


How to Upgrade NVR Firmware

Reolink releases its NVR/IPC firmware in need after completing requests from customers. Please follow the below steps for upgrading.

1. Connect the NVR to a monitor by HDMI cable. (If there is no display, please connect it to a VGA monitor to change it to 1920*1080.)
2. Download the NVR firmware from <https://reolink.com/firmware/>. All of the firmware is in a zipped file. So, you may need to extract the .zip file first and find .pak file.
3. Format one of your USB flash drive to FAT32 format and copy the firmware to it.
4. Insert the USB flash drive to one of the USB port on the NVR back panel or front panel.
5. Go to page System --> Maintenance --> Upgrade From Local.

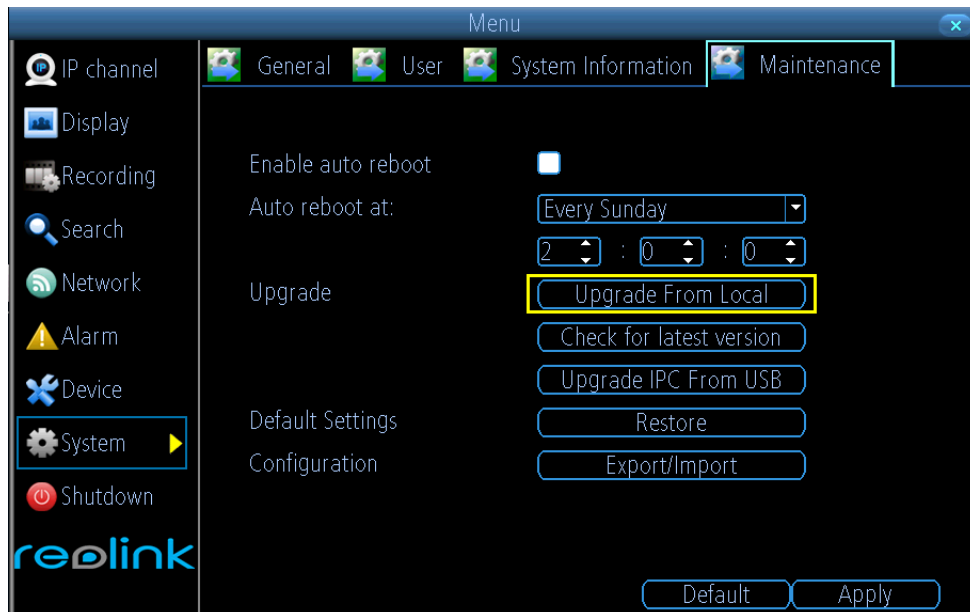

6. Select the correct firmware and click "Upgrade".

Note: Please do not power off the NVR or remove the USB flash drive during the upgrading, or it will damage the NVR.

