

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### RAM 2014-18 1500 FRONT BUCKET and REAR BENCH SEAT COVERS

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

#### KIT CONTENTS:

##### FRONT COVERS

Front Driver Side Seat Cover x1

Front Pass Side Seat Cover x1

Head Rest Covers x2

##### REAR COVERS

Rear Driver Side Back Rest Cover x1

Rear Driver Side Bottom Cover x1

Rear Pass Side Back Rest Cover x1

Rear Pass Side Bottom Cover x1

Rear Head Rest Covers (Large) x2

Rear Head Rest Cover (Small Center) x1

Rear Arm Rest Cover x1

#### TOOLS NEEDED:

15mm socket (If removing seats)

18mm socket (If removing seats)




#### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



## INSTALLATION INSTRUCTIONS

1. Seats were removed for photo purposes. This is not necessary but can be removed for installation.
2. If you are not removing the seats skip to *step 6*.
3. If you have chosen to remove the front seats remove the bolt in the seat frame using a 15mm in the front and a 18mm socket for the rear bolts. **See Photo 1 and 2** . Retain hardware for later use.

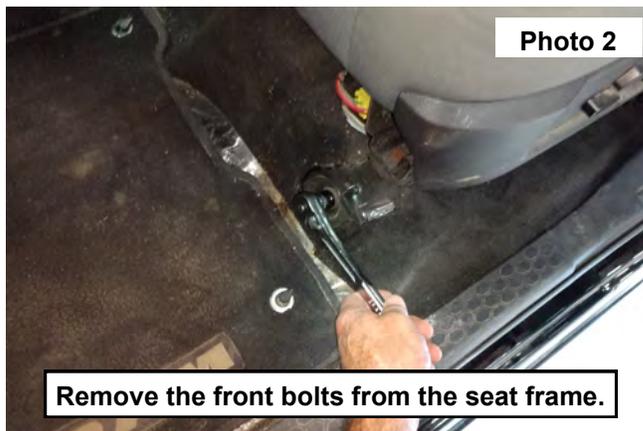

4. Disconnect the seats wiring harness under the seat. **See Photo 3**.
5. Remove the seat.
6. Installing the seat cover. Remove the headrest from the seat by pressing the button on the side of the adjustment tabs. Pull straight out of the top of the seat then set aside in a safe place for later use. **See Photo 4**.



7. Place the back rest cover onto the seat from the top down. The outside of the cover will have an air bag cut out. **See Photo 5**.
8. Tuck the seat cover tab inside of the back rest and bottom of the seat. **See Photo 6**.



9. Wrap the straps around the bottom and front sides of the seat then connect the buckle together. Pull the strap tight securing the cover to the seat. **See Photo 7.**
10. Pull the hooked straps tight and connecting them to the frame on each side of the seat. **See Photo 8.**



11. Tuck the seat cover under the head rest mount on top of the seat. **See Photo 9.**
12. Slide the head rest into the cover and secure tight using the Velcro on the bottom at the bottom of the cover. **See Photo 10.**




13. Install the head rest into the mounting location of the seat. **See Photo 11.**
14. Install the cover onto the opposite seat and install the front seats if they were removed for the installation process at this time.



## REAR SEAT COVER INSTALLATION

1. Seats were removed for photo purposes. This is not necessary but can be removed for installation.
2. If you are not removing the seats skip to **Step 6**.
3. If you have chosen to remove the rear seats remove the bolt in the seat frame using an 18mm socket. **See Photo 1 and 2**. Retain hardware for later use.

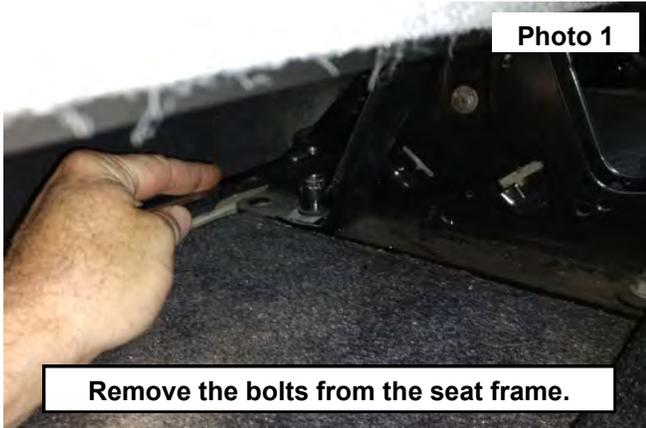

4. Folding the seat up remove the seat belt buckles from the inside of the seat. **See Photo 3**.
5. Remove the seat from the vehicle.
6. Installing the seat cover. Remove the headrest from the seat by pressing the button on the side of the adjustment tabs. Pull straight out of the top of the seat then set aside in a safe place for later use. **See Photo 4**.



7. Install the seat cover over the back of the seat. Tuck the seat cover under the head rest mount on top of the seat. **See Photos 5 and 6**.



8. Tuck the straps into the bottom of the seat. Connect the buckles from top to bottom adjusting the seat cover. Do not pull straps tight at this time. Connect the buckles on the sides of the seat again adjusting the covers. Do not pull the straps tight at this time. **See Photo 7.**
9. Locate the arm rest cover shown in **Photo 8.**



10. Install the cover onto the arm rest pulling the release tab out of the top side of the cover. Adjust the cover to the look desired and secure using the Velcro on the flap side of the cover. **See Photo 9.**
11. Install the covers onto the head rest. **See Photo 10.**



12. Install the head rest into the original location of the seat. Adjust to the look desired. **See Photo 11.**
13. Install the lower seat covers onto the bottom of the seat. Tuck the straps into the back of the seat. Connect the buckles together pull tight while adjusting the look of the seat cover. **See Photo 12.**



14. Repeat steps for the drivers side bucket seat.
15. If removed install the rear seats using the retained hardware. See Photo 14.
16. Raise the seat up and inert the seat belt buckles back in-between the top and bottom of the seat in the original location.
17. At this time adjust the covers and tighten straps.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

