 


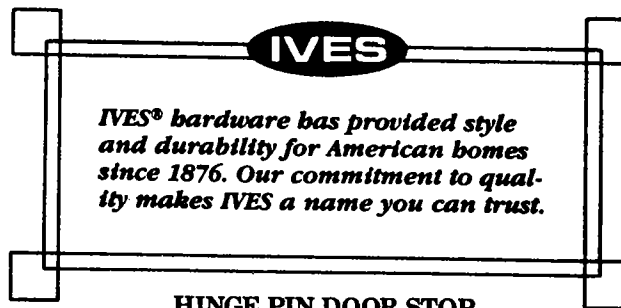

HINGE PIN DOOR STOP

 
FOR USE ON REMOVABLE PIN-HINGED TYPE DOORS TO STOP DOOR AND PREVENT DAMAGE TO DOOR, WALL AND DOOR KNOB. FEATURES REMOVABLE BUSHING TO ACCOMMODATE LARGE HINGE PINS.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Regular screwdriver and hammer.

1. Using screwdriver and hammer, carefully remove pin (A) from hinge.
2. Position door stop on top of hinge and tap hinge pin (A) into hinge using hammer. If hinge pin (A) is too large, remove bushing (B) by loosening bolt (C); retighten.
3. To adjust for desired degree of opening, loosen adjustment bolt (C) and slide stop arm (D). Retighten bolt.

NOTE: Two hinge pin door stops are recommended per door.

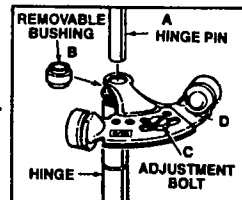

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW
LOCKS



DOOR
STOPS



COAT &
HAT HOOKS



DOOR
BOLTS



HINGE PIN DOOR STOP C69F3 BRASS

MADE IN U.S.A.