


HINGE PIN DOOR STOP

FOR USE ON REMOVABLE PIN-HINGED TYPE DOORS TO STOP DOOR AND PREVENT DAMAGE TO DOOR, WALL AND DOOR KNOB. FEATURES EASY ASSEMBLY AND REMOVABLE BUSHING TO ACCOMMODATE VARIOUS SIZE HINGE PINS.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Regular screwdriver and hammer.

1. Assemble door stop by pressing rubber tips onto threaded and fixed door stop arms and screw together (See illustration).
2. Using screwdriver and hammer, carefully remove pin (A) from top hinge.
3. Position door stop on top of hinge with threaded arm facing door. Tap hinge pin (A) into hinge using hammer. If hinge pin (A) is too large, remove bushing (B).
4. Adjust stop for desired degree of opening by turning threaded arm (C).

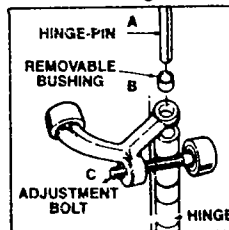

NOTE: Two hinge pin door stops are recommended per door.

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW
LOCKS



DOOR
STOPS



COAT &
HAT HOOKS



DOOR
BOLTS



HINGE PIN DOOR STOP C70A3 BRASS
MADE IN U.S.A.