


VON DUPRIN®


INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for locations of holes, backset (line X-X) and center lines.
2. Prepare door for control:
 - A. Transfer line X-X from inside (exit device) side of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
 - B. Locate and prepare holes as shown on other side.
3. Prepare control:
 - A. Orient control as shown for your application (RHR or LHR) and make sure mounting studs are in positions shown. If not, move mounting studs to correct positions.
 - B. Install cylinder.
 - C. If necessary, adjust tailpiece length.
4. Apply exit device and control.

CONTROL AND MOUNTING STUD POSITIONS

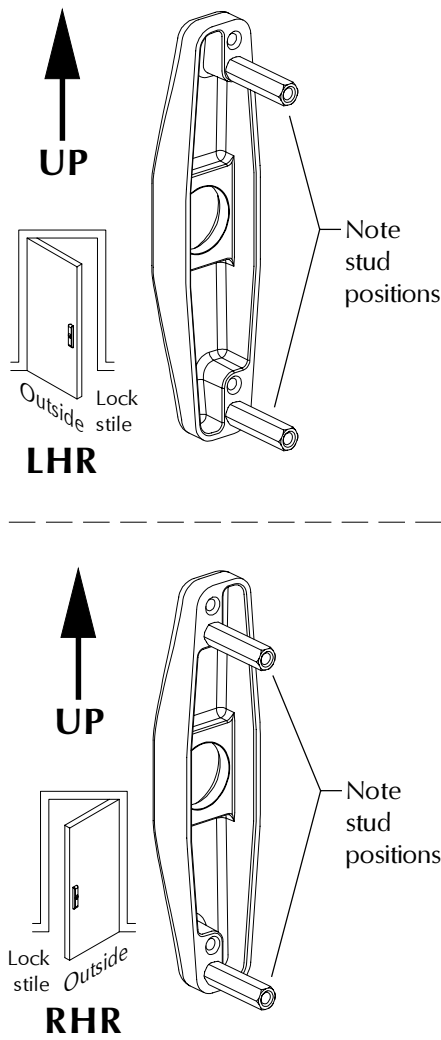


TO INSTALL CYLINDER

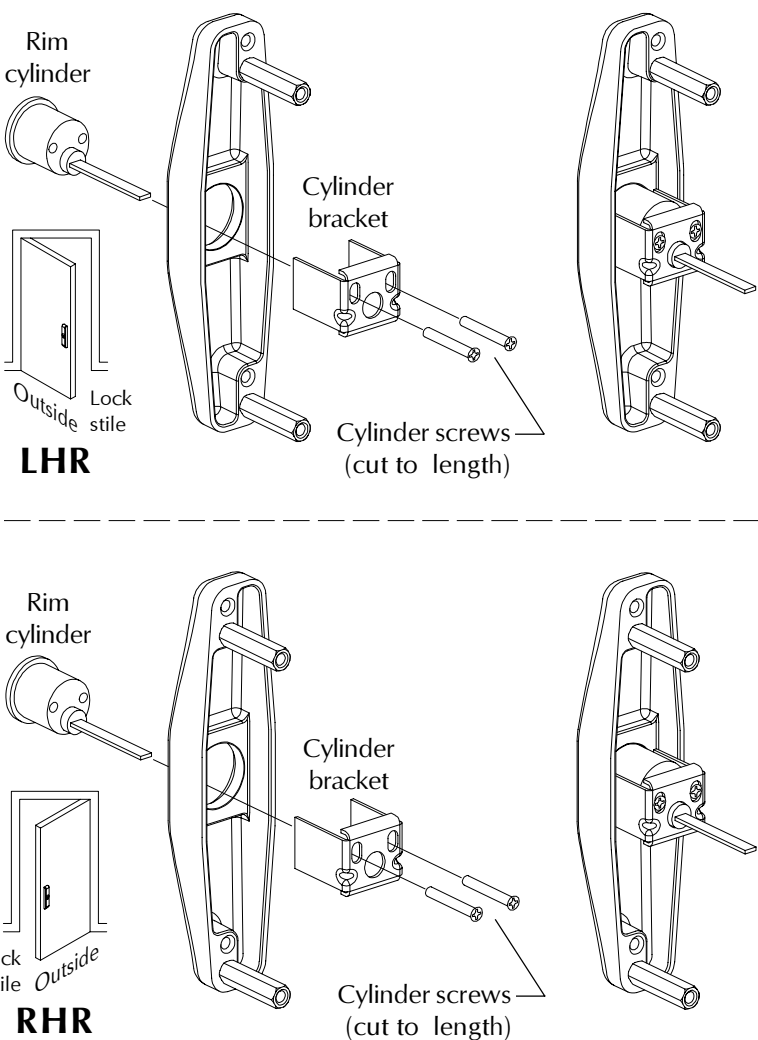

TO ADJUST TAILPIECE LENGTH

Cut cylinder tailpiece as shown.

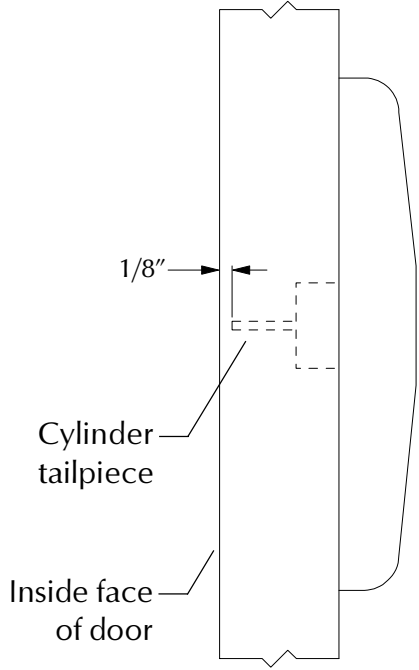


388NL CYLINDER CONTROL


Copyright © 2004 Ingersoll-Rand.
All rights reserved.

PAGE NO.
1 of 2

 
REVISION
1



DOOR PREPARATION, METAL DOOR APPLICATION

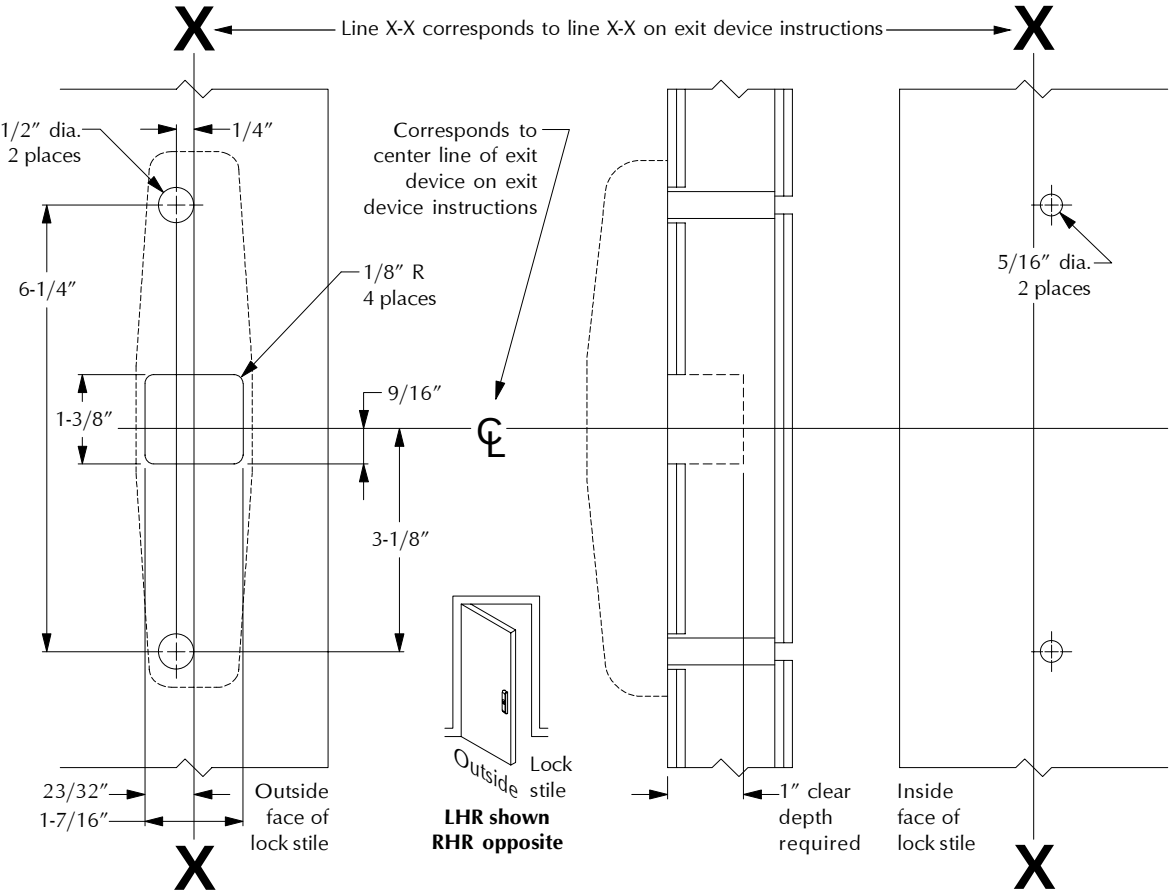

DOOR PREPARATION, WOOD DOOR APPLICATION

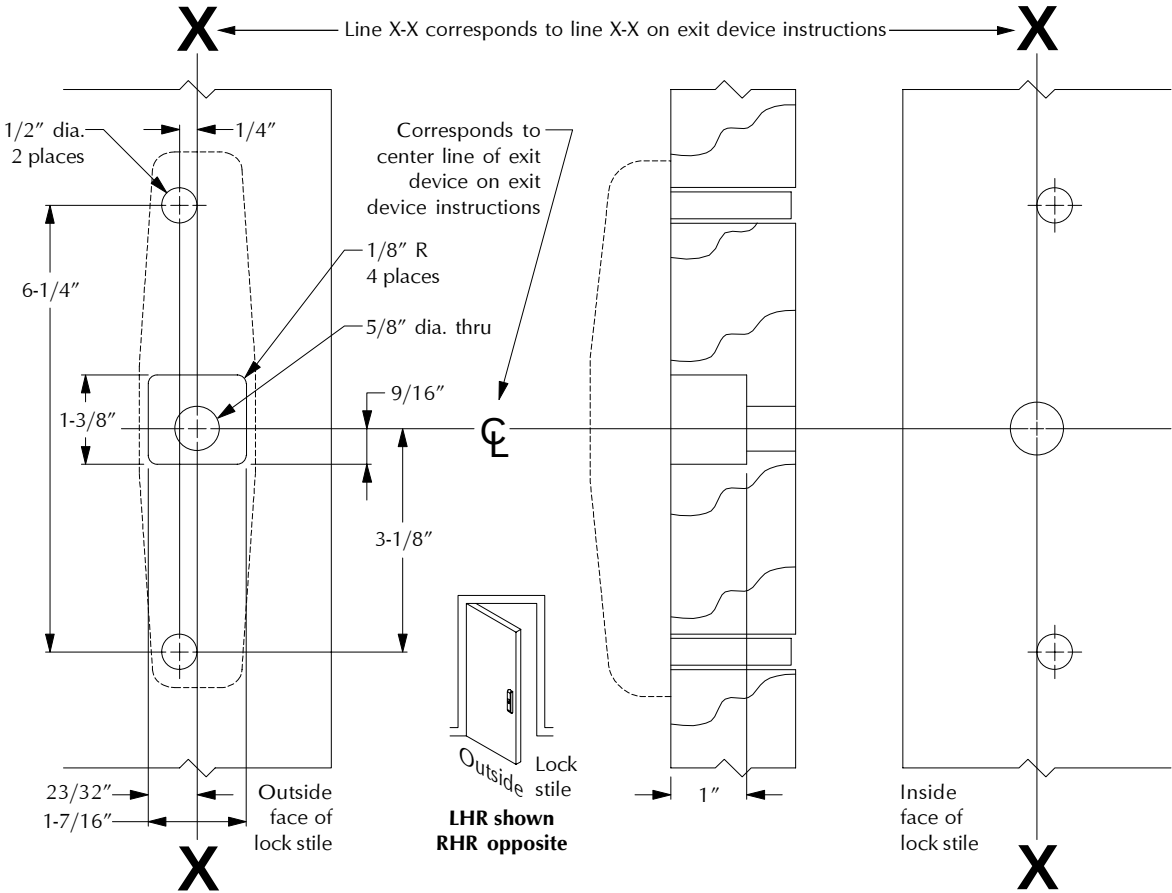

Device Application Schedule
33A/35A Rim Device
3327A/3527A Vertical Rod Device
3347A/3547A Vertical Rod Device
3348A/3548A Vertical Rod Device
3327A-F/3527A-F Vertical Rod Device
3347A-F/3547A-F Vertical Rod Device
3348A-F/3548A-F Vertical Rod Device

For cutouts on inside face of door, see exit device instructions.

 Security & Safety Proven Source. Proven Solutions.™	388NL CYLINDER CONTROL			941093-00
	Copyright © 2004 Ingersoll-Rand. All rights reserved.	PAGE NO. 2 of 2	REVISION 1	