


MS1850

SERIES MS® ACCESSORIES

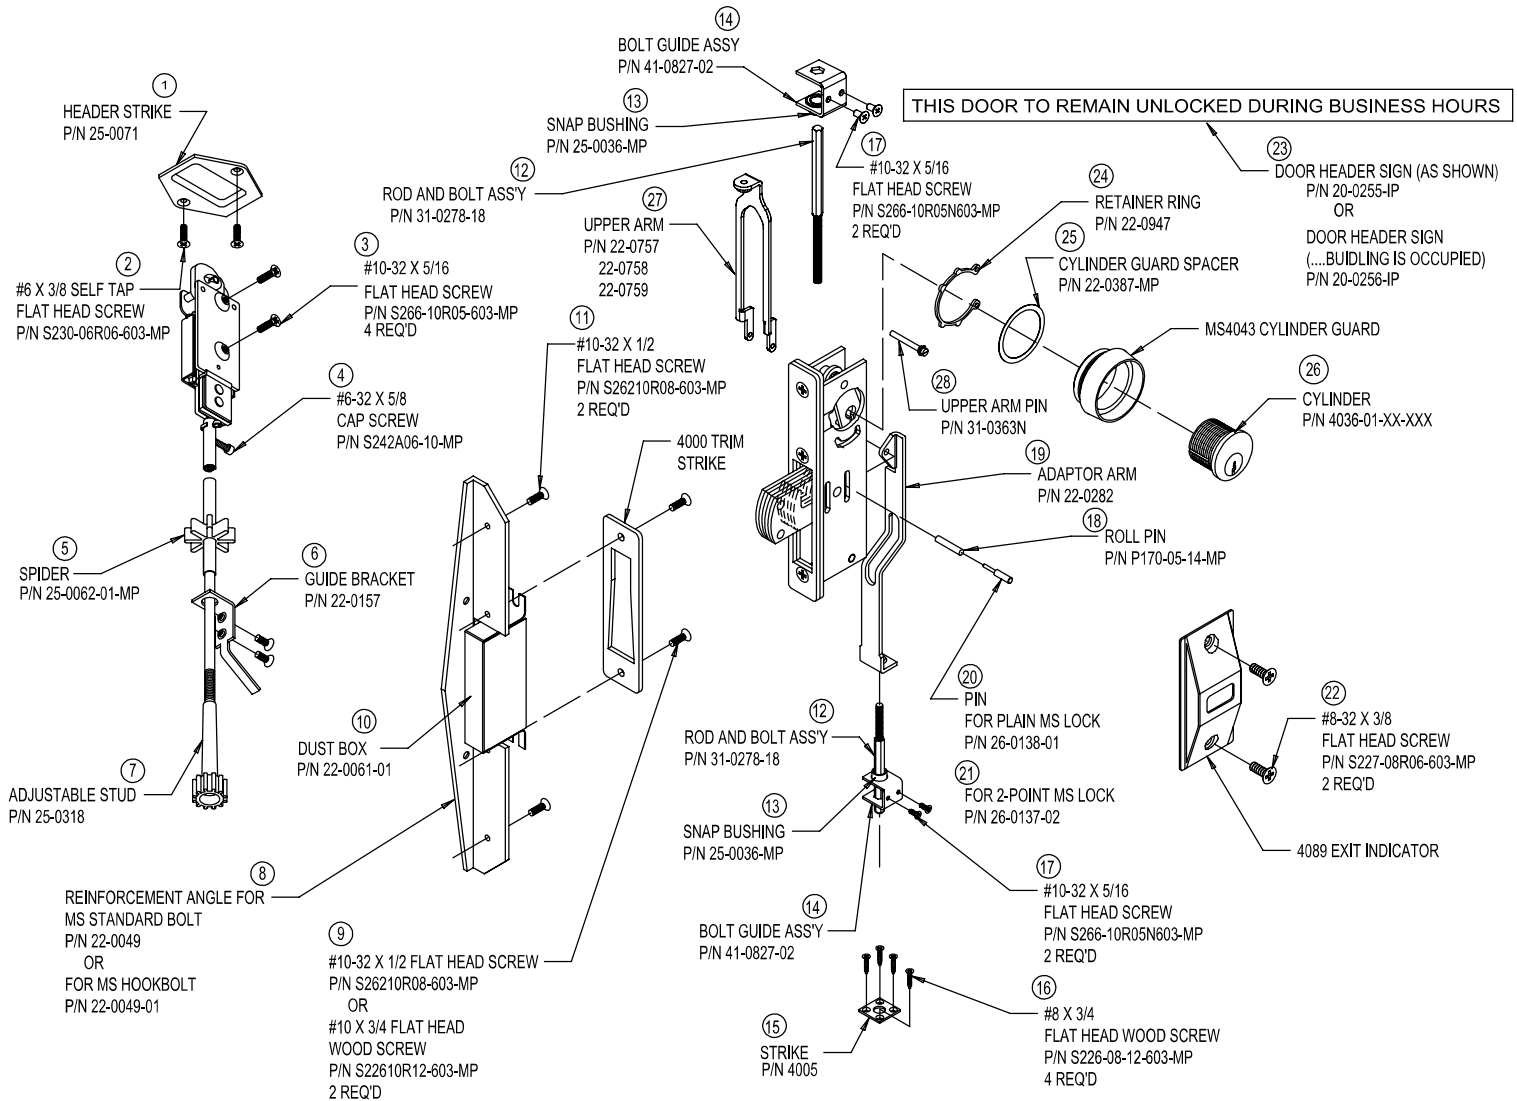

MS1850

SERIES MS® ACCESSORIES

MS1850 Series MS® Accessories

ITEM	PART NUMBER	DESCRIPTION		
------	-------------	-------------	--	--

4085 Header Bolt

1	25-0071	Header Strike	Each	
2	S230-06R06-603-MP	#6-32 × 3/8 Self Tapping Flat Head Screw	Pkg. of 10	
3	S266-10R05-603-MP	#10-32 × 5/16 Flat Head Screw	Pkg. of 10	
4	S242A06-10-MP	#6-32 × 5/8 Cap Screw	Pkg. of 10	
5	25-0062-01-MP	Spider	Pkg. of 10	
6	22-0157	Guide Bracket	Each	
7	25-0318	Adjustable Stud	Each	

4000 Series Strikes

8	22-0049	Reinforcement Angle, Standard Bolt	Each	
	22-0049-01	Reinforcement Angle, Hook Bolt	Each	
9	S262-10R08-603-MP	#10-32 × 1/2 Flat Head Screw	Pkg. of 10	
	S226-10R12-603-MP	#10 × 3/4 Flat Head Wood Screw	Pkg. of 10	
10	22-0061-01	Dust Box (4001)	Each	
11	S262-10R08-603-MP	#10-32 × 1/2 Flat Head Screw	Pkg. of 10	

4015 Threshold Bolt

12	31-0278-18	Rod and Bolt Ass'y (Cyl. Ht. 53-7/16 Max)(4016)	Each	
13	25-0036-MP	Snap Bushing (4016)	Pkg. of 10	
14	41-0827-02	Bolt Guide Ass'y	Each	
15	4005	Strike with Screws	Each	
16	S226-08-12-603-MP	#8 × 3/4 Flat Head Wood Screw	Pkg. of 10	
17	S266-10R05N-603-MP	#10-32 × 5/16 Flat Head Screw (4016)	Pkg. of 10	
18	P170-05-14-MP	Roll Pin	Pkg. of 10	
19	22-0282	Adaptor Arm (4015, 1870, 1870HM, MS1837, 1877)	Each	

4089 Exit Indicator

20	26-0138-01	Pin, for Standard MS Deadlock	Each	
21	26-0137-02	Pin, for MS Two-Point (MS × 4015)	Each	
22	S227-08R06-603-MP	#8-32 × 3/8 Flat Head Screw	Pk. of 10	
23	20-2055-IP	Header Sign (...DURING BUSINESS HOURS)	Each	
	20-2056-IP	Header Sign (...BUILDING IS OCCUPIED)	Each	

MS4043 Cylinder Guard

24	22-0947	Retainer Ring	Each	
25	22-0387-MP	Cylinder Guard Spacer	Pkg. of 10	
26	4036-01-XX-XXX	Cylinder	Each	

4016 Header Bolt

	22-0757	Upper Arm 1-1/8" Backset	Each	
27	22-0758	Upper Arm 1-1/2" Backset	Each	
	22-0759	Upper Arm 31/32" Backset	Each	
28	31-0363N	Upper Arm Pin Ass'y	Each	