

6321.099.KIT LEVER STRENGTH MORTISE KIT INSTALLATION INSTRUCTION

PKLS63 10/09

A. REMOVE OLD PARTS

PARTS BEING REMOVED

1.
2.

DEADBOLT COMPONENTS
REMOVED IN IMAGE FOR
CLARITY PURPOSES

1. Remove hub lever with spring and discard.
2. Remove lock hub assembly and discard.

B. ADD NEW PARTS

PARTS BEING ADDED

1.
2.
3.

DEADBOLT COMPONENTS
REMOVED IN IMAGE FOR
CLARITY PURPOSES

1. Install spring spacer over this post.
2.1 Install lock hub assembly in same place that the old lock hub was removed from, be sure that brass bushing is installed with lock hub. One spring leg should rest on pin in lock hub during install as shown.
2.2 Lock hub spring should be preloaded resting against this post and on top of spring spacer.
3 Install the hub lever spring into the middle cut in the hub lever. The curved leg of the spring should be resting against the hub lever. Install the hub lever and spring in the same place the old lever was removed. Preload the spring against the lock case.