

USERS GUIDE DUAL SWITCH PUSHPLATE

Part Number Reference: 10PBDGP1

DUAL SWITCH PUSHPLATE


This pushplate is designed to fit into either double-gang or 4x4 electrical boxes. Typical uses include controlling inside and outside doors of a vestibule. The faceplates are made of 1/16" thick stainless steel for durable use. The pushplate may be hard wired to the door operator or connected to one of B.E.A.'s line of radio-controlled transmitters.

RELATED OPTIONAL ACCESSORY

RADIO CONTROLLED TRANSMITTER AND RECEIVERS: Wide range of analog and digital transmitters and receivers

INSTALLATION INSTRUCTIONS

1. Attach the adapter ring to the electrical box. Use (2) #6-32 screws for 2-gang electrical boxes or (2) #8-32 screws for 4x4 boxes.
2. Wire the switches of the pushplates to the door controllers or radio controlled transmitters using the NO or NC contacts and common.
3. Start (2) #6-32 screws into the center holes of the adapter ring. Place the keyway-shaped holes of the backplate over the holes, and fully tighten the screws with the enclosed hex key.
4. Test the pushplates for proper activation.

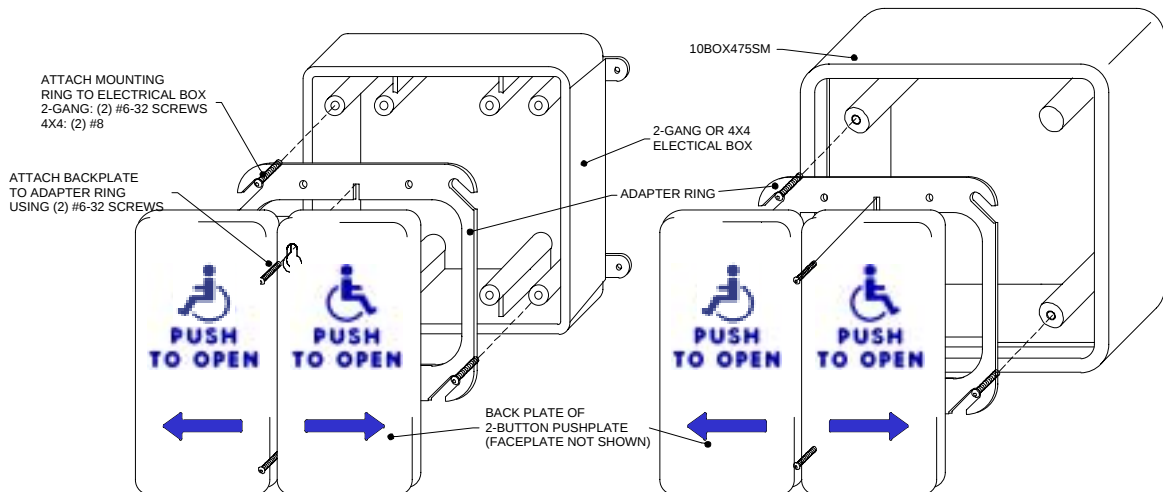

PUSHPLATE CLEANING

The pushplates are constructed with durable stainless steel and painted with scuff-resistant coatings. To clean the plates, use only a damp, non-abrasive cloth. Repeated cleaning with harsh solvents or abrasive materials may cause deterioration of the coating. Please make the end-user aware of this procedure.

TECHNICAL SUPPORT

If after troubleshooting a problem, a satisfactory solution cannot be achieved, please call B.E.A., Inc. for further assistance during Eastern Standard Time at
1-800-523-2462 from 7am - 5pm or 1-800-407-4545 from 5pm - midnight & weekends.

DO NOT leave any problem unresolved. If you must wait for the following workday to call B.E.A., leave the door inoperable until satisfactory repairs can be made. **NEVER** sacrifice the safe operation of the automatic door or gate for an incomplete solution.