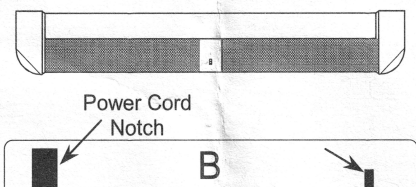
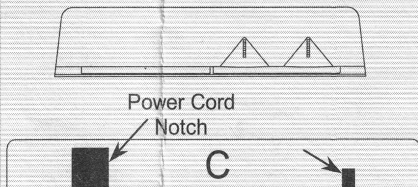
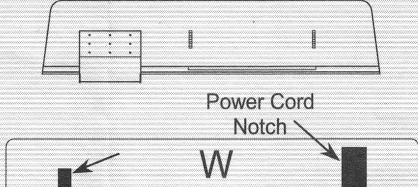


# UNIVERSAL RAIN COVER (URC) INSTRUCTION MANUAL

The Universal Rain Cover (URC) is designed to shield and protect the Bodyguard, the Wizard and the Crystal from rain and snow. It is made of tough and flexible, UV-resistant Royalite plastic for durable protection.

STEP	BODYGUARD	CRYSTAL	WIZARD
1	Locate the approximate location of sensor on door header.		
2	Cut out notches on URC to match the sensor's mounting hole locations with a utility knife.		
			
3	Prepare Sensor.		
	a.) Remove <b>left</b> endcap, both lenses and center light pipe of Bodyguard. b.) Remove 3/8" plug on URC.	a.) Remove sensor cover	
4	Hold URC in desired location. Locate and drill an access hole through the power cord notch to run the sensor's power cord. Route the power cord through the hole.		
5	Drive the two self-tapping mounting screws to attach the sensor and URC to the header.		
6	Set-up the sensor according to the sensor's instruction manual.		
7	Reassemble sensor.		
	a.) Snap lens and light pipe in place b.) Put left end cap in place c.) Tighten Phillips head screw d.) Replace 3/8" plug	a.) Replace sensor cover	

If after troubleshooting a problem, a satisfactory solution cannot be achieved, please call B.E.A., Inc. for further assistance during Eastern Standard Time at  
**1-800-523-2462 from 7am - 5pm or 1-800-407-4545 from 5pm - midnight & weekends.**

**DO NOT** leave any problem unresolved. If you must wait for the following workday to call B.E.A., leave the door inoperable until satisfactory repairs can be made.

**NEVER** sacrifice the safe operation of the automatic door or gate for an incomplete solution.