
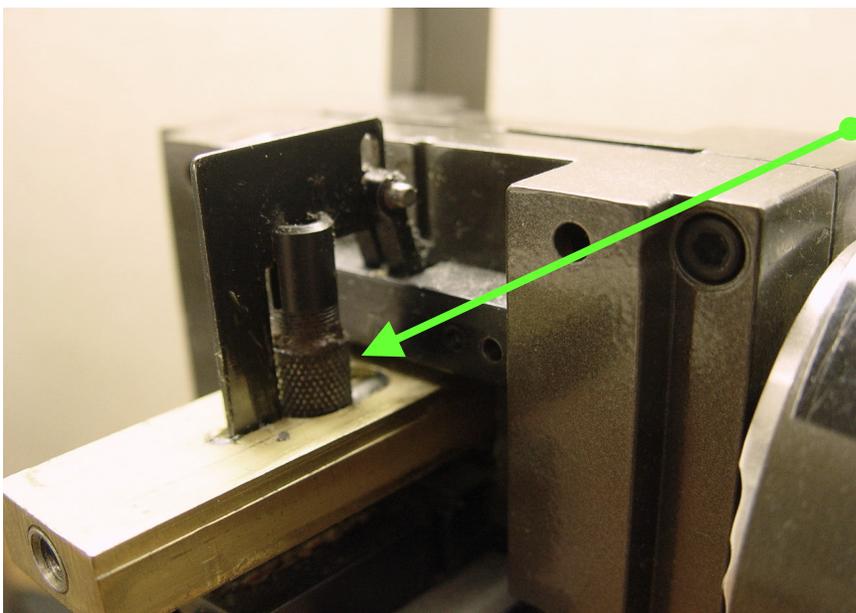


When the carriage does not index correctly or seems to skip key cuts remove the cover on the back to see view as shown.

With cover removed cycle the cutter arm and watch to see if the ratchet pin fully engages and moves carriage one full position.

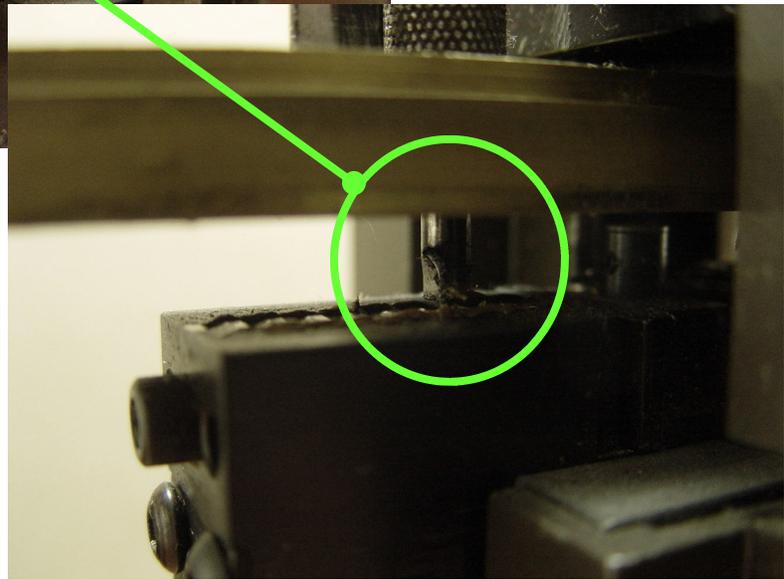

If the ratchet pin does not engage fully, adjust the height of the pin by turning the knurled sleeve with a set of pliers. Make small adjustments and check by cycling the cutter arm. Clockwise raises pin Counter-clockwise lowers pin