



**Procedure for replacing pushbutton assembly**  
**CAUTION**  
**TURN OFF POWER BEFORE REMOVING COVER**

With the cover removed from the dryer. Turn cover over with the grill facing you. Remove the pushbutton assembly by following the steps listed below:

- 1) Remove the black pushbutton tip, by using a pair of pliers and turning the tip counter clockwise while holding pushbutton with your other hand
- 2) Remove lockwashers between pushbutton rod and pushbutton tip.
- 3) Remove retaining ring from pushbutton rod by using needlenose pliers or regular Pliers and pull retaining ring from pushbutton rod.
- 4) Pull pushbutton up and outward of cover.
- 5) Remove pushbutton spring from pushbutton rod.
- 6) To install new pushbutton in dryer cover reverses the above procedure.

For further technical assistance call WORLD DRYER customer service at:

Toll-free 1-800-323-0701

In Illinois: 708-449-6950