


ACTUATION PIN RESETTNG TOOL ENCLOSED

The Model BFR-PRT Actuation Pin Resetting Tool is used to re-set the actuation pin after the Systems Releasing Module is placed in the set position and before the actuation cartridge is installed. The **Model BFR-PRT** is also used to check for the proper positioning of the cartridge gasket and actuation pin.

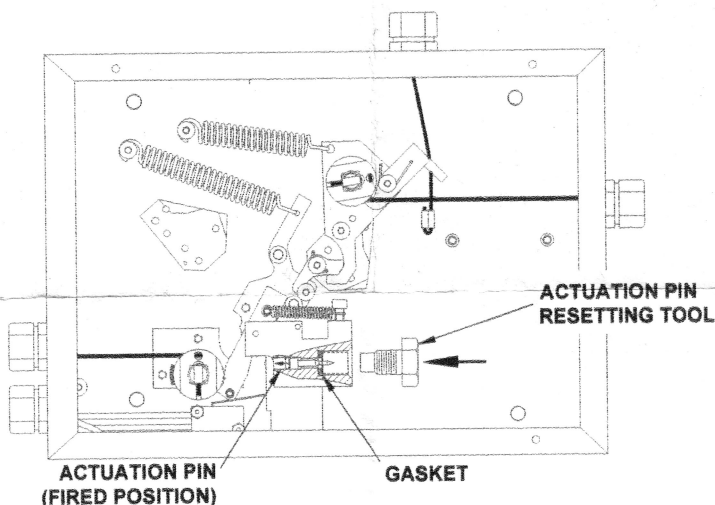

Before installing the Nitrogen Cartridge it is necessary to make sure that the Actuating Pin is moving freely. Insert the Actuation Pin Resetting Tool into the threaded hole of the Manifold Mounting Block where the Nitrogen Cartridge is installed.

After screwing the Resetting Tool fully in, the Actuating Pin is now in the set position and an Actuation Cartridge can now be installed.

CAUTION

The Actuation Pin Resetting Tool can only be used when the Systems Releasing Module is in the SET POSITION. Installing the Actuation Pin Resetting Tool when the Systems Releasing Module is in the fired position may cause damage to the mechanism.