

897 AS Z1 XL 12

New



www.camar.it/warning




Fe

50

1500

400

9 897 00 AL 528

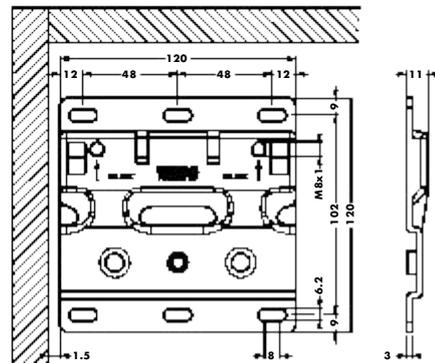

897 AS Z1 XL 24

New



www.camar.it/warning




Fe

20

720

40

9 897 00 AL 528

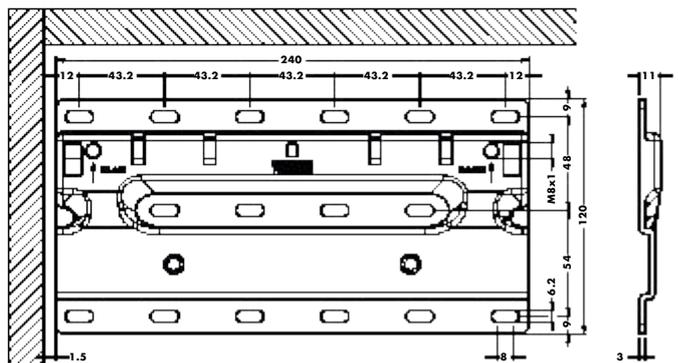

3.0
525

1
2
3
4
5
6
7
8
9
WARNING


897 AS Z1 XL 90

New



www.camar.it/warning

50
 1500
 400

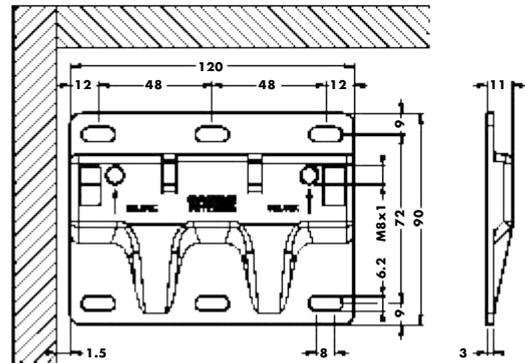


897 AS Z1 12 12



www.camar.it/warning

50
 1500
 400

897 00 AL 528

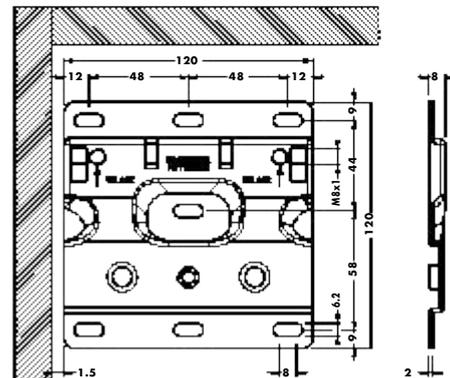

3.0
526

1
2
3
4
5
6
7
8
9
WARNING


897 AS Z1 12 86

New



www.camar.it/warning

100
 3600
 100

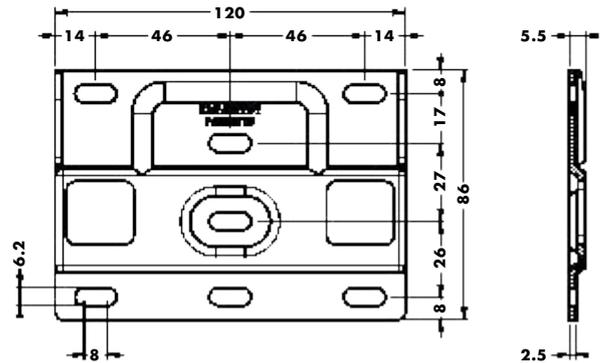


897 AS Z1 60 70



www.camar.it/warning

200
 6000
 800

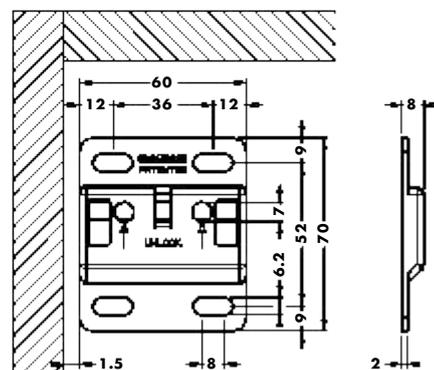


1

897 00 AL



Lmm

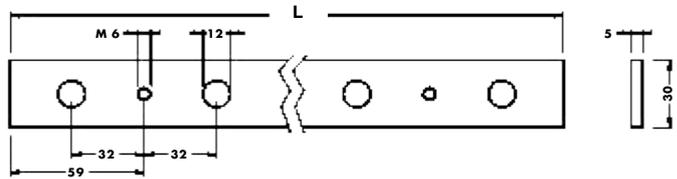

	Lmm
807 02 Z1 IN □□	A - 5
807 02 Z1 RV □□	A + 11
807 XL Z1 IN □□	A - 5
807 XL Z1 VI □□	A - 5
807 XL Z1 RV □□	A + 15
807 XL Z1 VR □□	A + 15

2

3

4

5


6

897 □ AM



Lmm

Warning icons: a weight icon, a hazard triangle with an exclamation mark, a lifting icon, and a website icon with the URL www.camar.it/warning.

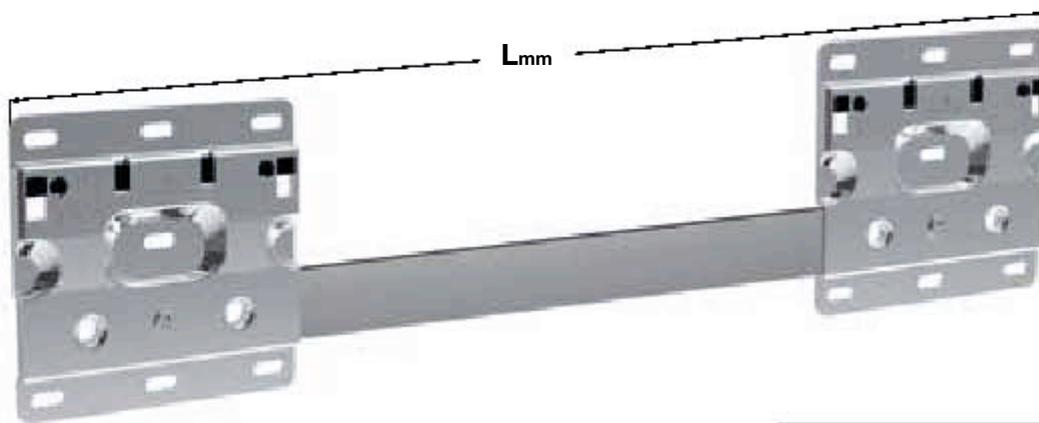

	Lmm
807 02 Z1 IN □□	A - 3
807 02 Z1 RV □□	A + 13

7

8

9

WARNING



897 XL

Lmm

New




 
554-555
www.camar.it/warning



Al

Fe

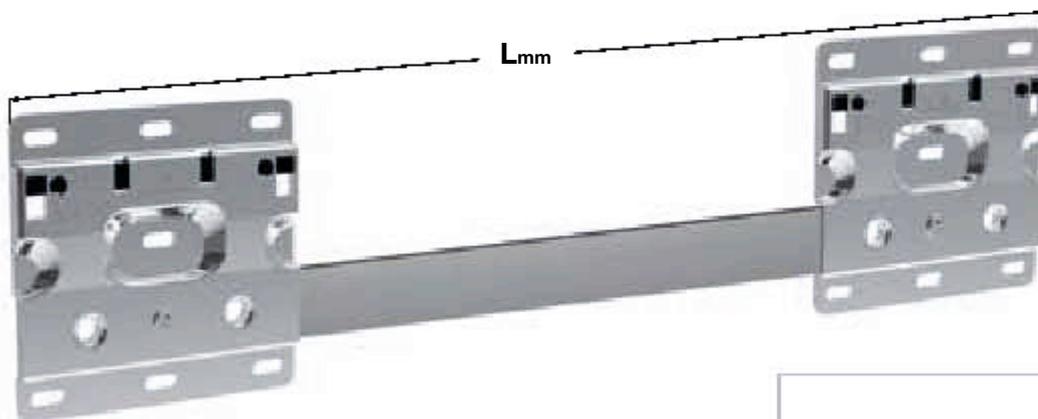

	
	Lmm
807 XL Z1 IN	A - 3
807 XL Z1 VI	A - 3
807 XL Z1 RV	A + 17
807 XL Z1 VR	A + 17