


INSTALLATION INSTRUCTIONS FOR SOFFIT MOUNTED COORDINATORS


THIS TEMPLATE APPLIES TO

600 SERIES COORDINATORS, CB, AB & C BRACKETS

IMPORTANT: INSTALL COORDINATOR BEFORE ANY OTHER HARDWARE EXCEPT HINGES.



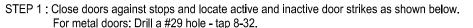

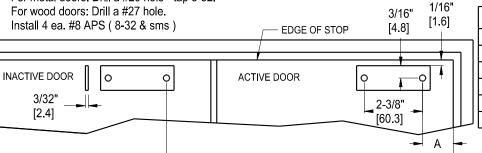

COORDINATOR В Α **MECHANISM** 1-1/4" [31.8] 27-1/2" [698.5] 32" (N-632) [812.8] 42" (NX-642) [1066.8] 1-1/4" [31.8] 37-1/2" [952.5] 52" (652) [1320.8] 1-1/4" [31.8] 47-1/2" [1206.5 60" (L-660) [1524] 1-1/4" [31.8] 55-1/2" [1409.7 1-1/4" [31.8] 61-1/2" [1562.1] 66" (XL-600) [1676.4] 72" (XXL-600) [1828.8] 1-1/4" [31.8] 67-1/2" [1714.5]


REINFORCEMENT

STEP 2: Depress trigger and then depress the lever and hold. Locate coordinator against soffit and strike plates as shown below.

Mark center hole location and drill a #10 hole.

Mount coordinator to soffit with 1ea. #12-24 thread forming screw.

SOFFIT BY OTHERS SIDE STOR COORD. VIEW DOOR DOOR STRIKE

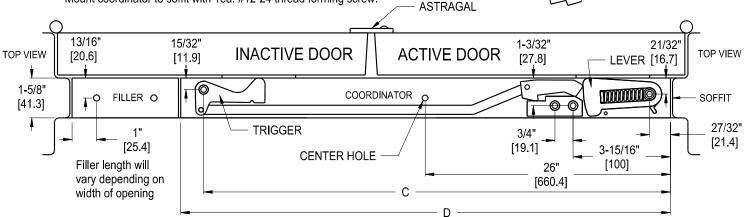

STEP 3: Close doors to ensure coordinator is resting against both door strike plates. Mark the 4 remaining mounting hole locations. Drill #10 pilot holes.

Install 4 ea. #12-24 thread forming screws.

STEP 4: Fillers (if supplied) fill the void between the coordinator and soffit. They mount the same as the coordinator.

COORDINATOR MECHANISM	O	D
32" (N-632) [812.8]	31" [787.4]	32" [812.8]
42" (NX-642) [1066.8]	41" [1041.4]	42" [1066.8]
52" (652) [1320.8]	51" [1295.4]	52" [1032.8]
60" (L-660) [1524]	59" [1498.6]	60" [1524]
66" (XL-600) [1676.4]	65" [1651]	66" [1676.4]
72" (XXL-600) [1828.8]	71" 1803.4]	72" [1828.4]

TURN CLOCKWISE

STEP 5: Test operation by opening both doors and alllowing the active door to close first. The active door should be held open until the inactive door closes.

If the coordinator overrides causing the active door to close prior to the inactive door ADJUST DOOR CLOSER SPEEDS FIRST.

If the coordinator still overrides, adjust the tension on the override mechanism by using a #1 Phillips head screwdriver and turning the screw in the lever end clockwise. SEE FIGURE A

NOTE: If the lever and or trigger does not return to the extended position after both doors are opened, the mounting screws thru the lever and or trigger may be too tight. Back screws off 1/4 turn until the lever and or trigger return to the extended position.

SCREW DRIVER ACTIVE DOOR LEVER TO INCREASE TENSION. WITH THE DOOR OPEN 0 0 FIGURE A

Dimensions in [] denotes millimeters


Door Controls International™ 2362 Bishop Circle East, Dexter MI. 48130 PH: 1-800-742-3634 FAX: 1-800-742-0410 www,doorcontrols.com

AB & C BRACKETS AND CARRY BAR INSTALLATION - REVERSE SIDE

#1 PHILLIPS HEAD

INSTALLATION OF AB OR C BRACKET WHEN REQUIRED

AB and C brackets are available when it is necessary to mount parallel arm closers, non-fire rated vertical rod strikes, or any soffit applied hardware. Supplied with 4 ea. 1/4-20 x 1/2" FH screws. to use to mount the required harware. The mounting holes supplied in the bracket are to mount the bracket to the frame. Drill and tap the bracket for the soffit applied hardware. The depth of the soffit will determine the required bracket. See below.

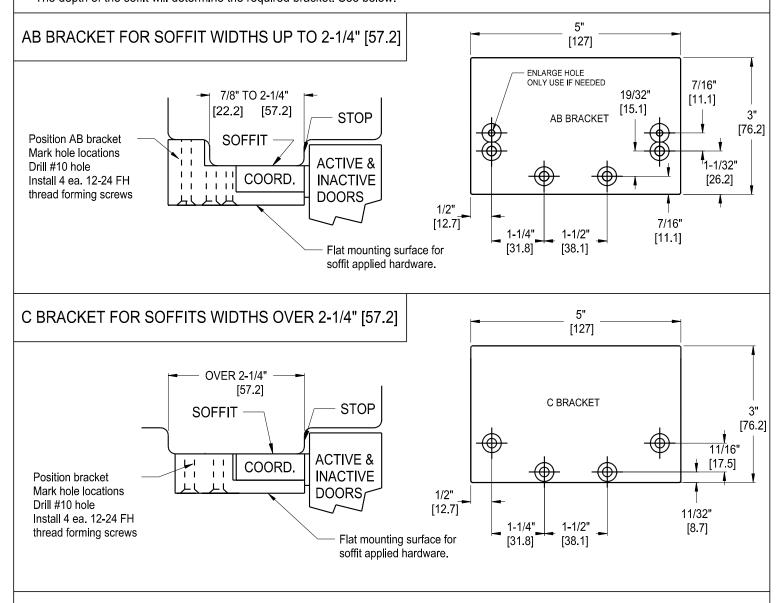

INSTALLATION OF CB CARRY BAR WHEN REQUIRED

