

TO BUILDING MANAGER

You can extend the life of DOR-O-MATIC exit devices by locking the cross bar down in the depressed position, making the whole unit inoperative during the "open" hours


DIRECTIONS FOR "DOGGING" DOWN CROSS BAR

Hold cross bar down in depressed position and using wrench key turn set screws located on underside of housings, in until they seat

To release or "un-dog" the device, reverse rotation of wrench key and back screws out until cross bar reaches normal "up" position

IMPORTANT — ALWAYS "DOG" BOTH HOUSINGS

Part No. 27-128 (Rim)

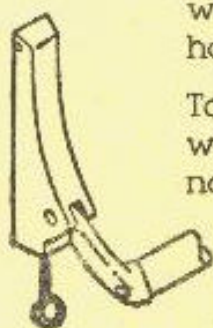

NOTE: When the DOR-O-MATIC rim panic device is installed in a door with a cylinder for outside key entry it can be assembled to function in either of two ways. (Standard factory installation, see "A" below.)

A. Key entry with key dogging option—To key dog the device for continued outside entry turn key one full turn (360°) and remove key from cylinder. Do not turn key in opposite direction to remove. To again lock door, insert key and turn one full turn in opposite direction.

B. Key entry only—Turn key until device opens. Key must be then turned back to be removed from cylinder—leaving door locked from outside entry


FUNCTIONS CAN BE CHANGED AT ANY TIME

INSTRUCTIONS:

1. Be sure panic is in locked position.
2. Detach crash bar.
3. Remove panic lock stile housing.
4. Setting for "A" — Turn pinion clockwise until bolt completely retracts. Setting for "B" — Y Turn pinion counter clockwise until bolt is completely visible — Z then turn pinion back one-half turn clockwise.
5. Replace panic lock stile housing and crash bar.



A.

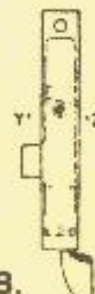

B.