


# Installation and Service

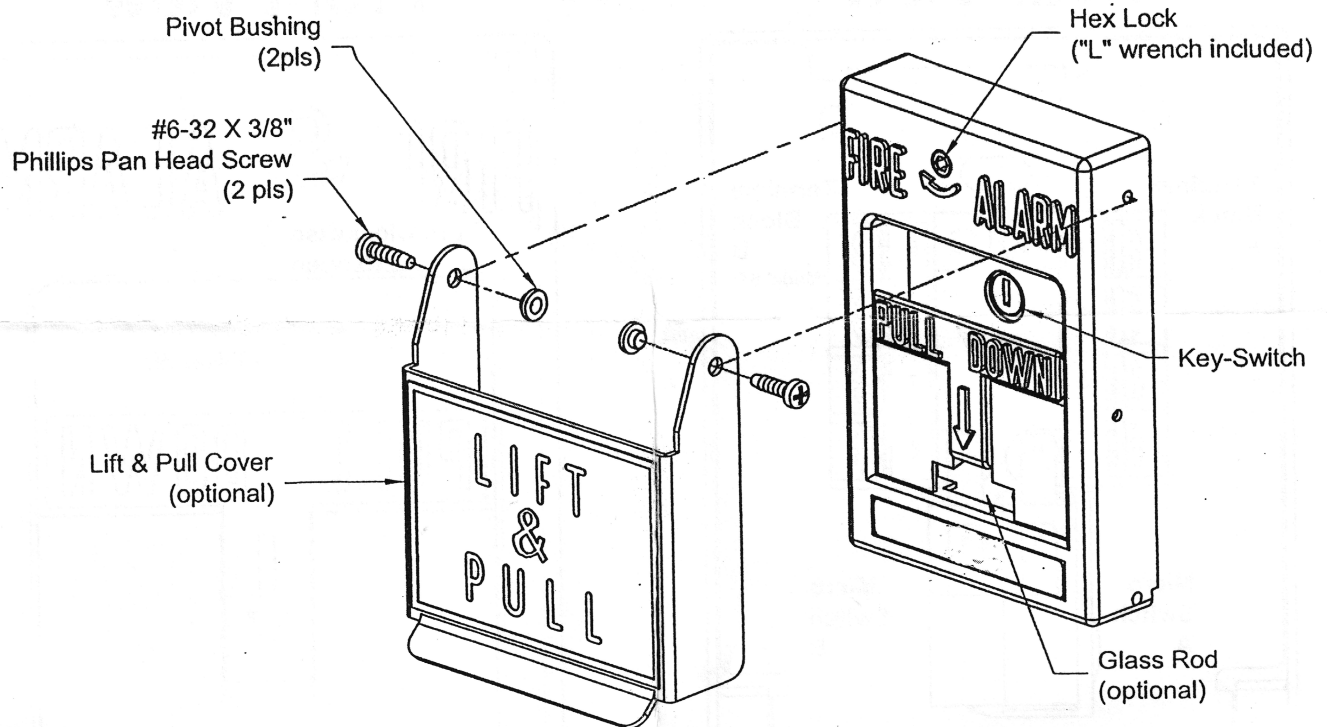

## Installers Note:

The stations are supplied with glass rod removed. It is recommended that the station be activated and tested prior to installation of the glass rod.


- Glass Rods and Hardware are shipped with station in box.

## Replacement of Glass Rod:

If broken, remove debris, then reset T-Handle to Normal Position. Insert one end of the new Glass Rod under Spring Tab, then with one finger, lift other end of Spring Tab allowing Glass Rod to slip into place.

## To Close Station:

Simply push station closed.

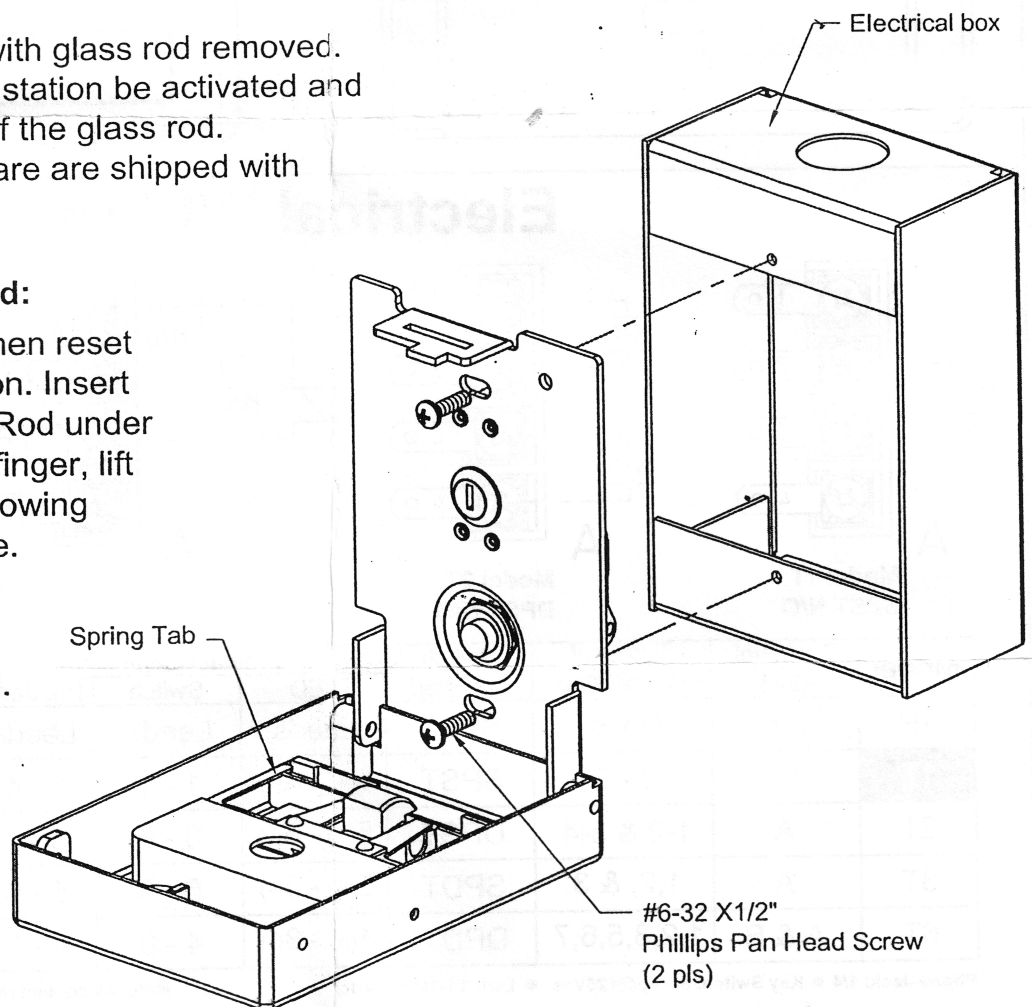

Wiring Instructions on Reverse Side