

CLOSER BODY FUNCTION ADJUSTMENT INSTRUCTIONS

ADJUSTMENT INSTRUCTIONS

SPRING POWER — As per "Spring Tension Chart" select the correct number of turns for spring adjustment nut that corresponds with the installation. Using 5/32" (4mm) allen key, turn adjustment nut full 360° clockwise turns to desired setting.



SPEED — Door closing and latching speeds are controlled by #1,#2 speed regulating screw separately.
A. Clockwise turns slow the speed. B. Counterclockwise turns increase the speed.

SPRING POWER/DOOR SIZE CHART

STANDARD/TOP JAMB INSTALLATION (Size 2~6)				
FULL TURNS OF SPRING ADJUSTMENT SCREW	MAXIMUM DOOR WIDTH			
	Interior door width	Exterior door width	Swing out	Swing in
-3		8½ Pound opening force		
0	32"(813)	28"(711)	24"(610)	
+1	36"(914)	32"(813)	28"(711)	
+5	42"(1067)	36"(914)	32"(813)	
+9	48"(1219)	42"(1067)	36"(914)	

STANDARD/TOP JAMB INSTALLATION (Size 1~4)				
FULL TURNS OF SPRING ADJUSTMENT SCREW	MAXIMUM DOOR WIDTH			
	Interior door width	Exterior door width	Swing out	Swing in
-3		5 Pound opening force		
0	32"(813)	28"(711)	24"(610)	
+2	36"(914)	32"(813)	28"(711)	
+10	42"(1067)	36"(914)	32"(813)	
+12	MAXIMUM TURNS			

*Then parallel installation : Each closing power size reduce one Size power

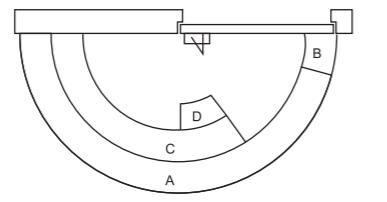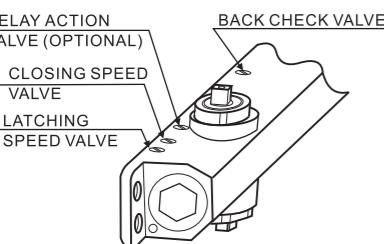

1. "CLOSING SPEED"—control by closing speed valve.

- Turn the closing speed valve CLOCKWISE the closing speed be slow.
- Turn the closing speed valve COUNTER-CLOCKWISE the closing speed be fast.


2. "LATCHING SPEED"—control is the same closing speed.

3. "BACK CHECK"—control by back check valve.



- Turn the back check valve CLOCKWISE the back check power be strong.
- Turn the back check valve COUNTER-CLOCKWISE the back check power be weak.

4. "DELAY ACTION"(OPTIONAL)—control by delay action valve.

- Turn the delay action valve CLOCKWISE the delay action times be increase.
- Turn the delay action valve COUNTER-CLOCKWISE the delay action times be decrease.

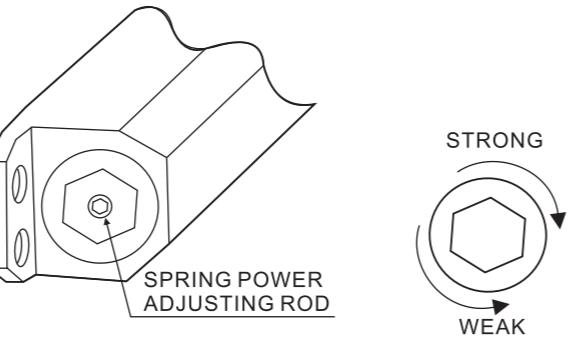



SPRING POWER ADJUSTMENT — is controlled by the Hex Socket Spring Adjustment rod. Power is now set at "0" turns. To INCREASE, use a 5/32" Allen key and turn CLOCKWISE "full" 360° turns as per the spring power/Door Size Chart above.

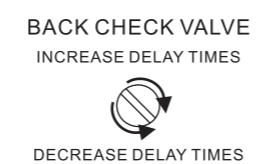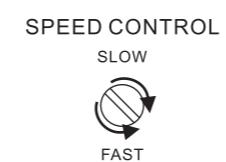

INSTALLATION INSTRUCTIONS


SUPER ADJUSTABLE
Adjustable Closing Power
No Hold- Open
SURFACE MOUNTED

STANDARD INSTALLATION(ON PULL SIDE MOUNTING)

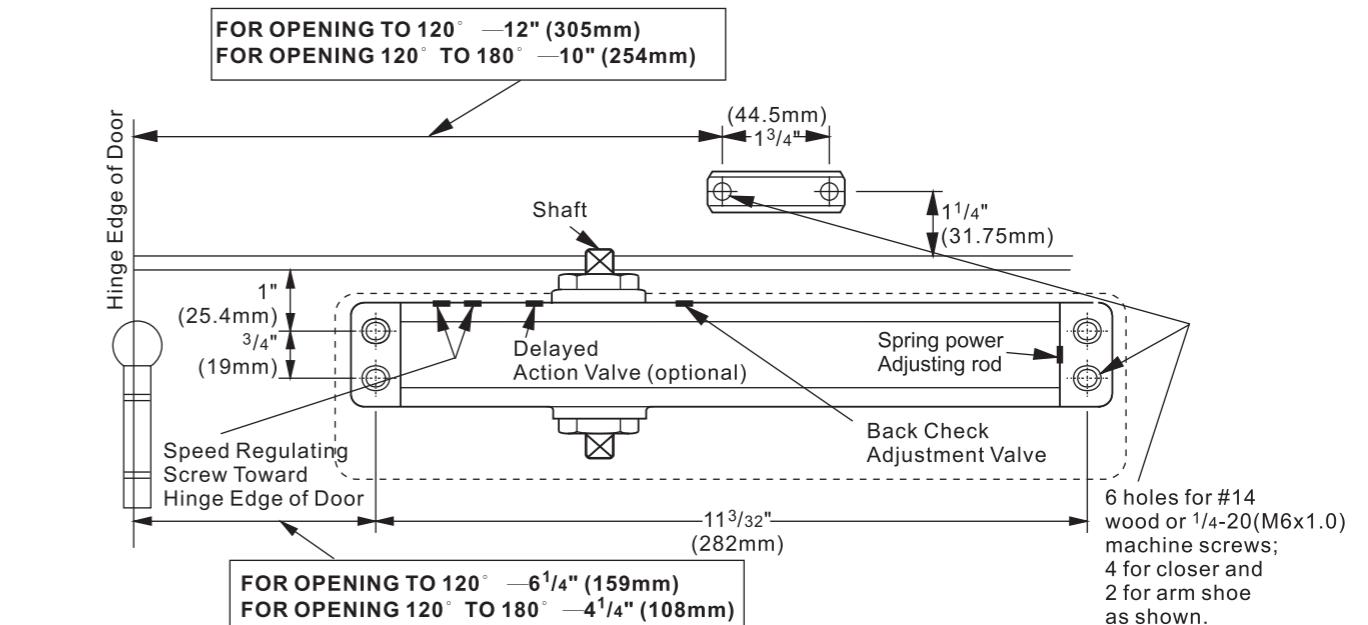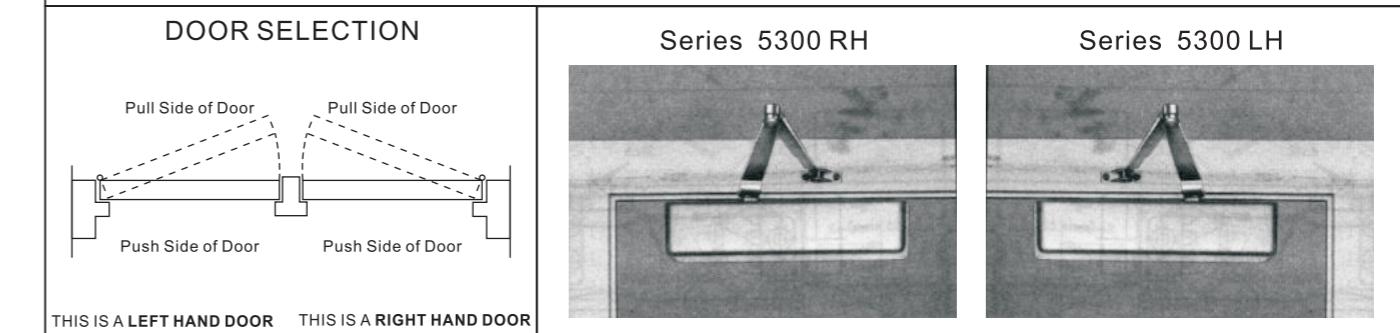

INSTALLATION INSTRUCTIONS



1. Select degree of opening and use dimensions shown in above template to mark four holes on door for closer and two holes on frame for arm shoe.
2. Drill pilot holes in door and frame for #14 wood screws or drill and tape for 1/4-20(M6x1.0) machine screws.
3. Mount closer on door WITH SPEED REGULATING SCREW TOWARD HINGE EDGE.
4. Place main arm on shaft on top of closer at proper index mark as illustrated. FOR RIGHT HAND DOOR No . 4 (illustration "A") FOR LEFT HAND DOOR No . 1 (illustration "B"). Tighten arm screw with lockwasher securely.
5. Attach the arm shoe of the forearm to the frame.
6. Adjust length of forearm so when it is attached to main arm it will be at a right angle (90°) to door when door is closed and assemble at elbow then tighten locknut.

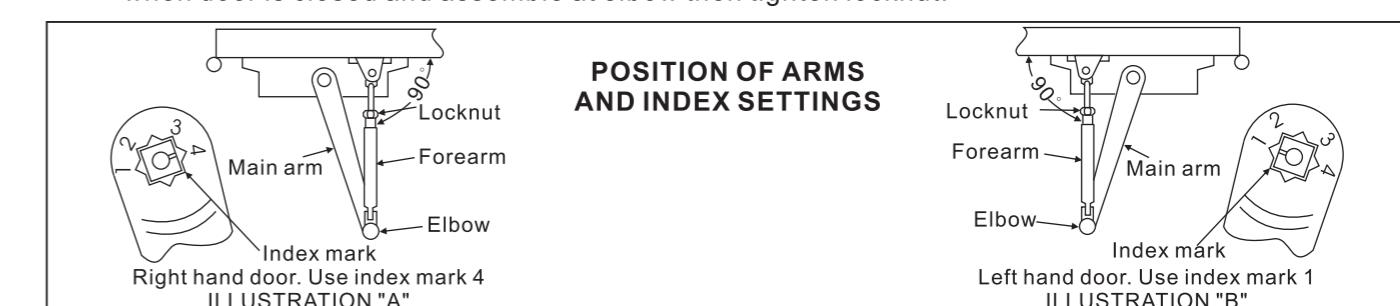

INSTALLATION INSTRUCTIONS


SUPER ADJUSTABLE
Adjustable Closing Power
No Hold- Open
SURFACE MOUNTED

TOP JAMB INSTALLATION(ON PUSH SIDE MOUNTING)

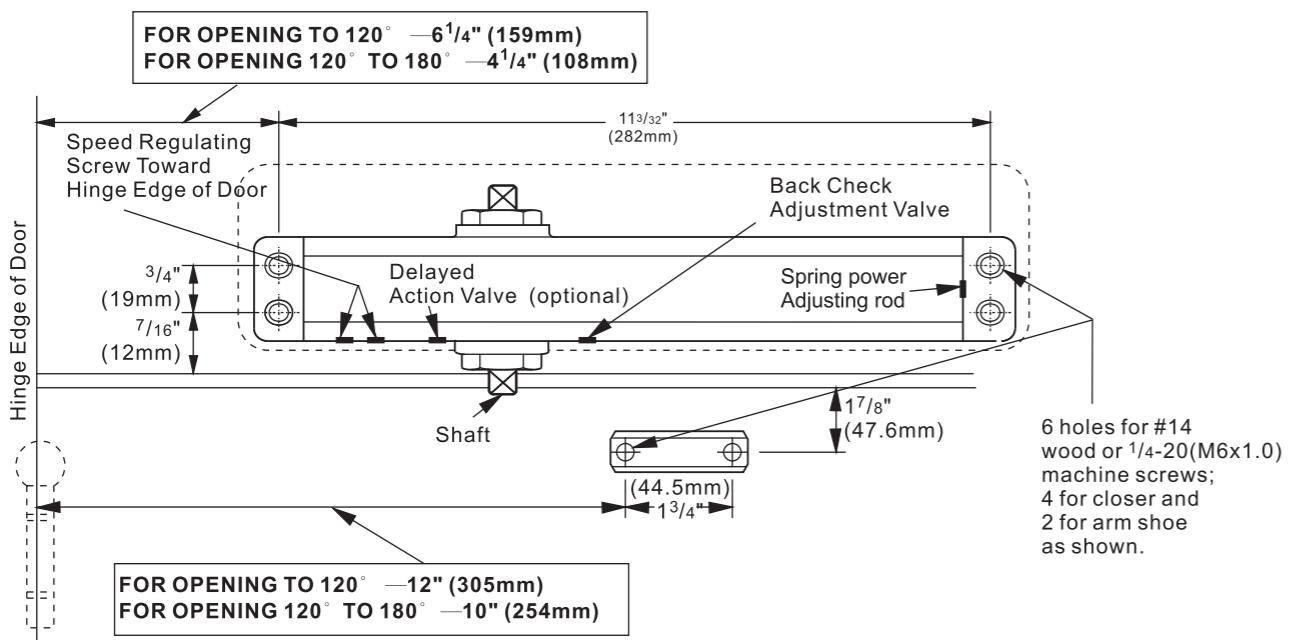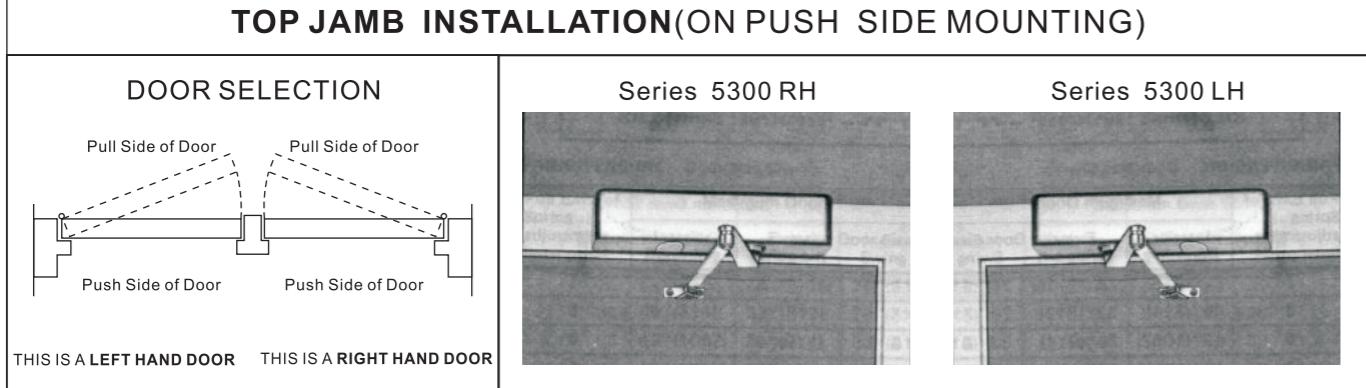

INSTALLATION INSTRUCTIONS

1. Select degree of opening and use dimensions shown in above template to mark four holes on door for closer and two holes on frame for arm shoe.
2. Drill pilot holes in door and frame for #14 wood screws or drill and tape for 1/4-20(M6x1.0) machine screws.
3. Mount closer on door WITH SPEED REGULATING SCREW TOWARD HINGE EDGE.
4. Place main arm on shaft on top of closer at proper index mark as illustrated. FOR RIGHT HAND DOOR No . 4 (illustration "A") FOR LEFT HAND DOOR No . 1 (illustration "B"). Tighten arm screw with lockwasher securely.
5. Attach the arm shoe of the forearm to the frame.
6. Adjust length of forearm so when it is attached to main arm it will be at a right angle (90°)to door when door is closed and assemble at elbow then tighten locknut.

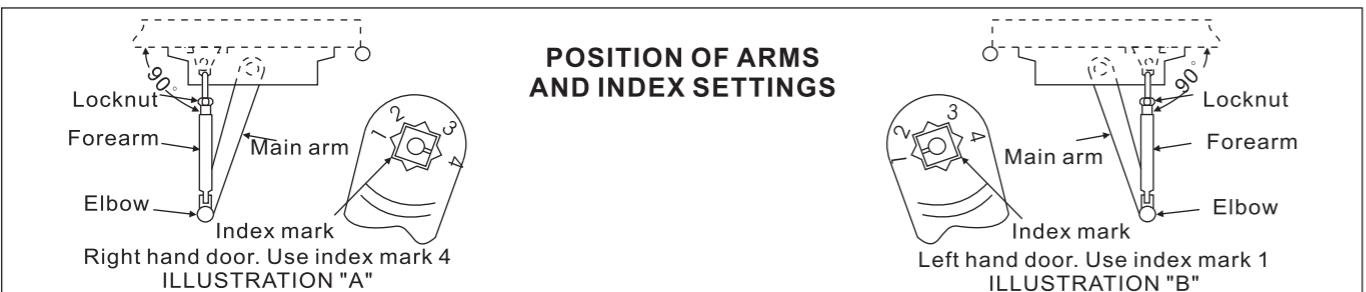

INSTALLATION INSTRUCTIONS

SUPER ADJUSTABLE
Adjustable Closing Power
No Hold- Open
SURFACE MOUNTED

PARALLEL INSTALLATION(ON PUSH SIDE MOUNTING)

