
90

# **GLYNN-JOHNSON**

829407-00

**Function Conversions** 

Installation Instructions

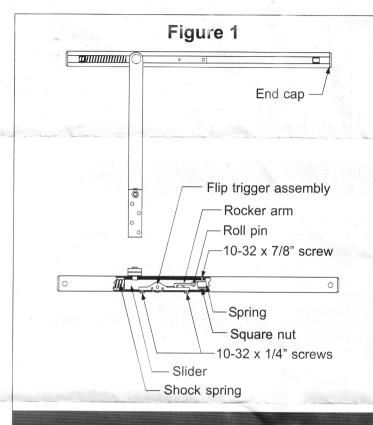


### Hold-open to Stop Only

(Refer to Figure 1)

- 1. Remove the 2 screws on the bottom of the channel which hold the flip finger assembly in the channel.
- 2. With the slider away from the spring end of channel, remove the trigger assembly from the channel.
- Note: When the trigger assembly is removed, the overhead will function as a stop only. Removing the holdopen components from the slider is not necessary for conversion.

#### Optional

- 3. Remove the overhead unit from door and frame.
- 4. Remove the end cap by knocking the slide against it.
- 5. Slide the arm assembly out of the channel.
- Remove the screw at the end of the slider. The square nut and spring will drop out of the slider.
- Remove the roll pin from the side of the slider. The rocker arm will drop out of the slider.
- 8. Slide the arm assembly into channel, with the short end of the slider toward the shock spring in channel.
- 9. Replace the end cap.
- 10. Reinstall the overhead unit.

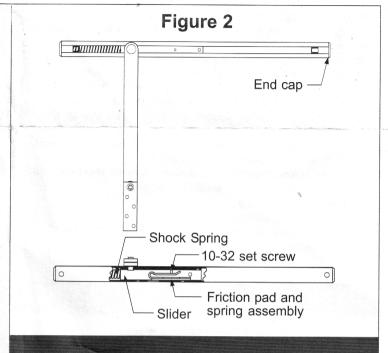

## Friction Hold-open to Stop Only

(Refer to Figure 2)

- 1. Remove the set screw from the top of the slider.
- Note: When the set screw is removed from slider, the overhead will function as a stop only. Removing the friction components from the slider is not necessary for conversion.

#### Optional

- 2. Remove the overhead unit from door and frame.
- 3. Remove the end cap by knocking the slide against it.
- 4. Slide the arm assembly out of the channel. The friction pad and spring assembly will drop out of the slider.
- 5. Slide the arm assembly into channel, with the short end of the slider toward the shock spring in channel.
- 6. Replace the end cap.
- 7. Reinstall the overhead unit.

### Stop Only to Hold-open

#### (Refer to Figure 1)

- 1. Remove the overhead unit from door and frame.
- 2. Remove the end cap by knocking the slide against it.
- 3. Slide the arm assembly out of the channel.
- 4. Place rocker arm inside slider as shown.
- 5. Install roll pin through slider and rocker arm.
- 6. Put screw through the top of the slider in the hole nearest the end of the slider.
- 7. Place spring over screw inside the slider.
- 8. Put square nut over screw and tighten about 4 turns.
- 9. Place the flip trigger assembly inside channel with the short end of the assembly toward the shock spring.
- 10. Secure the flip trigger assembly with 2 screws through the bottom of the channel.
- 11. Grease the rocker arm and the flip trigger with a graphite or white lithium grease, not supplied in kit.
- 12. Slide the arm assembly into channel, with the short end of the slider toward the shock spring in channel.
- 13. Replace the end cap.
- 14. Reinstall the overhead unit.
- 15. Adjust the hold-open tension as described in the installation instructions.

### Friction Hold-open to Hold-open

#### (Refer to Figure 1 and 2)

- 1. Remove the overhead unit from door and frame.
- 2. Remove the end cap by knocking the slide against it.
- Slide the arm assembly out of the channel. The friction pad and spring assembly will drop out of the slider.
- 4. Remove the set screw from the middle of the slider.
- 5. Place rocker arm in slider as shown.
- 6. Install roll pin through slider and rocker arm.
- 7. Put screw through the top of the slider in the hole nearest the end of the slider.
- 8. Place spring over screw inside the slider.
- 9. Put square nut over screw and tighten about 4 turns.
- 10. Place the flip trigger assembly inside channel with the short end of the assembly toward the shock spring.
- 11. Secure the flip trigger assembly with 2 screws through the bottom of the channel.
- 12. Grease the rocker arm and the flip trigger with a graphite or white lithium grease, not supplied in kit.
- 13. Slide the arm assembly into channel, with the short end of the slider toward the shock spring in channel.
- 14. Replace the end cap.
- 15. Reinstall the overhead unit.
- 16. Adjust the hold-open tension as described in the installation instructions.

### Stop Only to Friction Hold-open

#### (Refer to Figure 2)

- 1. Remove the overhead unit from door and frame.
- 2. Remove the end cap by knocking the slide against it.
- 3. Slide the arm assembly out of the channel.
- 4. Remove any grease from inside channel.
- 5. Place friction pad and spring assembly into slider.
- 6. Slide the arm assembly back into the channel with the short end of the slider toward the shock spring end of the channel.
- 7. Put set screw in top of slider.
- 8. Replace the end cap.
- 9. Reinstall the overhead unit.
- 10. Adjust the friction hold-open tension as described in the installation instructions.

### Hold-open to Friction Hold-open

#### (Refer to Figure 1 and 2)

- 1. Remove the overhead unit from door and frame.
- 2. Remove the end cap by knocking the slide against it.
- 3. Slide the arm assembly out of the channel.
- 4. Remove the 2 screws on bottom of channel which hold the flip trigger assembly in the channel.
- 5. Remove the trigger assembly from channel.
- 6. Remove any grease from inside channel.
- 7. Remove the screw from the end of the slider. The square nut and spring will drop out of the slider.
- 8. Remove the roll pin from the side of the slider. The rocker arm will drop out of the slider.
- 9. Place friction pad and spring assembly into slider.
- 10. Slide the arm assembly back into the channel with the short end of the slider toward the shock spring end of the channel.
- 11. Put set screw in top of slider.
- 12. Replace the end cap.
- 13. Reinstall the overhead unit.
- 14. Adjust the friction hold-open tension as described in the installation instructions.

