

Adjustment facility

Braking effect

Adjusting the braking effect with the screw

- Unscrew to increase braking effect
- Tighten screw to decrease braking effect

