 
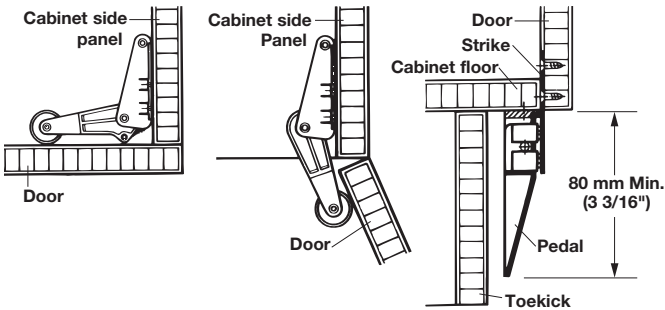 


Waste Bin Accessories


→ Door Opener

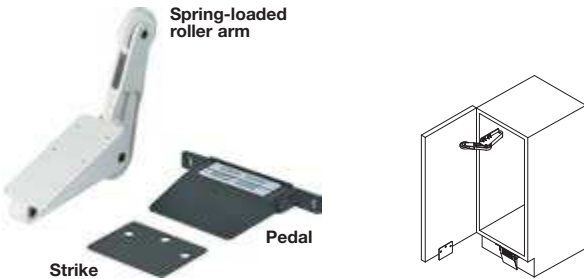

- > For hinged base cabinet doors
- > Material: Pedal and Roller Arm: Plastic; Strike: Steel

Color	Item No.
white	502.15.033

 → Door Opener

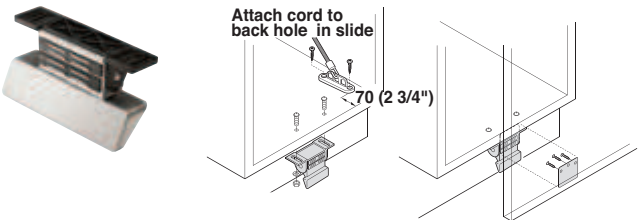


- > Mounted to pull-out door for frameless cabinets
- > For silver US Cargo 15 and 21 only - not for use with soft close
- > Material: Pedal: Plastic; Strike: Steel, enameled

Finish	Item No.
silver/black	502.15.250

Supplied With
Mounting hardware

 
→ Foot Pedal

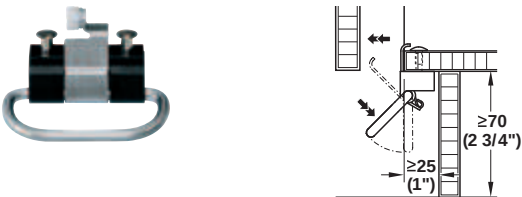

- > For automatic extension of a waste bin
- > Material: Stainless Steel

Finish	Item No.
satın	502.47.183

 → Foot pedal

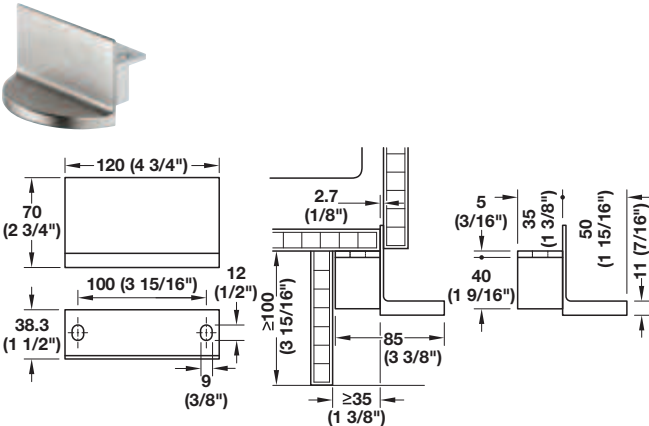

- > For waste bins behind front panels
- > Easily retrofitted
- > Can also be used for the bottom drawer
- > Toe kick height: min. 100 mm (3 15/16'')
- > Toe kick offset: min. 35 mm (1 3/8'')
- > Width: 120 mm (4 3/4'')
- Material: Stainless Steel

Item No.
502.47.186