 


Wireless wall switch



Häfele Connect Mesh 4-button remote and wall plate kit



Battery included in kit only

- > Version: 4-button remote with wall plate, mounting bracket and battery
- > Material: Plastic
- > Color: White
- > L x W x H: 119 x 75 x 8 mm (4 11/16" x 3" x 5/16")
- > Mounting: Screw mounted on a wall surface or installed over a wall box
- > Supplied with: 4-button remote (850.00.951)
Decora style wall plate with mounting screws (820.66.753)
Mounting bracket for remote control (825.73.775)
CR2032 button cell lithium battery (002.99.032)

Item No.

 
450.80.868



Please order Häfele Connect Mesh 6-way distributor separately, see page 130.



Häfele Connect Mesh 4-button remote - for Decora style wall plate



Design advantage

- > Designed to fit with Decora style wall plates, this wireless 4-button switch provides a clean contemporary appearance, and can be mounted flush to the wall

- > Area of application: For controlling lights connected to Connect Mesh distributors
- > Function: Each button can be programmed with the Häfele Connect Mesh App to control a group of lights or to activate specific scenes
- > Material: Plastic
- > Color: White
- > L x W x H: 67 x 33 x 8 mm (2 5/8" x 1 5/16" x 5/16")
- > Mounting: Use as a handheld control or wall mount with a Decora style wall plate and mounting bracket
- > Supplied with: 4-button remote switch



Battery not included.
Please order 1 replaceable CR2032 button cell lithium battery (1 x 002.99.032) separately, see page 144.

Item No.

850.00.951

