
844S Installation Instructions

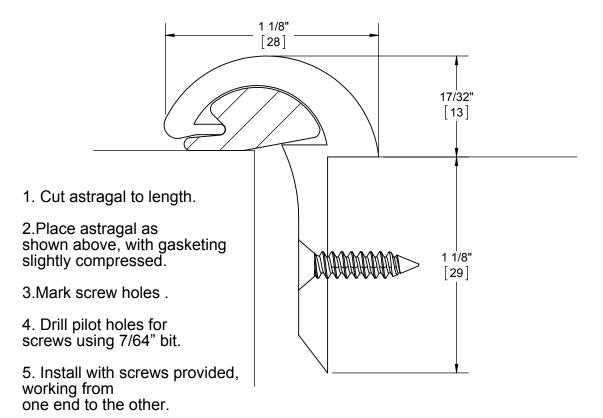



HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. CALL HAGER ENGINEERING AT 1-800-325-9995 FOR THE LATEST REVISION DATE OF TEMPLATE.

6.Adjust astragal so it does not impede closing

and latching of

doors.

PRIMARY DIMENSIONS SHOWN IN INCHES, DIMENSIONS IN [] ARE MILLIMETERS.

MATERIAL
Material <not specified>

DO NOT SCALE DRAWING

DRAWN RCT 5/8/2012
ENG. APPR. -
Q.A.

TOLERANCES:
FRACTIONAL: ±0.015"
ANGULAR: MACH: ± 1° BEND: ±1°
TWO PLACE DECIMAL: ±0.01"
THREE PLACE DECIMAL: ±0.004"

844S ASTRAGAL/MEETING STILE