

Push Button and Push Plate Switches

E2.4
Jan 08

C520 -

 
Wall mounted. Black face plate with a red button.
2 3/4" x 4 1/2" (70 x 114).

C521 -

Jamb mounted. Black face plate with a red button.
1 3/4" x 4 1/2" (44 x 114).

C521-2 -

Jamb mounted. Black face plate with a red button.
1 3/4" x 5" (44 x 127).

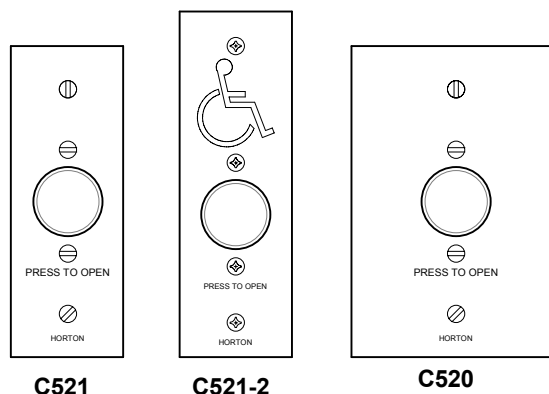

C521

 
C521-2

C520

For use on all products


C1315-2 -

For use on handicap designated openings.
Momentary contact microswitch assembly with 1" (25) diameter red button with junction box.
Junction box is 4" (102mm) square x 1 1/2" (38) deep, molded plastic with 1/8" (3) thick blue plastic cover with raised white lettering and handicap logo. This unit may be surface mounted on the wall or a post.

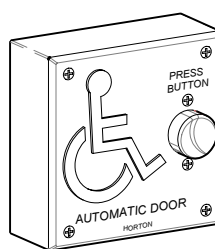

C1315-2

 For use on slide, swing and folding

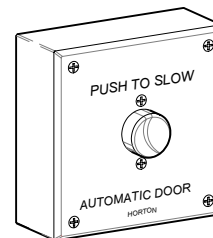

C9616

 
For use on revolving doors

C9616 -

"Push to Slow" button for revolving doors.
Same as C315-2 except for engraving on face cover.

C1260 (Plain) -

6 1/4" (159) diameter brushed stainless steel push plate and microswitch assembly with momentary contact.
Assembly mounts to standard junction box, 4" (102) square x 1 1/2" (38) deep (not included) with four allen types screws (included) which are accessible through two holes in the front face of the push plate.

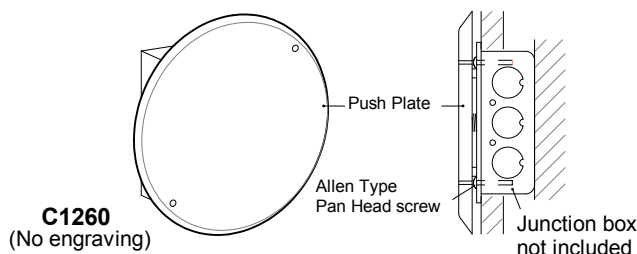

C1260
(No engraving)

C1260-1, 3 & 4 (Engraved) -

The plate can be engraved with the international handicap symbol and/or a message as shown (engraved symbol and letters colored blue).



C1260-1



C1260-3



C1260-4



C1260-5

For use on slide swing and folding

If Radio Control required, specify with "RC" behind item number. See next page for Transmitter and Receiver.