



Indicator Lock Installation Instruction

Step1. Install the latch and tighten the screws.


A. How to adjust the latch.

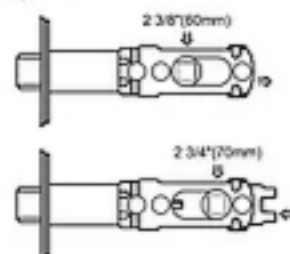

B. How to install.

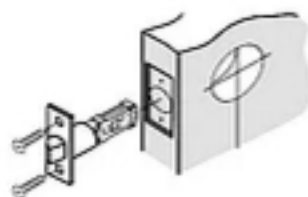


Step2. Install strikes with supplied screws.

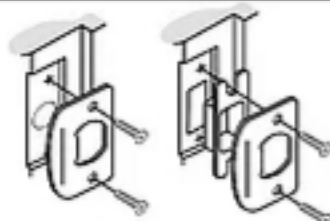


Step3. Install Exterior mechanism.


A. The lock has to be in unlocked position; the indicator should display "Vacant"

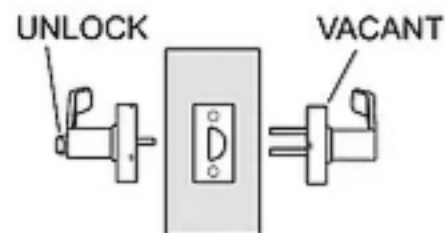

B. Install Indicator.

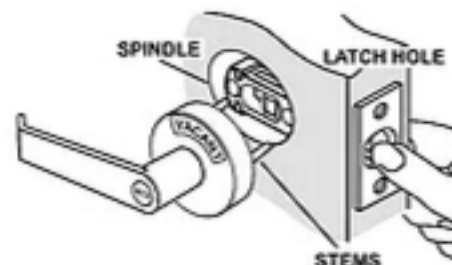


C. To reverse the level L-R Remove the handle with included key and reverse the handle.

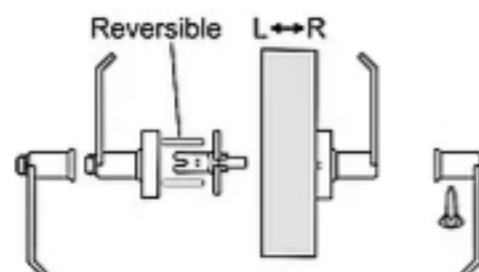


INSTALLATION OF LOCK

Step4. Install Interior part of the lock.

A. Remove the cover with included key.

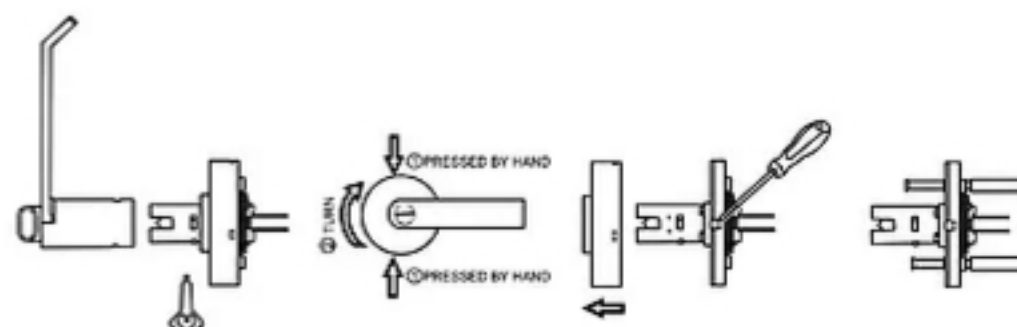


B. Install the interior handle. Make sure the position is "Unlock"

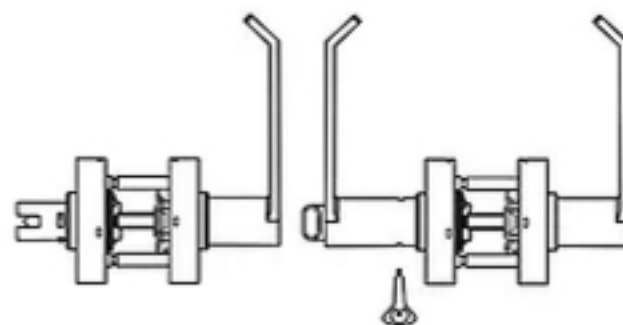

HOW TO USE THE KEY?

Please use the key from outside when emergency happens

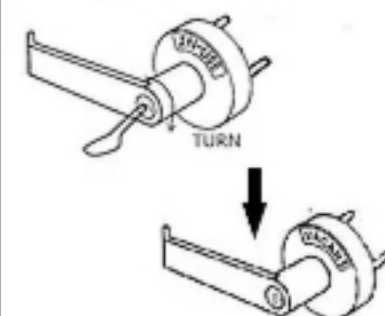

Suitable for door thickness: 1-3/8" (35mm) to 2" (50mm)

1 FOLD HERE ON DOOR EDGE

2 MARK FOR 1 1/2" (45mm) DOOR

3 MARK FOR 1 1/2" (35mm) DOOR

3 THEN DRILL 1 1/2" (25mm) HOLE IN CENTER DOOR OF EDGE (2" IN DEPTH)

TEMPLATE

FOR INSTALLING ENTRY LOCK AND DEADBOLTS

4 MARK CENTER OF HOLE ON DOOR FACE

5 DRILL 2-1/8" (51mm) HOLE

IMPORTANT! PLACE TEMPLATE ON HIGH EDGE OF DOOR BEVEL