

INST.COR

COR32, COR42, COR52, **COR60 & COR72**



Coordinator with CB1 Carry Bar,


AND TAP MOUNTING HOLES FOR

BUSHINGS. THE BUSHING WILL PREVENT THE FILLER BAR FROM

COLLAPSING.

12-24 MACHINE SCREW. INSTALL 12-24 MACHINE SCREW THROUGH

Installation Instructions

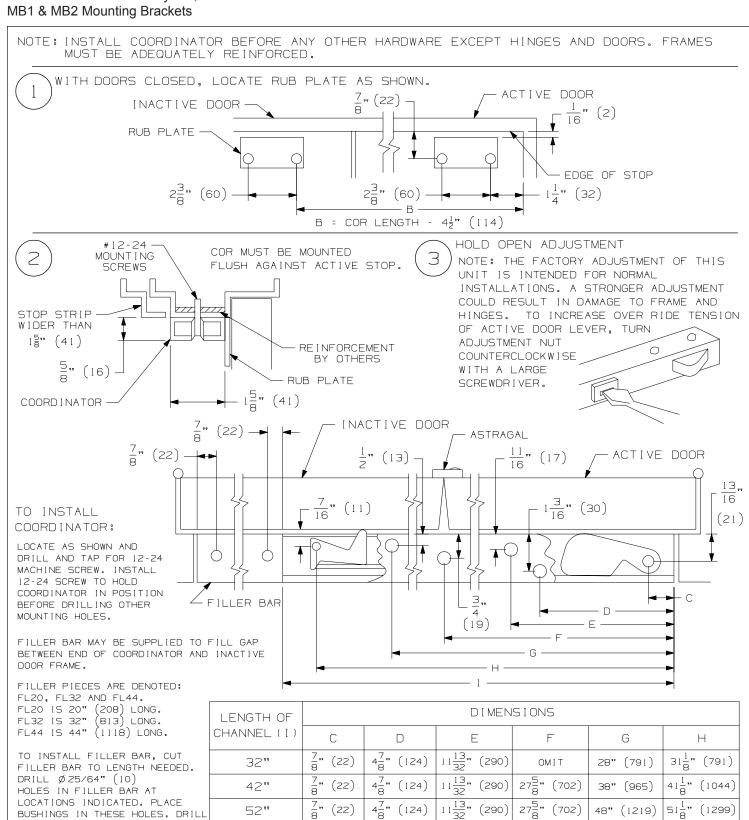

 $4\frac{7}{8}$ " (124)

 $4\frac{7}{9}$ " (124)

(22)

(22)

60"

72"

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

(702)

(702)

56" (1422)


68" (1727)

(1502)

(1807)

(290)


(290)

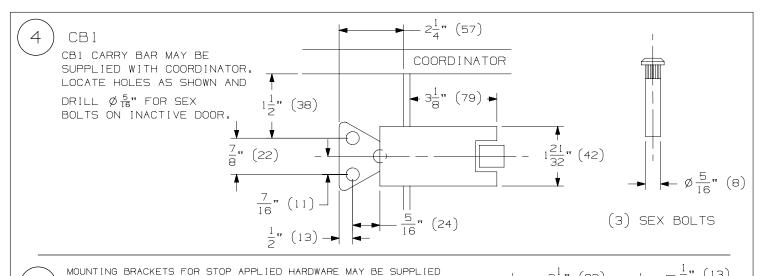

MOUNTING BRACKETS FOR STOP APPLIED HARDWARE MAY BE SUPPLIED WITH COORDINATOR, BRACKETS MUST BE FIELD PREPARED FOR STOP APPLIED HARDWARE, LOWER MOUNTING HOLES FOR DOOR APPLIED HARDWARE 15" TO CLEAR COORDINATOR AND MOUNTING BRACKET.


NOTE: DO NOT DRILL HOLES IN THE COORDINATOR. THIS WILL CAUSE DAMAGE TO THE UNIT AND THE COORDINATOR WILL FUNCTION CORRECTLY

MB2 MOUNTING BRACKET FOR STRIP WIDTH UP TO $2\frac{1}{2}$ "

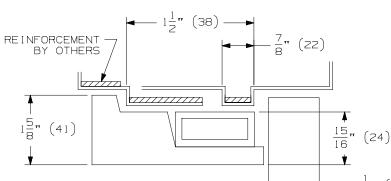

MB1 MOUNTING BRACKET


FOR STOP STRIP WIDTHS OVER $2\frac{1}{2}$ " (64)

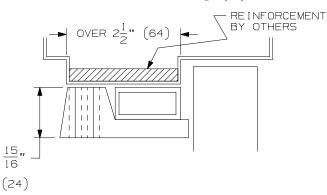

NOTE: FOR MB1F, MB2F, MB3F, MB1V, MB2V OR MB3V, SEE SEPARATE INSTRUCTIONS.

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

	\longrightarrow 3 $\frac{1}{4}$ " (83) \longrightarrow \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc (13)
	$-\frac{1}{2}$ " (13)
SE CTLY.	
4"	2" (51)
<u> </u>	$-\frac{1}{2}$ " (13)
$1\frac{5}{8}$ " (41) —	5 " (3)
	<u>16</u> " (8) → <u>3</u> " (10)
	$\frac{11}{16}$ " (17)

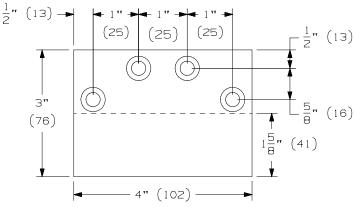

	QTY	SCREW DETAILS
COORDINATOR	6	12-24 X 1 ¹ / ₄ " TRPHMS
FILLER BAR	2	BUSHINGS
FILLER DAR	2	12-24 X 1 ¹ / ₄ " TRPHMS
RUB PLATE	4	8 X ¾" FPHSMS
CARRY BAR	m	12-24 X 1 ¹ / ₄ " TRPHMS
CARRI DAR	m	Ø ⁵ ™ SEX BOLT
MB1 OR MB2	4	12-24 X 1 ¹ / ₄ " TRPHMS

Customer Service

1-877-671-7011 www.allegion.com



© Allegion 2014 Printed in U.S.A. INST.COR Rev. 01/14-b