

Installation

1. Provide a 1" diameter hole in basin at location where soap dispenser is desired.
2. Insert the shank through the hole in the basin and secure the shank with the neoprene washer, steel washer, and wing nut provided (1).

NOTE: The shank can be cut to the correct length required.


3. FOR DISPENSERS WITH PLASTIC SOAP CONTAINERS: Thread the adapter onto the shank. Then thread the plastic soap container into the adapter.

FOR DISPENSERS WITH METAL SOAP CONTAINERS: Thread the stainless steel soap container onto the shank.


4. On the plunger and valve assembly, place the square cut end of the supply tube on the cylinder and tighten the tube on the cylinder with the cable tie provided (2).

NOTE: DO NOT install the angled cut end of the supply tube on the cylinder.

5. Insert the entire plunger and valve assembly with supply tube into the shank mounted to the basin.
6. Tighten the escutcheon with the wrench provided (1).

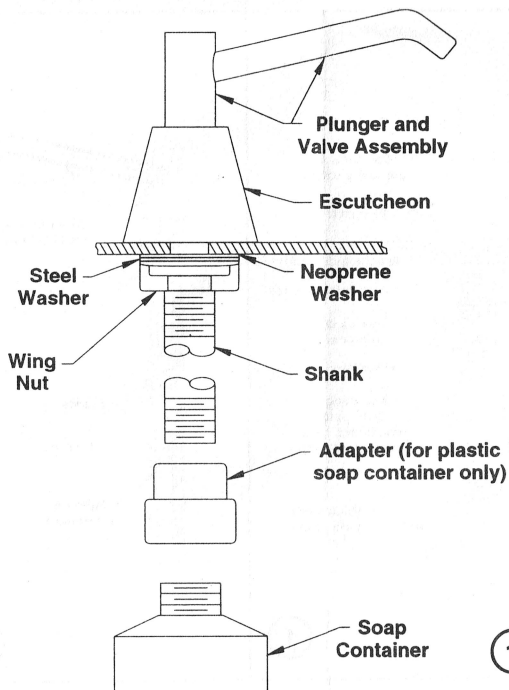

1

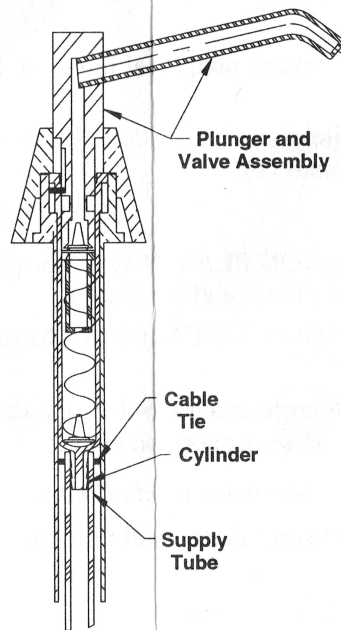

2


Installation

6322, 6324, 6326

Soap Valves

Boutons-poussoirs de savon

Válvulas para jabón

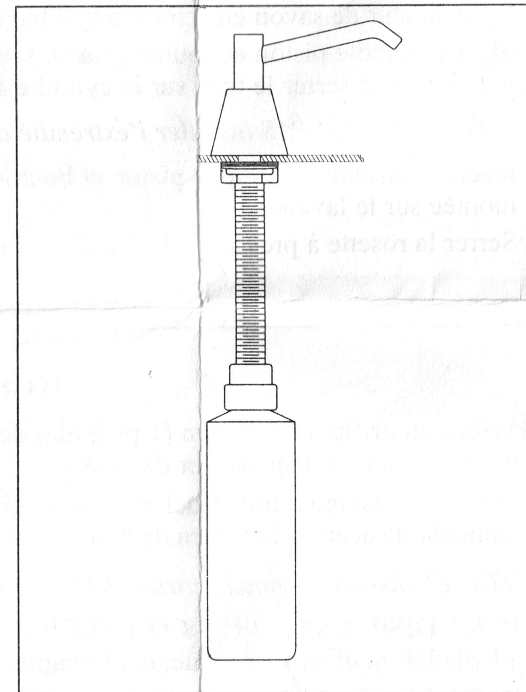

Bradley 

P.O. Box 309, Menomonee Falls, WI 53052-0309

TEL 1-800-BRADLEY FAX 262-251-5817

www.bradleycorp.com

Made in Taiwan

P20-105 Rev. E; ECN 06-1541
© 2006

page 1 of 2
8/31/06