


SERIES 2090 PARTS LIST

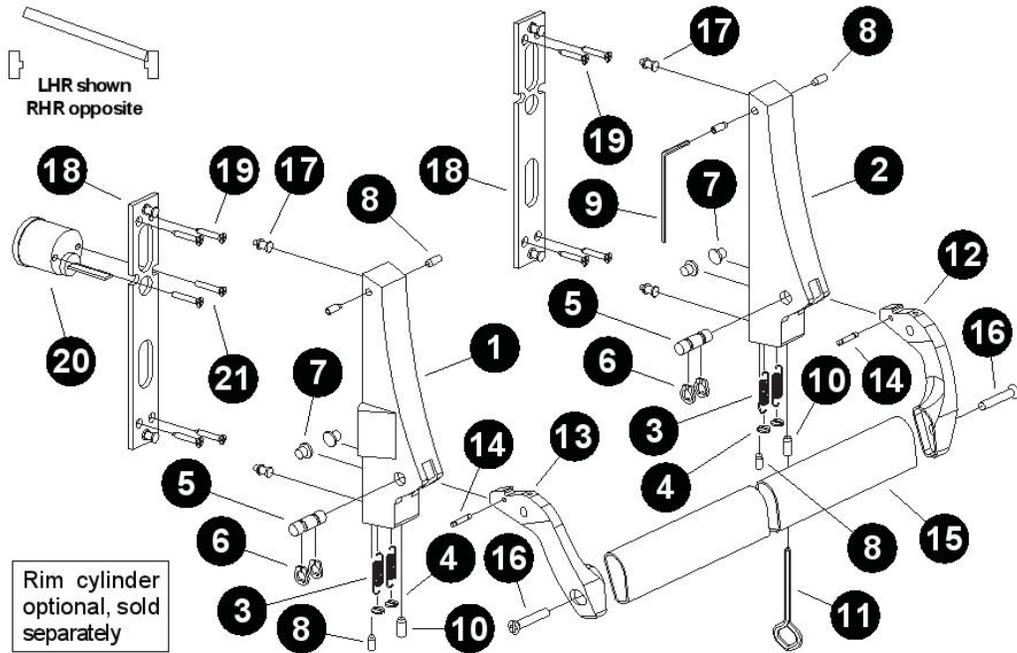


Item	Qty.	Description
1	1	Housing, active (RHR or LHR)
2	1	Housing, inactive (RHR or LHR)
3	4	Tension spring
4	2	Spring retainer
5	2	Axle pin
6	4	Retaining ring
7	4	Axle bushing


Item	Qty.	Description
8	6	1/4-20 x 3/8" socket head set screw
9	1	1/8" Allen wrench
10	2	7/16-14 x 3/4" socket head set screw
11	1	Dogging key
12	1	Lever arm, LH
13	1	Lever arm, RH
14	2	Spring pin

Item	Qty.	Description
15	1	Crossbar
16	2	1/4-20 x 1" Taptite
17	4	Housing mounting stud (metal doors)
18	2	Assembly plate (for wood doors)
10	8	#10 x 1" FPHSMS (for wood doors)
20	1	Rim cylinder
21	2	Rim cylinder screws


**SD36 Strike (standard)**

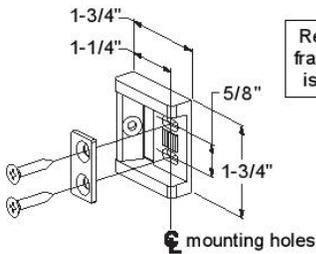


**SD35 Strike (optional)**

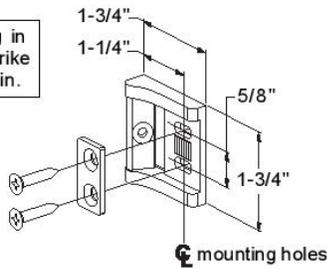


**Double Doors with STK45 Strike**

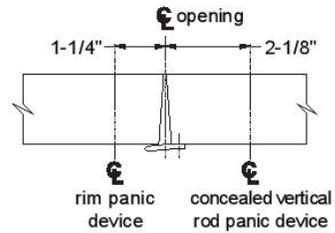

**Surface Mounted Strike**

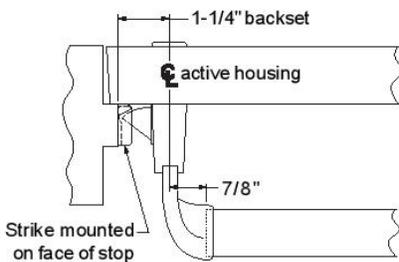

**Mortised Strike**

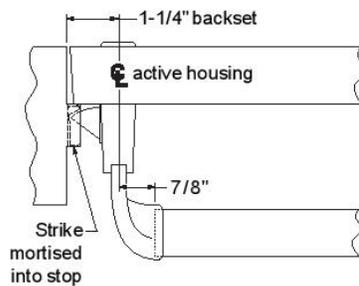

**Double Doors with RM70 Mullion**

