




Box 459 - Rosemount, MN 55068
 Phone 800-328-0953
 Fax 800-334-8823

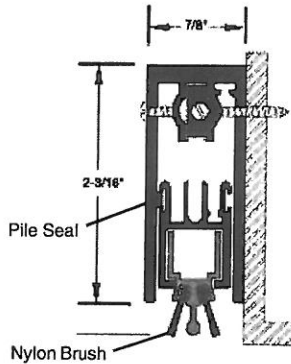

Automatic Door Bottom Part # 933

Please Note - For the sizes:
 24" cannot be trimmed.
 36", 42" and 48" can be trimmed
 up to 3". All other sizes can be
 trimmed up to 1".

Maximum drop 3/4"

1. Slide the brush out of its aluminum retainer.

2. Cut only the end of the door bottom opposite the adjusting screw. Cut the door bottom 3/16" shorter than the distance between door stops. DO NOT cut anything from end with the adjusting screw.

3. Cut the brush the same size as the door bottom with a wire cutter or pliers. CAUTION: CUT WITH A WIRE CUTTOR OR PLIERS. THIS IS NECESSARY TO CRIMP THE BRUSH FILAMENTS IN THE GALVANIZED RETAINER. IF THIS IS NOT DONE, THE BRUSH FILAMENTS WILL NOT BE LOCKED IN AND MAY COME OUT OF THE GALVANIZED RETAINER.

4. Mount door bottom with adjustment screw at the hinged side of the door and the end of the case tight against the door when door is closed.

5. Loosen adjustment screw to give complete seal when door is closed. Maximum drop 3/4".

6. This door bottom is designed to have the operating bar move sideways about 1/8" to 3/16" toward the swinging end of the door.

7. The door bottom drops at the hinged end first so the swinging side of the door can swing freely. Pile inserts prevent air passing over the operating bar. Automatic is reversible. Fits right or left hand doors.

8 Operate the door several times to ensure that the automatic door bottom is properly adjusted so as not to inhibit the door from self-closing and latching.

Things to look for on 933 installation

1. When trimmed down, a burr was left. When trimmed to length make sure there are no burrs or chips that have gotten in the case.

2. Case is not collapsed or pinched so bar can't come down. Bar must move freely. You should be able to have the bar go up and down with your finger.

3. Adjusting screw not hitting jamb: Adjusting screw must hit jamb for the automatic door bottom to work properly.

4. Mounting screw not in straight: Mounting screws must be in straight so not pressing against case.

5. Clearance under door not greater than 3/4".

6. Watch so that the bar is not pulled down too far when trimming or looking into the door bottom. Pulling the bar down too far can stretch the spring and ruin the door bottom so it will not work properly.

7. Automatic works on a pivot system. The adjusting screw hits the hinge side of the door making the bar come down on the hinge side - when the bar comes in contact with the floor, threshold or some hard surface, it pivots the bar so that the latch or strike side of the bar will come down. Make sure automatic is adjusted correctly.



Meets UL10B, UL10C
 Category J 17L5
 Meets CAN4-S104-2010

Positive Pressure Tested Gasketing Materials for Fire Doors.

Intended for Application to/with listed steel frames and/or classified steel covered composite, hollow metal type fire doors rated up to 3 hours, wood and plastic covered composite type fire doors rated up to 1-1/2 hours, and wood core type fire doors rated up to 20 minutes.