

20-25 FLOOR CLOSER

3/4" OFFSET PIVOTED-HANDED

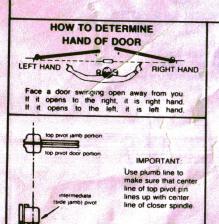

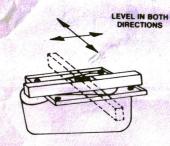

INSTALL CEMENT CASE IN FLOOR

- A. For floor plate application: Cement case is set 1/8" below floor level.
- B. For threshold application: Cement case is set flush with floor
- C. Set cement case in floor and block in pos-
- D. Case should be parallel with center line of
- E. CEMENT CASE SHOULD BE LEVEL Place levels per illustration.
- F. Grout in cement case with closer. Cement should not get between closer and case.

1. INSTALLATION INSTRUCTIONS

RIGHT HAND Installation




INSTALL CLOSER

- A. Measure 13 16" out from door jamb.
- B Allow 1 8 minimum clearance from door stop to door face. Measure door thickness. Add 3 4"
- C. Where lines meet determines center line of close

3. INSTALL TOP PIVOT AND CLOSER ARM

- A Install top pivot in door per template
- B. Install top pivot in frame per template
- Center line of pivot should line up with center line of closer. Use plumb line as
- D. If side jamb pivot is used, see template for

4. HANG DOOR

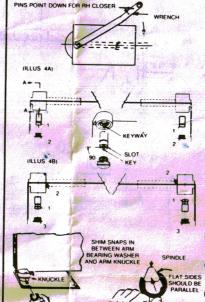

CAUTION: Closer is shipped with "stroke" valve down. DO NOT FORCE VALVE DOWN

- A. Using wrench, turn spindle until wrench is parallel with center line of closer.
- B. Set door on closer spindle. DO NOT FORCE DOOR CLOSED WHILE "STROKE" VALVE IS TURNED

NOTE: You may have received two different styles of top pivots, check the pivot pins. If the pivot pin has an O-ring see instruction C. If no O-ring see instruction D.


- Push item 1 "top pivot pin" into place. Note: Key on pin MUST ALIGN WITH KEYWAY Keyway is towards face of door. Slot in pin is parallel to face of door. Attach "cap" item 2. (Illus. 4A) CAP MUST BE TIGHTENED SECURELY
- Push item 1 "top pivot pin" into place and tighten item 2 "set screw". Note: Undercut in pivot pin MUST. ALIGN WITH SET SCREW Attach item 3 "cap" (Illus. 4B)
- E Open "stroke" valve (counterclockwise) one turn.
- F. If door drags at floor (or threshold, if used), raise door to desired clearance and insert one or more
- G While working door back and forth TIGHTEN ARM LOCKING SCREW SECURELY with wrench fur-
- H. Put arm cap on closer spindle and secure TIGHTLY with cap screw furnished.

SPRING POWER ADJUSTMENTS

This closer can be adjusted for increased or decreased spring power

These adjustments if required should be done by an authorized repair agency or consult factory for proper instructions.

Repairs, parts replacement or internal adjustments must be done by a Rixson authorized repair agency. Consult Rixson Mfg. Representative or factory for authorized repair agency in your

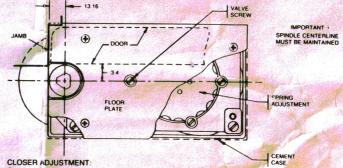

PUSH SHIM INTO POSITION

WITH THUMB OR


SCREWDRIVER


Closing speed can be adjusted to suit local conditions and requirements. With a screw driver turn the adjusting screw that projects through the floor plate or threshold, either in or out as the case may be until the desired action is attained. Turn this valve screw to the right, clockwise, to decrease closing speed and to the left to increase the closing speed. FORCING THIS SCREW DOWN WILL IMPAIR ITS OPERATION.

closer number	door location and function	meximum door width
no. 20	interior	not over 3'6"
	outswinging entrance, vestibule	not over 2'10"
	inswinging entrance	not over 2'6"
no. 25	interior	not over 4'0"
	outswinging entrance, vestibule	not over 3'6"
	inswinging entrance	not over 3'2"

PARTICISATION OF THE PROPERTY OF THE PROPERTY

FRANKLIN PARK, ILLINOIS 60131 U.S.A. REXDALE, ONTARIO, CANADA M9W 2Z4

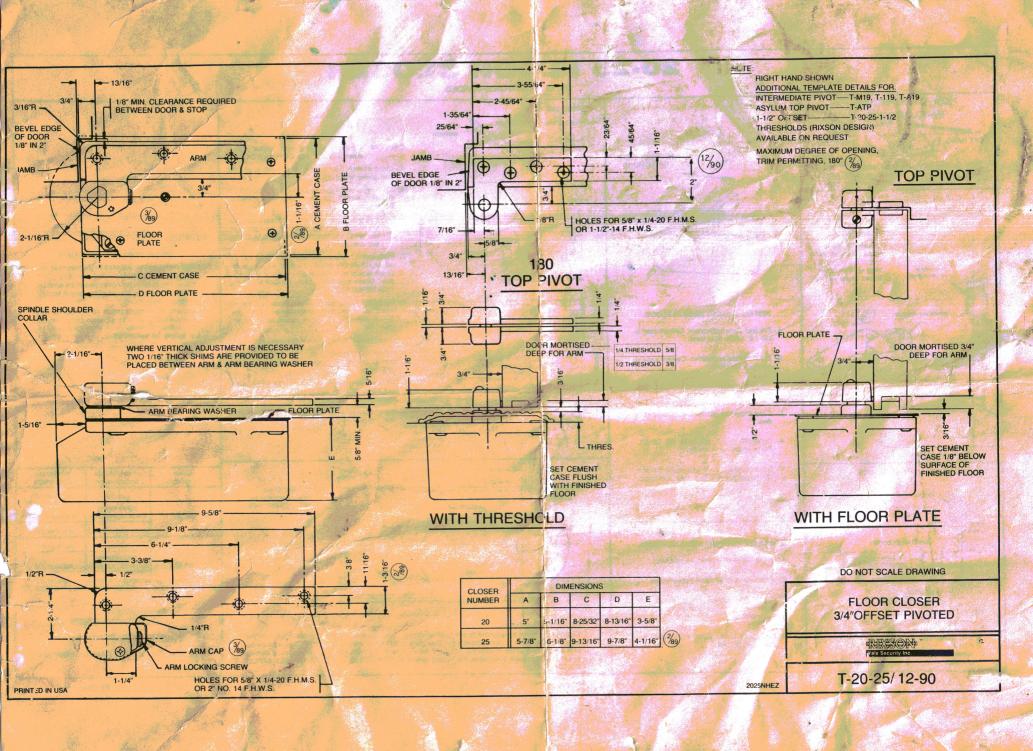

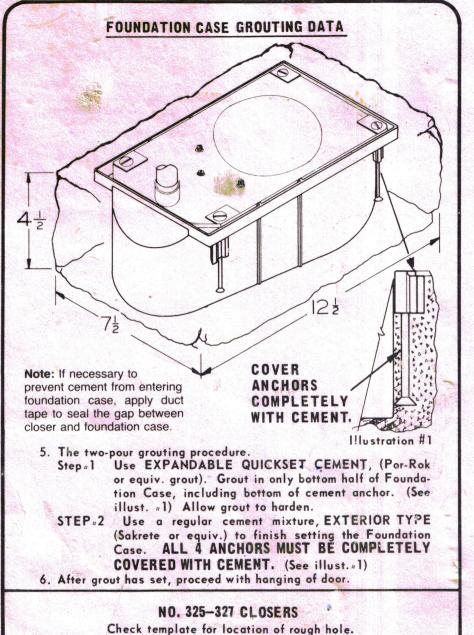


FRANKLIN PARK, ILLINOIS, U.S.A. - MSSISSAUGA, ONTARIO, CANADA

PRINTED IN U.S.A.

25016

REVISED: 5-88

OVER

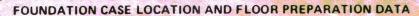

- Prepare rough hole in concrete as shown.
 IMPORTANT: Refer to closer template for exact location.
- 2. Mount the spotter support straps to closer, with #10-24 x 5/16 screws supplied.
- 3. Set foundation case in rough hole and locate in proper relationship to JAMB with the spindle locator. Place magnet-level on closer spindle. Shim as required to level closer and set for correct height from finished floor.
- 4. Use a two-pour grouting procedure per instructions on reverse side. IMPORTANT: Spindle locator to be used for %" offset only. Refer to template for 1½" offset or other special closer instructions.

