


SCHLAGE E/Installation Instructions

 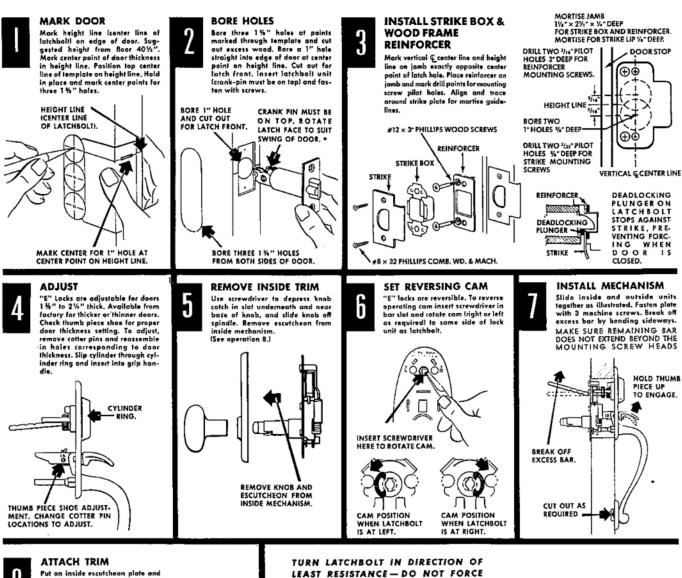


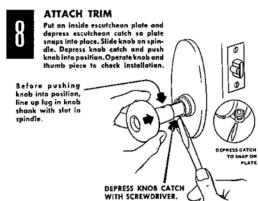

LEAST RESISTANCE - DO NOT FORCE

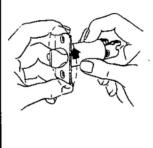

"To adjust: Hold latch with Crank Pin on top as shown in illustration above and rotate the face plate to suit swing of door. This reversible latch unit has a self-adjusting face plate which permits it to be installed on either flat or bevel



*