



Passage latch trim

L9010, LM9310

Levers

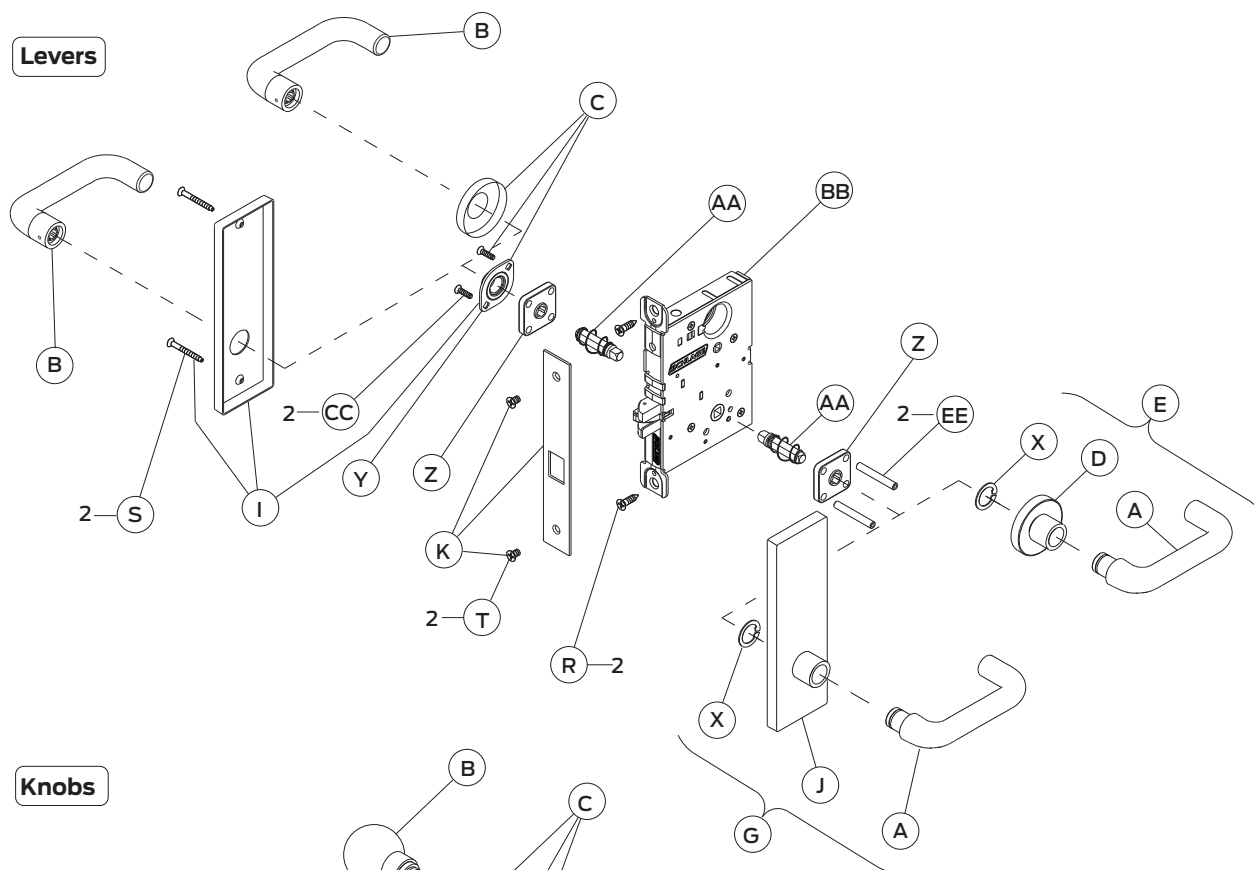

Knobs

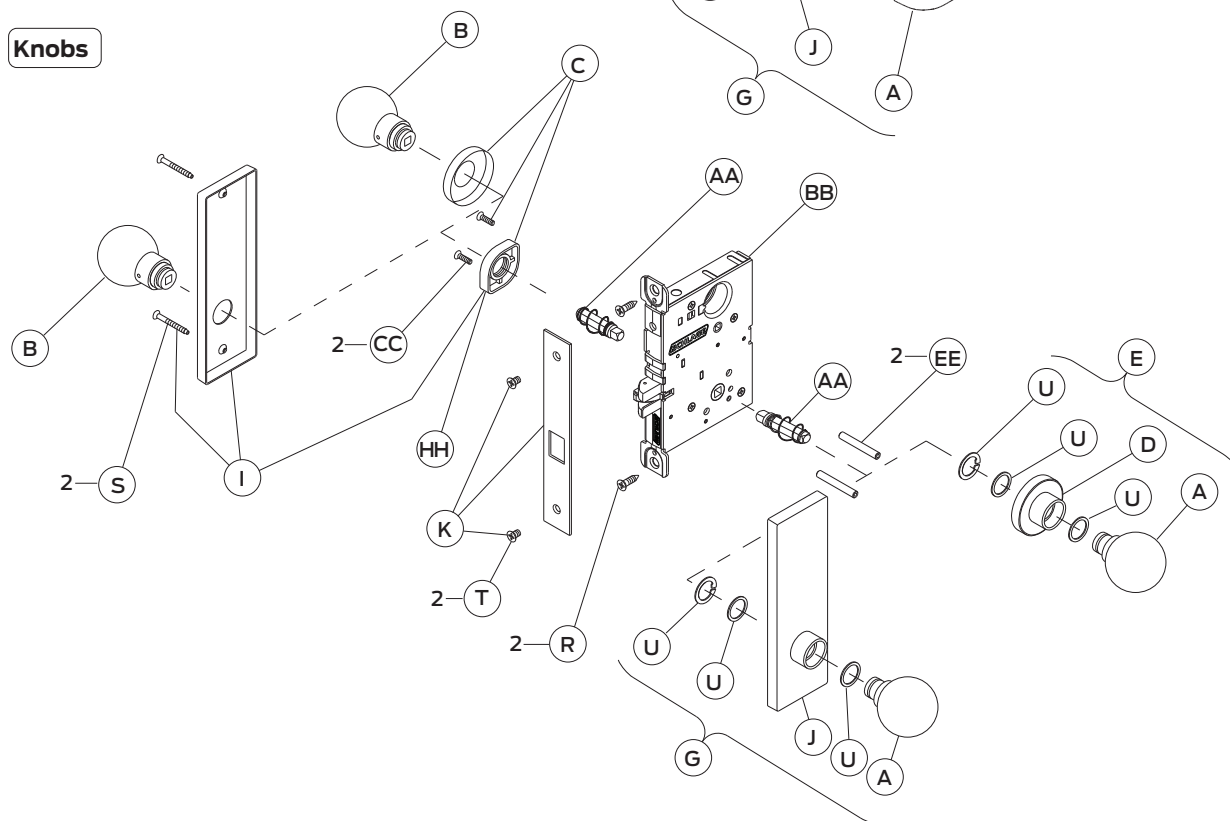

Note: LM9310 lock function has latch and auxiliary latch. Lock case and armor front shown with latch only.

Trim assemblies

	P/N	Description	L9010	LM9310
A	09-401	Outside knob and lever	•	•
B	09-402	Inside knob and lever	•	•
C	09-403	Inside rose	•	•
D	09-404	Outside rose and bushing	•	•
	Outside rose and knob/lever:			
E	09-506	All designs except AST, AVA, MER	•	•
	09-655	AST, AVA, MER	•	•
G	09-550	Outside escutcheon x knob/lever (except 93 lever) L and N x blank	•	•
I	09-632	Inside escutcheon for knob/lever, L and N x blank	•	•
	09-636	Outside escutcheon and bushing by knob/lever except 93 lever, L and N x blank	•	•
J	09-650	Outside N escutcheon and bushing x 93 lever x blank	•	•
K	09-662	1¼" armor front x Schlage logo, latch	•	•
R	C203-736	Case mounting screw pack	•	•
	Escutcheon thru-bolts/screws:			
S	K510-389	N escutcheon	2	2
	L583-120	L escutcheon	2	2
T	K110-020	Armor screw pack	•	•
U	K110-550	Knob truarc rings and spacer pack	•	•
X	L283-030	Lever truarc rings	•	•
Y	L283-031	Inside lever mounting plate	•	•
Z	L283-040	Lever spring cage	2	2
AA	L283-060	Spindle and spring	2	2
	Assembled lock case:			
BB	L283-131	Passage	•	•
	L283-314	Passage/exit x multipoint		•
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever except single dummy	2	2
EE	L583-212	Mounting post	2	2
HH	L583-321	Inside knob mounting plate	•	•