
801 Avenida Acaso, Camarillo, CA 93012 • (805) 494-0622 • Fax: (805) 494-8861 www.sdcsecurity.com • E-mail: service@sdcsecurity.com

INSTALLATION INSTRUCTIONS SERIES 1510, 1570, 1580 EMLOCK

The 1500 Series Emlock is mounted to the underside of the header, on the stop side of the door. A TJ mounting kit (optional) can be used when mounting on the hinge side of the door. (Fig. 1D)

The armature is mounted to the door. A hardware kit is provided to compensate for misalignment and wear of the door, by allowing the armature to pivot on it's center point.

 Inspect the frame header to determine if an angle bracket or filler plate is required. See Figure 1A, 1B, 1C.

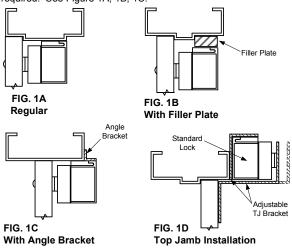

- Fold template as indicated by dotted line. For single doors, locate template against the door and header on the lock jamb side of the frame.
- 3. Mark and drill holes as indicated bt template. For armature plate hole preparation, see Figure 2A, 2B, 2C.
- Mount armature to door. To determine proper hardware (provided), see Figure 2A, 2B, 2C.
- Install mounting plate to header with the interlock detail away from the door side of the stop, with #10 Flt Hd. Screws provided.

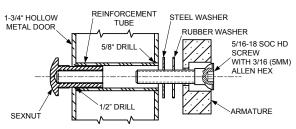


FIG. 2A HOLLOW METAL DOOR

From Sexnut side of door, drill exactly 1/2" hole thru one metal thickness only. From Armature side of door, drill 5/8" hole to insert reinforcement tube. Press in sexnut and reinforcement tube all the way and mount armature to door using hardware provided per Figure 2B.

 Holding the magnet housing at each end, engage the entire length of the interlock detail, by pushing towards the door. (If necessary, tap with a soft hammer to ensure proper alignment and engagement).

Caution: The lock body must be held in place until secured with mounting screws. Screws provided inside the housing at each end. Tighten the screws and check alignment.

Test operation. When all is operating properly, tighten all screws. Install anti-tamper plugs over socket head screw using a soft hammer to avoid damage to the housing.

Electromagnet and armature should be handled carefully. Any damage to the surface such as paint, burrs, dirt and rust may hinder bonding of surface and reduce holding power.

SHOULD THE SURFACE PLATING BE DAMAGED:

Do not touch the lock face with your hands.

Using a soft, clean, dry cloth or abrasive cloth (i.e., Scotch-Brite), clean lock face. Do not use sand paper.

A rust inhibitor such as M1, manufactured by Starret, or LPS3, manufactured by LPS Laboratories (available at most hardware stores) can then be applied.

Apply a coat of inhibitor to armature face also.

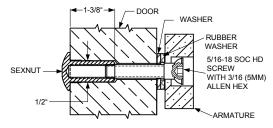


FIG. 2B SOLID DOOR

Drill 3/8" hole thru door. From sexnut side of door, drill exactly 1/2" hole, 1-3/8" deep. Mount armature to door with hardware provided per Figure 2A.

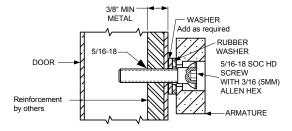


FIG. 2C REINFORCED DOOR


Drill and tap for 5/16-18 machine screw. Mount
armature to door with hardware provided per Figure 2C.

OPTIONAL: 1511-DF DRILL FIXTURE

Drill many doors and frames in a fraction of the time.

ELECTRICAL SPECIFICATIONS


Voltage kickback protection standard

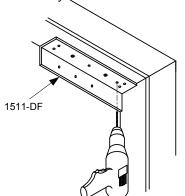


SERIES	1510	1570	1580
INPUT VOLTAGE (VDC)	12/24	12/24	12/24
POWER CONSUMPTION (mA)	700/350	250/125	440/220
COIL RESISTANCE (OHMS)	35* (PER COIL)	100* (PER COIL)	60* (PER COIL)
HOLDING FORCE (LBS)	1650	1200	650

*NOTE: For a proper coil resistance reading, turn off the DC voltage. Use an ohmmeter and measure the resistance between the pins of the plug connector positions E1-E2 and E3-E4

 1510, 1570 SERIES CONNECTIONS

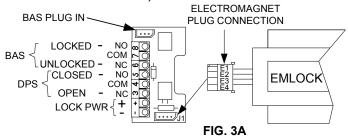




AVAILABLE OPTIONS

ATS	Anti-Tamper Switch
BAS	Magnetic Bond Sensor
DPS	Door Position Switch
LED	Tri-Color LED Red or Green
	Both on = Yellow
TD	TIME DELAY (1-30 sec)

SPDT, DRY, SPDT, DRY, SPDT, DRY, 20 mA 40 mA

20 mA

1580 SERIES CONNECTIONS

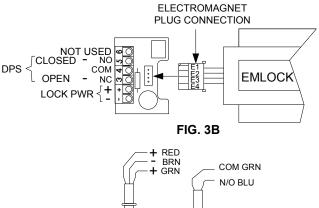

AVAILABLE OPTIONS

BAS	Magnetic Bond Sensor	SPST, No, Dry
DPS	Door Position Switch	SPDT, Dry
LED	Tri-Color LED Red or Green	20 mA
	Both on = Yellow	40 mA

All switches rated @ 250 mA @ 30 VDC

ELECTRICAL INSTALLATION

- 1. Use jacketed cable for all wire runs. Refer to the SDC wire gauge chart for proper lock power wire size (18 AWG gauge minimum).
- 2. Use only shielded cable for all signal wires. 22 AWG gauge (minimum) may be used for signal wires up to 1,000 feet.
- 3. All wires must be colored coded.
- 4. Use properly fused power source only. See Electrical Specifications.
- 5. Make all Emlock terminal connections according to Figure 3A or 3B.

IMPORTANT NOTES

INDOOR USE ONLY

Do not run power wires and signal wires in the same cable or conduit.

Do not install a diode in parallel with any magnetic lock. A diode will cause a delay when releasing the door and residual magnetism to occur.

Although SDC recommends the use of a DC power supply, a transformer with an adjacent mounted full wave bridge rectifier may be used. A significant voltage drop will occur when using a full wave bridge rectifier.

Any low voltage condition will cause erratic operation of the optional bond sensor.

When using a full wave bridge rectifier, all access controls and/or release contacts must be located between the Emlock and rectifier to ensure quick release.

AWG WIRE CHART


To determine the correct wire gauge to use on "one circuit" the following information is required:

- 1. The quantity, voltage, and current draw of all lock(s) to be used.
- 2. The distance in feet from the power supply to the furthest lock.

Add together the current draw (amps) of all locks on the same circuit. Cross reference the total amps with the distance between the power source and the furthest lock to determine the wire gauge required. All wiring must be installed in accordance with all state and local codes.

		DISTAN	CE IN FEE	T FROM	POWER S	OURCE T	O FARTHE	ST LOCK	ING DEV	ICE			
Minimum Wire Gauge for 12 Volts AC or DC	AMPS 0.25 0.50 0.75 1.00 1.50 2.00 2.50	25 18 18 18 18 18 16	50 18 18 18 16 14 14	75 18 18 16 14 12	100 18 16 14 14 12	150 18 16 12 12	200 16 14 12	250 16 12	300 14	400 14	500 12	1000	
		DISTAN	CE IN FEE	T FROM	POWER S	OURCE T	O FARTHE	EST LOCK	(ING DEV	ICE			
Minimum Wire Gauge for 24 Volts AC or DC	AMPS 0.25 0.50 0.75 1.00 1.50 2.00 2.50	25 18 18 18 18 18 18	50 18 18 18 18 18 18 16	75 18 18 18 16 16 14	100 18 18 18 16 14 14 12	150 18 18 16 14 14 12	200 18 16 14 14 12	250 18 16 14 12	300 18 14 12 12	400 16 14 12	500 16 12	1000 16	
					TROU	BLE SHO	OTING	<u>.</u>					
PROBLEM Emlock relea (residual ma	•	CAUSE Control switch wired on AC side of power source.					ce.	SOLUTION Control switch must be wired on DC side of power supply. When an AC transformer and rectifier are used, the control switch must be wired between the rectifier and the Emlock.					itrol
		Field	installed d	liode in pa	rallel with p	oower inpu	ıt.	Remov	e diode.				
Poor holding	g force.	Arma	ture install	ed rigidly.				Armature must pivot loosely from its center mounting point to permit full armature contact. Check for proper voltage at the Emlock input. If low,					
		Low	voltago					determine if the correct wire gauge is being used to prevent excessive voltage drop.					vent
		LOW	voltage.					Check power supply load capacity. It must meet or exceed the combined current rating of all locks on the circuit.					eed
			oltage inpu ock will ma		ming noise)		Emlocks require DC input voltage. When AC voltage from a transformer is used, a full wave bridge rectifier must be installed to convert the AC voltage to DC voltage.					om a
No holding for Door does n		No po	ower.									e voltage is low o	
		Input	polarity re	versed.				Check is: Posi	.	olarity. Ter	minal (-) is	: Negative. Term	inal (+)
		Open	circuit in I	Emlock co	il.			open, re		magnet c		. If reading is highig. 3A and the	n or
		Magr	net coil sho	ort.				Coil shorts or incorrect wiring will blow fuses. Measure the for correct resistance. See Fig. 3A and the Resistance specifications			the coil		

specifications.

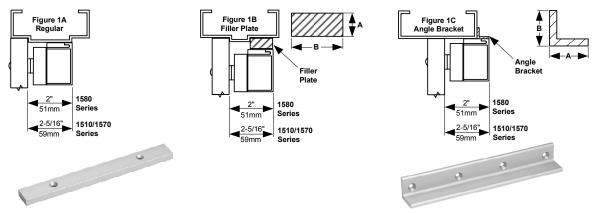

FILLER PLATES: For extension of the stop to provide a proper mounting surface on the underside of the header. **See Figure 1B.**

FOR 1581 SINGLE EMLOCK MODELS

PARI#	SIZE	Α	В		_	
FP01		1/8" x	1-1/4"	(3 x 32mm)		
FP02		1/4" x	1-1/4"	(6 x 32mm)		8-3/4" (222mm)
FP03		3/8" x	1-1/4"	(10 x 32mm)		
FP04		1/2" x	1-1/4"	(13 x 32mm)		
FP05		5/8" x	1-1/4"	(16 x 32mm)		

FOR 1511, 1571 SINGLE EMLOCK MODELS

PART#	SIZE	A B _	_
FP11		1/8" x 1-1/4" (3 x 32mm)	
FP12		1/4" x 1-1/4" (6 x 32mm)	11"
FP13		3/8" x 1-1/4" (10 x 32mm)	(279mm)
FP14		1/2" x 1-1/4" (13 x 32mm)	(27 311111)
FP15		5/8" x 1-1/4" (16 x 32mm)	


FOR 1582 DOUBLE EMLOCK MODEL

PART#	SIZE	A B _	_
FP30		1/8" x 1-1/4" (3 x 32mm)	
FP31		1/4" x 1-1/4" (6 x 32mm)	17-1/2"
FP32		3/8" x 1-1/4" (10 x 32mm)	(445mm)
FP33		1/2" x 1-1/4" (13 x 32mm)	(44511111)
FP34		5/8" x 1-1/4" (16 x 32mm)	

FOR 1512, 1572 DOUBLE EMLOCK MODELS

PART#	SIZE	Α	В		_	•
FP21		1/8" x	1-1/4'	' (3 x 32mm)		
FP22		1/4" x	1-1/4'	' (6 x 32mm)		22"
FP23		3/8" x	1-1/4'	' (10 x 32mm)		(559mm)
FP24		1/2" x	1-1/4'	' (13 x 32mm)		(55911111)
FP25		5/8" x	1-1/4'	' (16 x 32mm)		

 Multiple predrilled and tapped mounting holes to accommodate the use of several different locks on either 4" or 4.5" aluminum frames.

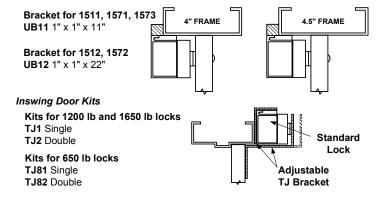

ANGLE BRACKETS: Used as extension on shallow door frames to provide adequate mounting surface. **See Figure 1C.**

FOR 1581 SINGLE EMLOCK MODELS

PART#	SIZE	Α	В	
AB01		1"	x 1" (25 x 25mm)	
AB02		1"	x 1-1/2" (25 x 38mm)	8-3/4"
AB03		1-1/2"	x 1-1/2" (38 x 38mm)	(222mm)
AB04		2"	x 1-1/2" (51 x 38mm)	

FOR 1511, 1571 SINGLE EMLOCK MODELS

PART#	SIZE	Α	В	
AB11		1"	x 1" (25 x 25mm)	
AB12		1"	x 1-1/2" (25 x 38mm)	11"
AB13		1-1/2"	x 1-1/2" (38 x 38mm)	(279mm)
AB14		2"	x 1-1/2" (51 x 38mm)	

FOR 1582 DOUBLE EMLOCK MODEL

PART#	SIZE	Α		В	
AB31		1"	Y	1" (25 x 25mm)	7
AB32				1-1/2" (25 x 38mm)	17-1/2"
AB33				1-1/2" (38 x 38mm)	(445mm)
AB34				1-1/2" (51 x 38mm)	(1.0)

FOR 1512, 1572 DOUBLE EMLOCK MODELS

_		В		Α	SIZE	PART#
]	(25 x 25mm)	1"	Х	1"		AB21
22"	2" (25 x 38mm)	1-1/2	Х	1"		AB22
(559mm)	2" (38 x 38mm)	1-1/2	Χ	1-1/2"		AB23
	2" (51 x 38mm)	1-1/2	Х	2"		AB24

• Field adjustable for 1/2", 5/8" and 3/4" all glass Herculite doors.

