
E-PLEX®



E-Plex 2000 Repair Kit Instructions





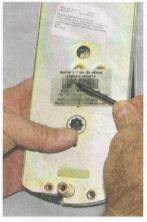

DO NOT REMOVE LEVER. Remove 5 screws (one is under center label) with torx wrench. Hold Thumb across Spring and Center Hub until Step 2.






Assemble Protective assembly Bracket oriented as shown with 1 of the 5 screws from the back plate removed in Step 1. This Bracket will allow you to set the assembly on a bench.





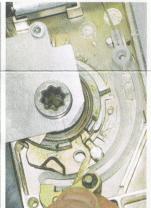

Rotate Lever Handle Clockwise and hold to place ARM in this position (lever will be at 5:00 position for LH lock.) Remove ARM by hand or with pliers.







Remove plastic Guide and any remaining pieces of old wire spring from housing. Insert new Guide with flat spring, making sure it is seated on pivot pin in housing as shown.









Holding lever in same position as in Step 3, install new ARM by hand or with pliers. Make sure longer Pin underneath is in curved track of plastic Guide.



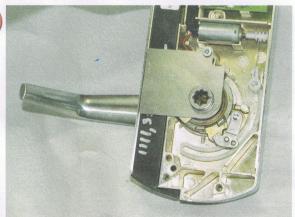

Release lever and make sure parts are installed correctly as shown above. Rotate lever to make sure Arm rides in curved track of plastic Guide. Ensure Guide is on pivot pin in housing.



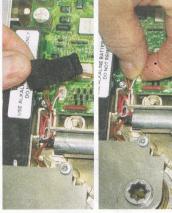



Remove foam over wires, unplug motor connector, and remove old motor (upper right). Install new motor with foam side against casting wall (lower right), reinstall connector and foam to complete.







Orient the Upper Block as shown and peel off the adhesive backing. Insert slanted side down into housing and press firmly against casting wall.





Center the privacy CAM verify the slot is UP if equipped before reinstalling and tightening the 5 screws.

Kaba Access Control

2941 Indiana Avenue Winston-Salem, NC 27105 USA Tel: 800.849.8324 • 336.725.1331 Fax: 800.346.9640 • 336.725.3269 www.kabaaccess.com



Install Lower Block between Motor and top of Assembly Bracket as shown.







Reassemble the privacy CAM with slot UP if equipped. Remove Assembly Bracket and reposition backplate.

12

VERIFICATION of the change done:

- a) Check the rotation of the lever handle. It should easily rotate up and down and return to the horizontal position.
- b) With a flat screw driver or a square spindle, rotate the INSIDE HUB.

It should easily rotate and return to the original position without undue friction. If it does not, remove the back plate and check:

- * that the 2 legs of the spring are in the correct position
- * that the ARM plate is under the inside HUB
- * that the switch is sitting well on its base
- * that the plastic guide is not on the pin of the housing
- c) Re-assemble the back plate on the lock.

PK3591 0212

Disclaimer: While reasonable efforts were made to ensure the accuracy of this document at the time of printing, Kaba assumes no liability for any errors or omissions. This information is subject to be revised without notice, and changes may be incorporated in future releases.