hes Installation Instructions **7000 Series Electric Strike**

HES, Inc. 22630 N. 17th Ave. Phoenix, AZ 85027 800-626-7590 www.hesinnovations.com

Product Components

1) 7000 Series Electric Strike Body

Plug In Connector

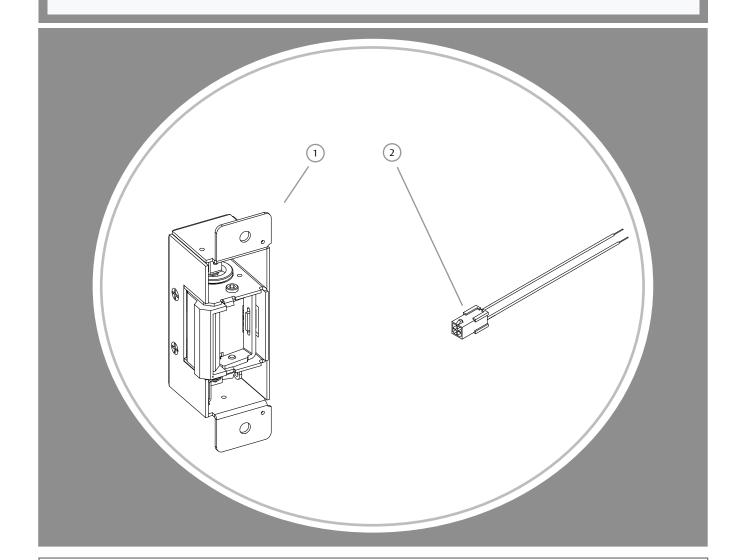


Diagram 1: Electrical Specifications

ELECTRICAL RATINGS FOR SOLENOID	CONTINUOUS DUTY	
	12VDC	24VDC
Resistance in Ohms	26.7	96
Amps	.45	.25

Solenoids are rated at +/- 10% indicated value.

MINIMUM WIRE GAUGE REQUIREMENTS	SOLENOID VOLTAGE	
	12VDC	24VDC
200 feet or less	18 gauge	20 gauge
200 - 300 feet	16 gauge	18 gauge
300 - 400 feet	14 gauge	16 gauge

Installation Directions

CAUTION! Before connecting any device at the installation site, verify input voltage using a multimeter. Many power supplies and low voltage transformers operate at higher levels than listed. Any input voltage exceeding 10% of the solenoid rating may cause severe damage to the unit and will void the warranty.

Prepare Strike

CAUTION: The 7000 series strike body ships as either a 12 or 24 volt unit, and is not field selectable. Verify that the power supply matches the voltage of the strike.

- 1. Make certain that the electric strike is in correct mode of operation for your application. This electric strike ships in fail secure mode. If you need to convert the unit to fail safe, see Diagram 2.
- 2. If using Latchbolt Monitor (LBM), see Diagram 3.


3. Attach the faceplate option to the electric strike using the hardware and instructions included with the option kit.

Prepare Frame

4. Prepare door jamb per the appropriate template detail (see pages 3-4).


Finish Installing

5. Connect power to the electric strike, and install into jamb using the hardware provided with the option kit.

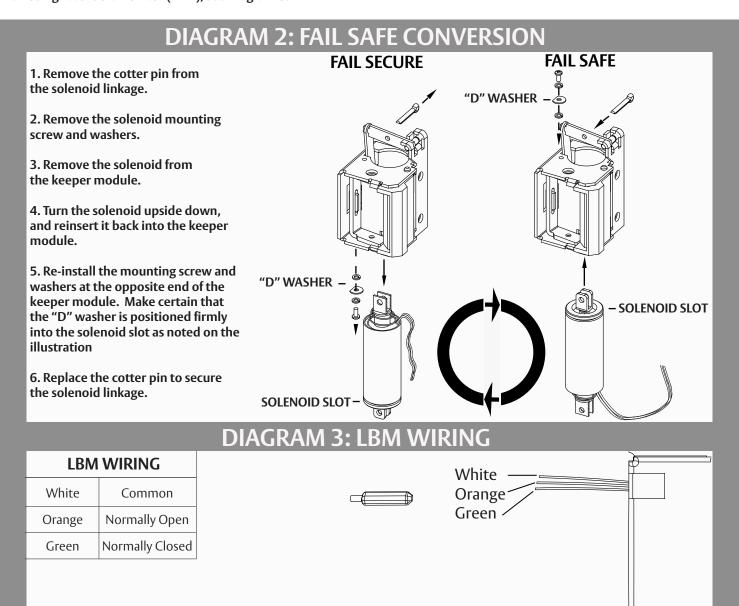


Inches [mm]


701 OPTION

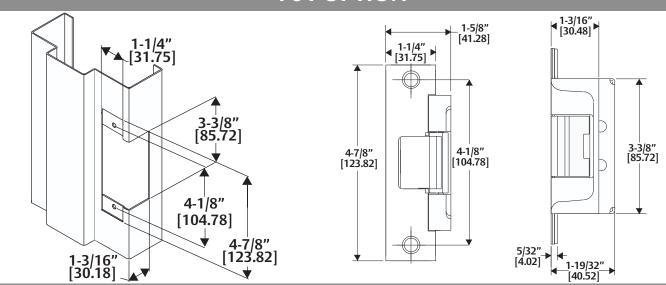

702 OPTION

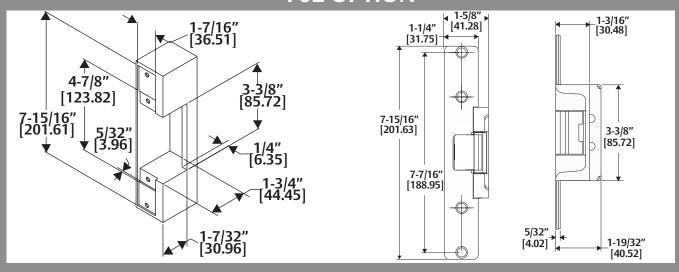


783 OPTION

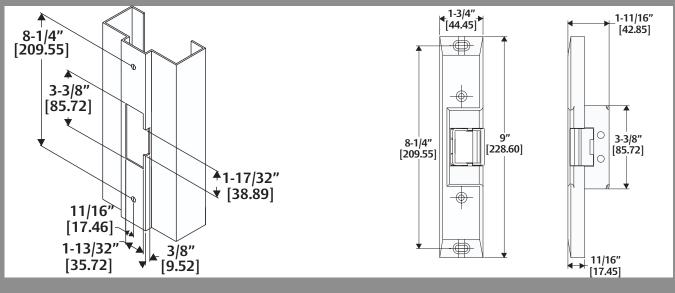



Inches [mm]

786 OPTION

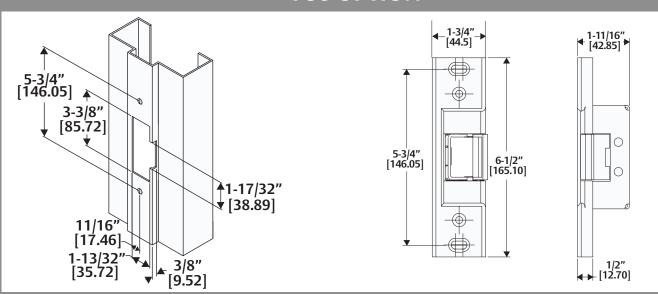


789 OPTION

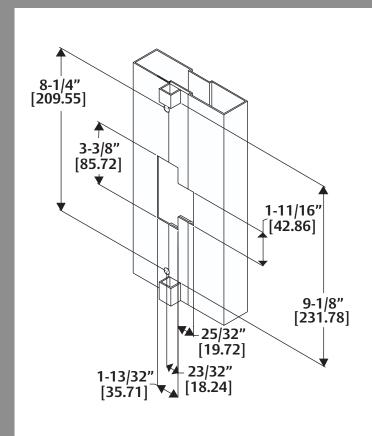

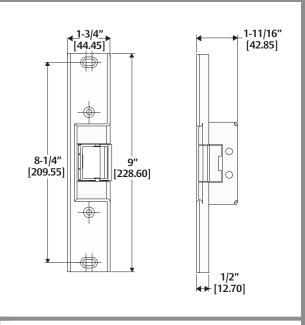

Keeper Pocket Adapter Installation

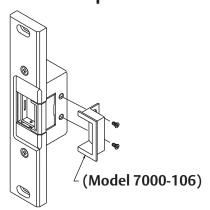

3021006.001 rev A