
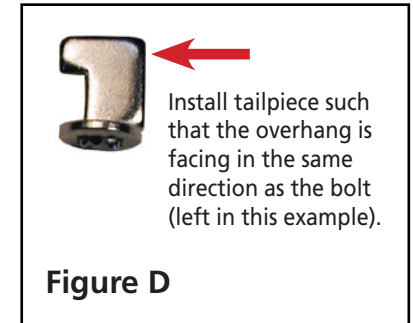
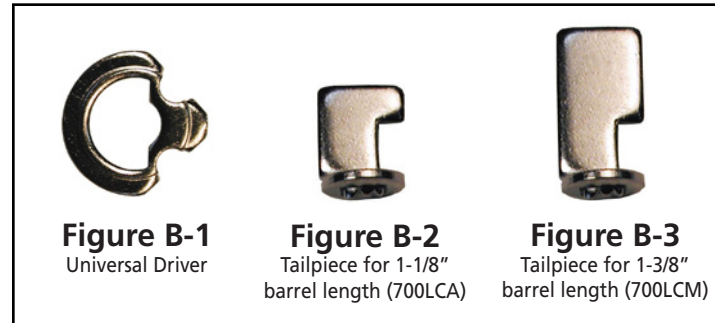


Cylinder installation for less cylinder locks with standard function (key removable in locked and unlocked position)

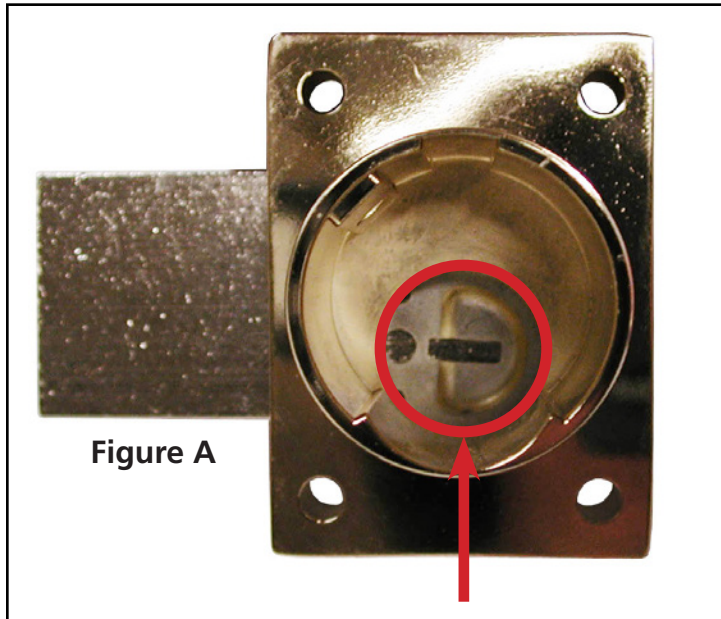

Cylinder installation for standard function*

- Step 1:** Cycle lock so that the deadbolt is either completely left or completely right. The slot inside the lock case should be in a horizontal (left/right) orientation (**Figure A**).
- Step 2:** Install the universal driver (**Figure B-1**) into the back of the cylinder. If pin is located on the top left, install as shown in **Figure C-1**. If pin is located on top right, install as shown in **Figure C-2**.
- Step 3:** Install the tailpiece into the back of the cylinder in the horizontal position such that the overhang is facing in the same direction as the bolt (**Figure D**).
- Step 4:** Pick up the lock body and slide it down over the cylinder. If the tailpiece does not immediately go into the horizontal slot, pick up the complete assembly, put the key into the cylinder, and turn the key slightly back and forth until the tailpiece drops into the slot. Secure the cylinder housing to the body using the supplied set screw.

* *Standard (non-captive) function = key removable in the locked and unlocked position*

