## ► For 1-1/8" Diameter Cam Locks

720, 820, 920, CR25, ME93, SA54, and YA93 (excludes 720B-DM)

**NOTE:** These instructions do not apply to the **720B-DM direct drive** cam lock. The **720B** uses different cams and cam shifter mechanism.

Above referenced 1-1/8" diameter cam locks ship standard with A, B and C cam shifters (pictured below).



720-CDLM lost motion cam shifter (non-key-retaining)



**720-CDDM**key retaining door cam shifter

 


**720-KR** key retaining drawer cam shifter

## 820 requires proper installation of universal driver into back of cylinder

(see picture at right)

The 820 Series includes universal driver (item no. 10-360). For cam rotation to work properly, the supplied universal driver must be installed under the cap at the back of the cylinder in either of the 2 vertical positions indicated at the right (with tab to the left or right only). DO NOT install universal driver in the horizontal (tab up) position.





Correct universal driver position for 820 cam lock

The cam shifter and cams must be assembled per the below instructions to achieve the proper handing and operation. To make cam assembly easier, it is recommended that a core is installed inito the lock before the cam and cam shifter is assembled onto the back of the lock.

