



## OPERATING MODES

**OFF** – Used to de-activate the unit (sensors are turned off). The unit can still be operated via Key Switch inputs.

To use – Select OFF mode, move out of sensor detection zone and allow door(s) to close fully. Once closed, it is possible to approach and lock door(s). If opened manually the door(s) will cycle to the full open position and remain open until the detection zone is cleared. **Under no circumstance are the doors to be forced closed! Forcing doors will damage the drive belts!**

**AUTO** – Used when the door is intended to be fully automated (sensor activation/safety).

**REDUCED OPENING** – Used to minimize the loss of the inside environment. The door will operate normally, with the exception of the reduced opening, which can be set to your liking.

**ONE WAY** – Used to limit egress to one direction. The outside sensor inputs are de-activated. Upon activation from the inside sensor, both inside and outside sensors become active. The outside sensor will remain active until the door comes fully closed.

**HOLD OPEN** – Used for extended egress. The door will remain open until another mode is selected.