


4CH DIGITAL VIDEO RECORDER

DIGIMASTER SERIES

DR4N-Lite

INSTRUCTION MANUAL

Before connecting, operating or adjusting this product,
read this instruction booklet carefully and completely

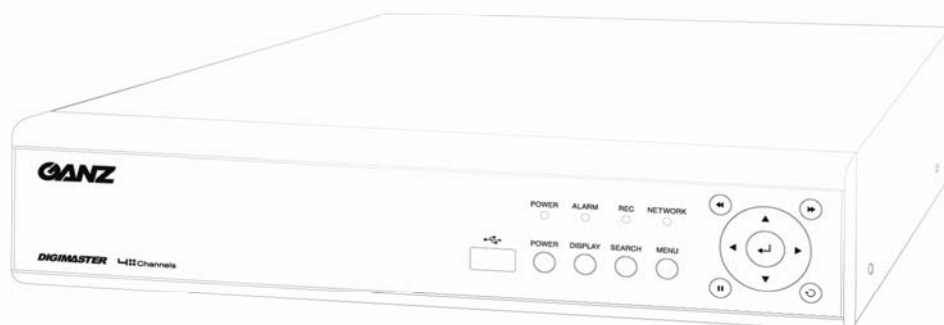

SPECIFICATION & ORGANIZATION	11
Specifications	11
Product Contents List	12
System Organization	12
PRODUCT DESCRIPTION	13
Front panel description	13
Rear panel description	13
Remote Controller description	14
CONNECTION & POWER ON	14
LIVE DISPLAY	15
Division screen	15
Manual Recording	16
Key Lock Function	17
PTZ Camera control	17
SYSTEM SETUP	18
Display	18
OSD	18
Monitor	19
Camera	20
Camera Title	20
Color Setup	20
PTZ Setup	21
Motion Sensor	22
Sound	24
Audio	24
Buzzer	24
System	25
Date / Time	25
Network	26
Mail	27
User Management	29
System Management	29
Control Device	32
Event / Sensor	33
HDD Event	33
Alarm Input	33
Alarm Out	34
Buzzer Out	34
E-mail Notification	35
Disk Manage	36

RECORD MENU	37
Recording operations	37
Simple recording	38
Advanced recording	39
Manual recording	41
SEARCH	42
Time Search	42
Event Search	44
ARCHIVING	45
REMOTE CLIENT SETUP	48
Client software installation	48
Client software organization	50
Explanation of Function keys	51
Create a connect group	52
Detail Setup	53
Additional Configuration	54
REMOTE SEARCH	55
Explanation of function keys	56
Quick Search	57
Archiving	58
Still Shot	58
Log Viewer	59
Backup Player	59
Print	60
Event Viewer	60
Remote Recording Setup	61
Record	61
Camera	62
Sound	62
Event / Sensor	63
System	64
WEB Client Setup	65

Introduction

Thank you for purchasing the GANZ DIGIMASTER.

This DVR is produced using the most advanced CBC technology and its quality is guaranteed by strict reliability and compatibility testing.

This manual provides necessary information for the correct use of this product and also contains some useful tips.

Please read this manual thoroughly before using your DVR in order to prevent possible malfunctions due to any mishandling.

Notice

This manual applies to the DR4N-Lite.

This manual describes the external features of GANZ DIGIMASTER, part names, correct connection methods for supported domes or pan/tilt receivers, control devices, peripheral devices and the system setup instructions. It is important to note here that some features, figures, pictures and references can only be applied to just one model.

- CBC cannot be held responsible if the DVR is damaged due to the use of non-compatible devices with this product. If you have any doubts, please check.
- CBC cannot be held responsible if the DVR is damaged due to the product being disassembled or modified by the user.
- This product is qualified for both domestic and industrial use. This product is qualified under the Radio Equipment Requirements of Korea and acquired international certification including CE (Europe) and FCC (USA).

This manual is written based on the 4 Channel DVR. The contents may change according to the number of Channels and the type of exterior equipment.

Copyrights

All copyrights of this manual are reserved by CBC Co., Ltd.

Copyright© 2009

Any reproduction or republishing of this manual for commercial purposes is prohibited.

It is prohibited to transfer this manual via online media such as, but not limited to, the Internet.

It is also prohibited to post, distribute or translate this manual without permission from CBC.

CBC is not held responsible if the DVR is damaged as a result of improper handling by a user unaware of how to operate this product or who did not consult this manual before attempting to operate the product.

CBC reserves the right to change the contents of this manual without notice.

CBC reserves all copyrights of registered trademarks in this manual.

Caution

Please be aware of the following precautions before installing the DVR.

Avoid positioning the GANZ DIGIMASTER in any place where the unit may come into contact with moisture, dust, or soot.

- Avoid placing in direct sunlight or near heating appliances.
- Keep the product away from electric shock or magnetic substances.
- Avoid temperature extremes (recommended operation temperature is between 0°C and ~40°C).
- Do not place any conductive material through the ventilation grills.
- Keep the system turned off before installation.
- Ensure that enough space is left for cable connections.
- Place the system on a solid surface with sufficient air ventilation. Avoid any surface that vibrates.
- Placing the system near electronic devices such as radio or TV may cause the product to malfunction.
- Do not disassemble the product without seeking assistance from the supplier.
- Do not place any heavy object on the system.
- Please keep cleaning the fan filter of front panel.

CALIFORNIA USA ONLY

This Perchlorate warning applies only to primary CR (Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA.

"Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate."

Safety Warnings and Cautions

The following are warnings and cautions to ensure user safety and prevent property damage. Please read the information below thoroughly.

Warning and caution signs



Warning

If you are not aware of this warning, you may be seriously injured or be killed.



Caution


If you are not aware of this caution, you may be injured or cause property loss.



Warning


Turn off the system before installing the system. Do not plug in several electric devices to the same outlet.

- This may cause heating, fire or electric shock.

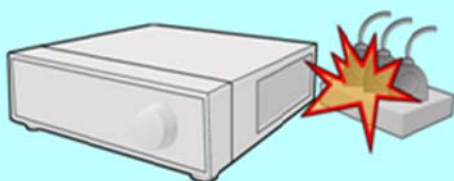


Do not place any liquid container on the system, such as water, coffee or any other beverage.

- If liquid is poured onto the system, it can cause a system malfunction or fire.

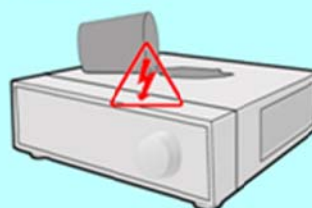

Prevent the power cable from being severely bent or pressed by a heavy object.

- This may cause fire.

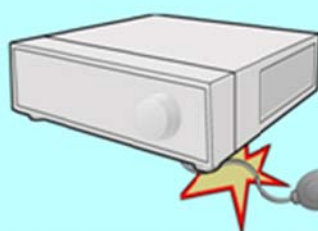


Clean the dust around the system on a regular basis. When cleaning the system, always use dry cloth. Do not use wet cloth or other organic solvents.

- This may damage the surface of the system and can cause system malfunction or electric shock.



Avoid any place with moisture, dust, or soot.

- This can cause fire or electric shock.

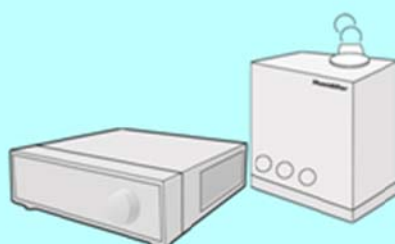

When pulling the power cable from the plug, do so gently. Do not touch the plug with wet hands and avoid using the plug if the holes on the outlet are too loose.

- This may cause fire or electric shock.





Warning


Do not attempt to disassemble, repair or modify the system on your own. It is extremely dangerous due to high voltage running through the system.

- This may cause fire, electric shock or serious injuries.




Install the system in a cool place without direct sunlight and always maintain room temperature. Avoid candlelight and heat-generating devices such as a heater. Keep the system away from high-traffic areas.

- This may cause fire.

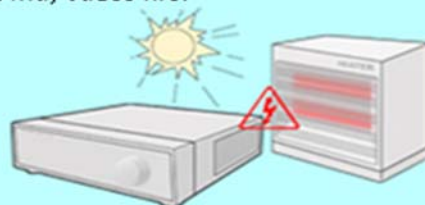


Check for any danger signs such as a moist floor, loosened or damaged power cable or unstable surface. If you encounter any problems, ask your dealer for assistance.

- This may cause fire or electric shock.

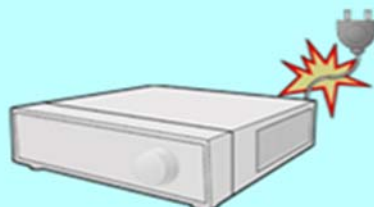


Install the system on a flat surface with sufficient air ventilation. Do not place the system on an elevated surface.

- This may cause system malfunction or serious injuries.

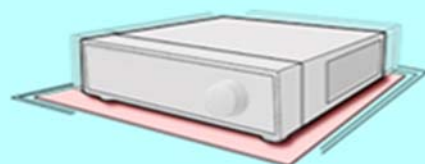

Keep at least 15cm between the back of the system and the wall for the cables connected into the system. Otherwise, the cables may be bent, damaged or cut.

- This may cause fire, electric shock, or injuries.

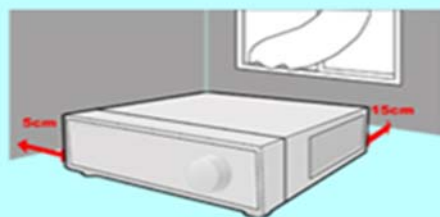

The power outlet must be placed on a ground, and the voltage range must be within 10% of the voltage rate. Do not use the same outlet with a hair dryer, iron, refrigerator or any heating appliances.

- This may cause fire, heating and electric shock.



When the system's battery is depleted, you must replace it with the same or equivalent type of battery specified by the manufacturer. Depleted batteries should be discarded according to manufacturer's instructions.

- This may cause an explosion.

If the system's HDD has exceeded its life span, you may not be able to recover any data stored inside the HDD. If the video on the system screen appears 'damaged' while playing a recording stored inside the system's HDD, it must be replaced with a new one. Ask for an engineer's assistance for HDD replacement from your dealer.

- CBC is not responsible for deleted data caused by user mishandling.



Caution

Do not install the system in an area featuring high magnetic, electric wave or wireless devices such as radio or TV.

- Install the system in a place without magnetic objects, electric frequencies or vibration.




Install the system in a place with appropriate moisture and temperature levels.

- Avoid installing the system at high (over 40°C) or low (under 0°C) temperatures.



Prevent any substances from entering into the system.

- This may cause system malfunction.

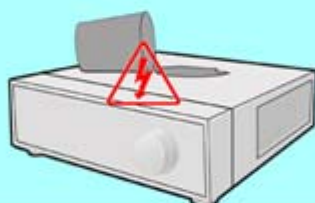

Do not place any heavy objects on the system.

- This may cause system malfunction.



Install the system in a place with sufficient air ventilation.

- Keep at least 15cm distance between the back of the system and the wall, and at least 5cm distance between the side of the system and any walls.



Install the system on a stable and level surface.


- The system may not operate properly.






Caution


The system can be damaged as a result of strong impact or vibration. Avoid throwing objects within the vicinity of the system.

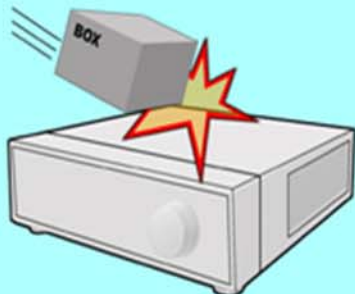

The outlet must be placed on the ground.

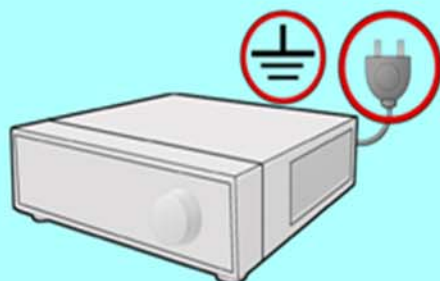


Avoid direct sunlight or any heating appliances.

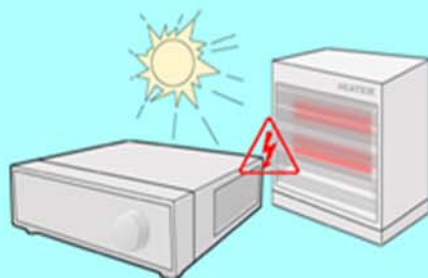

If there is strange sound or smell, unplug the power cable immediately and contact the service center.


- This may cause fire or electric shock.

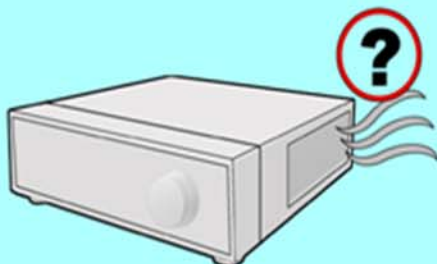

Ventilate the air inside the system operation room and tighten the system cover firmly.

- System malfunction may be caused by inappropriate environment.

Do not overturn the product when in use.

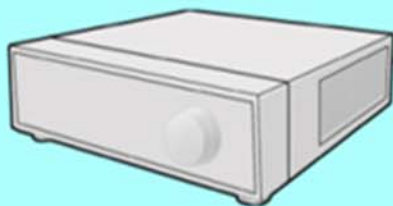

It is recommended to use AVR (automatic voltage regulator) for stable power supply.

It is recommended to coil the core-ferrite around the connector of the system to avoid electromagnetic interference.

In order to maintain stable system performance, have your system checked regularly by the service center.

- CBC is not held responsible for system breakdown caused by user mishandling.

Important Safety Instructions

- 1) Read these instructions.
 - 2) Keep these instructions.
 - 3) Read all warnings.
 - 4) Follow all instructions.
 - 5) Do not use this apparatus near water.
 - 6) Clean only with a dry cloth.
 - 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
 - 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
 - 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other.
A grounding type plug has two blades and a third grounding prong.
The wide blade or the third prong is provided for your safety.
When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 11) Only use the attachments/accessories specified by the manufacturer.
 - 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 - 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
 - 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - 15) This equipment is indoor use and all the communication wirings are limited to inside of the building.
 - 16) The socket-outlet shall be installed near the equipment and shall be easily accessible.
 - 17) CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- # Operation Max temperature : 40°C
- # USB Load condition: USB Ports(5 Vdc, Max. 500 mA)

Specifications & Organization

1. Specifications

Video standard	PAL/NTSC
Audio	2-way Audio conference
Monitor display	Real time:25 Fps (PAL), 30Fps(NTSC) per camera
Covert camera operation	Programmable
Event/Log search	No limitation for user login/out, config changes, remote access, connects/disconnects
Record Scheduling	Daily, Weekly adjust specific Hr per channel
Remote Access	TCP/IP, View, Search, Recording & Control by Client Program or I.E.
Playback	Up to 4 Channel simultaneous playback
Pre/Post alarm recording	5 seconds(Pre), 3 minutes(Post), programmable per camera
Activity detection	11X8, Sensitivity levels: 10
Video inputs	4CH BNC
Monitor outputs	1 VGA(1024X768), 1 Composite(BNC)
Audio inputs	4 x line-in, RCA socket
Audio output	1 x line-out, RCA socket
Resolution	352x240,704x240,704x480(NTSC), 352x288,704x288,704x576(PAL)
Compression standard	MPEG-4
Recording speed	352x240 : 120/100 (NTSC/PAL) , 704x240 : 60/50 (NTSC/PAL) 704x480 : 30/25 (NTSC/PAL)
Image size	3-5 Kbyte (352x240, 352x288), 5-10 Kbyte (704x240, 704x288) 6-16 Kbyte (704x480, 704x576)
Hard disk capacity	2 X HDD, No limit in capacity
Secondary Storage	USB default (USB memory stick, USB HDD, ODD)
Alarm inputs	4 x TTL, programmable as NC/NO
Alarm outputs	1 relay out
Back-up file formats	AVI
Network Speed Control	8 levels
OSD languages	English, Spanish, Dutch, Portuguese, French, Russian, Japanese, Czech , German, Italian
Ethernet interface	10/100-Base-TX, RJ-45
Remote Function	Live View, Live Recording, Search, Set-up, Archiving
PTZ Control	RS-485 interface
Supply voltage	100VAC-240VAC, 60/50Hz

2. Product Contents List

Please check if all the product contents are present after opening the package.



DR4N-Lite



12V Adaptor
(With ac cord)



Instruction Manual



Remote Controller
(With Battery)




Remote Agent
Installation CD




PS2 Mouse

3. System Organization

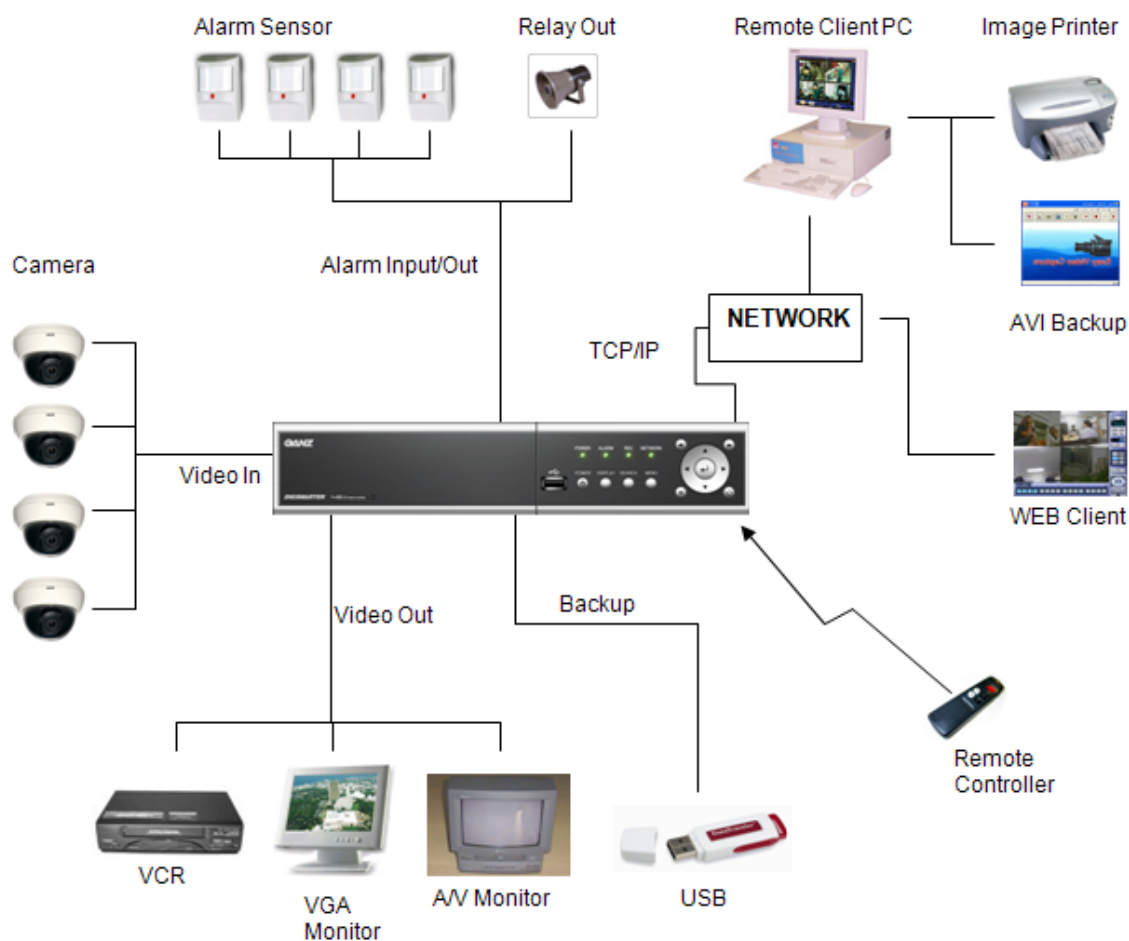


Product Description

1. Front Panel

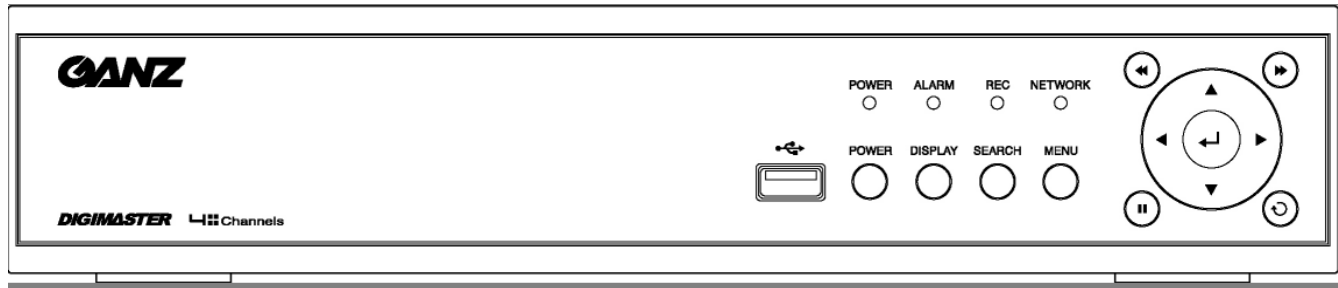

- **USB PORT:** Port for USB devices, for mouse and backup.
- **POWER:** Turn on power of system.
- **DISPLAY:** Select display mode between split and full mode.
- **SEARCH:** Enter to search menu
- **MENU:** Enter to system configuration menu.
- **NAVIGATION KEY:** use for navigating on menu or control PTZ.

2. Rear Panel

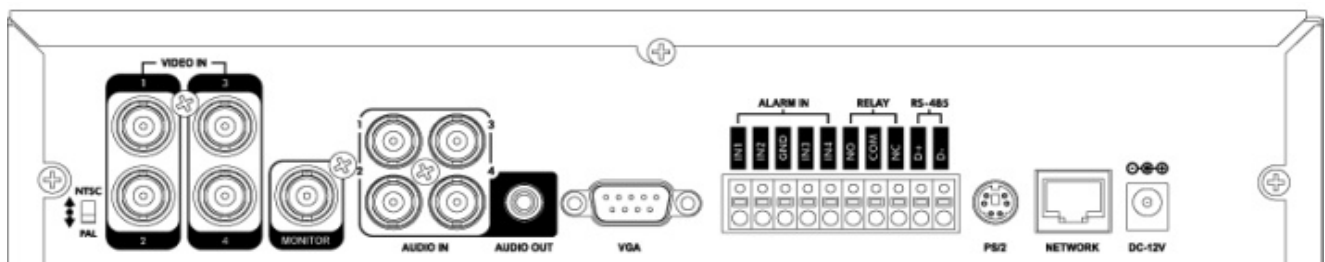

- **NTSC/PAL Switch**
- **Video Input:** Connect the coaxial cables from the video sources to the BNC video in Connectors
- **Monitor Out:** Connect AV monitor for main system OSD
- **Audio Input/Output:** Connect Mic to Input / Connect Speaker to Output
- **VGA Output:** Provide for RGB monitor output
- **Alarm in:** Connect Sensor devices
- **Relay:** Connect Relay device for
- **RS-485:** Connect PTZ camera or Keyboard controller.
- **PS2:** Connect PS/2 type mouse
- **Network:** Connect RJ-45 for local network or Internet
- **DC12V:** Connect the Power Source from Power Adapter.

SYSTEM CONFIGURE – Remote Controller



CONNECT & POWER ON

- Connect up to 4 **CAMERA INPUTS** as necessary.
- Connect one or more monitors to the DVR using the **COMPOSITE, VGA** connections
- Connect power to the DVR. The DVR checks for proper power connection and emits one beep.
Press the **POWER BUTTON** on the front panel of the DVR to begin operation.





After startup diagnostics are complete, the operator must logon to the system. The default user name is 'ADMIN'. the default password of '1234' and press the **ENTER** button.



Double click on the Password tap then the Virtual Keyboard will be appeared. Then, click the password and click the OK button.



The DVR begins normal operation and shows the default display of all 4 channels.

The status bar at the bottom of the screen shows current time and date and percentage of hard drive used.

A title for each channel is shown.

The red square and letter 'C' in the top right of each channel display shows that the channel is recording in Timer / Schedule mode.

LIVE DISPLAY

DIVISION SCREEN



2 different display modes are supported by the 4 channel DVR.

By repeatedly pressing the **DISPLAY** button, the operator can choose between single screen, 4 screen and basic sequence modes.




Press the Enter button. Then red square on camera title will be shown.

If pressing the Enter button again by moving the navigation key, user can select the single display channel.



Click the right mouse button on the Live Display screen and click the **SEQUENCE** menu.

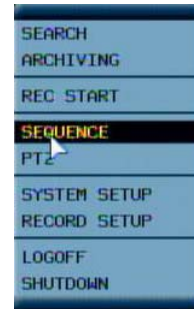



All the display modes are static with the exception of the sequence mode. In this mode, the sequence symbol () is displayed and each channel is shown in full screen for a set period of time before switching to the next channel.

The sequence runs indefinitely until a different display mode is chosen.

Manual Recording(Panic Recording, REC START)



Click the right mouse button on the Live Display screen and click the **REC START** menu

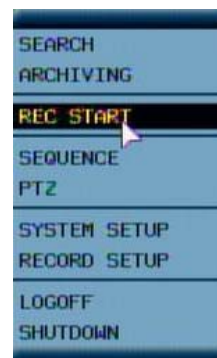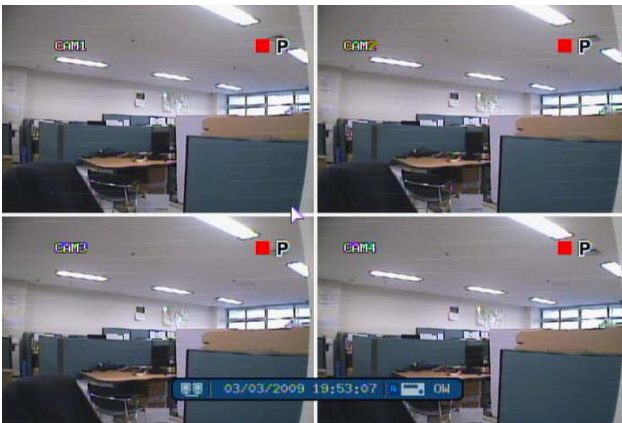

Manual recording will override all standard recording settings to provide, by default, continuous recording on all channels.

If selecting the REC START, The top right of the display shows a red square and letter 'P' only to indicate that the DVR is in manual recording mode.

Select the REC STOP again to return to normal recording mode.

Key Lock Function



An operator with ADMIN rights can choose to lock the DVR front panel to prevent any unauthorized control. Select the **KEYLOCK** button and YES.

PTZ Camera Control




Speed domes and other telemetry devices connected to the DVR, can be fully controlled from the front panel. In live display mode, press the **PTZ** button. To select a camera to control, use the **CHANNEL SELECTION** buttons.


Pan,Tilt and Zoom movement is controlled by the **CURSOR KEYS**



Click the right mouse button on the Live Display screen and click the **LOGOFF** menu.

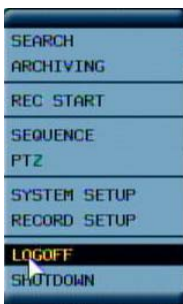

Click the right mouse button on the Live Display screen and click the **PTZ** menu.

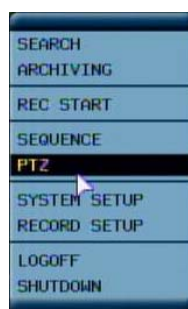





Click the PRESET & SWING menu.

All menus can be controlled by navigation key and pressing the mouse click.

SYSTEM SETUP



Click the right mouse button on the Live Display screen and click the **SETUP** menu.

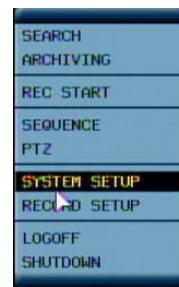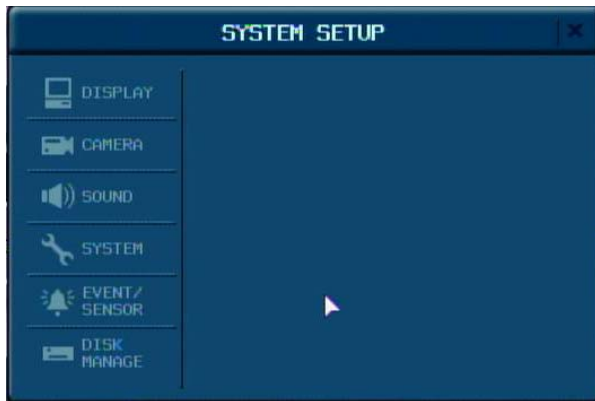

DISPLAY

: To setup the various display options, highlight DISPLAY and press **ENTER**.

DISPLAY - OSD



Click the **OSD** menu and click the ON/OFF menu.

Then, click the  button for ON/OFF.

STATUS BAR : Turns the status bar at the bottom of the live display ON or OFF.

CAMERA TITLE : Determines whether the camera title is displayed.

EVENT ICON : Determines whether the DVR recording status is shown at the top right of each channel display window.

BORDER : Determines whether there is a border around each channel in multi screen display mode.

MOTION SENSOR DISPLAY : If false motion recording is occurring, the operator can use this feature to determine and rectify the cause in realtime.

OFF – normal display mode.


ACTIVE – areas where motion is detected are highlighted with colored blocks.

INACTIVE – areas where no motion is detected are highlighted with colored blocks.

MOTION COLOR: The color of the blocks displayed when MOTION SENSOR DISPLAY is set to ACTIVE or INACTIVE.

LANGUAGE: To change the Language, after selecting the language, please press the APPLY button, Then system will reboot and language will be changed.

DISPLAY - MONITOR

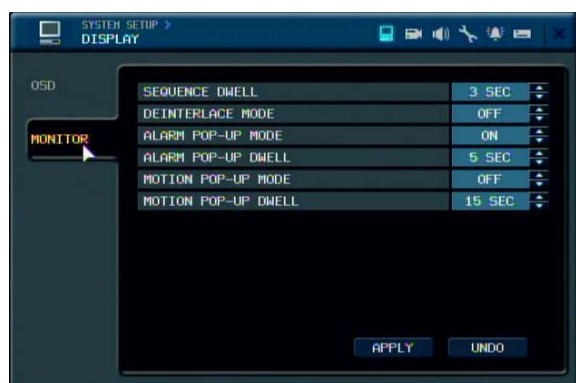

Click the **MONITOR** menu and click the ON/OFF menu.
Then, click the  button for ON/OFF.

SEQUENCE DWELL : The time that each screen is displayed in a sequence operation.

DE-INTERLACE MODE : When recording any channels in D1 resolution (704 x 480 / 704 x 576) this should be set to ON to prevent judder during playback.

ALARM POP-UP MODE : When set to ON, an alarm input will cause the associated channel to display full screen.

ALARM POP-UP DWELL : Determines how long the full screen popup is displayed after an alarm input.
If the alarm condition continues, the popup screen is displayed constantly.

MOTION POP-UP MODE : When set to ON, motion detection will cause the associated channel to display full screen.

MOTION POP-UP DWELL : Determines how long the full screen popup is displayed after motion detection.
If motion continues, the popup screen is displayed constantly.

To change any of these settings, highlight MONITOR and press **ENTER** to select.

Use the **CURSOR KEYS** to navigate to the option required. Press **ENTER** to select the option (the cursor changes to orange) and use the **CURSOR KEYS** to change the setting. Press **ENTER** to save the setting or **RETURN** to cancel.

CAMERA

To setup the various camera options, highlight CAMERA and press **ENTER**.

CAMERA : CAMERA TITLE



Click the **CAMERA TITLE** menu and click ON/OFF menu on the COVERT menu.

Then, click the  button for ON/OFF.

Click the CAM No on the TITLE menu and change the camera name.

COVERT: When it is set to ON, the camera image is not displayed in live display but continues to be recorded.

TITLE: For each camera, a title of up to 11 characters can be set using the virtual keyboard.

DISPLAY : COLOR SETUP



Click the **COLOR SETUP** menu and click the value on the BRIGHTNESS, CONTRAST, TINT and COLOR menu.

Brightness, contrast, tint and color can be adjusted for each individual channel.

Highlight which channel to modify and press **ENTER**.



Click the each value by  button.

The selected channel is displayed in full screen.
 BRIGHTNESS, CONTRAST, TINT and COLOUR can be changed as necessary.
 To modify a different channel, highlight CAMERA and choose the desired channel.
 Press **RETURN** when all changes are completed.

DISPLAY : PTZ SETUP



Click the **PTZ SETUP** menu and click the each value on the ADDRESS, PROTOCOL and BAUD RATE menu.
 Change the value by  button.

ADDRESS: The unique ID of the PTZ device.
PROTOCOL: The protocol of the PTZ device.
BAUD RATE: The baud rate of the PTZ device.



Click the  button and change the detail value by  button.

PTZ properties can also be adjusted for each channel by selecting the  icon and pressing ENTER.

Note that some settings, such as AUTO FOCUS, may not be compatible with particular PTZ equipment.
If this is the case, changing this value will have no effect on PTZ control.

DISPLAY : MOTION SENSOR

 


Click the **MOTION SENSOR** menu and decide the value on the SENSITIVITY menu.

Change the value by  button.

SENSITIVITY : Between 1 (Lowest) and 10 (Highest) and determines the degree of motion required before recording is activated.



Click the  button.

AREA SETUP : Choosing this option allows the operator to define which areas of the image are monitored for motion detection.

Blue grid squares represent detection areas.

The area on the picture shows that motion will be detected across the entire image.



To quickly select or deselect the entire grid, click the right mouse button and click **SELECT ALL** or **DESELECT ALL** menu.

Or press **RETURN** to bring up the motion menu to select or deselect the entire grid,.
Choose **SELECT ALL** or **DESELECT ALL** as appropriate.



Drag the grid by the left mouse.

To select or deselect specific areas, press **ENTER** to bring up the yellow cursor square in the top left of the display.

Move the cursor using the **CURSOR KEYS** to the first corner of the area to be set and press **ENTER**

Please note

: a motion detection recording schedule must be defined in the **RECORD MENU** described.

SOUND

To setup the various sound options, highlight **SOUND** and press **ENTER**.

SOUND : AUDIO



Click the **AUDIO** menu and click the ON/OFF menu.
Then, click the  button for ON/OFF.

LIVE AUDIO : When it is set to ON, the selected audio channel can be monitored on the AUDIO OUTPUT.

AUDIO MONITORING CHANNEL : Specify which one of the 4 AUDIO INPUTS is routed to the AUDIO OUTPUT.

NETWORK AUDIO TX : When it is set to ON, live and playback audio is transmitted to a remote PC connection.

NETWORK AUDIO RX : When set it is to ON, allows a remote PC connection to send audio back to the DVR.

SOUND : BUZZER



Click the **BUZZER** menu and click ON/OFF menu.
Then, click the  button for ON/OFF.

KEYPAD: When it is set to ON, each front panel button pressed, is confirmed by a beep.

REMOTE CONTROL: When set to ON, each command received from the IR remote, is confirmed by a beep.

SYSTEM

To setup the various system options, highlight **SYSTEM** and press **ENTER**.

DATE / TIME



Click the **DATE / TIME** menu and click the ON/OFF menu.
Then, click the  button for ON/OFF.

DATE TIME : Allows the operator to set or modify the current date & time.

DATE FORMAT : Determines how the date is displayed.

TIME FORMAT : Determines how the time is displayed.

NETWORK TIME SERVER SETUP

: If the DVR is connected to the Internet, the time and date can be accurately set by selecting SYNC and pressing **ENTER**.

TIME ZONE SETUP : should be set according to the region that the DVR is used in.

D.S.T : When set to ON, the DVR will automatically adjust the time by one hour on the relevant date in spring and autumn.

SYSTEM : NETWORK



Press the **NETWORK** menu and click the ON/OFF menu.

Then, click the  button for ON/OFF.

DHCP : When enabled, the DVR will obtain an IP address automatically if connected to a DHCP server or router.

DDNS : When enabled, the DVR can be accessed through a Dynamic DNS server.
Commonly used if a broadband connection does not have a static IP address.

WEB SERVICE : When enabled, allows remote connections using Internet Explorer or other web browsers.

IP ADDRESS : If DHCP is not being used, the IP address can be manually set.

GATEWAY : If DHCP is not being used, the gateway IP address can be manually set.

SUBNET MASK: If DHCP is not being used, the subnet mask can be manually set.

1ST DNS SERVER : If DHCP is not being used, the first DNS server can be manually set.

2ND DNS SERVER : If DHCP is not being used, the second DNS server can be manually set.

DDNS SERVER : If DDNS is enabled, the host DDNS server is specified here.

NET CLIENT PORT : The port number that the DVR uses to support remote connection from the client software.

WEB SERVER PORT : The port number that the DVR uses to support remote connection from Internet Explorer or other web browsers.

MAX TX SPEED : Specifies the maximum bandwidth that the DVR can use during a remote connection.

Please note: If any network settings are modified, the DVR will need to be restarted for changes to take effect

SYSTEM : MAIL



Press the **MAIL** menu and click ON/OFF menu.

Then, click the  button for ON/OFF.

SERVER : The SMTP outbound email server that should be used to send email notifications.

PORT : The outbound email port number.

SECURITY : Set to OFF if the SERVER does not require a username and password to connect.

USER : Enter a username to identify the DVR in email messages.

PASSWORD : If SECURITY is set to ON, enter the password here.

TEST E-MAIL : Can test the E-mail function.

Please note : A USER must be entered for the mail function to operate correctly. The username must not contain spaces

SYSTEM : USER MANAGEMENT



Press the **USER MANAGEMENT** menu.

By default, the DVR is configured with a user ID of ADMIN, belonging to the ADMIN group and with a password of 1234.

As well as the ability to add new users, existing user details can be modified.

To modify user details, highlight the user with the blue box and double click.



Double click the **ADD** button.

To add the new user, press the **ADD** button.

USER ID: Edit the user ID using the virtual keyboard.

PASSWORD: Change the password using the virtual keyboard.

GROUP: Users can belong to one of two groups - MANAGER or USER.

(The user nr of ADMIN group is only one.)

E-MAIL: Enter the user's email address if email notification is required.

E-MAIL NOTIFICATION: Enable or disable email notifications for this particular user.

Please note: For security reasons, it is recommended that the ADMIN user password is changed after receiving the DVR.



Double click the current user.


By virtual keyboard, detailed information can be changed.

SYSTEM: SYSTEM MANAGEMENT



Click the **SYSTEM MANAGEMENT** menu.

SYSTEM INFORMATION

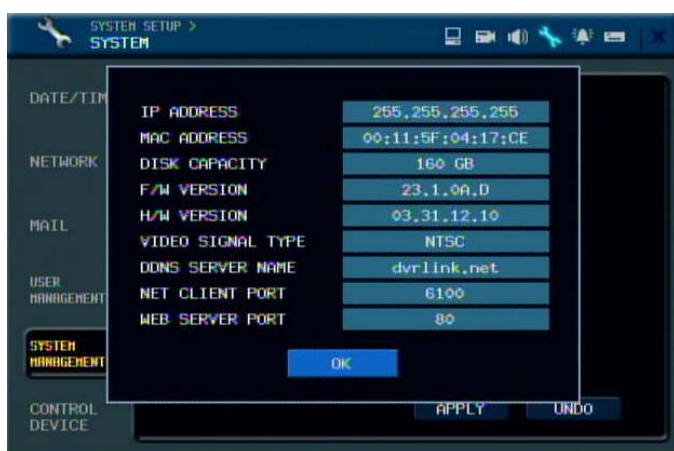

- **IP ADDRESS:** Shows either the manual IP address entered in NETWORK setup or the IP address assigned by a DHCP server if enabled.
- **MAC ADDRESS:** Shows the MAC (Media Access Control) address of the DVR. It is unique – no other network device has this MAC address.
- **DISK CAPACITY:** The first value shows the amount of hard drive capacity used by recorded footage, the second value shows the total hard drive capacity installed.
- **F/W version:** Shows the firmware version of the DVR.
- **H/W version:** Shows the hardware version of the DVR.
- **VIDEO SIGNAL TYPE:** The DVR automatically switches between PAL and NTSC depending on the channel 1 input signal at power on.
- **DDNS SERVER :** If DDNS is enabled, the host DDNS server is specified here.
- **NET CLIENT PORT :** The port number that the DVR uses to support remote connection from the client software.
- **WEB SERVER PORT :** The port number that the DVR uses to support remote connection from Internet Explorer or other web browsers.


SYSTEM NAME : A system name of up to 15 characters can be defined. It is used so that notification emails can be identified.

F/W UPDATE : Firmware updates may be released periodically to enhance system performance and add extra features. The operator can upgrade the firmware using a USB memory stick. After finishing the upgrade, system will be rebooted.

- 1) Select the “Press” icon from F/W upgrade and appear the login pop-up window.



- 2) After checking the USB detection from device item, press the “GET F/W” icon.

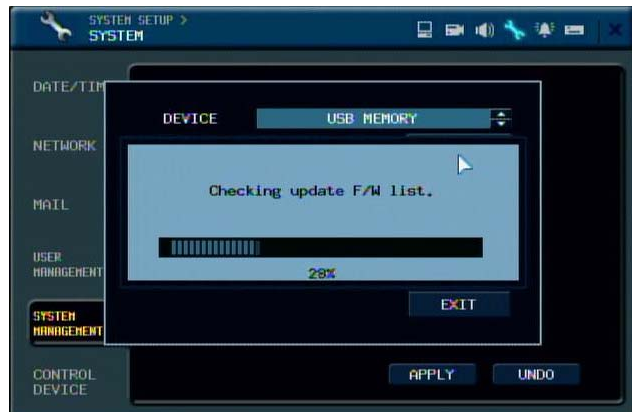

- 3) Select the F/W and Press the “Yes” icon.



4) After finishing, system is rebooted.




5) After rebooting one time, system will ask to reboot again with below pop-up window.

Press "OK" and system reboot again. After finishing reboot, F/W upgrade is finished successfully.




FACTORY DEFAULT: If settings have been changed which cause erratic behavior, the factory default settings can be loaded.

After finishing the factory default, system will be rebooted.

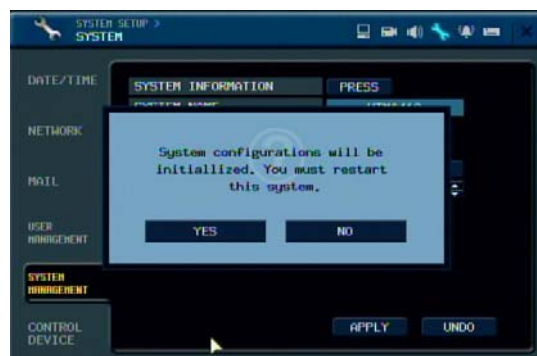

Caution: If you try to factory default, system will ask to format after finishing the factory default.

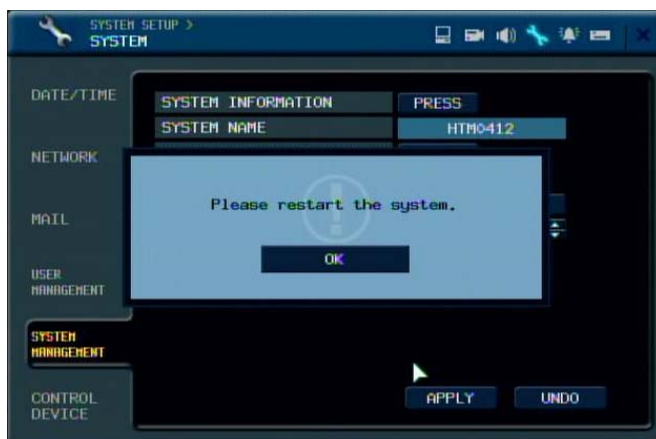

SYSTEM DATA : System settings can be saved to a USB memory stick. The settings can be reloaded in case of accidental factory reset or can be transferred to another DVR if multiple units need to be installed with the same settings.

After loading the configuration data, system will be rebooted

SYSTEM : CONTROL DEVICE



Click the **CONTROL DEVICE** menu and select the SYSTEM ID, PTZ Protocol and camera BAUD RATE.

This will allow up to 254 DVRs to be controlled from the same keyboard.

SYSTEM ID: If more than one DVR is connected on the same RS485 bus, each one must have a unique ID.


PROTOCOL: Must be set by Control Device.

BAUD RATE: Must be set to match the baud rate of the PTZ controller.

EVENT / SENSOR

To setup the various event handling options, highlight EVENT/SENSOR and press **ENTER**

EVENT / SENSOR: HDD EVENT

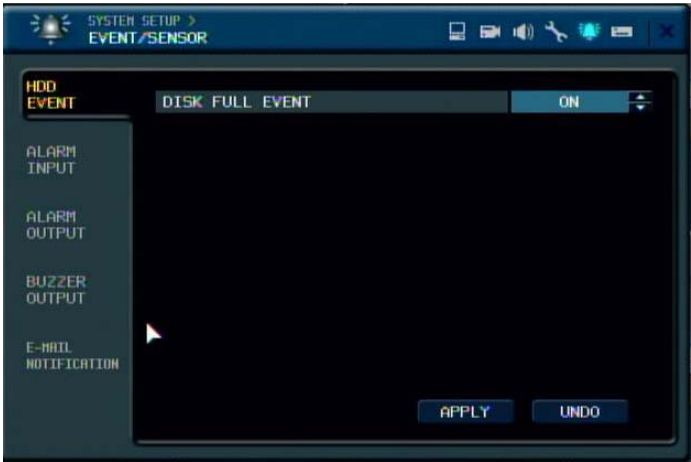

Click the **HDD EVENT** menu.
Then, click the value by  button to change.

DISK FULL EVENT: If it sets to “ON” alarm output and buzzer are activated when HDD becomes full.

EVENT / SENSOR : ALARM INPUT



Click the **ALARM INPUT** menu and click the OPERATION and TYPE value.
Then click the value by  button to change.

Determine the behavior of each of the 4 alarm inputs.

OPERATION: Alarm inputs can be enabled or disabled.

TYPE: Alarm inputs can be set as normally open (N/O) or normally closed (N/C).

EVENT / SENSOR: ALARM OUTPUT



Click the **ALARM OUTPUT** menu and click each value. Then, click the value by  button to change.

Determine the behavior and actions that will trigger each of the 4 alarm outputs.

Behavior settings

OPERATION : The selected alarm output can be enabled or disabled.

HDD EVENT : Determines whether a hard drive event triggers the alarm output.

MODE : Can be either TRANSPARENT (the output is active only when the trigger criteria is present) or LATCHED (the output is active for a set period of time after a trigger).

DURATION : In LATCHED mode, the time that the alarm output remains active after it has been triggered.

Action settings

ALARM : Determines whether alarm inputs would trigger the alarm output.

VIDEO LOSS : Determines whether video loss on any of the selected channels will trigger the alarm output.

MOTION : Determines whether motion detection on any of the selected channels will trigger the alarm output.

Remember to select “APPLY” and press ENTER to save all settings before exiting these menus

EVENT / SENSOR : BUZZER OUT



Click the **BUZZER OUTPUT** menu and click each value.

Then, click the value by  button to change.

Determine the behavior and actions that will trigger the internal buzzer.

Behavior settings

OPERATION : The internal buzzer can be enabled or disabled.

HDD EVENT : Determines whether a hard drive event sounds the buzzer.

MODE : Can be either TRANSPARENT (the buzzer sounds only when the trigger criteria is present) or LATCHED (the buzzer sounds for a set period of time after the trigger).

DURATION : In LATCHED mode, the time that the buzzer sounds after it has been triggered.

Action settings

ALARM : Determines whether alarm inputs will sound the buzzer.

VIDEO LOSS : Determines whether video loss on any of the selected channels will sound the buzzer.

MOTION : Determines whether motion detection on any of the selected channels will sound the buzzer.

Remember to select “APPLY” and press ENTER to save all settings before exiting these menus

EVENT / SENSOR : EMAIL NOTIFICATION



Click the **EMAIL NOTIFICATION** menu and click the each value.

Then, check the usage by clicking.

Determine the behavior and actions that will send an email to a remote user.

Behavior settings

NOTIFICATION : Email notification can be turned ON or OFF.

HDD EVENT : Determine whether a hard drive event sends an email.

BOOTING EVENT: Determines whether a reboot event sends an email.

Action settings

ALARM : Determine whether alarm inputs will send an email.

VIDEO LOSS: Determine whether video loss on any of the selected channels will send an email.

MOTION: Determine whether motion detection on any of the selected channels will send an email.

FREQUENCY: E-mail sending period (10~30MIN)

Email settings must also be configured in MAIL and USER MANAGEMENT settings described

DISK MANAGE



Click the **DISK MANAGEMENT** menu.

To manage the internal hard drives, highlight DISK MANAGE and press **ENTER**.

RECORD TIME LIMIT: In certain circumstances, it may be necessary to limit the amount of footage stored on the DVR (to comply with data protection laws for example).

Recording can be limited to 12 hours, 1,2,3days, 1week or 1,month.

Once the DVR has this amount of footage stored, it will start to overwrite the earliest recorded footage.

DELETE DATA: In case of selecting the recording time limit, user can select the current data is remained or removed.

DELETE DATA : OFF

Only ADMIN can review all recorded data even though RECORD TIME LIMIT is ON.

DELETE DATA : ON


ADMIN and Manager can review the recorded data within the duration of RECORD TIME LIMIT.

OVERWRITE: When set ON, the DVR will start overwriting the earliest recorded footage once the hard drive becomes full. In this case, the percentage of hard drive used shown in live display will always be 99%. When set to OFF, the DVR will stop recording when the disk becomes full.

FORMAT: If necessary, all footage can be erased from the DVR using this option.

Please note: When a RECORD TIME LIMIT is set, the OVERWRITE option cannot be changed

RECORD MENU

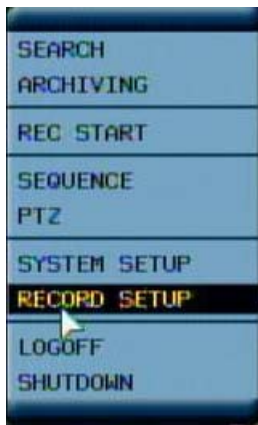

Click the **RECORD SETUP** menu.

To setup the recording behavior of the DVR, highlight RECORD MENU and press **ENTER**.

RECORD : RECORDING OPERATIONS



Click the **RECORDING OPERATION** menu and click the each value. Then click the value by  button to change.

RECORDING MODE: SIMPLE/ADVANCED

Default is simple mode. If changing the recording mode as ADVANCE, second item is changed from SIMPLE RECORDING to ADVANCED RECORDING.

SCHEDULE MODE : Either DAILY (one schedule will apply to every day of the week) or WEEKLY (each day of the week has its own schedule).

Please note: When recording mode is simple mode, this option cannot be changed.

PRE EVENT RECORDING TIME : When the DVR is not in continuous recording mode, this setting determines the amount of footage that is always recorded before an event occurs. (motion detection, alarm input etc.)

POST EVENT RECORDING TIME : When the DVR is not in continuous recording mode, this setting determines the amount of footage that is always recorded after an event occurs. (motion detection, alarm input etc.)


SIMPLE RECORDING



Click the **SIMPLE RECORDING** menu.

The simple recording controls the quality, size and FPS for all cameras at the same time. Each channel can be set for a single recording type(Continuous, Motion, Alarm)

- RECORD QUALITY:** Sets the video recording quality to Low, Standard, High or Highest for all cameras.
- RECORD SIZE:** Sets the video capture size for all camera to 352X240, 704X240, 704X480(NTSC) for all cameras.
- FPS:** Sets the Frames per second for recording across all channels. The FPS for the channels can be set to 1,2,3,7,15 or 30FPS for NTSC, and 1,2,4,7,12 or 25FPS.

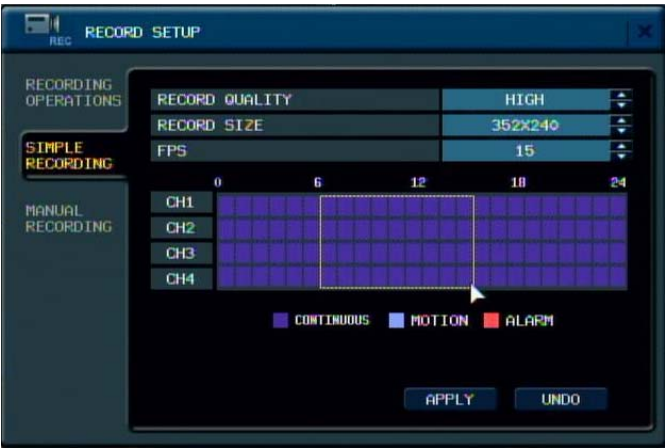

Click a single block to open the recording type menu. Click and Drag a block of times to configure multiple channels and times at once.

ADVANCED RECORDING



Click the **ADVANCED RECORDING** menu.

This setup screen allows the operator to configure the recording mode of continuous, motion and alarm recording.

There are 2 sections:

SETTING: Recording settings for each channel can be defined across a 24 hour period, in blocks (for example between 09:00 and 18:00) or for each individual hour. Note that when SCHEDULE MODE is set to WEEKLY, each day of the week can also be selected.

ACTIVATION: This section determines at what times the DVR will record and whether it is continuous recording , motion detection or alarm recording.

SETTING



Click the **SETTING** menu.

Select the time block that want to set.





Click the SIZE, FPS, QUALITY, AUDIO and ALARM value.
Then, click the value by  button to change.

Press **ENTER**. Recording settings for the selected time period are displayed.

SIZE : Recording resolutions of 352x240/352x288, 704x240/704x288 or 704x480/704x576 can be selected for each channel.

FPS : Frame rates between 1 – 30(NTSC) or 1-25(PAL) can be set for each channel.

QUALITY : Four different picture recording qualities can be set for each channel.

AUDIO : If audio devices are connected to the DVR, any audio channel can be assigned to any of the video channels.

ALARM: Select the Alarm channel that related with alarm recording.

During playback, when a particular channel is selected in full screen, the assigned audio channel will be played back at the same time.

Adjust values as desired and select OK to finish and return to the setting menu. Other time periods can be configured in the same manner.

Remember that if SCHEDULE MODE is set to WEEKLY, recording settings need to be changed by each day as well as each particular time

Note: The DVR supports a maximum recording rate across all channels of 120 frames per second at 352x240 resolutions.


As settings are adjusted, the 'frames available' at bottom left displays

the number of available frames still remaining and must always be zero or higher.


If, whilst changing recording settings, this figure becomes negative, recording resolutions and / or frame rates must be lowered to increase the 'frames available' value to zero or above.

ACTIVATION

Click the **ACTIVATION** menu.

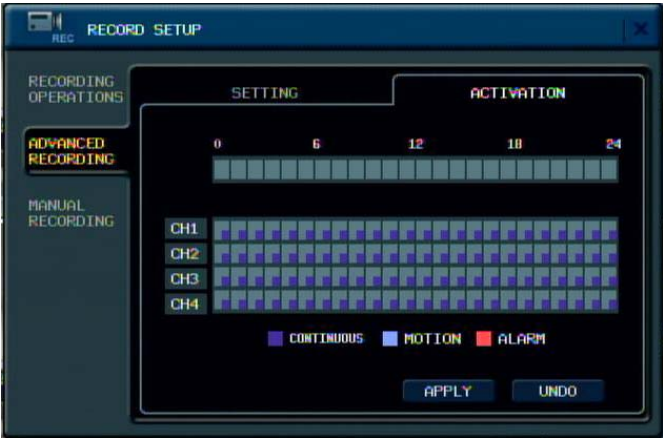

Select the Channel and time that want to set.

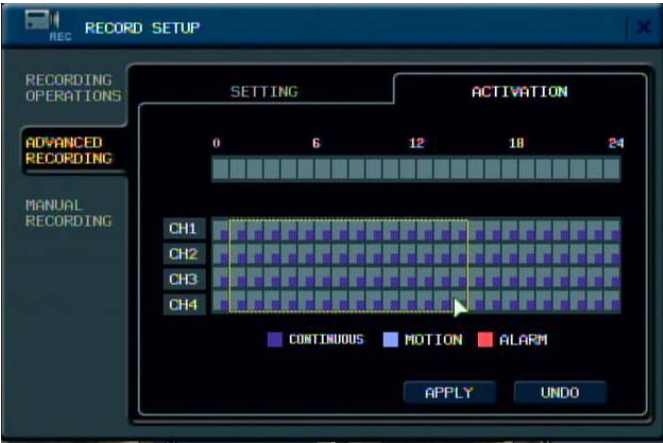

After selecting the channel and time, select the recording type.(Continuous, Motion and Alarm)

MANUAL RECORDING(Panic Recording)




Click the **MANUAL RECORDING**.
Select the Size, Frame, Quality and audio.

During manual recording mode, the DVR will override all other recording settings and record continuously on all channels at the settings configured here.

Manual recording time: After passing the assigned time, recording is returned as original recording type.

SEARCH

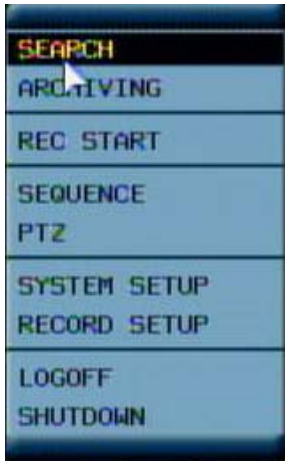


Click the right mouse button on the Live Display screen and click the **SEARCH** menu.

To search for a particular section of recorded footage, press the **SEARCH** button.

To protect unauthorized viewing of footage, only ADMIN and MANAGER user levels can playback footage.

To login as ADMIN, enter the default password of 1234 and press **ENTER**.

SEARCH : TIME SEARCH

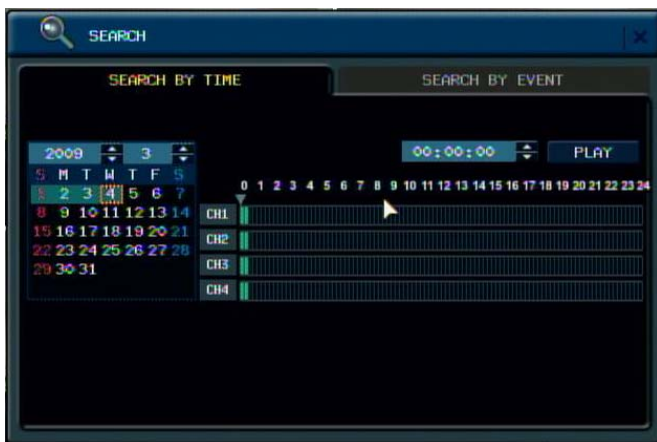

Click the date that user want.

The DVR uses a calendar and timeline search method for quick access to recorded footage.

The calendar displayed on the left shows the current month.

Days highlighted in green have recorded footage.

The timeline on the right shows a 24 hour status of all channels for the selected day. Light blue areas show recorded footage.



Drag the time bar by left mouse.

Press **ENTER** to select the calendar and use the **CURSOR KEYS** to move the purple square to the required day. As different days are selected, the timeline display also changes to show recorded footage on that day. Press **ENTER** to choose the day and move to the timeline.

Use the **CURSOR KEYS** to move the timeline cursor left or right to select the time segment required. Each movement of the timeline cursor increases or decreases the time by 15 minutes. The currently selected time is displayed above the calendar. Select the **PLAY** to begin playback from the selected time.



By pressing **DISPLAY** or using the **CHANNEL SELECTION** buttons, it is possible to display a single screen or 4 screens in a similar way to the live display mode.



Playback speed and direction can be controlled using the five playback buttons in menu. To exit the search screen and go back to live view, repeatedly press **RETURN**.

SEARCH : EVENT SEARCH

The DVR event log stores events such as motion and alarm activated recording, video loss etc.



Click the **SEARCH BY EVENT** menu and each value.
Then click the value by  button to change.
Click the **START** menu.

To display the event log screen, select SEARCH BY EVENT.
Various filters can be used to limit the number of events displayed. Using the **CURSOR KEYS** and **ENTER** button, select the FROM and TO date / time and the events and channels required.



Click the **START** menu.

Highlight START and press **ENTER** to display the event log for the criteria selected.
To playback footage for a particular event, select the event from the list using the **CURSOR KEYS** and press **ENTER**.



Playback resumes from the moment the selected event occurred and continues until stopped by the operator. During event search playback, playback buttons can be used as normal. To stop playback and return to live view mode, repeatedly press **RETURN**.

Note: The event log search contains the following selectable entries:


ALARM: When ticked, all alarm input events are displayed for the chosen date range.

TIMER: When ticked, scheduled recording operations are displayed for the chosen date range.

MOTION: When ticked, all motion detection events are displayed for the chosen date range.

ETC: When ticked, all other events (Video loss, remote connection etc.) are displayed for the chosen date range.

ARCHIVING

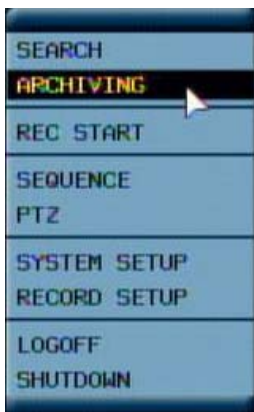


Click the right mouse button on the Live Display screen and Click the **ARCHIVING** menu.

To archive recorded footage to USB memory stick , select the ARCHIVING button.

To protect unauthorized viewing and distribution of footage, only the ADMIN user level can archive footage.

To login as ADMIN, enter the default password of 1234 and press **ENTER**.

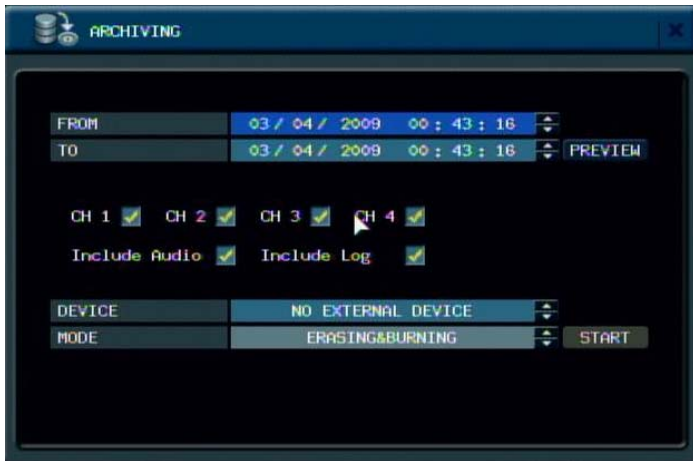

Click the each value.

Then click the value by  button to change

Click the **START** menu.

The Archiving screen allows the operator to choose exactly what to backup and to where.

Use the **CURSORS KEYS** to navigate around the Archiving screen. To change any value or setting:

Press **ENTER** to change the green cursor to orange.

Use the up and down **CURSORS KEYS** to change the value.

Press **ENTER** to accept the value or RETURN to cancel.

To change a tick box setting, press ENTER to toggle on or off.



FROM / TO: Start and end time to backup.

CHANNEL: Video and audio for any channel can be included or excluded from the backup.

Check the "Include Audio" and "include the log"

SELECT DEVICE: Choose between USB device.

MODE: 'Bruning' or 'Erasing&Burning'

Please note: To use a USB memory stick, it must be inserted before selecting the archiving menu

Additionally make sure to do the "PREVIRW" firstly. If not doing the "PREVIEW", user can not start the backup.



Click the **OK** menu.

Once all the desired archive options have been selected, highlight the START button and press **ENTER**. The DVR displays a list showing the exact information to be archived and the total archive size. If the ORIGINAL SIZE is larger than the available space on the backup media, the END TIME of the archive set is reduced accordingly. The MODIFIED SIZE is the final file size of the archive set. Select "OK" and press **ENTER** to begin the archive process.



Once extracted, the footage is copied to DVD or USB. Note that depending on the amount of footage selected for archive, the extracting and burning process may take some time, during which the DVR cannot be used. Normal recording is unaffected by the archive process.

REMOTE CLIENT SETUP

The DVR is supplied with software to allow remote connections either on a direct LAN connection or over the Internet.

The remote client allows full live viewing of the DVR including control of PTZ cameras.


In addition, playback, remote setup, audio talkback, local backup and remote alarm triggering can all be achieved.

Client Software Installation




Insert the CD supplied with the DVR into your PC's CD-ROM drive. The install process will begin automatically and display the following screen.


Click 'Next>' to continue

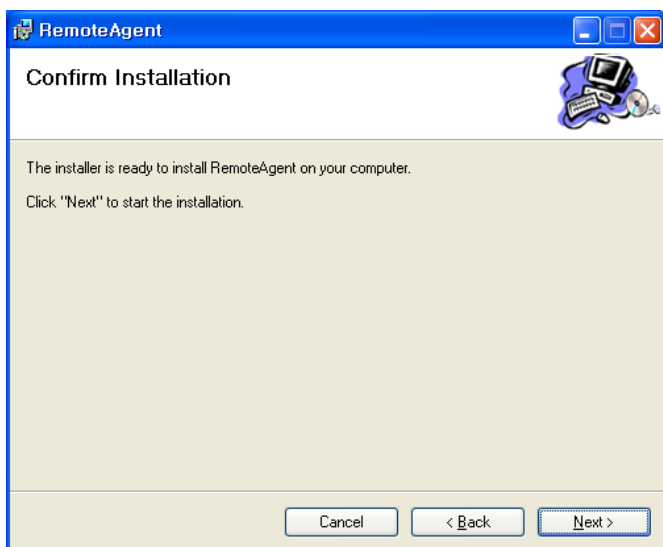

Click 'Next>' to begin installation.

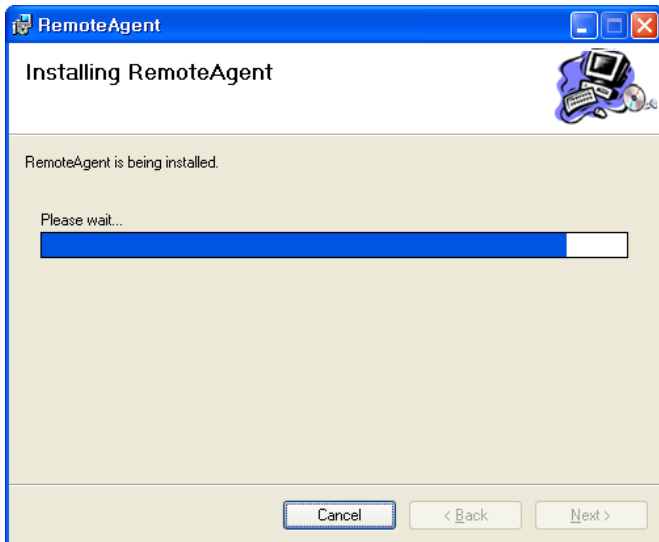

The DVR remote client software is installed.

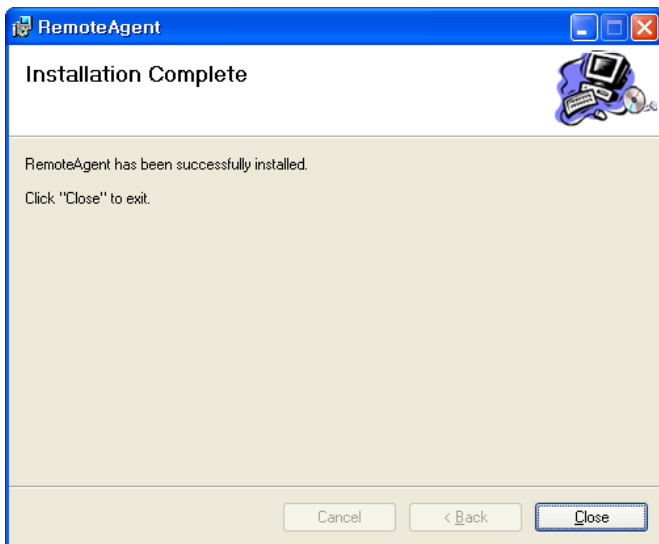

A final install screen is displayed confirming that installation is successful.

Two icons are created on the PC desktop.

'Remote Agent' is the main software package.

'Backup Player' is the software to view archive footage from the DVR.




To begin using the remote client software, double click the icon on the desktop or click:

Start – Programs –RemoteAgent – DVR

– RemoteAgent.

The main remote client window is displayed.

Client Software Organization

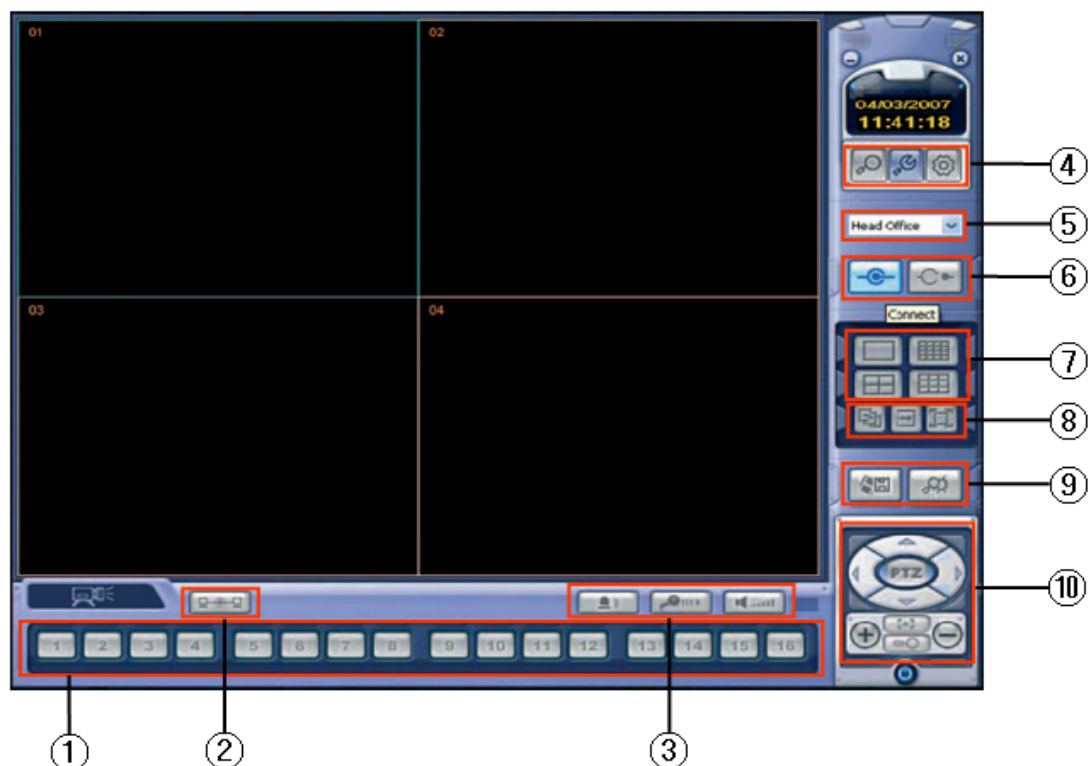

①  CHANNEL SELECTION buttons

 STATUS button

②  ALARM button

③  TALKBACK button

 AUDIO button

 SEARCH button to access remote playback

④  SETUP button to configure DVR connections

 DVR SETUP button to adjust DVR settings remotely

⑤  DROP DOWN LIST to select a DVR connection

⑥  CONNECT button

 DISCONNECT button

⑦  DISPLAY button to choose 1,4,9 or 16 screen display

⑧  SEQUENCE button

 MANUAL SWITCH button

 FULL SCREEN button

⑨  SAVE TO AVI button


 EVENT VIEWER button

⑩  PTZ CONTROL button

EXPLANATION OF FUNCTION KEYS


- ① CAMERA SELECTION Button : Indicate Connected Camera No. & Select camera No to see the image.
- ② STATUS Button : Show the connected DVR.
- ③ ALARM Button : Control Alarm output.
 - TALKBACK Button : Communicate between DVR and Remote Client.
 - AUDIO Button : Listen live audio (ON/OFF).
- ④ SEARCH Button : Entering the Search mode to playback the image.
 - SETUP Button : Entering the client software to change or check the setting.
 - DVR SETUP Button : Entering the connected DVR to change or check the setting.
- ⑤ DROP DOWN LIST : Select the group to connect.
- ⑥ CONNECT Button : Connect DVR.
 - DISCONNECT Button : Disconnect DVR.
- ⑦ DISPLAY Button : Change the division screen to 1,4.
- ⑧ SEQUENCE Button : Change the live screen automatically.
 - MANUAL SWITCH Button : Change the live screen manually by mouse click.
 - FULL SCREEN Button : Change to the full screen.
- ⑨ SAVE TO AVI Button : Save the current displayed image to AVI file.
 - EVENT VIEWER Button : Show the current event in DVR and find image.
- ⑩ PTZ CONTROL Button : Control PAN/TILT/ZOOM of camera.

CREATE A CONNECT GROUP

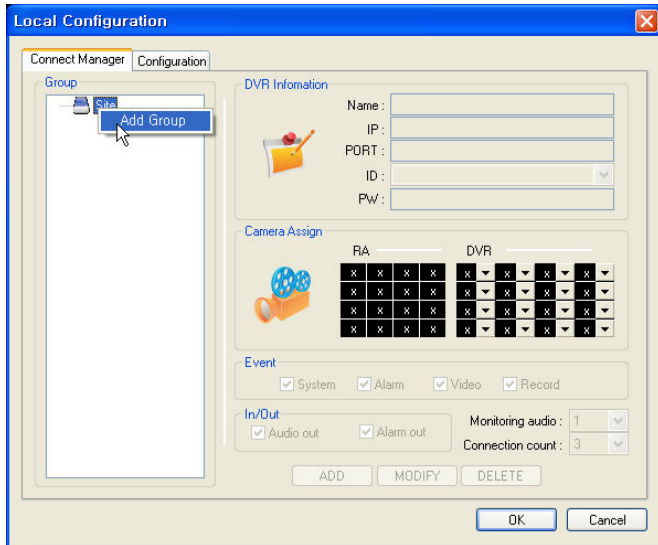


The DVR remote client software can be configured with any number of connection groups. Each connection group can consist of up to 4 DVRs. To create a connection group, click the **SETUP** button to display the Local configuration screen.

In the 'Group' window on the left, right click 'Site' and choose 'Add Group'

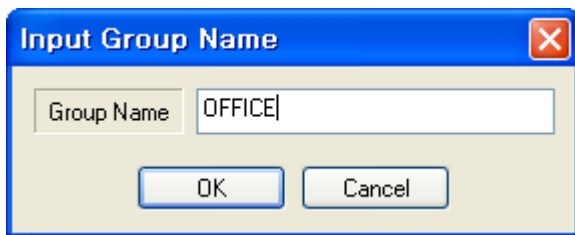


Enter a name to easily identify the connection group and click OK.

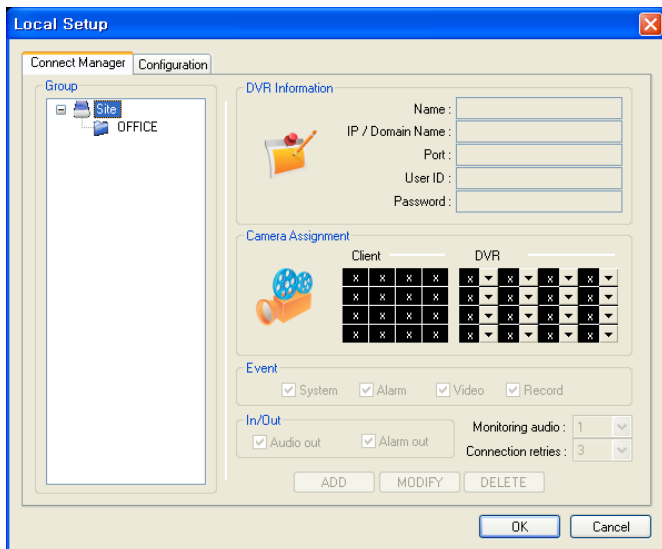

The new group is created.

DETAIL SETUP

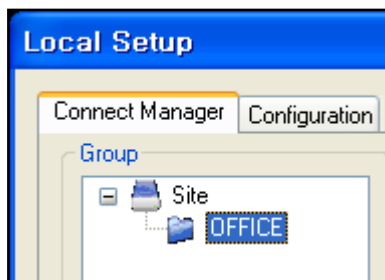

Details for up to 4 DVRs can be added to the 'OFFICE' group. Click 'OFFICE' to highlight it and then enter the following information in the 'DVR Information' window.

DVR Information

Name : Sales Part

IP / Domain Name : 192.168.123.123

Port : 6100

User ID : ADMIN

Password : *****

Name: Any name that will easily identify the DVR.

IP / Domain Name: The IP or DDNS address of the DVR.

Port: The network port of the DVR.

User ID: A valid user ID already setup on the DVR.

Password: The password assigned to the user ID.

Camera Assignment

Client				DVR			
1	2	3	4	1	2	3	4
x	x	x	x	x	x	x	x
x	x	x	x	x	x	x	x
x	x	x	x	x	x	x	x

In the 'Camera Assignment' window, specific channels of the DVR can be allocated to the remote client display channels. Using the drop down lists under DVR, select which channels are displayed and in to which position.

To ignore certain channels, leave the drop down as 'x'

In this case, only channels 1-4 from the selected DVR will be displayed.

Note: only one instance of each channel can be selected.

Each connection group can display a total of 16 channels from one or more DVRs. For example, a connection group could consist of one 16ch DVR and display all 16 channels.

Or, it might consist of two 16 channel DVRs and display 7 channels from one and 9 channels from another.

Event

☒ System ☒ Alarm ☒ Video ☒ Record

In/Out

☒ Audio out ☒ Alarm out

Monitoring audio : 1

Connection retries : 3

ADD MODIFY DELETE

To complete the details for the selected DVR:

-Tick the event occurrences that the DVR will send to the remote client system log.

-Tick 'Audio out' to enable or disable the audio talkback function.


-Tick 'Alarm out' to enable the remote alarm trigger function.

-In 'Monitoring audio' choose which DVR audio input is transmitted to the remote client software during

live display.

-In 'Connection retries' choose the number of times the remote client will attempt to connect before giving an error.

Finally, click ADD to save all the details.

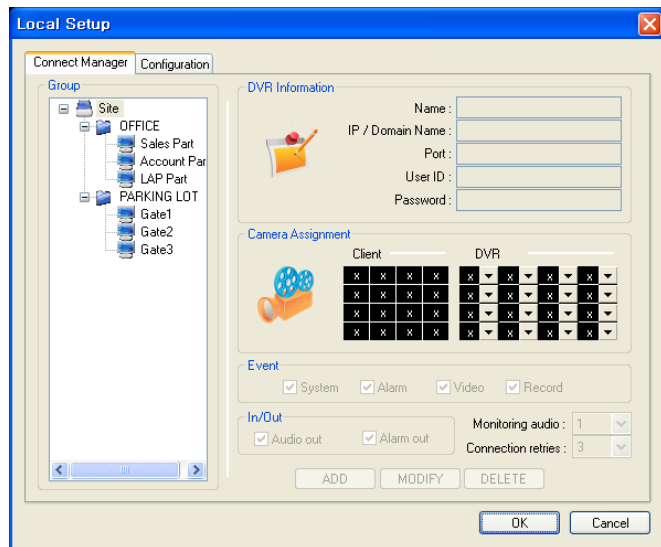


To add up to three more DVRs to this group – simply repeat the steps from the previous page in 'Enter DVR details'.

To create another connection group, repeat the steps from the previous page in 'Create a connection group'

During operation, only one group can be connected at once. For example, 'OFFICE' must be disconnected before connecting to 'Head Office'

ADDITIONAL CONFIGURATION

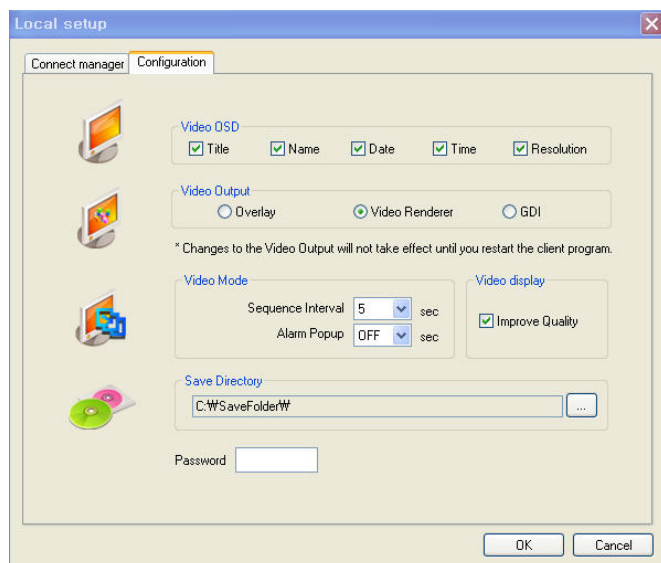

Click the 'Configuration' tab to setup various remote client program options.

Video OSD

Select or deselect the information that is displayed for each channel when a DVR is connected.

Video Output

For best results, leave set at the default of 'Video Renderer'. Overlay mixer and GDI are provided only for backwards compatibility with older PCs.

Video Mode

Define the sequence time between each channel when in sequence mode. Also, determines the full screen popup time when an alarm is triggered on the DVR.

Video Display

For best results, leave 'Quality improve' selected.

Saving directory

Specify the location where AVI files and snapshots will be saved to the local PC.


Password

If inputting the password, System ask the password when trying to enter the local setup menu.

REMOTE SEARCH

Click the **SEARCH** button to playback.




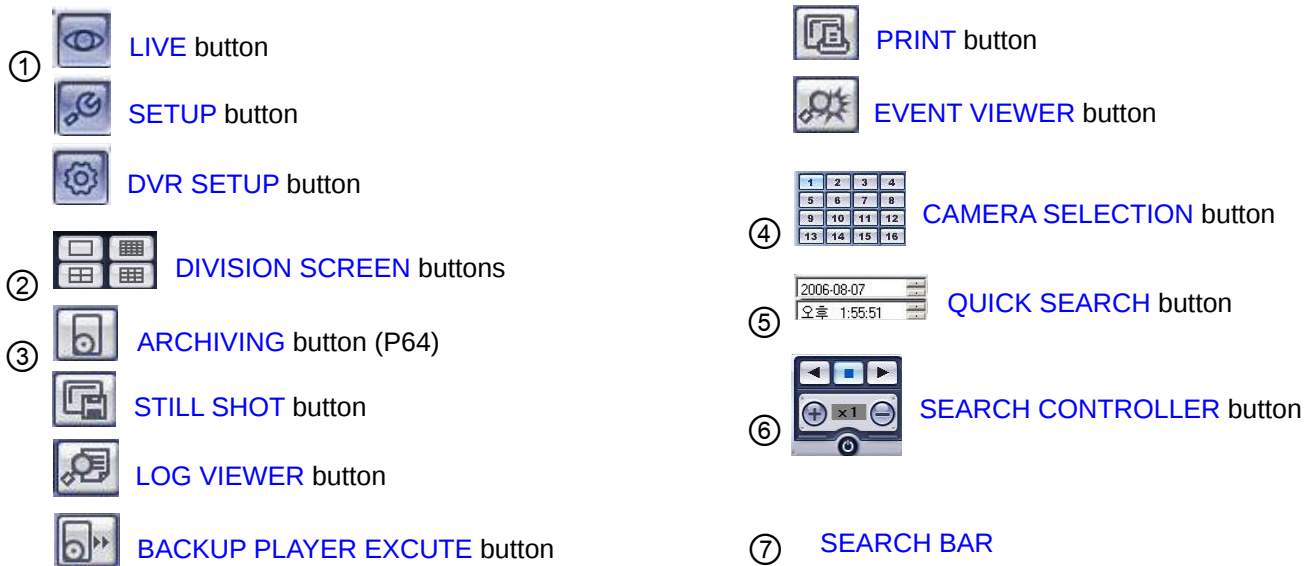

EXPLANATION OF FUNCTION KEYS


- ① LIVE Button : Return to the Live mode.
 SETUP Button : Entering the client software to change or check the setting.
 DVR SETUP Button : Entering the connected DVR to change or check the setting.
- ② DIVISIION SCREEN Button : Change the division screen to 1,4.
- ③ BACKUP Button : Can backup by channel including audio.
 STILL SHOT Button : Can save current image.
 LOG VIEWER Button : Can see all log records.
 BACKUP PLAYER EXECUTE button : Execute the backup player.
 PRINT Button : Can print current image.
 EVENT VIEWER Button :Can see all event records.
- ④ CAMERA SELECTION Button : Can select camera number.
- ⑤ QUICK SEARCH Button : To playback quickly, select date and time.
- ⑥ SEARCH CONTROLLER Button : Can control search function.
- ⑦ SEARCH BAR : Displayed recording status.

QUICK SEARCH

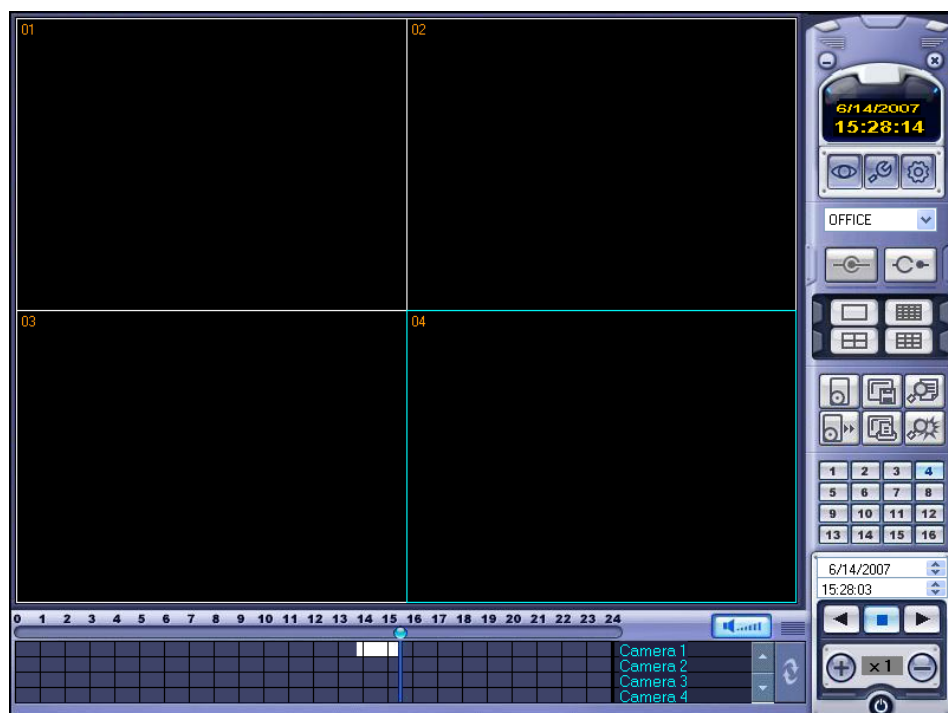

Click the **SEARCH** button in live display mode to switch to search mode.

 The **TIMELINE** at the bottom of the display shows a graphical overview of recorded footage for a particular day. White blocks indicate footage for a particular time segment, whilst blue blocks indicate no footage.



Choose the required date by selecting and then adjusting the date value using the up and down arrows.

As different dates are selected, the **TIMELINE** changes to show the status of recorded footage for that particular date.




Use the mouse to drag the **CURSOR** to the required time.

The exact time selected is displayed under the date.



Click to begin playback from the selected date and time.

ARCHIVING

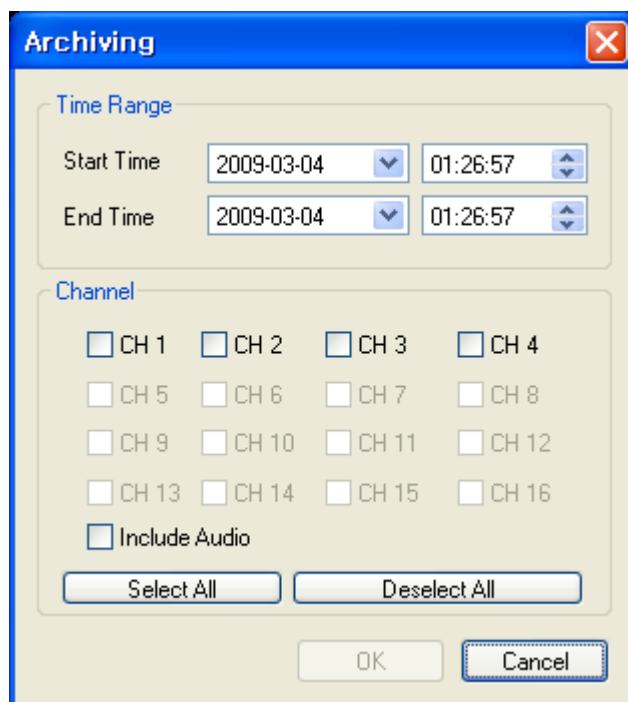

Pre-recorded footage on a DVR can be archived to the local PC hard disk.


Click the ARCHIVE button to show the archiving screen.

Choose start time, end time, which channels to archive and whether to include audio.

For convenience, choosing 'Select All' will highlight all available channels (including audio) for archiving.

Click OK to begin archiving data to the PC hard drive.

STILL SHOT

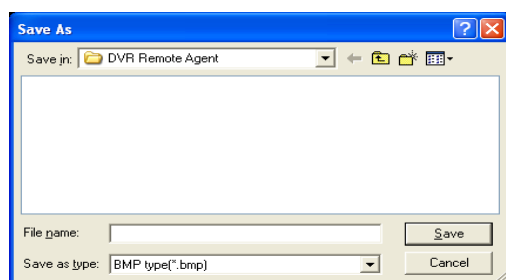


During playback, a still image can be save to the local PC hard disk by clicking the **SNAPSHOT** button.

Specify the file location, file name and choose BMP or JPG format. Click 'Save'.

The snapshot image is saved in the same style as the currently selected screen display, for example, quad screen, single screen etc.

LOG VIEWER

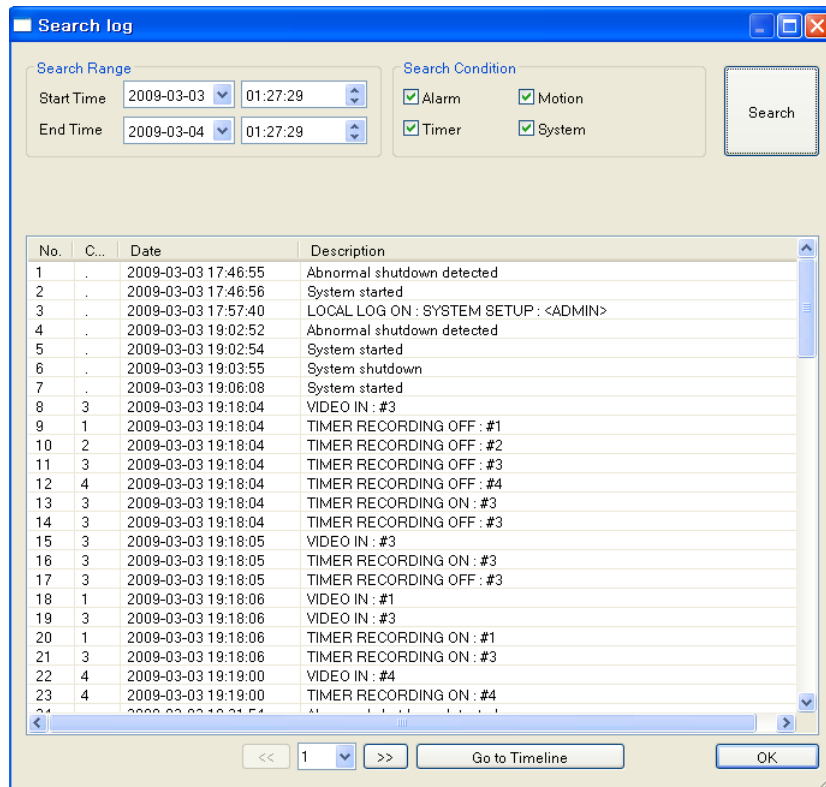

To search for an event and playback the recorded footage, press the **EVENT SEARCH** button.

Choose the 'Start time' and 'End time'. Select which events to include in the search and click 'Search'

The event log for the selected time period is displayed.

Select an event, click 'Go to timeline' and then click OK .

Click ▶ to begin playback from the selected date and time.

BACKUP PLAYER




To view archives backed up from a DVR, double click the player file.

Click  to choose which archive file to playback.

Playback of the archive file begins.

The controls under the display can be used to adjust playback direction and speed.


PRINT

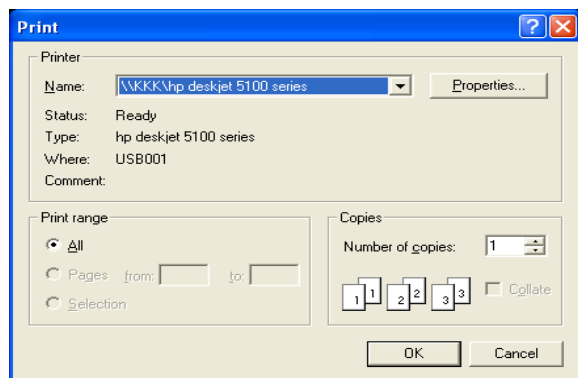

During playback, a still image can be printed on the local PC printer by clicking the **PRINT** button.

The printed image is in the same style as the currently selected screen display, for example, quad screen

EVENT VIEWER

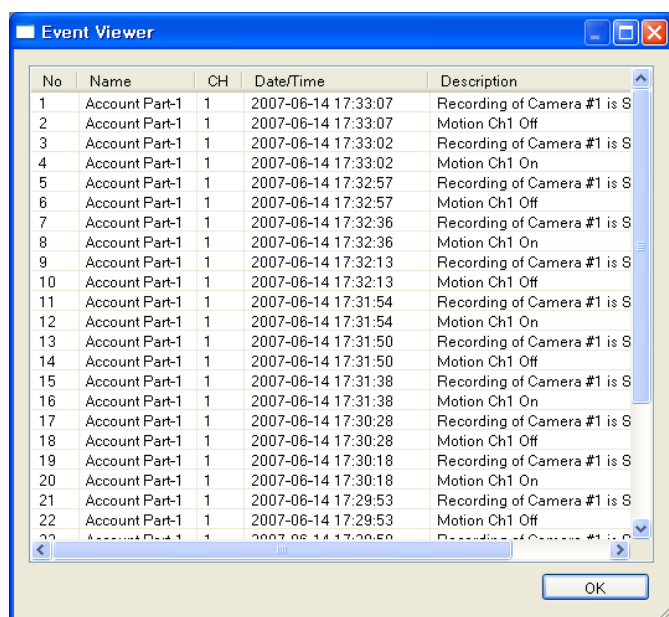

During playback, any live events detected on the DVR are sent to the remote client event log. To display this, click the **CURRENT EVENT LOG** button

REMOTE RECORDING SETUP

Only the ADMIN user can configure a DVR remotely. With the exception of network settings and certain display options, any of the DVR settings can be changed.


ENTERING SETUP

Click the **SETUP** button, enter the correct password for the ADMIN user and click OK



A dialog box titled "Checking Authority" with a red close button in the top right corner. It contains three input fields: "DVR Name" with the value "test", "User ID" with the value "ADMIN", and "Password" which is empty. At the bottom are "OK" and "Cancel" buttons.

RECORD

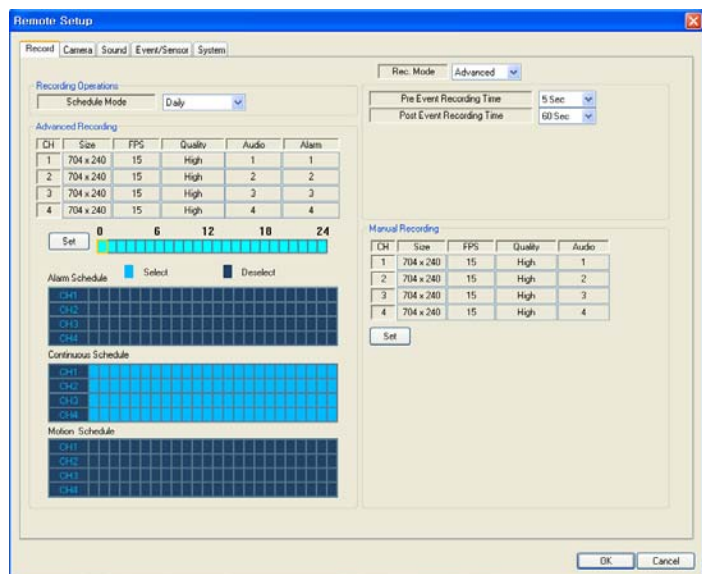

A "Remote Setup" dialog box with tabs for "Record", "Camera", "Sound", "Event/Sensor", and "System". The "Record" tab is active, showing "Recording Operations" with a "Schedule Mode" dropdown set to "Daily". Below this is a table for "Advanced Recording" with columns for CH, Size, FPS, Quality, Audio, and Alarm. A "Set" button is next to a 24-hour clock. There are also sections for "Alarm Schedule", "Continuous Schedule", and "Motion Schedule", each with a grid for CH1-CH4. On the right, "Rec Mode" is set to "Advanced", and "Pre Event Recording Time" and "Post Event Recording Time" are set to "5 Sec" and "60 Sec" respectively. A "Manual Recording" table is also present. "OK" and "Cancel" buttons are at the bottom.

• Record Operations

Schedule Mode: Select Weekly or Daily.

Pre Event Recording Time

: Record image including setting time before event happened. (0 ~ 5 Second)

Post Event Recording Time

: Record image including setting time after event happened. (5 ~ 180Second)

Panic recording: Disable, Auto, Manual

Panic recording time: It is related with Auto setup of panic recording

• Alarm Recording Schedule, Continuous/Motion record Schedule

Click the SET Button to set Alarm Recording.

Setup the size, rec. rate, quality and audio.

CAMERA

Camera Title

CH	Covert	Title
1	Off	CAM1
2	Off	CAM2
3	Off	CAM3
4	Off	CAM4

Color Setup

CH	Brightness	Contrast	Tint	Color
1	50	50	50	50
2	50	50	50	50
3	50	50	50	50
4	50	50	50	50

PTZ Setup

CH	Address	Protocol	Baud Rate	Property
1	0	pelcoD	9600 bps	Property
2	1	pelcoD	9600 bps	Property
3	2	pelcoD	9600 bps	Property
4	3	pelcoD	9600 bps	Property

Motion Sensor

CH	Sensitivity	Area
1	5	Area
2	5	Area
3	5	Area
4	5	Area

OK Cancel

• **Convert / Title**

Convert the camera and change the camera name.

(Covert function On/Off, Camera Name).

• **Color**

Setup the Bright, Contrast, Tint and Color.

• **PTZ**

Setup the PTZ camera address, Protocol, Baud rate and Properties for detail setup.

• **Motion Area**

Setup the motion sensitive and motion area.

SOUND

Audio

Live Audio: On

Audio Monitoring Channel: 1

Network Audio TX: On

Network Audio RX: Off

Buzzer

Keypad: On

Remote Ctrl: On

OK Cancel

• **Live Audio Setup**

Live Audio : On/Off.

Audio Monitoring Channel

: Select audio channel for live

Network Audio TX

: Choose the Audio transmission.

Network Audio RX

: Choose the Audio receive.

Buzzer

Keypad: on/off

Remote controller: on/off

EVENT / SENSOR

The screenshot shows the 'Remote Setup' window with the 'Event/Sensor' tab selected. The window is divided into several sections:

- Alarm Input:** A table with 4 rows. Each row has columns for 'Alarm' (1-4), 'Operation' (all set to 'Disable'), and 'Type' (all set to 'N/O').
- HDD Event:** A section with a 'Disk Full Event' dropdown set to 'On'.
- Alarm Output:** A table with 4 rows. Each row has columns for 'Alarm' (1-4), 'V-Loss' (all checked), and 'Motion' (all checked). Below this table are settings for 'Operation' (Disable), 'Mode' (Latched), 'Duration' (5 sec), and 'HDD Event' (On).
- Buzzer Output:** A table with 4 rows. Each row has columns for 'Alarm' (1-4), 'V-Loss' (all checked), and 'Motion' (all checked). Below this table are settings for 'Operation' (Disable), 'HDD Event' (On), 'Mode' (Latched), and 'Duration' (5 sec).
- E-mail Notification:** A table with 4 rows. Each row has columns for 'Alarm' (1-4), 'V-Loss' (all checked), and 'Motion' (all checked). Below this table are settings for 'Notification' (Off), 'HDD Event' (On), 'Booting Event' (On), and 'Frequency' (30 min).

At the bottom right of the window are 'OK' and 'Cancel' buttons.

• HDD Event

DISK FULL EVENT: On/Off

• Alarm Input

Setup the Alarm Connection & Type of each channel. (Enable /Disable, Normal Open / Normal Close)

• Alarm Out

Check the Alarm out event. (Alarm, Video loss, Motion)

Operation : Select usage of the Relay Connection with Alarm Sensor or not.

Mode: Select the reacted relay. (Latched/Transparent)

Duration: Setup the reacted relay time duration. (5seconds to 5minutes or Until key-in)

HDD Event : Select Alarm On & Off for Alarm out when HDD got a problem

• Buzzer out

Check the Buzzer out event. (Alarm, Video loss, Motion)

Operation : Select the buzzer On & Off for buzzer sound.

HDD Event: Select Buzzer On/Off for Buzzer when HDD happened any event.

Mode: Select the reacted relay. (Latched/Transparent)

Duration : Setup the Buzzer time duration.(5 seconds to 5 minutes or until key in)

• E-mail notification

Check the E-mail notification event. (Alarm, Video loss, Motion)

Notification : Select the E-mail notification On & Off.

HDD Event: Select E-mail notification On/Off when HDD happened any event.

Booting Event: Determines whether a reboot event sends an email.

Frequency : Setup the E-mail sending time duration. (10~30Min)

SYSTEM

The screenshot shows the 'Remote Setup' window with the 'System' tab selected. The window has a blue title bar and a menu bar with 'Record', 'Camera', 'Sound', 'Event/Sensor', and 'System'. The 'System' tab is active, showing several configuration sections:

- System Info:** A table with system details.

F/W Version	23.1.0A.D	Number of HDD	1
H/W Version	03.31.12.10	IP Address	192.168.150.107
Video Signal Type	NTSC	MAC Address	00-11-9A-04-17-ce
Disk Capacity	156280		
- Mail:** A section for email notification settings.
 - ☒ Default server use
 - Server:
 - Port:
 - User:
 - Security:
 - Password:
- Users:** A table for user management.

ID	Group	E-mail	Notify
ADMIN	ADMIN		No

 - Buttons: Add, Modify, Remove
- Network Speed:** A dropdown menu set to '8 Mbps'.
- Disk Overwrite:** A dropdown menu set to 'On'.

At the bottom right, there are 'OK' and 'Cancel' buttons.

- **System Info**

Check the DVR System information.

- **Mail**

Type the SMTP server name, information and user ID & password to use E-mail notification.

- **Users**

Add or delete any user.

- **Network Speed**

Select the network speed.

- **Disk Overwrite**


Select the On & Off for using disk overwrite.

WEB CLIENT SETUP

- **WEB Client Connection**

Input the IP Address or URL of the DVR in the Internet Explorer Address Bar.

A dialog will appear to confirm download of an ActiveX control. Please click 'Confirm' or 'Continue'.

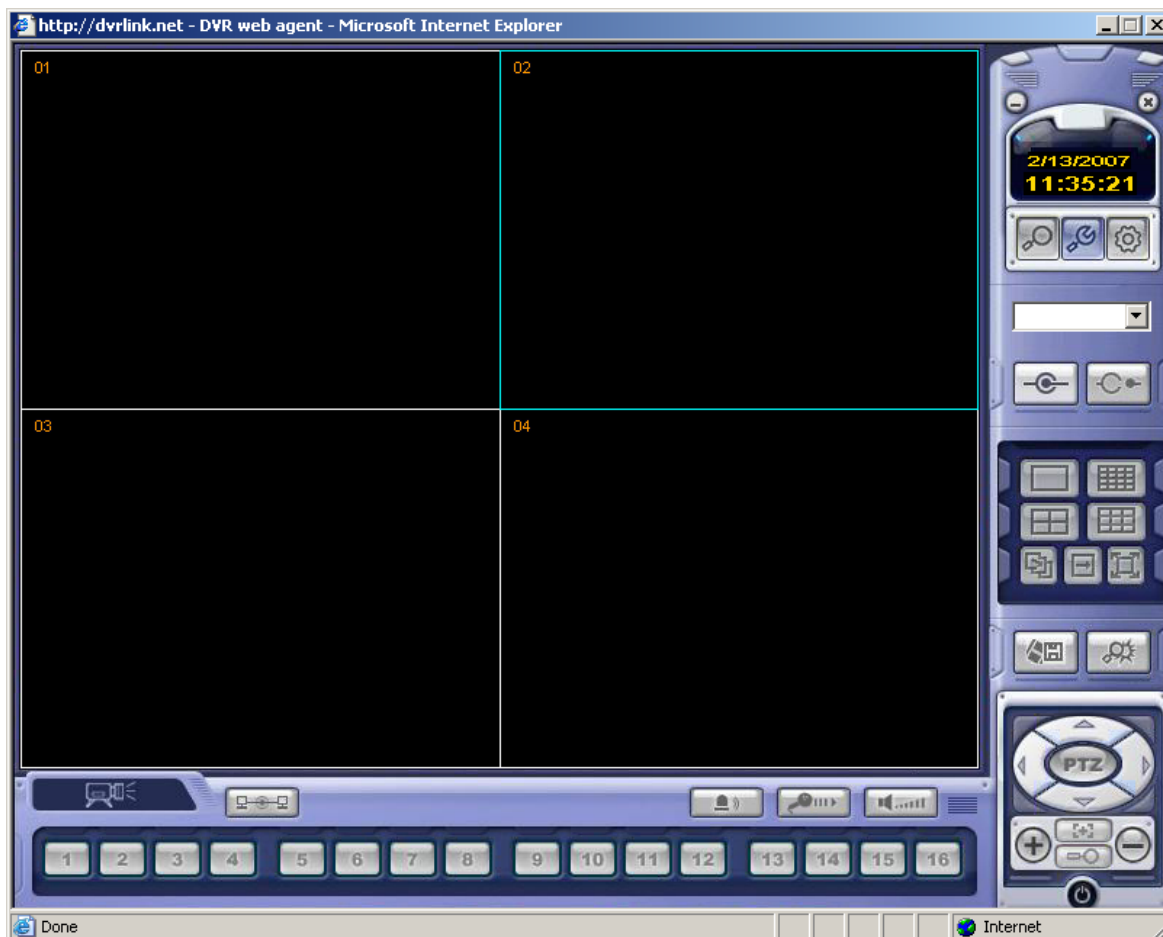

Web Client Window will appear in Internet Explorer.

All functions are the same as within the Remote Agent software.



Français/French

Élimination de votre ancien appareil

1. Ce symbole, représentant une poubelle sur roulettes barrée d'une croix, signifie que le produit est couvert par la directive européenne 2002/96/EC.
2. Tous les produits électriques et électroniques doivent être éliminés séparément de la chaîne de collecte municipale des ordures, par l'intermédiaire des installations de collecte prescrites et désignées par le gouvernement ou les autorités locales.
3. Une élimination conforme aux instructions aidera à réduire les conséquences négatives et risques éventuels pour l'environnement et la santé humaine.
4. Pour plus d'informations concernant l'élimination de votre ancien appareil, veuillez contacter votre mairie, le service des ordures ménagères ou encore le magasin où vous avez acheté ce produit.

English

Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Deutsch/German

Entsorgung von Altgeräten

1. Wenn dieses Symbol eines durchgestrichenen Abfalleimers auf einem Produkt angebracht ist, unterliegt dieses Produkt der europäischen Richtlinie 2002/96/EC.
2. Alle Elektro- und Elektronik-Altgeräte müssen getrennt vom Hausmüll über die dafür staatlich vorgesehenen Stellen entsorgt werden.
3. Mit der ordnungsgemäßen Entsorgung des alten Geräts vermeiden Sie Umweltschäden und eine Gefährdung der persönlichen Gesundheit.
4. Weitere Informationen zur Entsorgung des alten Geräts erhalten Sie bei der Stadtverwaltung, beim Entsorgungsamt oder in dem Geschäft, wo Sie das Produkt erworben haben.

Italiano/Italian

RAEE: SMALTIMENTO DELLE VOSTRE VECCHIE APPARECCHIATURE

1. Quando il simbolo del "Cassonetto Barrato" è apposto su un prodotto, significa che lo stesso può ricadere nei termini previsti dalla Direttiva Europea nr. 2002/96/EC in funzione dell'attuazione definita dalla Legislazione dei singoli stati membri dell'Unione Europea.
2. Tutti i prodotti elettrici ed elettronici dovrebbero essere smaltiti separatamente dai rifiuti municipali, tramite appositi contenitori, approvati dall'Amministrazione Comunale o dalle Autorità Locali.
3. Il corretto smaltimento delle vostre vecchie apparecchiature, contribuirà a prevenire possibili conseguenze di impatto negativo sull'ambiente e per la salute dell'uomo.
4. Per maggiori informazioni circa lo smaltimento delle vostre vecchie apparecchiature, siete pregati di contattare l'ufficio municipale della vostra città, il servizio di smaltimento rifiuti o il punto vendita nel quale avete acquistato il prodotto.

Polski/Polish

Utylizacja starych urządzeń

1. Kiedy do produktu dołączony jest niniejszy przekreślony symbol kołowego pojemnika na śmieci, oznacza to, że produkt jest objęty europejską dyrektywą 2002/96/EC.
2. Wszystkie elektryczne i elektroniczne produkty powinny być utylizowane niezależnie od odpadów miejskich, z wykorzystaniem przeznaczonych do tego miejsc składowania wskazanych przez rząd lub miejscowe władze.
3. Właściwy sposób utylizacji starego urządzenia pomoże zapobiec potencjalnie negatywnemu wpływowi na zdrowie i środowisko.
4. Aby uzyskać więcej informacji o sposobach utylizacji starych urządzeń, należy skontaktować się z władzami lokalnymi, przedsiębiorstwem zajmującym się utylizacją odpadów lub sklepem, w którym produkt został kupiony.

Português/Portuguese

Eliminação do seu antigo aparelho

1. Quando este símbolo de latão cruzado estiver afixado a um produto, significa que o produto é abrangido pela Directiva Europeia 2002/96/EC.
2. Todos os produtos eléctricos e electrónicos devem ser eliminados separadamente da coleta de lixo municipal através de pontos de recolha designados, facilitados pelo governo ou autoridades locais.
3. A eliminação correcta do seu aparelho antigo ajuda a evitar potenciais consequências negativas para o ambiente e para a saúde humana.
4. Para obter informações mais detalhadas acerca da eliminação do seu aparelho antigo, contacte as autoridades locais, um serviço de eliminação de resíduos ou a loja onde comprou o produto.

Español/Spanish

Cómo deshacerse de aparatos eléctricos y electrónicos viejos

1. Si en un producto aparece el símbolo de un contenedor de basura tachado, significa que éste se acoge a la Directiva 2002/96/EC.
2. Todos los aparatos eléctricos o electrónicos se deben desechar de forma distinta del servicio municipal de recogida de basura, a través de puntos de recogida designados por el gobierno o las autoridades locales.
3. La correcta recogida y tratamiento de los dispositivos inservibles contribuye a evitar riesgos potenciales para el medio ambiente y la salud pública.
4. Para obtener más información sobre cómo deshacerse de sus aparatos eléctricos y electrónicos viejos, póngase en contacto con su ayuntamiento, el servicio de recogida de basuras o el establecimiento donde adquirió el producto.

AMERICA

CBC (AMERICA) CORP.
New York / California
<http://www.cbcamerica.com>

EUROPE

CBC (EUROPE) LTD.
London
<http://www.cbceurope.com>

CBC (EUROPE) LTD.
Milan
<http://www.cbceurope.it/cctv>
info@cbc-europe.it

CBC (DEUTSCHLAND) GmbH
Dusseldorf
<http://www.cbc-de.com>

CBC (POLAND) Sp. z o.o
Warszawa
<http://www.cbcpoland.pl>

CBC Co., Ltd. MOSCOW REP OFFICE
Moscow
<http://www.cbc.ru>

CHINA

CBC(Beijing) Trading CO.,LTD.
Beijing
<http://www.cbc-china.cn/10/>

CBC (SHANGHAI) TRADING CO., LTD.
Shanghai
<http://www.cbc-china.cn/10/>

CBC SHANGHAI CO., LTD. GUANGZHOU OFFICE
Guangzhou
<http://www.cbc-china.cn/10/>

CBC (H.K.) CO., LTD.
Hong Kong
<http://www.cbc-china.cn/10/>

ASIA

CBC. S PTE LTD.
Singapore

CBC(THAILAND) CO., LTD.
Bangkok

CBC CO., LTD. MUMBAI REP OFFICE
Mumbai

CBC CO., LTD. JAKARTA REP OFFICE
Jakarta

CBC (TAIWAN) CO., LTD.
Taipei
<http://www.computar.com.tw/>

CBC Co. Middle East Branch Office
Dubai
<http://www.cbceurope.com>



CBC Co.,Ltd.
www.GANZ.jp