 


COIL CAP


Only use coil caps when the strike does not electrically work in the upside down or left handed position.

LEFT HANDED



INSTALLING CAPS

- Remove springs from coil
- Use a flat head screw driver attach the caps as shown

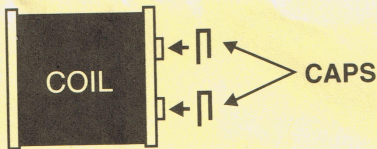

- The cap must be flush with the coil core as shown:

