

99 DEVICE - FUNCTION FOR TRIM

1. For EO, DT, NL and "Rigid" applications, cam remains as shipped

2. For TP, K and L applications:

Ⓐ Remove drive screw (do not reuse).


Ⓑ Turn cam to position shown.

3. For BE applications:


Ⓒ Remove drive screw.

Ⓓ Raise trim lock slide to full up position.

Re-install drive screw.

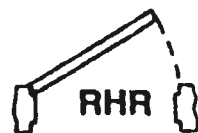

Ⓓ Rotate master cylinder cam 360° (one full turn to raise trim lock slide to up position. For BE function).

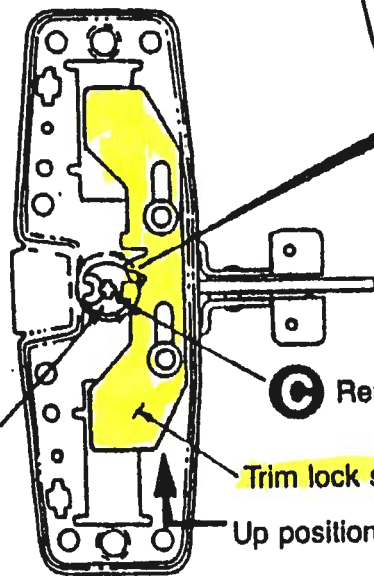

Cam is on back of center case

Ⓐ Remove drive screw

Ⓑ Master cylinder cam should be in position shown

5/64" Hex Key

Device shown handed for RHR application. LHR opposite.

Shipped as shown.