


INSTALLATION INSTRUCTIONS

Automatic Door Bottoms #354, #355


Regular Duty

For Metal Doors Only


ZERO INTERNATIONAL
415 Concord Avenue, Bronx, NY 10455-4801
Tel: 718-585-3230 • Fax: 718-292-2243
www.zerointernational.com
An ALLEGION Company

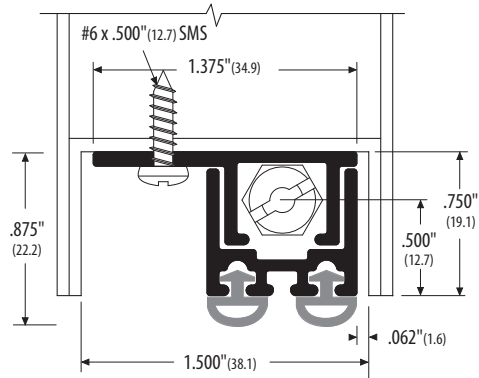

#354A
Mortised, Handed

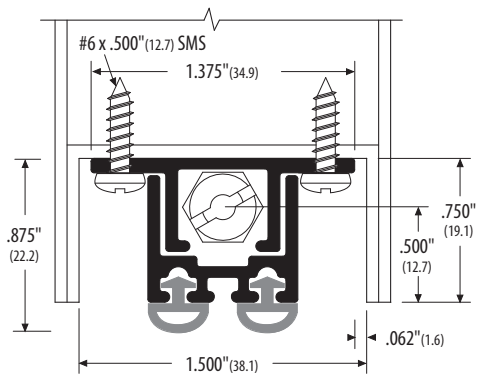


#355A
Mortised

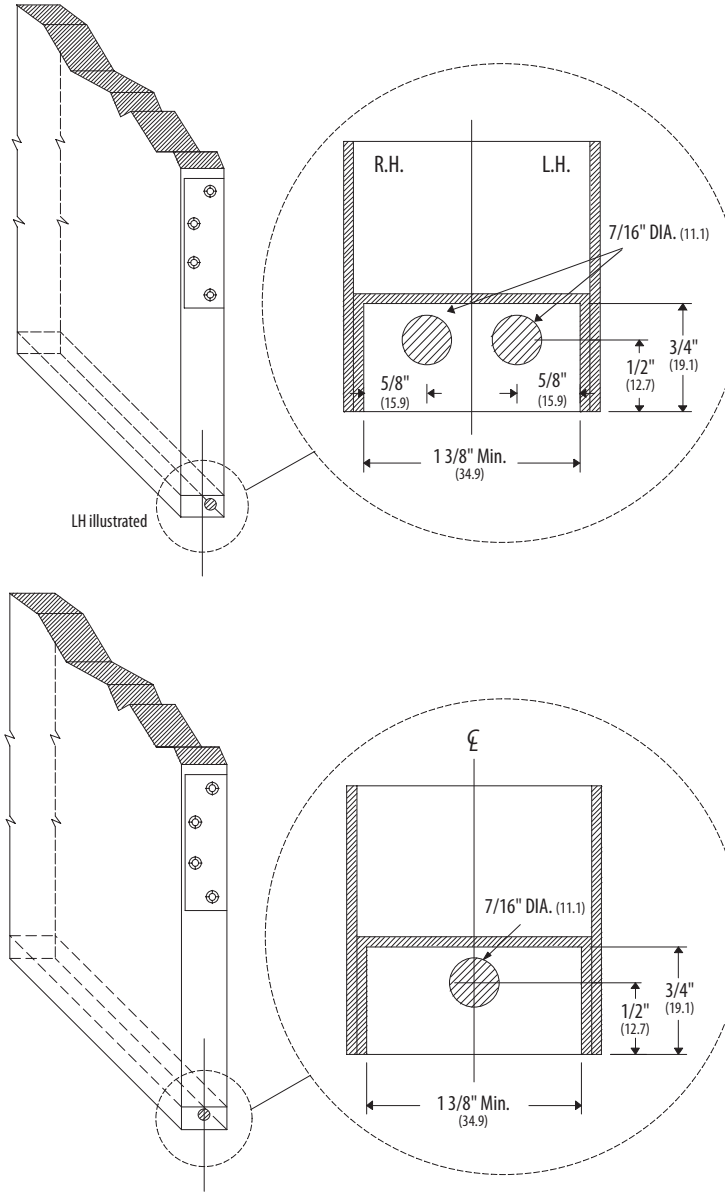

- 1** For part #354 - determine the door handing (L.H. or R.H.) before trimming.
- 2** Cut the automatic door bottom to 3/16" (4.8mm) less than the full width of the door.
- 3** Drill a 7/16" (11.1mm) hole at the lower edge of the door on the hinge side. (See the illustrations.) This is to allow the extension of the adjusting nut to make contact with the jamb.
- 4** Install the automatic door bottom with the adjusting brass nut extended through the hole slightly.
- 5** Final adjustment to control the drop of the automatic door bottom can be made once the unit is installed, by turning the adjusting brass nut in or out. Open and close the door while adjusting the brass nut to get the desired seal with the floor or sill. Maximum Drop is 1/2" (12.7mm). Do not over adjust.

TRIMMING INSTRUCTIONS

NOTE:
Handing on item #354 must be determined prior to trimming.

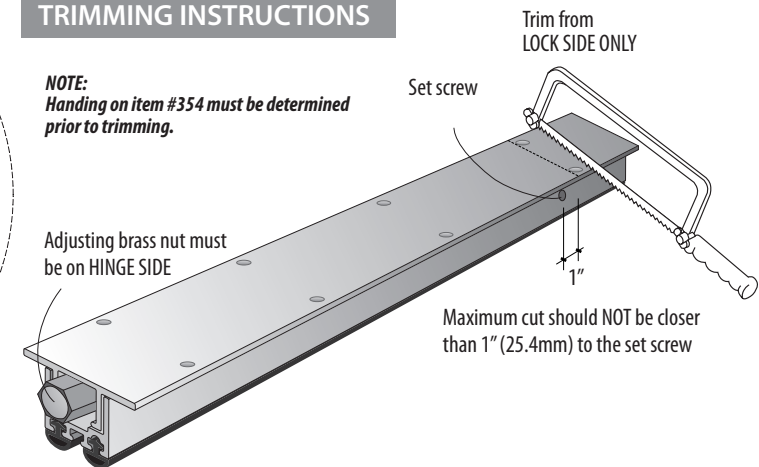

(Length in inches unless specified other)

