

## Pipe and Roof Deicing Heating Cable Installation Instructions

### GENERAL INFORMATION

- PSR heating cable may be used to prevent water pipes from freezing or to prevent the formation of ice dams on roofs.
- PSR heating cable is suitable for use on metal and plastic pipes (such as PVC or polybutylene) but not on flexible vinyl tubing (such as garden hose).
- PSR heating cable is suitable for use in metallic and nonmetallic gutters and downspouts.
- PSR heating cable is a self-regulating heating cable designed to change its heat output as the surrounding temperature changes. As the surrounding temperature increases, the output of the PSR cable decreases.
- PSR heating cables feature a pilot light in the plug (120V models only) to indicate when power is applied to the cable.
- PSR cable is suitable for shingle, slate, metal, wood and flat roofs with either plastic or metal gutters/downspouts.

### ⚠ PRECAUTIONS

- Heating cables must be installed in compliance with all national, state, provincial and local electrical codes. Check with your local inspector for specific details.
- These instructions must be retained and made available to the user and transferred to future users.
- Heating cables must not be energized in summer conditions; ensure that all heating cables are de-energized during the summer.
- Heating cables must be connected to a ground fault protection device. If you are unsure if the circuit supplying the heating cable has ground fault protection, the Easy

- Heat HCP1 Cable Sentry can be used to provide appropriate protection for 120V cables. The HCP1 will identify a damaged cable and remove power from it, preventing serious damage to your property.
- Do not alter the length of the heating cable—cable is factory sealed and alteration will result in risk of electrical fire or shock.
  - Post warning labels (supplied with cable) to power supply disconnect switch, circuit breaker panel, outdoor receptacle and any other appropriate locations, as applicable. Also post labels along any pipe (on outside of insulation) on which the cable is installed.
  - Do not bend cable to a diameter less than 5 times the cable diameter.
  - Installing cable on a roof below 32° deg. F may damage the shingle if it is brittle.



**120 VOLT CABLE SELECTION CHART**

Model No.	Length in Ft.	Wattage @ 50°F (10°C)
PSR1006	6	30
PSR1012	12	60
PSR1018	18	90
PSR1024	24	120
PSR1050	50	250
PSR1075	75	375
PSR1100	100	500

**240 VOLT CABLE SELECTION CHART**

Model No.	Length in Ft.	Wattage @ 50°F (10°C)
PSR2006	6	30
PSR2012	12	60
PSR2018	18	90
PSR2024	24	120
PSR2050	50	250
PSR2075	75	375
PSR2100	100	500

### PIPE FREEZE PROTECTION

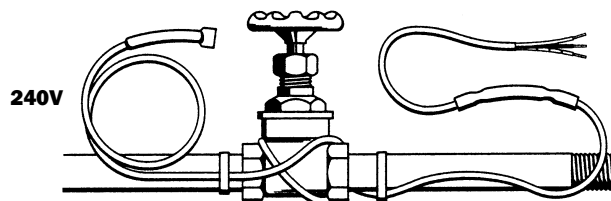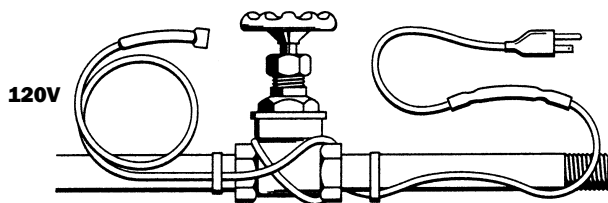

### PLANNING

- Exposure to temperatures above 150°F (66°C) will shorten the life of your cable. Before installing on hot water pipes, set the water heater thermostat below 150°F (66°C).
- Remove any old heating tapes or insulation before installing the new cable.
- Do not alter the length of the cable.**
- Do not use thin (1/8") foil-backed foam insulation.


**Selection of heating cable.** Select the appropriate cable length from one of the two charts on next page. Cable may be up to 2 feet shorter than the pipe. Lengths assume lowest ambient temperature is -20°F (-29°C), with a minimum of 1/2" fiberglass insulation or equivalent. For protection to -40°F (-40°C), use 1" fiberglass insulation. Note: Allow an extra foot of heating cable for each valve.

## CABLE LENGTH SELECTION CHART


Ambient Temperature -20°F, with 0.5" Thick Fiberglass Insulation.

Model #	No. of Cables	METAL PIPE *[-20°F (-29°C) with 0.5" thick fiberglass insulation]											
		Pipe Dia.	3'	4' - 6'	7'	8' - 12'	13' - 14'	15' - 18'	19' - 25'	26' - 50'	51' - 75'	76' - 100'	
A	PSR(*)006	1 cable	0.5"		A	A	B	B	C	C	E	F	G
B	PSR(*)012	1 cable	1.0"	A	A	A	B	B	C	C	E	F	G
C	PSR(*)018	1 cable	1.5"	A	A	A	B	B	C	D	E	F	G
D	PSR(*)024	1 cable	2.0"	A	B	B	C	C	D	E	F	G	H
E	PSR(*)050	1 cable	2.5"	A	B	B	C	C	D	E	F	G	H
F	PSR(*)075	1 cable											
G	PSR(*)100	1 cable											
H	PSR(*)100	2 cables											

Replace\* with voltage code:  
1 for 120V; 2 for 240V

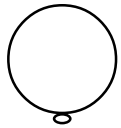

Single Cable

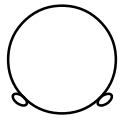

Double Cable

PLASTIC PIPE *[-20°F (-29°C) with 0.5" thick fiberglass insulation]											
Pipe Dia.	3'	4' - 6'	7' - 12'	13' - 15'	16' - 18'	19' - 24'	25'	26' - 50'	51' - 75'	76' - 100'	
0.5"		A	B	B	C	D	D	E	F	G	
1.0"	A	A	B	C	C	D	E	E	F	G	
1.5"	A	B	C	D	D	E	E	F	F	H	
2.0"	A	B	C	E	E	E	E	F	G	H	
2.5"	A	B	C	E	E	E	F	F	G	H	

\*For -40°F (-40°C), use 1" thick fiberglass insulation.

**Attaching heating cable to pipes.** Wrap Easy Heat HCA (optional Application Tape) or nylon cable ties at six-inch intervals to secure the heating cable to the pipe.

- If the heating cable is the same length as the pipe, run it straight along the bottom of the pipe. If two cables are required, position them in the 4 and 8 o'clock positions.
- If the cable selected is exactly double the pipe length, apply a single trace of cable straight along the pipe all the way to the end, and loop back, applying cable straight along the pipe all the way back to the starting point.
- If the cable selected is somewhat less than double the pipe length, spiral the cable evenly along the entire length of pipe.

**Protecting the system with thermal insulation.** Before insulating, ensure that there is no damage, such as nicks or cuts on the heating cables. Immediately cover the pipe, cables, connections, valves and spigots with 1/2" to 1" thick fiberglass insulation or equivalent. Do not leave the cables exposed. Use fire-resistant materials such as fiberglass wrap. Make sure the insulation is waterproofed (with polyethylene or other vapor barriers) in areas where water may come in contact with the insulation.

**Heating cable control options and power connection.** For 120 Volt cables, the heating cable can simply be plugged into either a ground fault protected electrical receptacle or the Easy Heat HCP1 Cable Sentry.

For 240 Volt cables, the cable is designed to be directly connected into an appropriate electrical outlet box supplied by ground fault protected circuit. Since it will be necessary to remove power from the cable from time to time, such as in summer, always connect the cable to an appropriate double-pole electrical switch. If the heating cable is the only load on the circuit, the branch circuit breaker may be used to disconnect power from the cable (switch is not necessary).

In addition, a remote thermostat similar to Easy Heat model C3RC can be used for 120 Volt or 240 Volt cables to reduce energy consumption and extend the life of the cable. Consult your local Easy Heat supplier or representative for other control options.

**Testing the system.** Once the installation is complete, apply power to the heating cable; wait about one hour, and then turn on a water tap supplied by the protected pipe and test the temperature of the water. It should feel warm almost immediately as the water heated by the cable flows through the pipe.

**Operation.** Energize the cable/control upon the arrival of cold weather in the fall and de-energize the cable in late spring.

**Maintenance.** Check cable each year for any damage before energizing the heating cable. Check any ground fault protection device for proper operation. Check pipe insulation and replace any that may be loose or damaged. Do not operate the cable if any damage is found.



USA  
2 Connecticut South Drive  
East Granby CT 06026  
TEL 800/537-4732  
FAX 888/324-2440

Canada  
99 Union Street  
Elmira ON N3B 3L7  
TEL 519/669-2444  
FAX 519/669-6419

# ROOF DEICING


**Selection of heating cable.** The total heating cable length for deicing is determined by including all elements of the roof system that need protection. Use Tables 1 and 2 to determine the total length of cable. usually one cable will be sufficient for both roof and gutter areas. For larger installations, use separate cables for roof area and gutter/downspout area.

**Installation procedures.**

- Remove leaves, pine needles, or any combustible debris from roof, gutters and downspouts before installing roof deicing cable.
- Use ZH-C Roof Clips (sold separately) for attaching the heating cable to the roof (shingle and metal roofs).
- For downspouts longer than 20 feet, use DSH Downspout Hanger (sold separately) to support the heating cable where it enters/exits a downspout.

One hanger is required for each downspout. Always loop the cable down to the bottom of downspout and back up toward gutter, clamping it into downspout hanger to prevent cable from being damaged by drain/gutter edge. This also ensures that the cable tail is secured on the roof. Cable to be linked to roof loop (see diagrams).

**TYPICAL SHINGLE ROOF** (Single cable shown for roof and gutter)

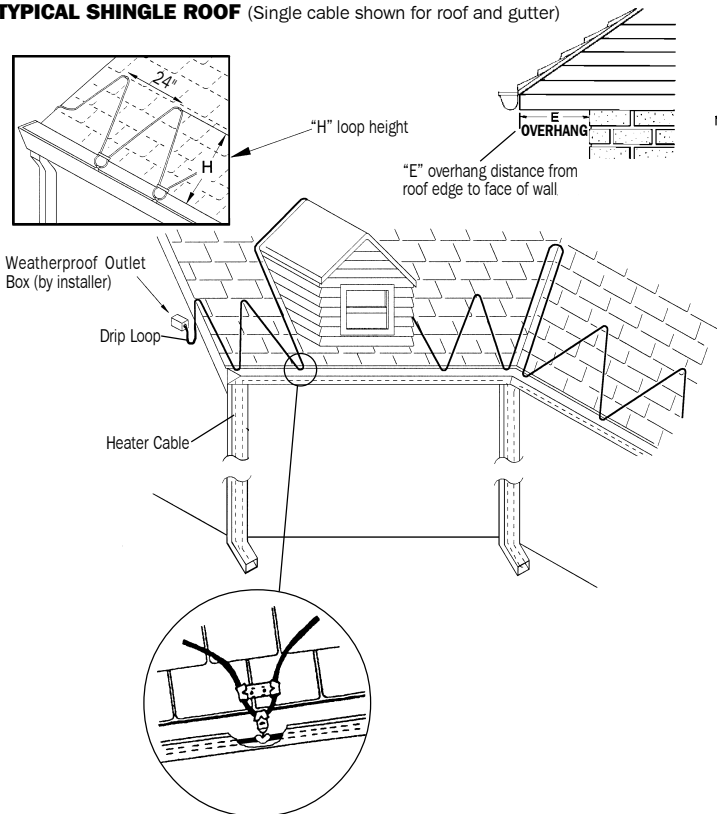

Items	Cable Required
Roof Edge	From Table 2 based on eave overhang
Gutter	1 ft of cable per foot of gutter (if gutter is wider than 6", use 2 traces)
Downspout	2 ft of cable per foot of downspout—cable is looped down and back
Roof Valley	6 ft of cable per valley—loop 3' up valley and back
Dormer Perimeter	1 ft of cable per foot of dormer perimeter



Eave Overhang E	Loop Height H	Length Factor Shingle Roof (Note 1)	Length Factor Metal Roof (Note 2)
12"	18"	1.9	2.5
24"	30"	2.7	3.5
36"	42"	3.6	4.5
48"	54"	4.6	5.5

Cable length required = Length Factor x Roof Length (feet)


**Notes:**

1. Standard shingle roof with sawtooth pattern. (See diagram)
2. Metal roof with loop pattern. (See diagram)
3. For other designs, contact Easy Heat.

**TYPICAL METAL ROOF** (Separate cables shown for roof and gutter)

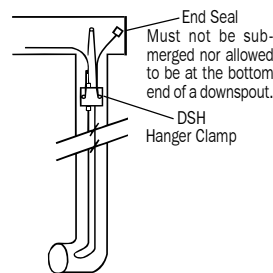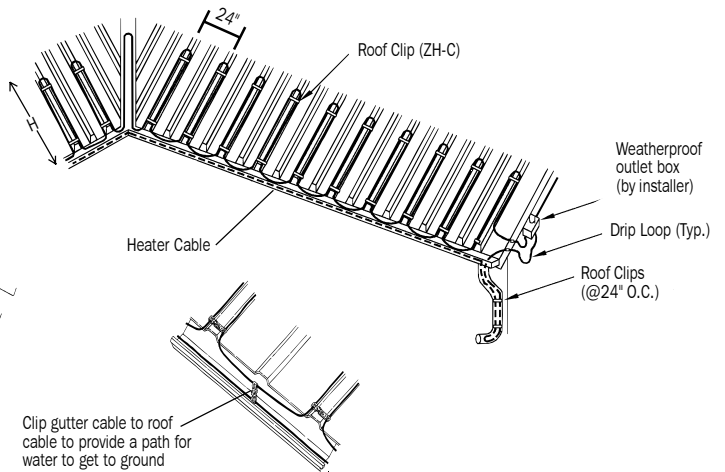

**END CIRCUIT  
DOWNSPOUT  
INSTALLATION**

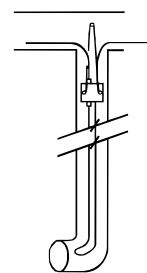

**MID CIRCUIT  
DOWNSPOUT  
INSTALLATION**



**Heating cable control options and power connection.**

For 120 Volt cables, the heating cable can be simply plugged into a ground fault protected electrical receptacle, or the Easy Heat HCP1 Cable Sentry, when icing conditions are present on the roof. The (optional) Easy Heat RS-2 Roof Sentry (120 Volt) control can be used to automatically ensure cables are energized only when icing conditions are present on the roof, minimizing energy consumption and extending cable life.

For 240 Volt cables, the cable is designed to be directly connected into an appropriate electrical connection box. Since it will be necessary to remove power from the cable from time to time, such as in summer, always connect the cable to an appropriate double-pole electrical switch. If the heating cable is the only load on the circuit, the branch circuit breaker may be used to disconnect power from the cable (switch is not necessary). Several automatic controls are available from Easy Heat.

**⚠** Always connect a pilot light into the circuit of 240V cables to indicate when the cables are energized.

**Testing the system.** Once the installation is complete, apply power to the heating cable; the surface of the cable will feel warm after about 15 minutes.

**Operation.** If no automatic controls are installed, energize the cable only when icing conditions are present on the roof, and de-energize when icing conditions are no longer present. For 120 Volt models only, the power cord plug contains a pilot light indicating that power is being applied to the cable. Ensure power is removed from the cable/control in summer.

**⚠ Maintenance.** Check cable annually for any damage, such as nicks or cuts possibly caused by animals or other activity on the roof. Check any ground fault protection devices for proper operation. Remove all debris (leaves, twigs, pine needles, etc.) from roof, gutters and downspouts prior to energizing the roof cable. Do not attempt to energize the roof cable if any of these problems are discovered.

**LIMITED WARRANTY AND LIABILITY**

Easy Heat warrants that if there are any defects in material or workmanship in this product during the first twelve (12) months after the date of its purchase, we will replace the product with an equivalent model, not including any labor or other installation costs.

Our obligation to replace the product as described above is conditioned upon (a) the installation of the product conforms to the specifications set forth in our installation instructions and (b) the product not having been damaged by unrelated mechanical or electrical activities.

**Product replacement as described above shall be your sole and exclusive remedy for a breach of this warranty. This limited warranty does not cover any service costs relating to repair or replacement.**

**We shall not be liable for any incidental, special or consequential damages as a result of any breach of this warranty or otherwise, whether or not caused by negligence.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

The warranty above is exclusive and makes no other warranties with respect to description or quality of the product. No affirmation of fact or promise made by us, by words or action, shall constitute a warranty. If any model or sample was shown to you, the model or sample was used merely to illustrate the general type and quality of the goods and not to represent that the goods would necessarily be of that type or nature. **No agent, employee or representative of ours has authority to bind us to any affirmation, representation or warranty concerning the goods sold unless such affirmation, representation or warranty is specifically incorporated by written agreement.**

**Any implied warranty of merchantability or fitness for particular purpose that may arise in connection with the sale of this product shall be limited in duration to twelve (12) months from the date of purchase. We disclaim all other implied warranties,** unless we are prohibited by law from doing so, in which case all such implied warranties shall expire at the earliest time permitted by applicable law. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

To obtain a replacement under this warranty any inoperative product or component must be returned, with proof of purchase, to Easy Heat at the addresses noted herein. Buyer is responsible for all costs incurred in removal and re-installation of product and must pre-pay shipment to factory or point of purchase.

In Canada  
Heating Cable Warranty Dept.  
99 Union Street  
Elmira, ON N3B 3L7

In USA  
Heating Cable Warranty Dept.  
2 Connecticut South Drive  
East Granby, CT 06026

