



SET YOUR OWN COMBINATION

With 1,000 combinations possible, the combination can be changed quickly without the need of special tools or disassembly.

EMAIL USE YOUR COMBINATION



Once you set your personal combination, simply email us your new code to Code@StatGuardplus.com and we will file it for you. Should you ever need it, simply contact us by phone or email and we will be glad to email the code to the address on file. It's that simple!

WARNING!

Read all instructions prior to installation of thermostat guard.
Verify dimensions to ensure product is suitable for your application.
Disconnect power to prevent electrical shock or equipment damage.
The thermostat guard should only be used as described in the manual.
Any other use is not recommended and will void warranty.



RESET COMBINATION

1. Set combination to opening number prior to resetting (factory default is 0-0-0).
2. On the underside outer edge of the lock there is a hole for the code reset button. Rotate the face of the cam until the code reset button comes into view.
3. Push the pin in with a paper clip and keep it pushed in while turning each of the dials to the desired number, setting your personal combination.
4. Release the reset button and your combination is set.
5. To lock, turn clockwise to the "locked" position. Rotate one or more dials after lock is closed.
6. To open the lock, set your personal combination.

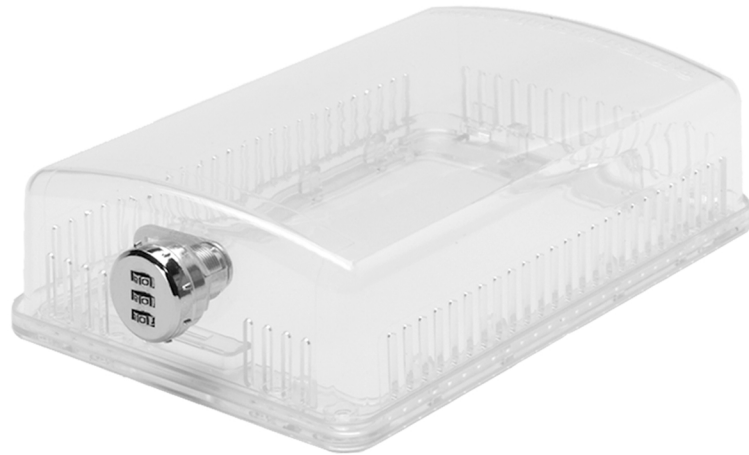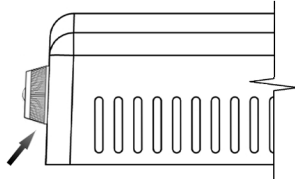

INSTALLATION

1. Unlock box by setting personal combination code and turning counter-clockwise. Separate cover from base.
2. Position the ring base over the existing thermostat.
3. Mark the wall at the six screw hole locations with a pencil.
4. Remove the ring base from the wall.
5. Insert either No.2 or No.3 Phillips driver bit into the recess of the anchor head. Use a manual screwdriver or a low battery powered electric screw gun.
6. Push the anchor into the surface of the wall board, where previously marked by pencil, until the two cutting blades penetrate the surface. Using gentle forward pressure rotate the anchor until the collar sets flush to surface of the wall.

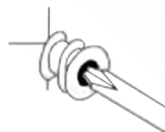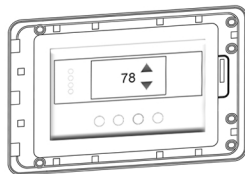

7. Re-align the base plate over the anchors. Insert the first four screws on the right side of the base plate as shown. Using gentle forward pressure rotate the screw until it is tight to the base plate and the right side is secure to the wall.
 8. Gently lift the left side of the base plate from the wall and attach the guard cover to the base plate by placing the three hinges into the three slotted holes on the base plate and rotate clockwise until the base plate is flush to the wall.
 9. Insert the final two screws into the left side of base plate. Using gentle forward pressure rotate the screws until it is tight to the base plate and secure to the wall.
- Fits thermostats up to: 7.25 in. (180mm) wide x 4.5 in. (114mm) high x 2.25 in. (56.25mm) deep

