

**Bluetooth Speaker Operation for
SPKACC Speaker Accessory Kit**

Update: 10.23.2014

Page 1 of 2

BLUETOOTH® wireless technology SPEAKER OPERATION

To connect to the Broan-NuTone Bluetooth® wireless technology Speaker for the first time:

1. To play your personal music or audio files, you need a *Bluetooth* wireless technology enabled Smart Phone, Tablet, or any other such device.
2. Set your device to a low-to-midrange volume before connecting to the speaker.
3. Make sure Fan is **ON** and *Bluetooth* wireless technology enabled device is located within 10 meters (approximately 33 feet) of the Speaker/Fan.
4. Pairing your *Bluetooth*® wireless technology enabled device with the Speaker:
 - a. For iPad/iPhone/iPod touch:
 - i. From your iPad/iPhone/iPod touch home page, tap **Settings**.
 - ii. From Settings, tap **General** (if you have iOS 7 or greater, you can skip this step).
 - iii. From General, tap **Bluetooth**.
 - iv. Move the **Bluetooth Slider** to **ON**/green (if it isn't ON already). When you do this, a list of discoverable *Bluetooth*® wireless technology devices will appear.
 - v. The Broan-NuTone Speaker has the *Bluetooth*® identifier "**Sensonic™ Vent Fan**". This identifier should be in the list of **Discoverable Devices**. If not, turn the Fan OFF, then ON, then turn Bluetooth OFF, then ON.
 - If "Sensonic™ Vent Fan" is still not on the list, consult with the owner's manual for your device and follow the procedure for Pairing/Connecting a *Bluetooth*® wireless technology device.
 - vi. Tap on "**Sensonic™ Vent Fan**" to complete the pairing of the *Bluetooth*® wireless technology Speaker with your Apple device.
 - b. For Android Phone/Tablet:
 - i. From your smart phone/tablet home page, tap **Settings**.
 - ii. From the *Settings* menu, go to **Wireless & Controls, Wireless & Networks**, or something similar.
 - iii. Find **Bluetooth, Bluetooth Settings** or something similar and tap **Bluetooth** or move **Bluetooth Slider** to **ON** (if it isn't on already).
 - iv. On the Bluetooth screen, tap "**Scan for Devices**", "**Search for Devices**" or something similar.
 - v. The Broan-NuTone Speaker has the *Bluetooth*® identifier "**Sensonic™ Vent Fan**". This identifier should show up in the list of **Available Devices**. If not, turn Fan OFF, then ON, and repeat pairing procedure.
 - If "Sensonic™ Vent Fan" is still not on the list, consult with the owner's manual for your Android device and follow the procedure for Pairing/Connecting a Bluetooth device.
 - vi. Tap on "**Sensonic™ Vent Fan**" to complete the pairing of the Bluetooth wireless technology Speaker with your Android device.
 - c. For all other Bluetooth® wireless technology enabled devices:
 - i. Follow the instructions that came with your *Bluetooth*® wireless technology enabled Phone, Tablet or Pad device to set it to search for *Bluetooth*® wireless technology accessories.
 - ii. Most *Bluetooth*® wireless technology enabled devices will require you to go to the "Paired Devices" (or similar) screen and SELECT "Search for Devices" or something similar.
 - iii. The Broan-NuTone Speaker has the *Bluetooth*® identifier "**Sensonic™ Vent Fan**". This identifier should show up in the list of **Available Devices, Discoverable Devices** or similar. If not, turn Fan OFF, then ON, and repeat pairing procedure.
5. Open up the audio program on your device and play your music or other audio files. The audio file should play over the Bluetooth Fan Speakers.
6. When done playing/listening to your audio files, disconnect from the Speaker by either turning OFF the fan, disconnecting *Bluetooth*® wireless technology from your device (Smart Phone, Tablet, etc) or simply walking away. The *Bluetooth*® wireless technology will automatically disconnect when the device is out of range of the Speaker, which should occur when device is approximately 10 meters (33 feet) away from the Speaker.

**Bluetooth Speaker Operation for
SPKACC Speaker Accessory Kit**

Update: 10.23.2014

Page 2 of 2

To connect to the *Bluetooth*® wireless technology Speaker each subsequent time (after initial connection is made):

1. The Sensonic™ Speaker can only play audio files from one *Bluetooth*® wireless technology device at a time, therefore one device must be **DISCONNECTED** (but not necessarily **UNPAIRED**) before using the Speaker with another device.
2. If your *Bluetooth*® wireless technology device was **DISCONNECTED** but not **UNPAIRED** from the Speaker last time it was used, then it should automatically connect next time the device is within range of the Speaker, unless the Speaker is already **CONNECTED** to another device.
 - a. If your device does not **CONNECT** automatically with the Speaker, then find your “Paired Devices” or similar list and **TAP** on “Sensonic Vent Fan” to reconnect with the Sensonic™ Speaker.
3. If your *Bluetooth*® wireless technology device was **UNPAIRED** from the Speaker after the last time it was used, you must follow the connection procedure in the previous section for **PAIRING** your device with the Speaker.
4. Open up the audio program on your device and play your music or other audio files. The audio file should play over the *Bluetooth*® wireless technology Fan Speakers.
5. When done playing/listening to your audio files, disconnect from the Speaker by either turning **OFF** the fan, disconnecting *Bluetooth*® wireless technology from your device (Smart Phone, Tablet, etc) or simply walking away. The *Bluetooth*® wireless technology will automatically disconnect when the device is out of range of the Speaker, which should occur when device is approximately 10 meters (33 feet) away from the Speaker.