

Accessory Parts

3PMNDK01FI03
3PMNDK01FI06
3PMNDK02FI01
3PMNDK02FI02
3PMNDK03FI01
HGDRSB000300C
HGDRSB000300CC
HGDRSB000300CD
HGDRSB000300DC
HGDRSB000300DCC
HGDRSB000300DCD
HGDRSB000300DG
HGDRSB000300DGC
HGDRSB000300DGD
HGDRSB000300G
HGDRSB000300GC
HGDRSB000300GD
HGDRSB180240C
HGDRSB180240CC
HGDRSB180240CD
HGDRSB180240G
HGDRSB180240GC
HGDRSB180240GD
LAKT23FIAC
LAKT24FIAC
LAKT25FIAC
LAKT300FIAC2
LAKT300FIDDC
VENSTAR03
VENSTAR07

ACCESSORY PARTS LIST

RP-FIOPL1



This manual is to be used by qualified technicians only.

This manual replaces RP-FIOPL1
released in February 2021.

Important Information

Index

Functional Parts List	3
Illustration and Parts	4 - 11

Views shown are for parts illustrations only, not servicing procedures.

4-5-22: REMOVED NOMENCLATURE PAGE PER REQUEST FROM DAIKIN MARKETING GROUP

Text Codes:

AR - As Required

NA - Not Available

NS - Not Shown

00000000 - See Note

QTY - Quantity Example (QTY 3) (If Quantity not shown, Quantity = 1)

M - Model Example (M1) (If M Code not shown, then part is used on all Models)

Expanded Model Nomenclature:

Example M1 - Model#1 M2 - Model#2 M3 - Model#3

Daikin Company, L.P. is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Daikin Company, L.P. also recommends contacting an authorized technician and using authorized factory parts.

Daikin Company, L.P. reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations.

For assistance within the U.S.A. contact:

Equipment Support
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
855-770-5678-Telephone
713-863-2382-Facsimile

For assistance outside the U.S.A. contact:

International Division
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
713-861-2500-Telephone
713-863-2382-Facsimile

Functional Parts

Part

No: Description:

0130M00059	LOW AMBIENT (M19, M20, M21, M22, M23)
0130M00271	MODULE CYCLE TIMER (M22, M23)
0130L00105	PHASE MONITOR (M26, M27, M28, M29, M30)
10135604	RELAY (M22, M23)
0130M00265	RELAY THERMISTOR (M22, M23)
RS400	REMOTE SENSOR (M24, M25)
SP400	SENSOR PACK (M24, M25)
0130M00276	SOLID STATE CONTACTOR (M22, M23)
ECP400-5	SURVEYOR ECP (M24, M25)
VENSTAR03	VENSTAR CONTROL KIT 15 - 20 TON (M24)
VENSTAR07	VENSTAR CONTROL KIT 25 TON (M25)



SPECIAL PARTS

IOD-7065	INSTALLATION INSTRUCTIONS (M28, M29)
IOD-7056	INSTALLATION INSTRUCTIONS (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)
IOD-7119A	INSTALLATION INSTRUCTIONS (M23)
IOD-7021B	INSTALLATION INSTRUCTIONS (M22)
IOD-7130A	INSTALLATION INSTRUCTIONS (M19, M20, M21)
IOD-7053	INSTALLATION INSTRUCTIONS (M26, M27)


Expanded Model Nomenclature

M1 - HGDRSB000300C
M2 - HGDRSB000300CC
M3 - HGDRSB000300CD
M4 - HGDRSB000300DC
M5 - HGDRSB000300DCC
M6 - HGDRSB000300DCD
M7 - HGDRSB000300DG
M8 - HGDRSB000300DGC
M9 - HGDRSB000300DGD
M10 - HGDRSB000300G
M11 - HGDRSB000300GC
M12 - HGDRSB000300GD
M13 - HGDRSB180240C
M14 - HGDRSB180240CC
M15 - HGDRSB180240CD
M16 - HGDRSB180240G
M17 - HGDRSB180240GC
M18 - HGDRSB180240GD
M19 - LAKT23FIAC
M20 - LAKT24FIAC
M21 - LAKT25FIAC
M22 - LAKT300FIAC2
M23 - LAKT300FIDDC
M24 - VENSTAR03
M25 - VENSTAR07
M26 - 3PMNDK01FI03
M27 - 3PMNDK01FI06
M28 - 3PMNDK02FI01
M29 - 3PMNDK02FI02
M30 - 3PMNDK03FI01


HINGED DOOR ASSEMBLY

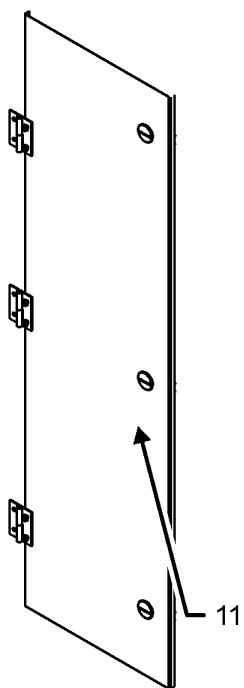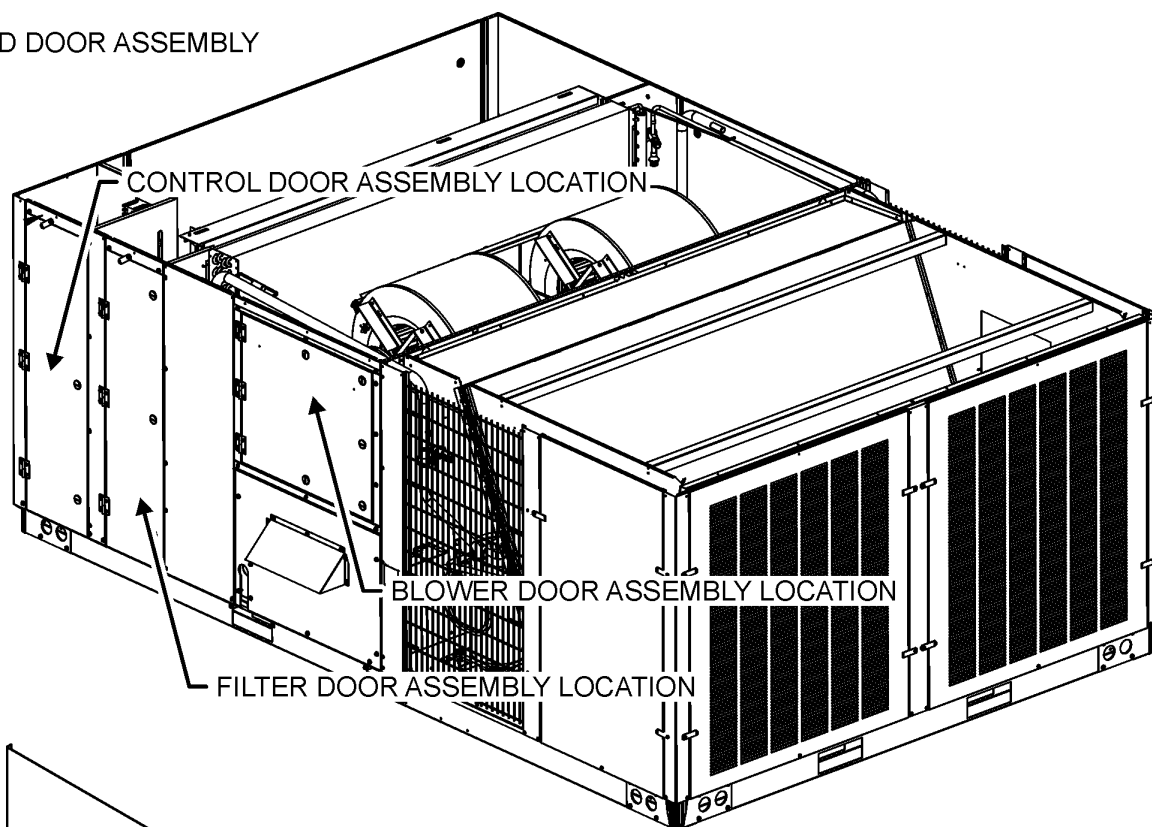

CONTROL DOOR ASSEMBLY

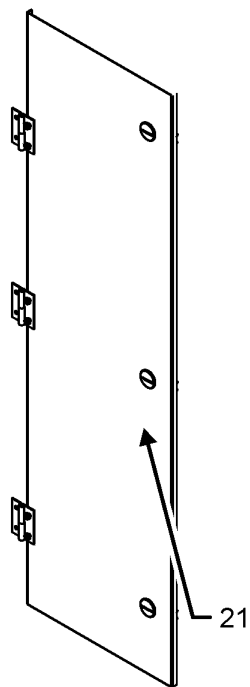

FILTER DOOR ASSEMBLY

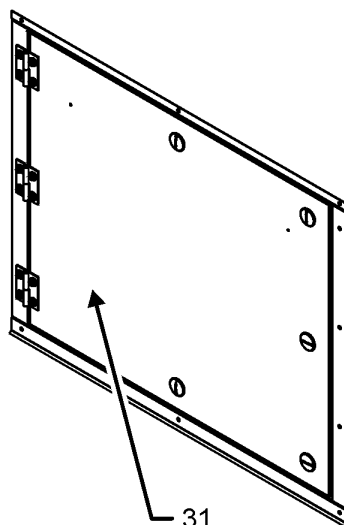


BLOWER DOOR ASSEMBLY

HINGED DOOR ASSEMBLY MAY DIFFER FROM WHAT IS SHOWN


Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
Image 1:		Expanded Model Nomenclature	
11	0270L01782	ASSY DOOR CONTROL (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
21	0270L01781	INSUL, ASSY DOOR FILTER (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
31	0270L01780	ASSY, BLOWER DOOR (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
NS	IOD-7056	INSTALLATION INSTRUCTIONS (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
NS	0270L01058	INSUL, ACCESSORY POST ASSY (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
NS	0270L01777	INSUL, ASSY, POST, ACCESSORY (M1, M4, M7, M10, M13, M16)	
NS	0270L01783	INSUL, ASSY, POST, ACCESSORY (M2, M5, M8, M11, M14, M17)	
NS	0270L01784	INSUL, ASSY, POST, ACCESSORY (M3, M6, M9, M12, M15, M18)	
NS	0270L01779	INSUL, ASSY, POST, BLOWER (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
NS	0270L01778	INSUL, ASSY, POST, FILTER (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
NS	0163M00360	LATCH (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M18)	
		M1 - HGDRSB000300C M2 - HGDRSB000300CC M3 - HGDRSB000300CD M4 - HGDRSB000300DC M5 - HGDRSB000300DCC M6 - HGDRSB000300DCD M7 - HGDRSB000300DG M8 - HGDRSB000300DGC M9 - HGDRSB000300DGD M10 - HGDRSB000300G M11 - HGDRSB000300GC M12 - HGDRSB000300GD M13 - HGDRSB180240C M14 - HGDRSB180240CC M15 - HGDRSB180240CD M16 - HGDRSB180240G M17 - HGDRSB180240GC M18 - HGDRSB180240GD M19 - LAKT23FIAC M20 - LAKT24FIAC M21 - LAKT25FIAC M22 - LAKT300FIAC2 M23 - LAKT300FIDDC M24 - VENSTAR03 M25 - VENSTAR07 M26 - 3PMNDK01FI03 M27 - 3PMNDK01FI06 M28 - 3PMNDK02FI01 M29 - 3PMNDK02FI02 M30 - 3PMNDK03FI01	

NOTE: SOME OF THE PANEL ASSEMBLIES INCLUDE THE DOOR ASSEMBLY AND SOME DO NOT


LOW AMBIENT

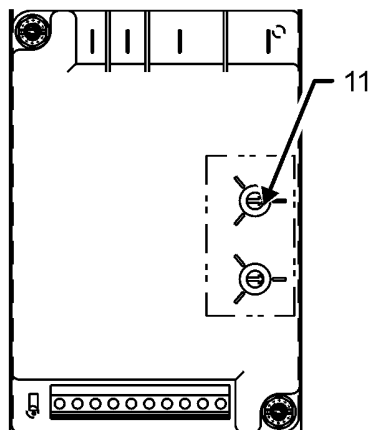

LOCATED ON PARTITION PANEL
FOR THE 15 - 20 TON MODELS

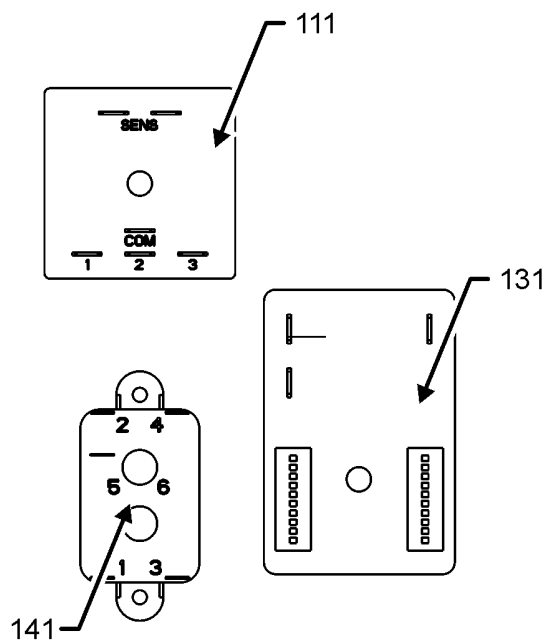

COMPONENTS USED BY THE
25 TON DDC AND NON-DDC MODELS
LOCATED ON THE CONTROL PANEL

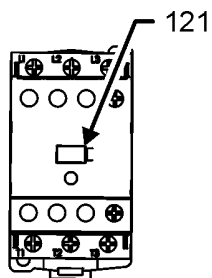

Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
----------------------	--------------	----------------------	--------------


Image 1:

11	0130M00059	LOW AMBIENT (M19, M20, M21, M22, M23)
111	0130M00265	RELAY THERMISTOR (M22, M23)
121	0130M00276	SOLID STATE CONTACTOR (M22, M23)
131	0130M00271	MODULE CYCLE TIMER (M22, M23)
141	10135604	RELAY (M22, M23)
NS	0121M00047	BRACKET LOW AMBIENT (M19, M20, M21, M22, M23)
NS	IOD-7021B	INSTALLATION INSTRUCTIONS (M22)
NS	IOD-7119A	INSTALLATION INSTRUCTIONS (M23)
NS	IOD-7130A	INSTALLATION INSTRUCTIONS (M19, M20, M21)


Expanded Model Nomenclature

M1 - HGDRSB000300C
 M2 - HGDRSB000300CC
 M3 - HGDRSB000300CD
 M4 - HGDRSB000300DC
 M5 - HGDRSB000300DCC
 M6 - HGDRSB000300DCD
 M7 - HGDRSB000300DG
 M8 - HGDRSB000300DGC
 M9 - HGDRSB000300DGD
 M10 - HGDRSB000300G
 M11 - HGDRSB000300GC
 M12 - HGDRSB000300GD
 M13 - HGDRSB180240C
 M14 - HGDRSB180240CC
 M15 - HGDRSB180240CD
 M16 - HGDRSB180240G
 M17 - HGDRSB180240GC
 M18 - HGDRSB180240GD
 M19 - LAKT23FIAC
 M20 - LAKT24FIAC
 M21 - LAKT25FIAC
 M22 - LAKT300FIAC2
 M23 - LAKT300FIDDC
 M24 - VENSTAR03
 M25 - VENSTAR07
 M26 - 3PMNDK01FI03
 M27 - 3PMNDK01FI06
 M28 - 3PMNDK02FI01
 M29 - 3PMNDK02FI02
 M30 - 3PMNDK03FI01


VENSTAR CONTROL KIT

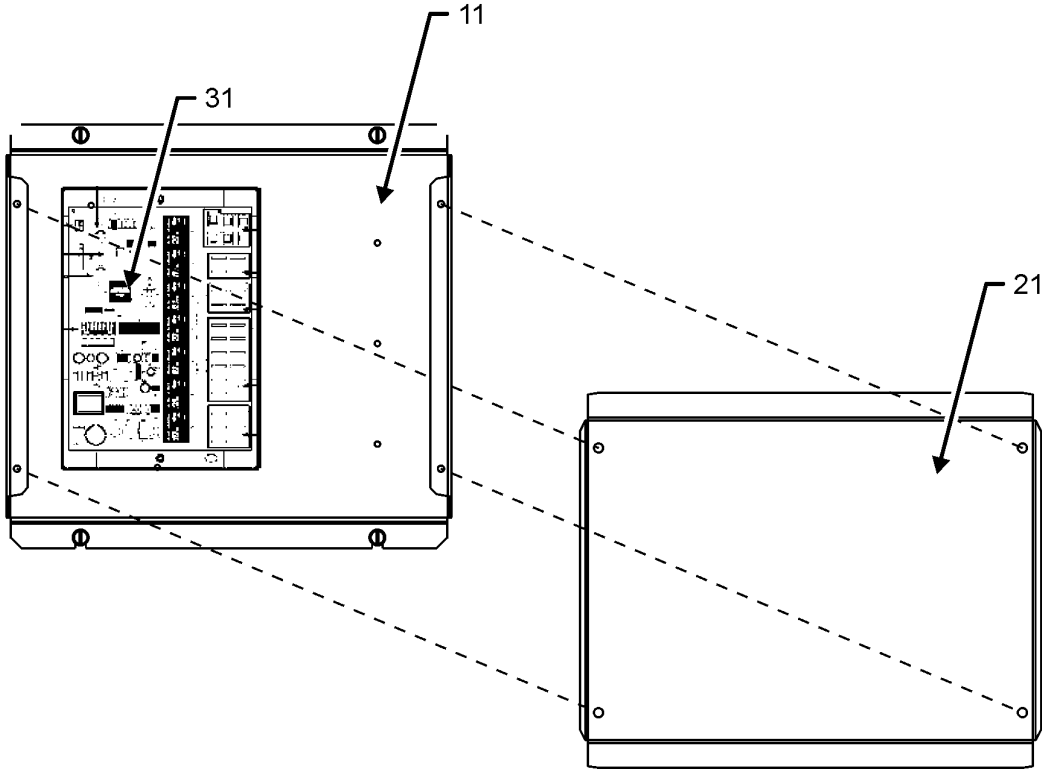

VENSTAR LOCATION

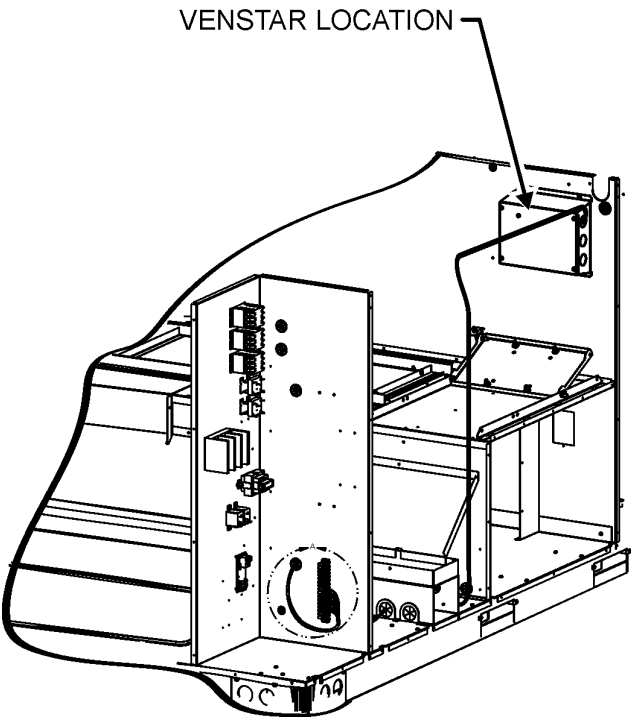

WIRING DIAGRAM LOCATED
INSIDE CONTROL BOX COVER

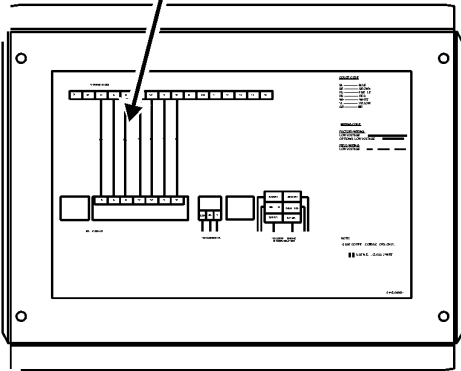


Ref. Part**No: No:****Description:****Ref. Part****No: No:****Description:****Image 1:**

11	0121L02515	VENSTAR CONTROL ENCLOSURE (M24, M25)
21	0121L02381	CONTROL BOX COVER (M24, M25)
31	ECP400-5	SURVEYOR ECP (M24, M25)
NS	RS400	REMOTE SENSOR (M24, M25)
NS	SP400	SENSOR PACK (M24, M25)
NS	VENSTAR03	VENSTAR CONTROL KIT 15 - 20 TON (M24)
NS	VENSTAR07	VENSTAR CONTROL KIT 25 TON (M25)
NS	0259L00555	WIRE HARNESS (M24)
NS	0259L00557	WIRE HARNESS (M25)


Expanded Model Nomenclature

M1 - HGDRSB000300C
 M2 - HGDRSB000300CC
 M3 - HGDRSB000300CD
 M4 - HGDRSB000300DC
 M5 - HGDRSB000300DCC
 M6 - HGDRSB000300DCD
 M7 - HGDRSB000300DG
 M8 - HGDRSB000300DGC
 M9 - HGDRSB000300DGD
 M10 - HGDRSB000300G
 M11 - HGDRSB000300GC
 M12 - HGDRSB000300GD
 M13 - HGDRSB180240C
 M14 - HGDRSB180240CC
 M15 - HGDRSB180240CD
 M16 - HGDRSB180240G
 M17 - HGDRSB180240GC
 M18 - HGDRSB180240GD
 M19 - LAKT23FIAC
 M20 - LAKT24FIAC
 M21 - LAKT25FIAC
 M22 - LAKT300FIAC2
 M23 - LAKT300FIDDC
 M24 - VENSTAR03
 M25 - VENSTAR07
 M26 - 3PMNDK01FI03
 M27 - 3PMNDK01FI06
 M28 - 3PMNDK02FI01
 M29 - 3PMNDK02FI02
 M30 - 3PMNDK03FI01

PHASE MONITOR

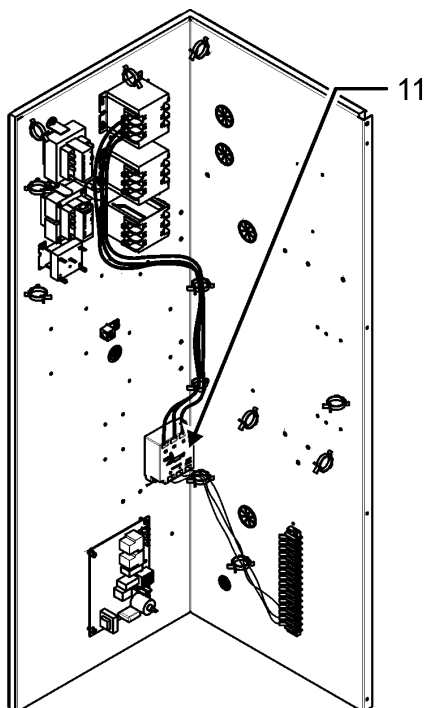

PHASE MONITOR LOCATION MAY DIFFER FROM WHAT IS SHOWN

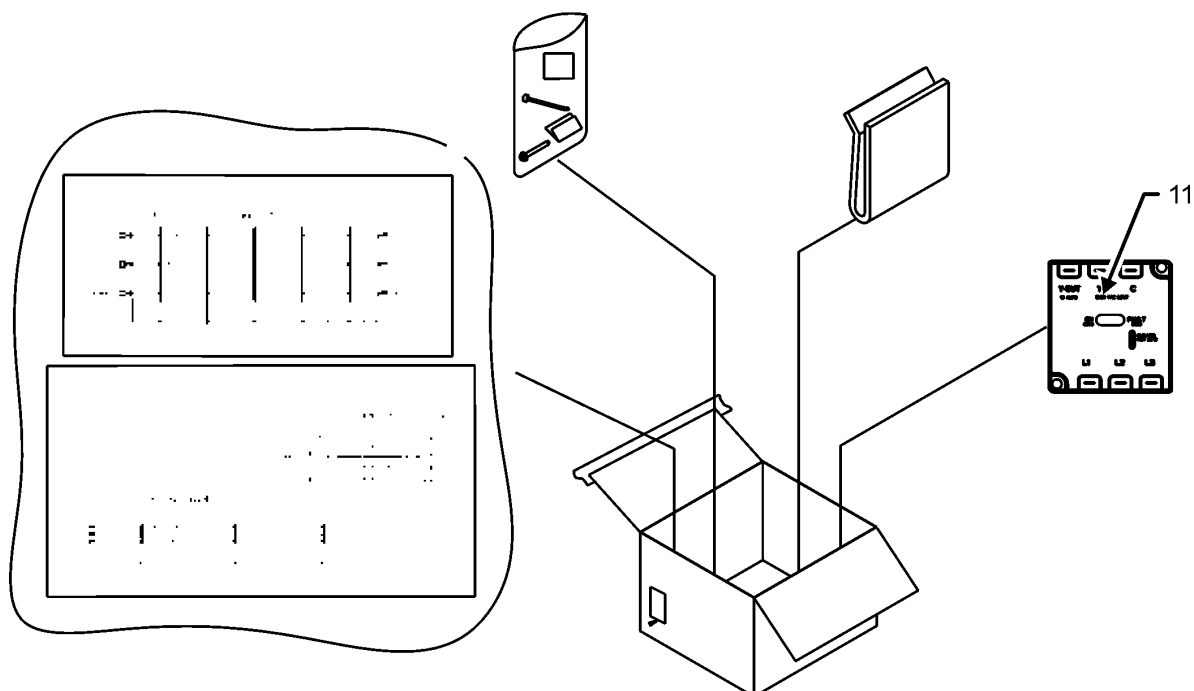

PHASE MONITOR KIT

PHASE MONITOR MAY DIFFER FROM WHAT IS SHOWN

Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
----------------------	--------------	----------------------	--------------

Image 1:

11	0130L00105	PHASE MONITOR (M26, M27, M28, M29, M30)
NS	IOD-7053	INSTALLATION INSTRUCTIONS (M26, M27)
NS	IOD-7065	INSTALLATION INSTRUCTIONS (M28, M29)
NS	0259L00447	WIRE ASSY PHASE MON NON DDC (M27)
NS	0259L00427	WIRE HARNESS (M26)
NS	0259L00428	WIRE HARNESS (M26, M27)
NS	0259L00473	WIRE HARNESS (M28, M29)
NS	0259L00474	WIRE HARNESS (M28, M29)
NS	0259L01658	WIRE HARNESS (M30)
NS	0259L01659	WIRE HARNESS (M30)

Expanded Model Nomenclature

M1 - HGDRSB000300C
 M2 - HGDRSB000300CC
 M3 - HGDRSB000300CD
 M4 - HGDRSB000300DC
 M5 - HGDRSB000300DCC
 M6 - HGDRSB000300DCD
 M7 - HGDRSB000300DG
 M8 - HGDRSB000300DGC
 M9 - HGDRSB000300DGD
 M10 - HGDRSB000300G
 M11 - HGDRSB000300GC
 M12 - HGDRSB000300GD
 M13 - HGDRSB180240C
 M14 - HGDRSB180240CC
 M15 - HGDRSB180240CD
 M16 - HGDRSB180240G
 M17 - HGDRSB180240GC
 M18 - HGDRSB180240GD
 M19 - LAKT23FIAC
 M20 - LAKT24FIAC
 M21 - LAKT25FIAC
 M22 - LAKT300FIAC2
 M23 - LAKT300FIDDC
 M24 - VENSTAR03
 M25 - VENSTAR07
 M26 - 3PMNDK01FI03
 M27 - 3PMNDK01FI06
 M28 - 3PMNDK02FI01
 M29 - 3PMNDK02FI02
 M30 - 3PMNDK03FI01