



# ***Service Manual***

## **DC INVERTER HEAT PUMP CONDENSING UNIT SERVICE MANUAL**

(GC202406-I)

Capacity: 24kBtu/h~54kBtu/h

Rate Frequency: 60Hz

Operation Range:

Cooling: 5°F(-15°C)~129.2°F (54°C)

Heating: -22°F(-30°C)~75.2°F (24°C)

### **Indoor Unit:**

FXU24HP230V1R32AH  
FXU36HP230V1R32AH  
FXU48HP230V1R32AH  
FXU60HP230V1R32AH

### **Outdoor Unit:**

FXU24HP230V1R32AO  
FXU36HP230V1R32AO  
FXU48HP230V1R32AO  
FXU60HP230V1R32AO







## Foreword

Thank you for choosing Gree U-Match air conditioners. In order to correctly install and use our units, and for the satisfactory operation effect, please read this manual carefully.

This manual specifies safe operation requirements from perspectives of product introduction, control, troubleshooting and maintenance, as well as basic principles and implementation methods. Professional operators must abide by relevant national (local) safety requirements and technical specifications set forth in this manual during operations; otherwise, the air conditioning system may fail or be damaged, and personnel safety accident may also occur.

## Safety Notice

 <p>Refrigerant Safety Group A2L R32</p>	Appliance filled with flammable magas R32.
	Before using the air conditioner, please first read the instruction manual.
	Before installing the air conditioner, please first read the instruction manual.
	Before repairing the air conditioner, please first read the technical service manual.

# CONTENTS

<b>Safety Notice on Maintenance</b> .....	<b>1</b>
<b>Safety Notice on Operation</b> .....	<b>2</b>
<b>1 Product Introduction</b> .....	<b>3</b>
1.1 Lists of Units .....	3
1.2 Electrical Parameters .....	4
<b>2 Control</b> .....	<b>5</b>
2.1 Operation Mode .....	5
2.2 Control Mode .....	6
2.3 Functions .....	9
<b>3 Troubleshooting</b> .....	<b>12</b>
3.1 Wiring Diagrams .....	12
3.2 PCB Layout .....	16
3.3 Error Code .....	23
3.4 Troubleshooting .....	25
3.5 Failures Not Caused by Errors .....	70
<b>4 Maintenance</b> .....	<b>72</b>
4.1 System Diagram .....	72
4.2 Connection Pipe Vacuum Pumping .....	73
4.3 Refrigerant Charging .....	75
4.4 Maintenance of Major Components .....	77
4.5 Removal of Major Components .....	87
<b>Appendices</b> .....	<b>147</b>
<b>1 Resistance/Temperature Lists of Temperature Sensors</b> .....	<b>147</b>
1.1 Voltage List of 15 K $\Omega$ Temperature Sensors (including ODU temperature sensors) .....	147
1.2 Voltage List of 20 K $\Omega$ Pipeline Temperature Sensors (including temperature sensors for defroster, IDU and ODU pipes) .....	149
1.3 Voltage List of 50 K $\Omega$ Discharge Temperature Sensors (including discharge air temperature sensor) .....	151
<b>2 Temperature/Pressure List of Refrigerant</b> .....	<b>154</b>
<b>3 Operation Tools</b> .....	<b>154</b>

## Safety Notice on Maintenance



### PROHIBITED:

- (1) Do not pierce or burn.
- (2) Please note that refrigerant may be odorless.
- (3) The appliance shall be stored in a room without continuously operating ignition sources (For example: open flames, an operating gas appliance or an operating electric heater).
- (4) Indoor unit adopts special joints that can't be detached. The installation method is the same with the common joints. However, because the joint can't be detached, if it is badly connected and causes leakage, it needs to be cut and replaced by a new one through welding.
- (5) Using unsuitable parts or tools may lead to electric shock or fire hazard.
- (6) If refrigerant leaks during maintenance, please ventilate the room immediately. Heavy leakage may lead to breathing difficulty, severe injury or death.
- (7) Disconnect power before disassembling the appliance for maintenance.
- (8) The appliance should be maintained and cared by authorized technical personnel with necessary qualifications.



### WARNING:

- (1) If the working place is more than 2m's high, please wear a safety helmet, gloves and a safety belt.
- (2) Never mix any other substances except the specified refrigerant into the refrigerant circuit.
- (3) When re-locating the appliance, check whether the new location is strong enough to withstand the weight of the appliance.
- (4) If there is refrigerant leak, please fix the leak before charging in the refrigerant. After refrigerant is charged, check for refrigerant leaks. If you cannot spot the leak, stop the maintenance work. Please evacuate the system and close the service valve to prevent refrigerant leaking into the room.
- (5) Prepare suitable tools and protectors.
- (6) If you need to carry out maintenance or check the electric circuit without cutting off the power, please be careful not to touch the electrical parts.



### NOTICE:

- (1) If the appliance is maintained at a humid place, it should be grounded to avoid electric shock.
- (2) Never repair the unit with wet hands. Operating the unit with wet hands may lead to electric shock.
- (3) If the unit is not correctly grounded, please check and fix it.
- (4) Before cleaning the unit, please disconnect power to prevent the inner fan from starting up and running at

high speed; Otherwise personal injury may occur.

- (5) Measure the insulation resistance after maintenance. The resistance must be 1M or higher. Bad insulation may lead to electric shock.
- (6) Welding and cutting work must be done in a well-ventilated place.
- (7) Gas appliances, heaters and other fire sources should be kept away from the installation and maintenance site.
- (8) Maintenance should be done according to suggestions of the manufacturer.
- (9) Maintenance should be done only after the refrigerant is completely reclaimed from the unit.

**OBSERVED:**

- (1) After the maintenance work is done, check the drainage of indoor unit.
- (2) Do not tilt the unit, otherwise, water may spill out from the unit and make the floor and furniture wet.
- (3) Disassembly of the unit, handling of the refrigerant, oil and accessories should all be done according to applicable local rules and regulations.

## Safety Notice on Operation

**PROHIBITED:**

- (1) Never try to modify the unit, otherwise, it may cause electric shock, overheat or fire hazard.
- (2) If the power cord or conducting wires are scratched, please replace them.
- (3) Never use connected or extended power cord or share the power socket with other appliances.
- (4) Prepare a specialized power circuit for the appliance.

**WARNING:**

- (1) If the power plug is dirty, please clean it before inserting it to the power socket. If the power plug is loose, please tighten it up.
- (2) Do not damage the power cord. A damaged or refitted power cord may lead to electric shock or fire hazard.
- (3) Check frequently whether the appliance is in good condition.



**NOTICE:**

- (1) After changing the batteries of remote control, please discard them to avoid being swallowed by children.
- (2) When the unit is working, do not remove the fan cover.
- (3) Do not use organic solvents to wipe the controller operating panel.
- (4) Before cleaning the unit, cut off the power supply.

# 1 Product Introduction

## 1.1 Lists of Units

### 1.1.1 List of Outdoor Units

Model	Power Supply	Finished Product Code	Appearance
	V/Ph/Hz		
FXU24HP230V1R32AO	208/230V-1Ph-60Hz	CF090W3110	
FXU36HP230V1R32AO		CF090W3130	
FXU48HP230V1R32AO		CF090W3120	
FXU60HP230V1R32AO		CF090W3010	

### 1.1.2 List of Indoor Units

Model		Cooling/Heating Capacity (Btu/h)	Power Supply	Finished Product Code	Appearance
			V/Ph/Hz		
Airhandler	FXU24HP230V1R32AH	24000/24000	208/230V-1Ph-60Hz	EH010N0210	
Airhandler	FXU36HP230V1R32AH	34000/34000	208/230V-1Ph-60Hz	EH010N0220	
Airhandler	FXU48HP230V1R32AH	48000/48000	208/230V-1Ph-60Hz	EH010N0190	
Airhandler	FXU60HP230V1R32AH	54000/54000	208/230V-1Ph-60Hz	EH010N0200	

**NOTE:** 1 Ton = 12000Btu/h = 3.517kW

### 1.2 Electrical Parameters

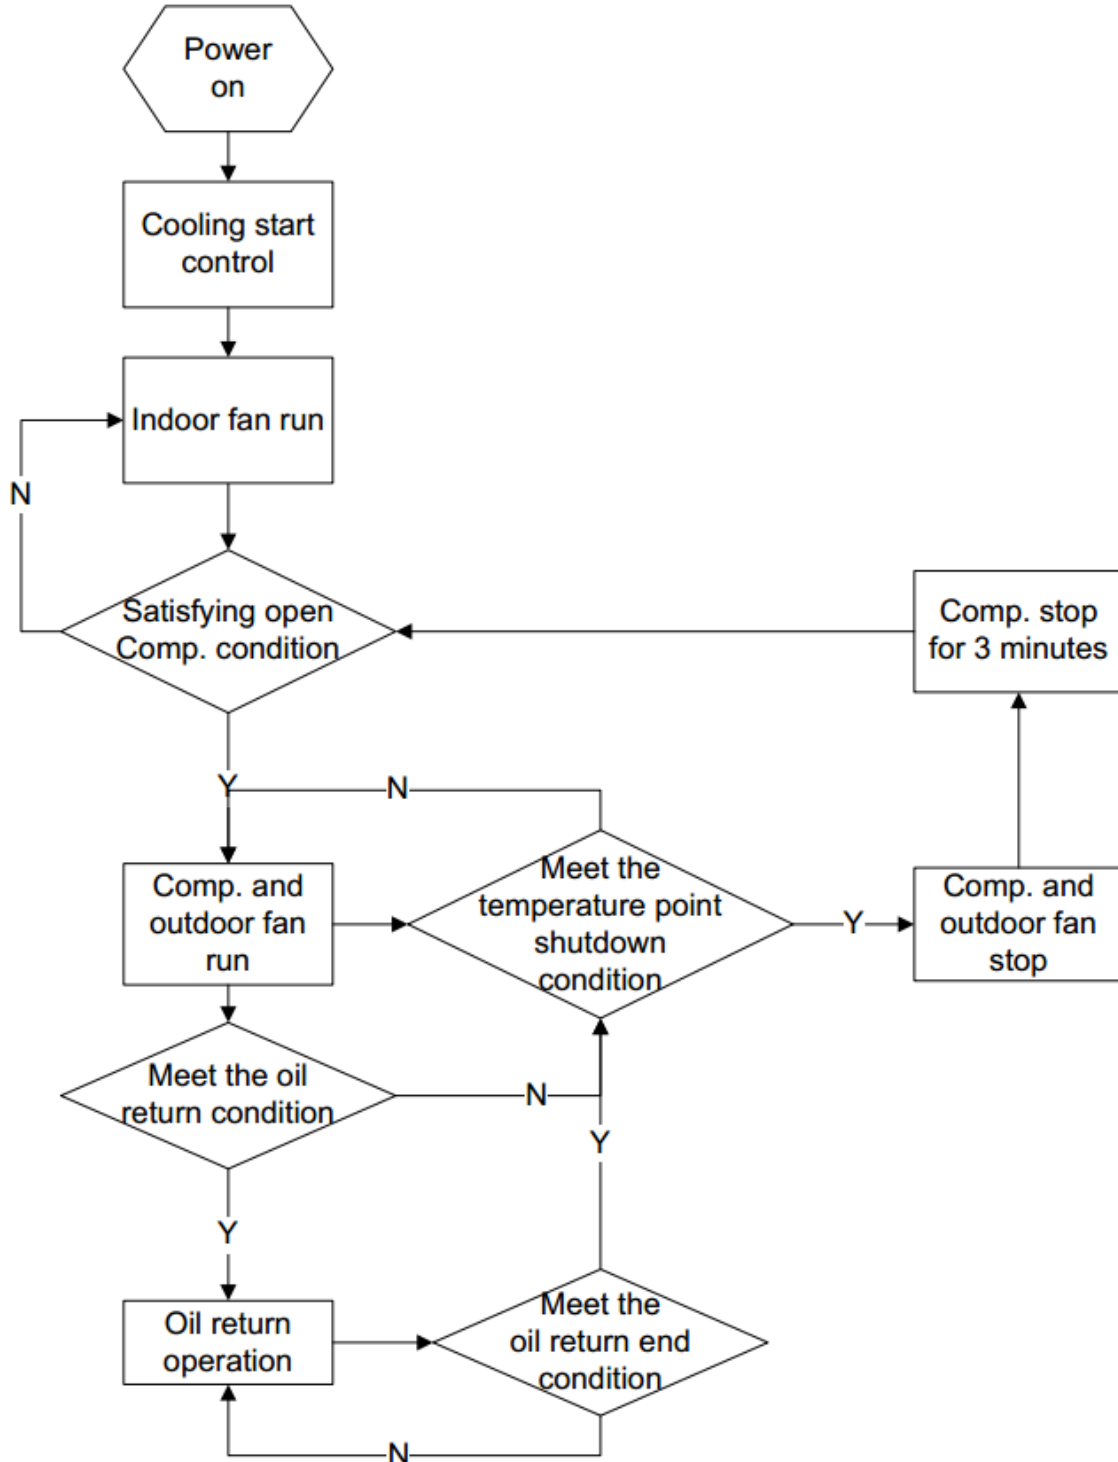
Model	Power Supply	Circuit Breaker Capacity
	V/Ph/Hz	A
FXU24HP230V1R32AO	208/230V-1Ph-60Hz	30
FXU36HP230V1R32AO		40
FXU48HP230V1R32AO		60
FXU60HP230V1R32AO		60

Model	Power Supply	Fuse Capacity	Circuit Breaker Capacity
	V/Ph/Hz	A	A
FXU24HP230V1R32AH	208/230V-1Ph-60Hz	3.15	15
FXU36HP230V1R32AH			
FXU48HP230V1R32AH			
FXU60HP230V1R32AH			

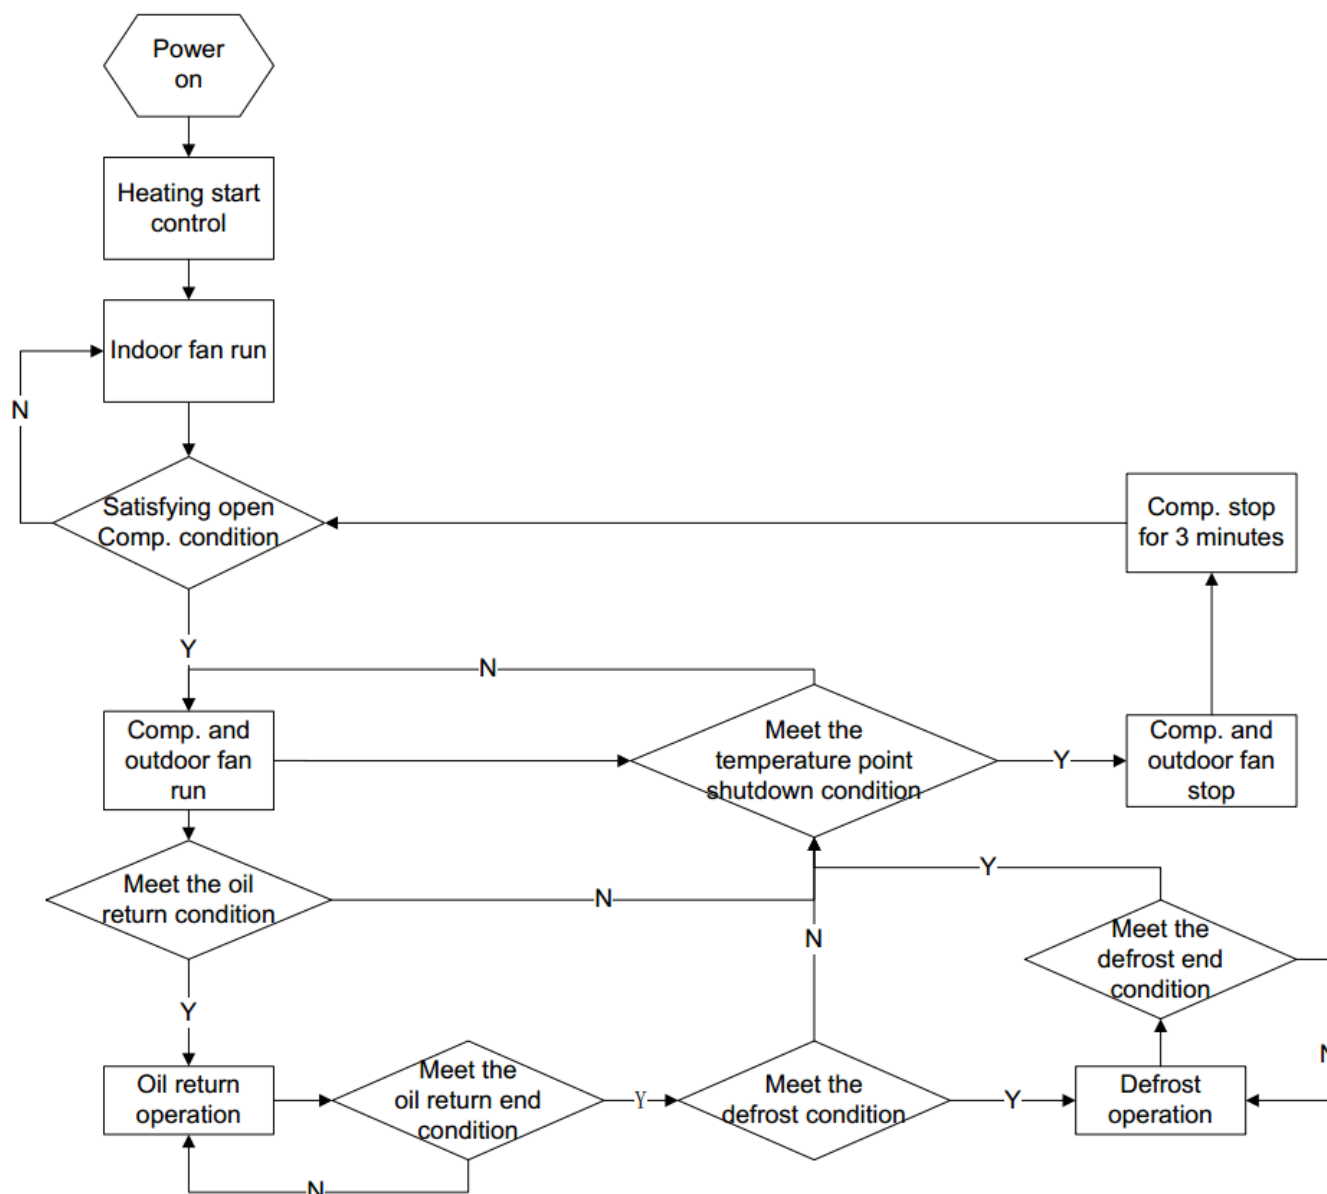
## 2 Control

### 2.1 Operation Mode

#### 2.1.1 Cooling Mode



## 2.1.2 Heating Mode



## 2.2 Control Mode

### 2.2.1 Based Control

#### 2.2.1.1 Compressor Control

When cooling or heating mode is turned on, indoor fan will run for a while before the compressor starts. Under different modes, the compressor can only be stopped after running for some time (special cases excluded). This is to protect the compressor from frequent start or stop. Once the compressor is stopped, it must not be restarted right away. Please wait for a few minutes.

### 2.2.1.2 EXV Control

When the unit is first started, the electronic expansion valve will reset control. During the process, the expansion valve will produce rattling sound. When cooling or heating mode is turned on, the valve will be open at a certain step before the compressor starts.

### 2.2.1.3 Outdoor Fan Control

This series air conditioner has two types of outdoor units: one with a single fan and the other with double fans. The outdoor fan can run at the highest level 10 and the lowest level 1. By controlling the speed of outdoor fan, the unit can achieve cooling at low temperature and heating at high temperature. In fan mode, outdoor fan will not work.

### 2.2.1.4 4-way Valve Control

After heating mode is turned on for a while, 4-way valve will be energized to change the direction of refrigerant flow so that the system can run in heating and the indoor unit will not blow cold air. Under other modes, the valve will not be energized.

To avoid the 4-way valve from incorrectly changing directions, when the unit stops in heating, due to a temperature point or other protection reasons, the 4-way valve will continue to function temporarily and lose power after a while.

There must be adequate differential pressure for the 4-way valve to change directions.

## **2.2.2 Special Control**

### 2.2.2.1 Defrosting Control

ODU defrosting control in heating: Defrosting will start when the temperature sensed by outdoor tube temperature sensor reaches a preset value. During defrosting, the 4-way valve will switch to the cooling condition, and outdoor fan will stop. When the temperature sensed by outdoor tube temperature sensor reaches the preset value of defrosting stop, system will quit defrosting. The 4-way valve will switch back to the heating condition, compressor and outdoor unit fan restart.

### 2.2.2.2 Oil Return Control

If the unit is running at low frequency for a long time, system will enable oil return control. This is to lead oil in the pipeline back to the compressor so that the compressor will not be lack of oil. Generally, the oil return takes about 5min. The compressor running frequency will be raised to the preset oil return frequency.

## 2.2.3 Protection Control

### 2.2.3.1 High Pressure Protection Control

System will enable high pressure protection control if the high pressure switch is detected open for continuously a little time. Under high pressure protection, system will be shut down and display error code E1.

When high pressure protection occurs for the first time, system will restore operation if the high pressure switch is detected to be reclosed for continuously a little time. When high pressure protection occurs for the second time in a certain time period, system will not restore operation. You need to manually turn off the unit and clear the error before restarting up the unit. (If high pressure protection occurs frequently, please send for professional personnel to repair.)

### 2.2.3.2 Low Pressure Protection Control

System will enable low pressure protection control if the low pressure switch is detected open for continuously a little time. Under low pressure protection, system will be shut down and display error code E3. When low pressure protection occurs, system will restore operation if the low pressure switch is detected to be reclosed within a few minutes after shutdown. If low pressure protection occurs for several times in a period of time, system will not restore operation automatically. You need to manually turn off the unit before restarting up the unit.

### 2.2.3.3 High Temperature Prevention Control

Under heating mode, system will enable high temperature prevention control if the temperature sensed by indoor tube temperature sensor reaches a certain value. When high temperature prevention control is enabled, outdoor fan will slow down.

### 2.2.3.4 Discharge High Temperature Protection Control

System will enable discharge temperature protection control if the discharge high temperature sensor is detected open for continuously a little time. Under discharge high temperature protection, system will be shut down and display error code E4. When discharge high temperature protection occurs, system will restore operation if the discharge high temperature sensor is detected to be reclosed within a few minutes after shutdown. If discharge high temperature protection occurs for several times in a period of time, system will not restore operation automatically. You need to manually turn off the unit before restarting up the unit.

## 2.3 Functions

### 2.3.1 Set Defrost Mode

The first dip switch is selecting the defrost mode.

The first dip switch is used to change the defrost setting, factory default setting is standard defrost. Under extremely low environment temperature, if the standard defrost cannot have the condenser defrosted completely, please set the second dip switch to be strong defrost. Under strong defrost, the defrosting time will be longer, which enable the condenser to be defrosted completely.

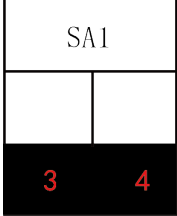
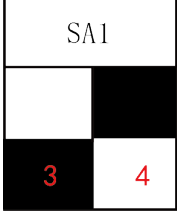
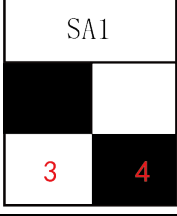
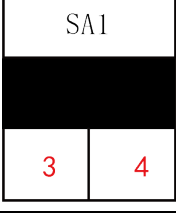
Defrost Mode	Outdoor Unit Dip Switches
Standard Defrost (Default)	
Dry Cooling	
Humid Cooling	
Snowy	

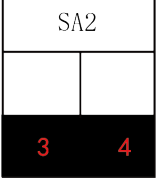
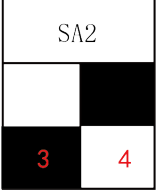
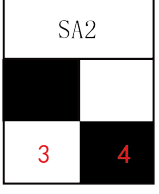
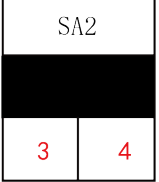
### 2.3.2 Set Operating Mode

The second dip switch and the fourth dip switch are selecting the operating mode. Standard mode is the conventional mode.

By setting the strong mode dip switches of the condensing unit, the air conditioner can quickly increase the capacity output and ensure reliable operation in a short time, so as to meet the user's demand for the indoor temperature to quickly reach the set temperature.

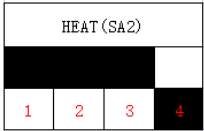
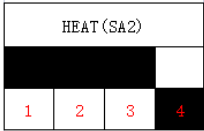
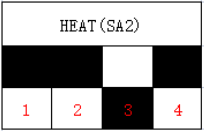
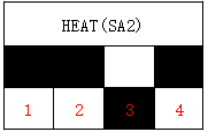
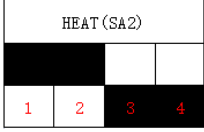
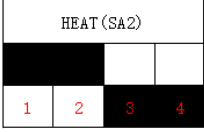
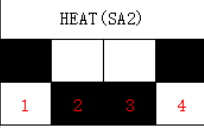
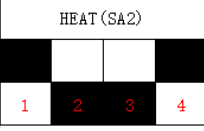
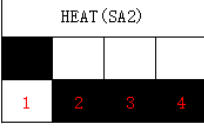
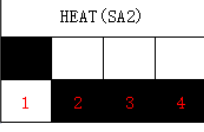
Energy saving mode is achieved by setting the condensing unit operating mode to operate the air conditioner within a small load range.

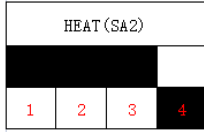
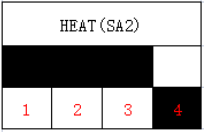
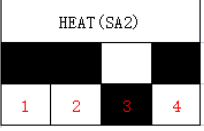
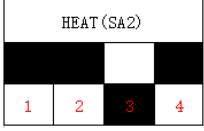
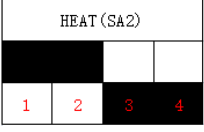
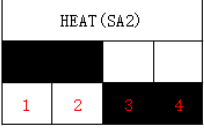
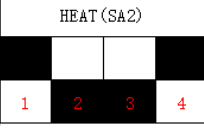
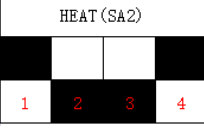
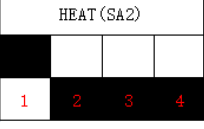
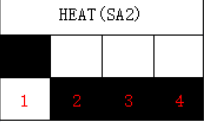
Operating Mode	Outdoor Unit Dip Switches
Standard mode (Default)	
Strong mode	
Energy saving mode	
Self-adaption mode	

Noise Reduction Mode	Outdoor Unit Dip Switches
Standard Defrost (Default)	
Noise Reduction Mode1	
Noise Reduction Mode2	
Noise Reduction Mode3	

### 2.3.3 Set Indoor Fan Speed

Set the indoor fan speed through the eight dip switches of the indoor main control board. The higher level, the higher speed of the indoor unit fan.

Capacity	FXU24HP230V1R32AH Indoor Unit Dip Switches	FXU36HP230V1R32AH Indoor Unit Dip Switches
Level 1		
Level 2		
Level 3 (Default)		
Level 4		
Level 5		

Capacity	FXU48HP230V1R32AH Indoor Unit Dip Switches	FXU60HP230V1R32AH Indoor Unit Dip Switches
Level 1		
Level 2		
Level 3 (Default)		
Level 4		
Level 5		

**NOTE:**

- ① After the unit is shut down or stopped at the temperature point, the indoor unit will delay for a few minutes and then shut down. The refrigeration can realize the drying function, relieve the mold of the air duct, and the heating can blow the waste heat and relieve the heat accumulation in the air duct.
- ② Installation and debugging when attention to verify the switch sequence of electrical heating and fan, ensure the fan must be turned on when electric heating operation, to ensure the electric heating is turned off before the fan.
- ③ During installation and debugging, pay attention to check whether the temperature controller has set the fan delay and shutdown time. If the temperature controller has been set, the actual delay and shutdown time of the fan is equal to the temperature controller setting time plus the fan delay time of the indoor unit.

**2.3.4 Set Indoor Unit**

The third dip switch is selecting the indoor unit.

The third dip switch is used to change the indoor unit setting, factory default setting is Air handler.

Defrost Mode	Outdoor Unit Dip Switches
Air Handler(Default)	 <p>The diagram shows a rectangular dip switch labeled 'SA3'. It has two positions, '1' and '2', which are highlighted in red. Position '1' is currently selected.</p>

**2.3.5 Thermostat Functions**

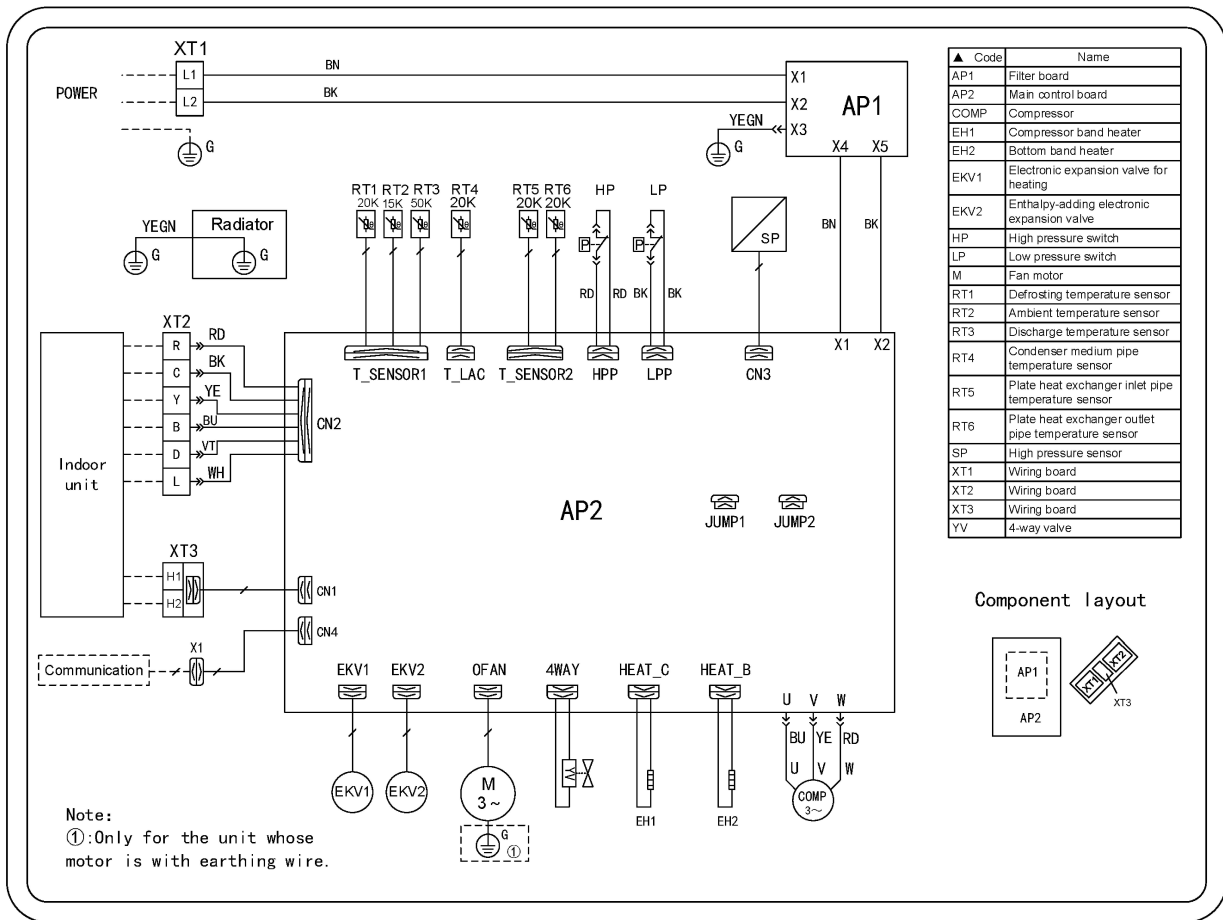
Thermostat model: WK-010WA1,WK-010WB1. Please refer to the thermostat instruction manual for all functions.

**3 Troubleshooting****3.1 Wiring Diagrams**

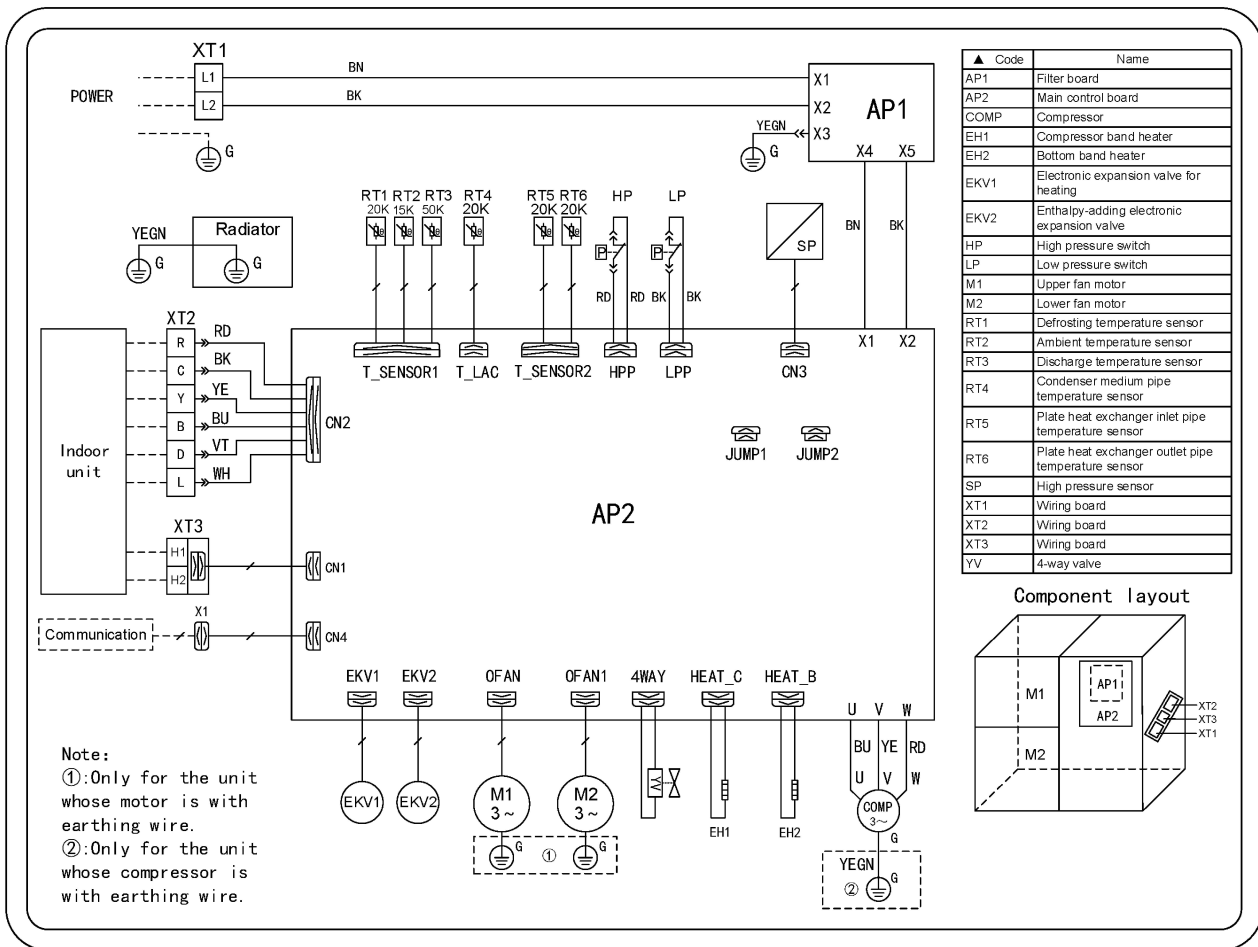
The following electric diagram is for reference only. Please refer to diagram stucked on the unit as the latest version.

### 3.1.1 Wiring Diagrams of ODUS

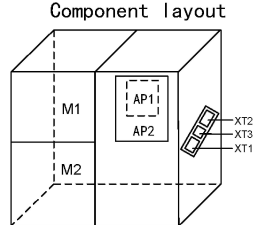
#### Model FXU24HP230V1R32AO, FXU36HP230V1R32AO



**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

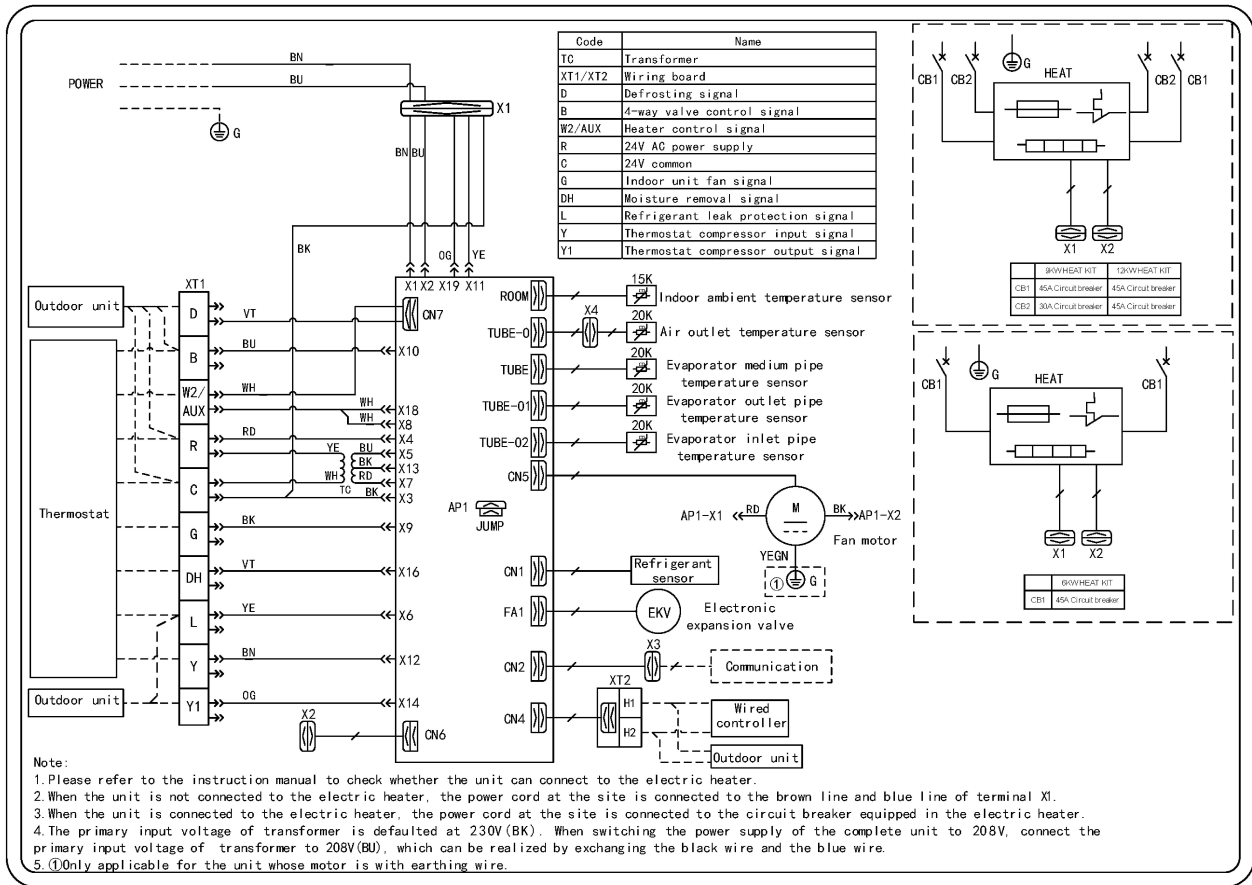


▲ Code	Name
AP1	Filter board
AP2	Main control board
COMP	Compressor
EH1	Compressor band heater
EH2	Bottom band heater
EKV1	Electronic expansion valve for heating
EKV2	Enthalpy-adding electronic expansion valve
HP	High pressure switch
LP	Low pressure switch
M1	Upper fan motor
M2	Lower fan motor
RT1	Defrosting temperature sensor
RT2	Ambient temperature sensor
RT3	Discharge temperature sensor
RT4	Condenser medium pipe temperature sensor
RT5	Plate heat exchanger inlet pipe temperature sensor
RT6	Plate heat exchanger outlet pipe temperature sensor
SP	High pressure sensor
XT1	Wiring board
XT2	Wiring board
XT3	Wiring board
YV	4-way valve



### 3.1.2 Wiring Diagrams of IDUs

Model:FXU24HP230V1R32AH,FXU36HP230V1R32AH,FXU48HP230V1R32AH,FXU60HP230V1R32AH



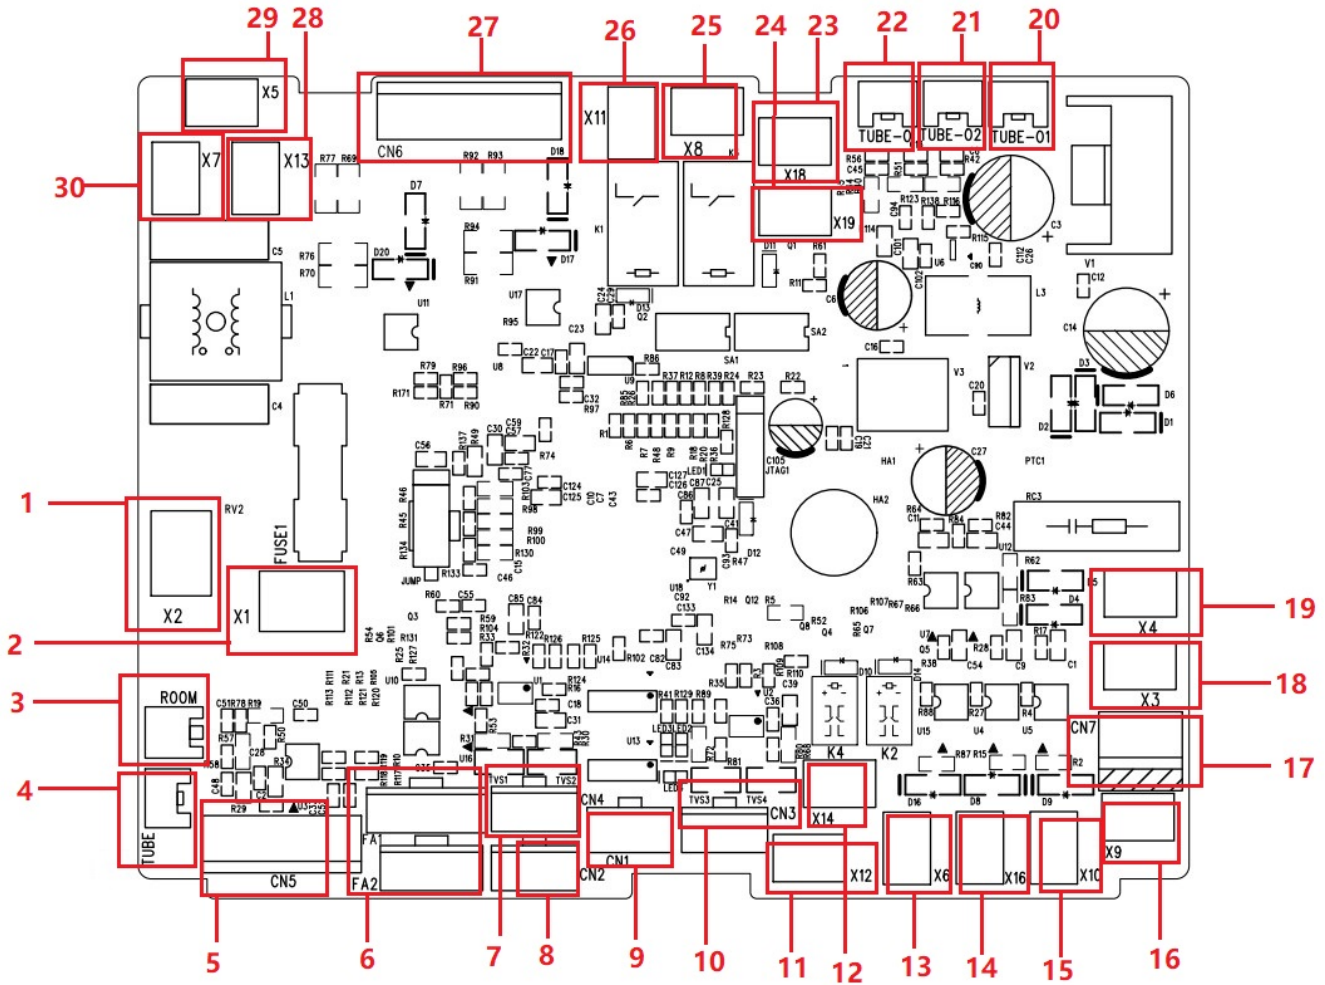
## 3.2 PCB Layout

### 3.2.1 Interface

Indoor Unit:

Model: FXU24HP230V1R32AH,FXU36HP230V1R32AH,FXU48HP230V1R32AH, FXU60HP230V1R32AH

Mainboard:



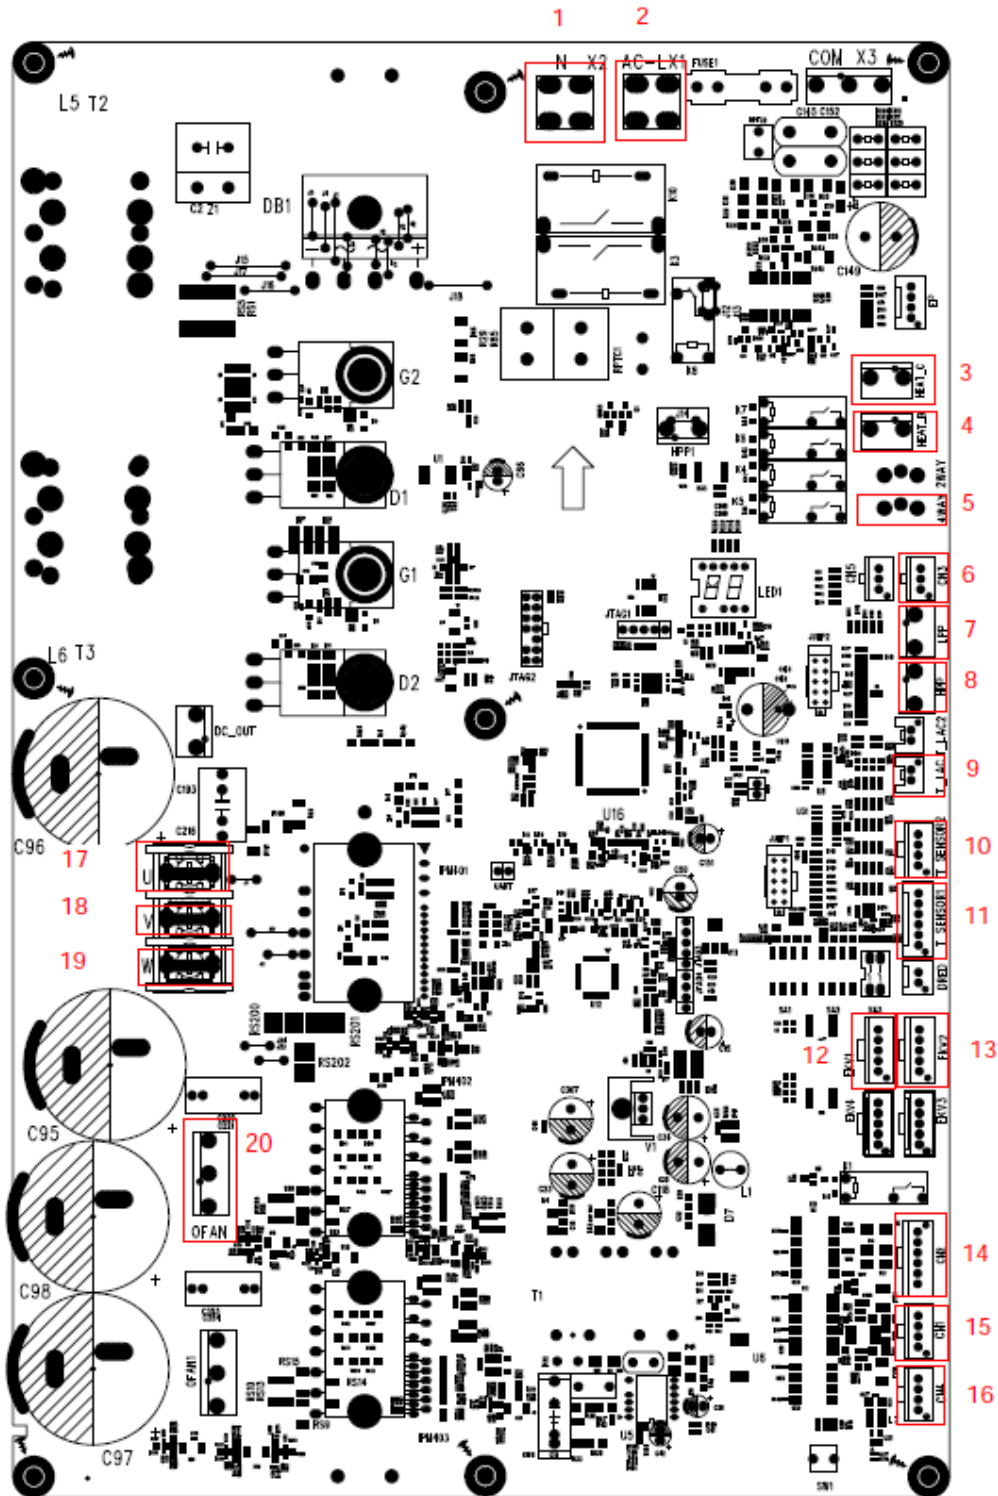
No.	Printing	Interface	No.	Printing	Interface
1	X2	Neutral wire input	16	X9	Indoor fan switch detection signal
2	X1	Live wire input	17	CN7	Electric heating on detection signal/defrosting on detection signal
3	Room	Indoor temperature sensor	18	X3(C)	Transformer output 24V zero line
4	TUBE	Evaporator tube temperature sensor	19	X4(R)	Transformer output 24V live wire
5	CN5	DC motor Interface	20	TUBE-O1	Evaporator outlet tube temperature bag
6	FA1/FA2	Electronic expansion valve	21	TUBE-O2	Evaporator inlet tube temperature bag

No.	Printing	Interface	No.	Printing	Interface
7	CN4	Line controller communication interface, internal and external machine communication interface	22	TUBE-O	Air outlet temperature bag
8	CN2	Pocket wizard communication power supply interface	23	X18	Electric auxiliary heating 1 control signal
9	CN1	Interface of refrigerant leakage sensor	24	X19	Electric auxiliary heating 1 control signal
10	CN3	Interface of refrigerant leakage sensor	25	X8	Electric auxiliary heating 2 control signal
11	X12	On-off control of compressor switch signal	26	X11	Electric auxiliary heating 2 control signal
12	X14	On-off control of compressor switch signal	27	CN6	Auxiliary heat adhesion detection
13	X6	Refrigerant leakage fault output signal	28	X13	transformer live wire input
14	X16	Dehumidification detection signal	29	X5	—
15	X10	Four-way valve open detection signal	30	X7	Transformer zero line input

**Outdoor unit:**

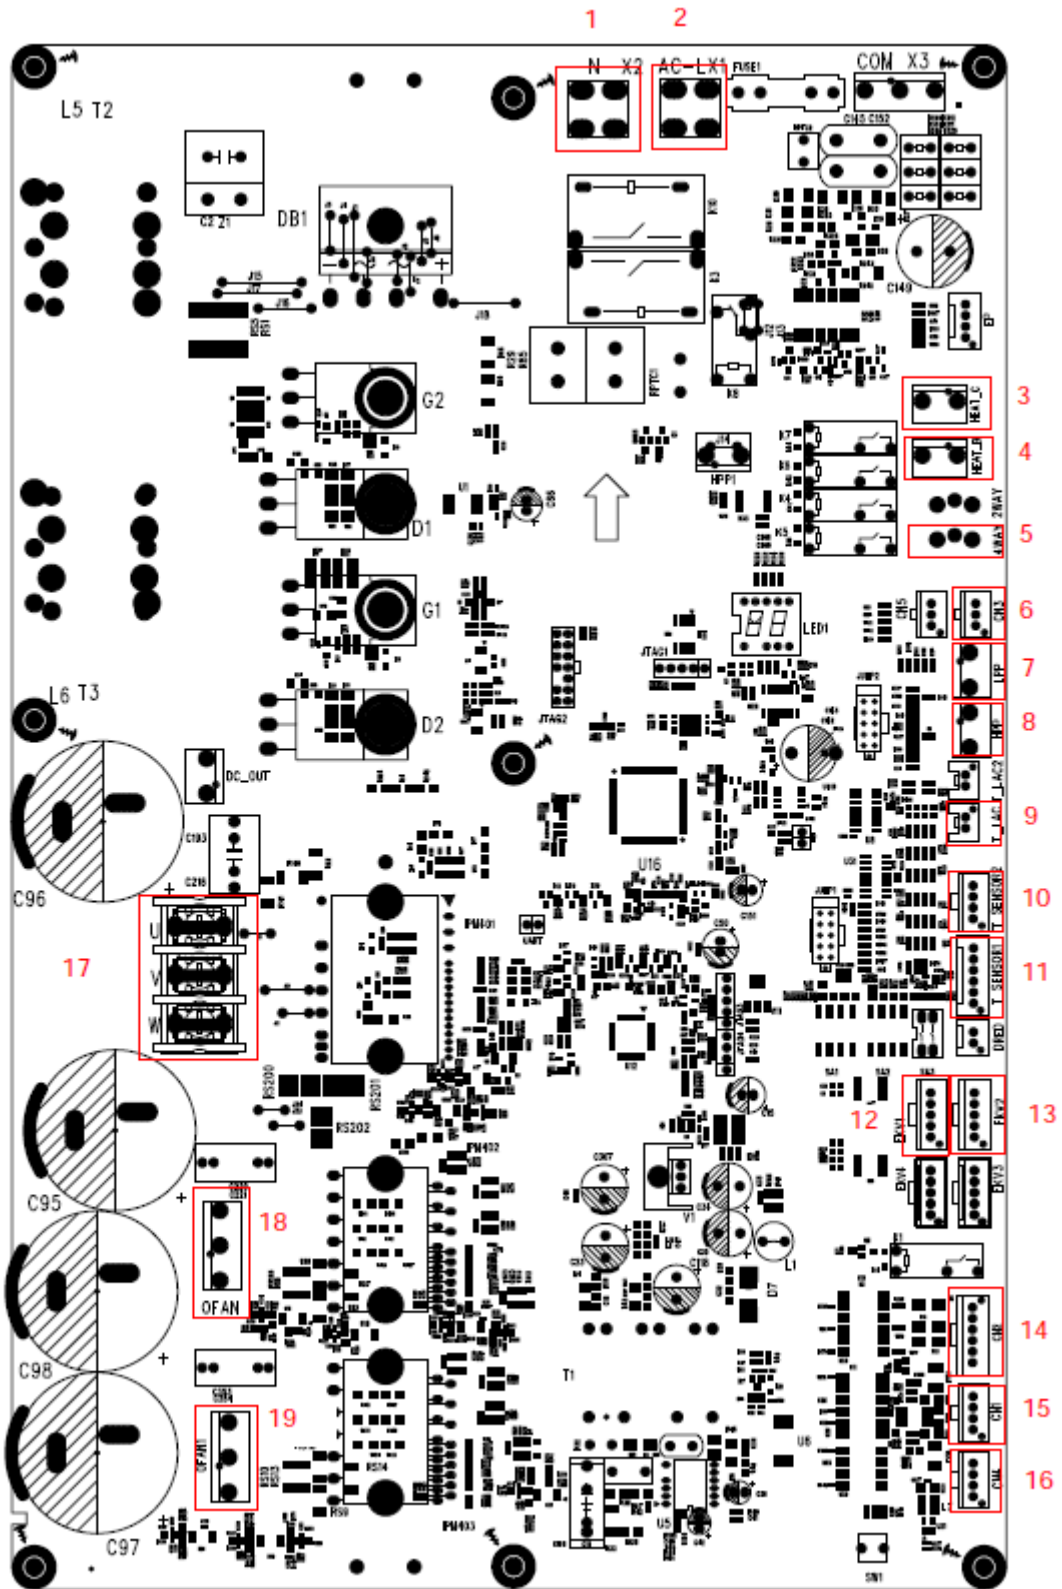
Mainboard, Drive Board

**Model:** FXU24HP230V1R32AO, FXU36HP230V1R32AO



No.	Printing	Interface	No.	Printing	Interface
1	AC-L	Live wire	11	T_SENSOR1	2.Outdoor ambient temperature sensor interface 4.Defrosting temperature sensor interface 6.Discharge temperature sensor interface
2	N	Neutral wire	12	EKV1	Heating electronic expansion valve
3	HEAT_C	Compressor electric heating belt	13	EKV2	Enthalpy increasing electronic expansion valve
4	HEAT_B	Chassis electric heating belt	14	CN2	485 communication
5	4WAY	4-way valve	15	CN1	Thermostat interface
6	CN3	High pressure sensor	16	CN4	After -sales terminal
7	LPP	System low pressure protection interface	17	U	Compressor U phase terminal
8	HPP	System high pressure protection interface	18	V	Compressor V phase terminal
9	T_LAC	Condenser Medium pipe temperature sensor	19	W	Compressor W phase terminal
10	T_SENSOR2	2.Board replacement into temperature sensing package 4.Board replacement temperature sensing package	20	OFAN	Fan terminal

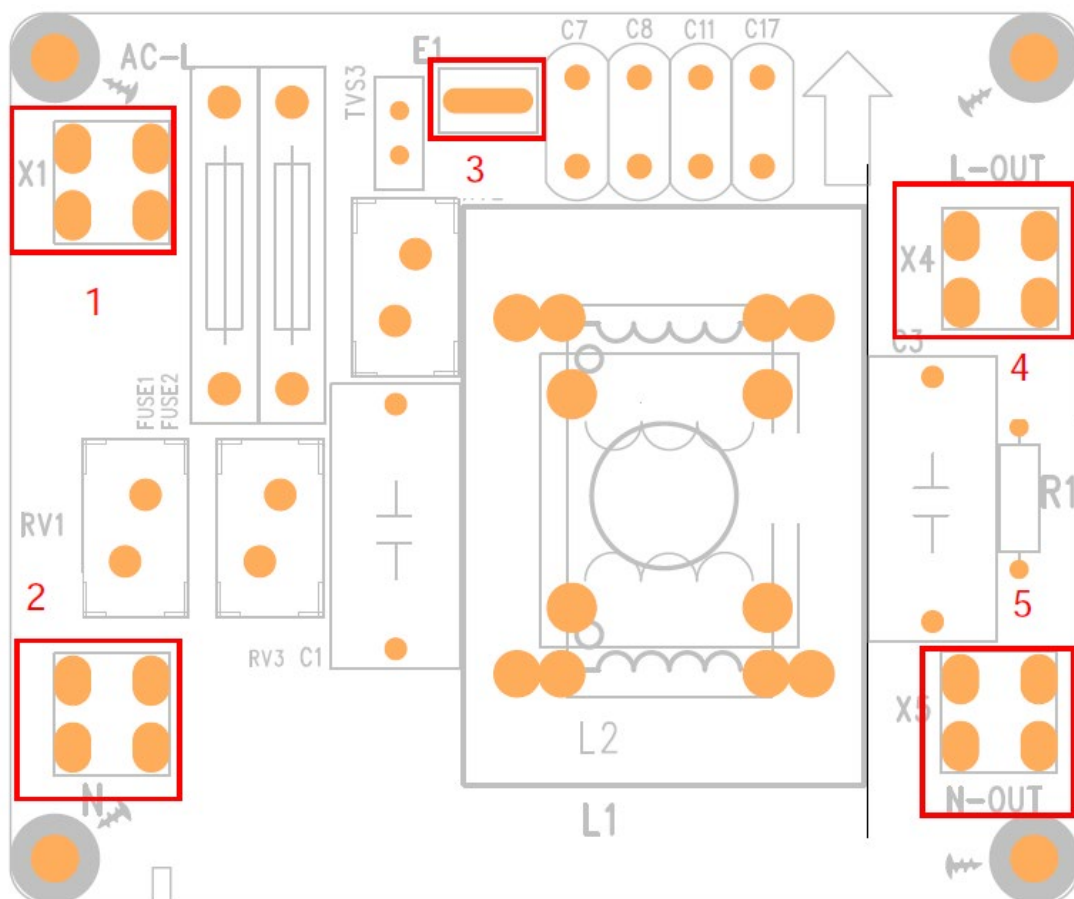
Model: FXU48HP230V1R32AO, FXU60HP230V1R32AO



No.	Printing	Interface	No.	Printing	Interface
1	AC-L	Live wire	11	T_SENSOR1	2.Outdoor ambient temperature sensor interface 4. Defrosting temperature sensor interface 6.Discharge temperature sensor interface
2	N	Neutral wire	12	EKV1	Heating electronic expansion valve
3	HEAT_C	Compressor electric heating belt	13	EKV2	Enthalpy increasing electronic expansion valve
4	HEAT_B	Chassis electric heating belt	14	CN2	485 communication
5	4WAY	4-way valve	15	CN1	Thermostat interface
6	CN3	High pressure sensor	16	CN4	After -sales terminal
7	LPP	System low pressure protection interface	17	X4	Compressor terminal
8	HPP	System high pressure protection interface	18	OFAN	Upper fan interface
9	T_LAC	Condenser Medium pipe temperature sensor	19	OFAN1	Lower fan interface
10	T_SENSOR2	2.Board replacement into temperature sensing package 4.Board replacement temperature sensing package	—	—	—

**Filtering Board:**

**Model:** FXU24HP230V1R32AO, FXU36HP230V1R32AO, FXU48HP230V1R32AO, FXU60HP230V1R32AO



No.	Printing	Interface	No.	Printing	Interface
1	AC-L	Power input live wire terminal	4	L-OUT	Power output live wire terminal
2	N	Power input neutral wire terminal	5	N-OUT	Power output neutral wire terminal
3	E1	Filtering board ground wire terminal	—	—	—

### 3.2.2 IPM Testing Method

#### 3.2.2.1 Method of Testing IPM Module

(1) Preparation before test: prepare a universal meter and turn to its diode option, and then remove the wires U, V, W of the compressor after it is powered off for one minute.

#### (2) Testing Steps

Step 1: put the black probe on the place P and the red one on the wiring terminal U, V, W respectively as shown in the following figure to measure the voltage between UP, VP and WP.

Step 2: put the red probe on the place N and the black one on the wiring terminal U, V, W respectively as shown in the following figure to measure the voltage between NU, NV and NW.

(3) If the measured voltages between UP, VP, WP, NU, NV, NW are all among 0.3V-0.7V, then it indicates the IPM module is normal; If any measured value is 0, it indicates the IPM is damaged.

FXU24HP230V1R32AO, FXU36HP230V1R32AO



FXU48HP230V1R32AO, FXU60HP230V1R32AO



### 3.3 Error Code

No.	Error Code	Error
1	E1	Compressor high pressure protection
2	E3	Refrigerant lack protection or compressor low pressure protection
3	E4	Compressor air discharge high-temperature protection
4	H4	Overload protection
5	C6	Discharge temperature sensor error
6	F3	Outdoor ambient temperature sensor error
7	e1	High pressure sensor error
8	e3	Low pressure sensor error
9	EE	Memory chip reading and writing failure
10	C4	ODU jumper cap error
11	C3	Condenser temperature sensor error
12	C7	ODU tube temperature sensor error
13	H3	Compressor overload protection
14	E2	Indoor Anti-freezing Protection
15	b2	Overcooler Gaseous Inlet Tube Temperature Sensing Error
16	b3	Overcooler Gaseous Outlet Tube Temperature Sensing Error
17	E6	Internal and external machine communication fault
18	H2	IPM Low Temperature Protection
19	FE	Refrigerant sensor fault
20	EH	Protection of auxiliary electric heating by mistake
21	C1	Indoor environment temperature sensing bag fault
22	C2	Indoor tube temperature sensing bag fault
23	FJ	Indoor air outlet temperature sensing bag fault
24	CA	Evaporator inlet tube temperature sensing bag fault
25	Cb	Evaporator output tube temperature sensing bag fault
26	CJ	Internal jumper cap fault
27	Ab	Drive reset protection (fan drive)
28	EA	Internal refrigerant leakage protection
29	A6	Fan communication failure (fan drive)

No.	Error Code	Error
30	A8	Module temperature too high (fan driven)
31	A9	Drive sensor fault (fan drive)
32	Ad	Phase loss protection (fan drive)
33	AH	Bus voltage too high (fan drive)
34	AL	Bus voltage too low (fan drive)
35	C8	Driver jumper cap fault
36	U2	Underphase
37	LE	The compressor is locked
38	P6	Communication fault between main control and driver
39	P8	Heat sink or IPM module or PFC module over temperature
40	UL	Over-current protection of frequency conversion external fan
41	PL	Bus low-voltage protection
42	PH	Bus high-voltage protection
43	PA	ODU AC current protection
44	H5	IPM module current protection
45	L3	DC fan error
46	HC	PFC overcurrent protection
47	Lc	Compressor startup failure
48	P0	Driver reset protection
49	P5	Compressor phase over-current protection
50	U1	Current detection circuit fault or current sensor fault
51	H7	Compressor out-of-step protection
52	P7	Module temperature sensor circuit failure
53	PU	Capacitor charging failure
54	A1	Outdoor fan IPM module protection
55	Ac	Outdoor fan startup failure
56	AE	Outdoor fan current detection circuit error
57	AJ	Outdoor fan out-of-step protection
58	E0	Indoor fan error

If malfunction occurs during operation, LCD temperature display zone will show the failure information. If several malfunctions occur at the same time, their corresponding error codes will be shown in turn. When malfunction occurs, please shut off the unit and send for professional personnel to repair. For example, E1 (as shown below) indicates high pressure protection.

## 3.4 Troubleshooting

### 3.4.1 “E1” Compressor High-Pressure Protection

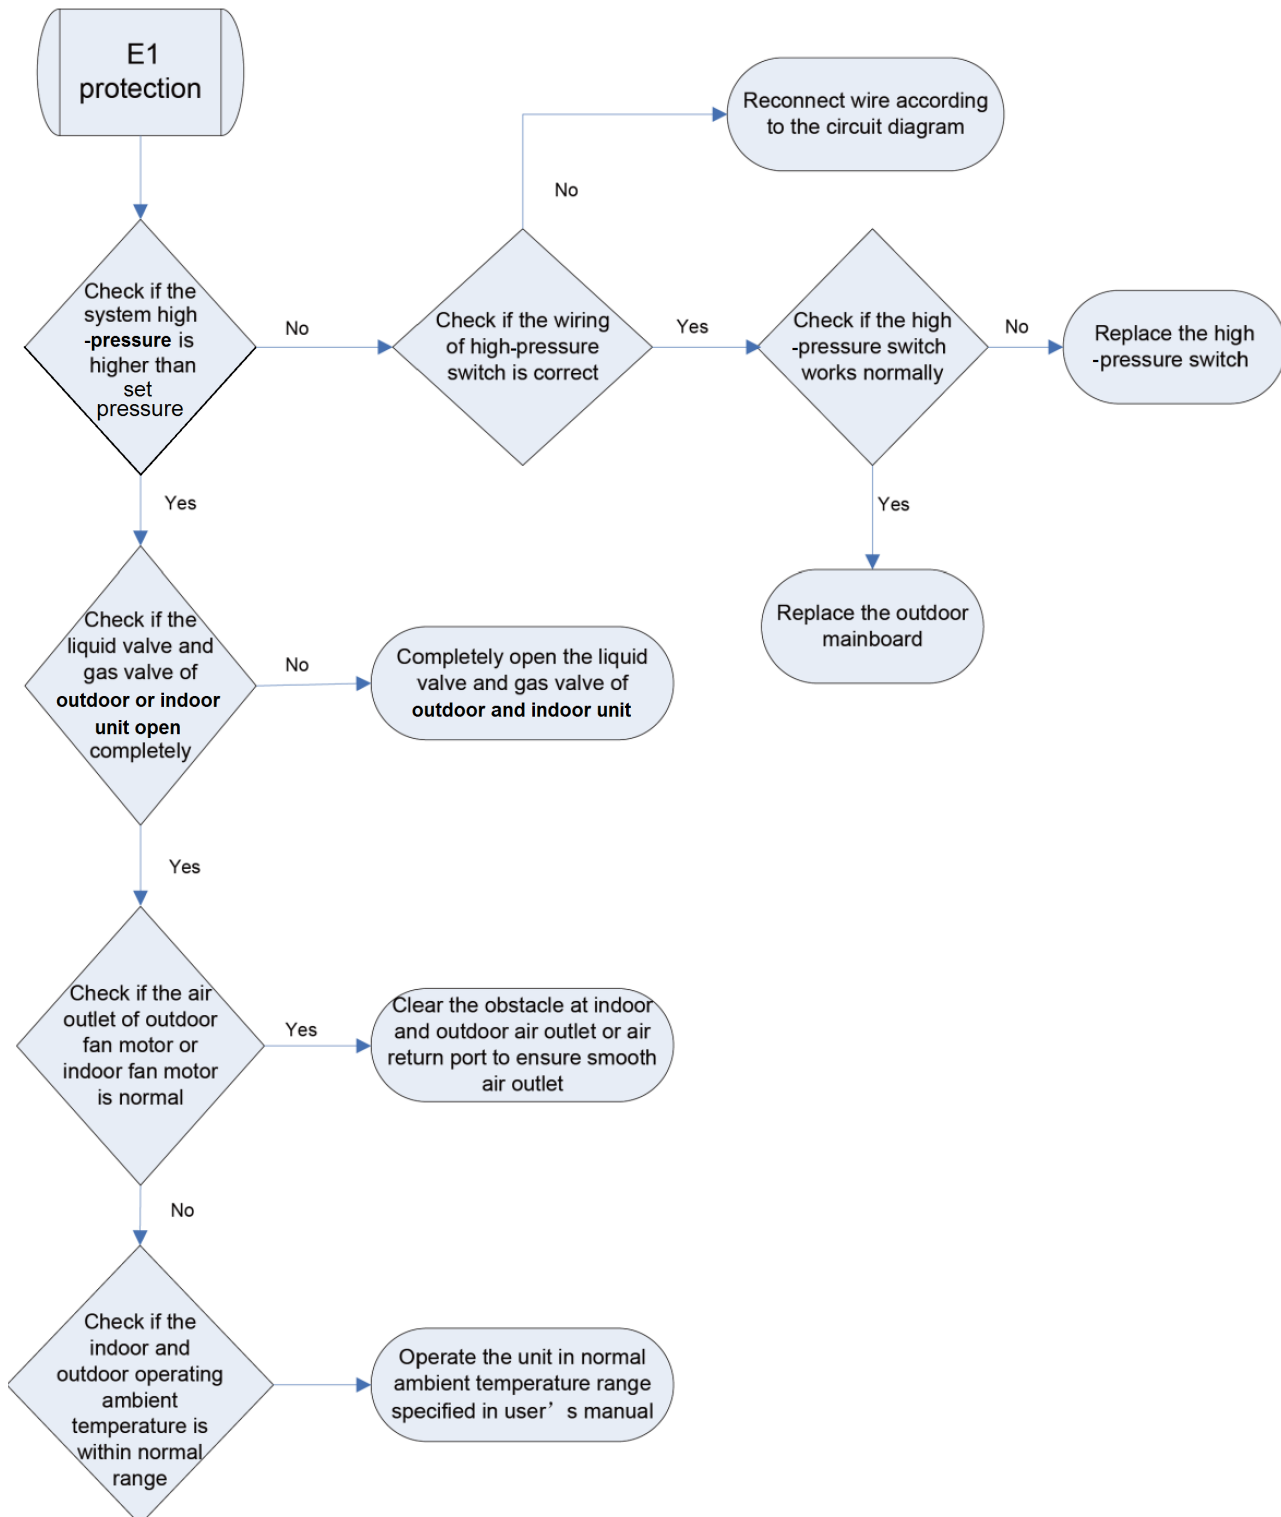
**Error display** ODU mainboard LED displayer.

**Error judgment condition and method**

It is judged through the action of high-pressure switch. If the high-pressure switch is cut off, it is judged that high-pressure is too high and the system stops operation for protection.

**Possible reason:**

- Cut-off valve of ODU or IDU is not fully opened.
- High-pressure switch is abnormal.
- Outdoor or indoor fan is not working properly.
- IDU filter or air duct is blocked (heating mode).
- Ambient temperature is too high.
- Refrigerant charging amount is too much.
- System pipeline is blocked.

**Troubleshooting:**

### 3.4.2 “E3” Refrigerant lack protection or compressor low pressure protection

**Error display:** ODU mainboard LED displayer.

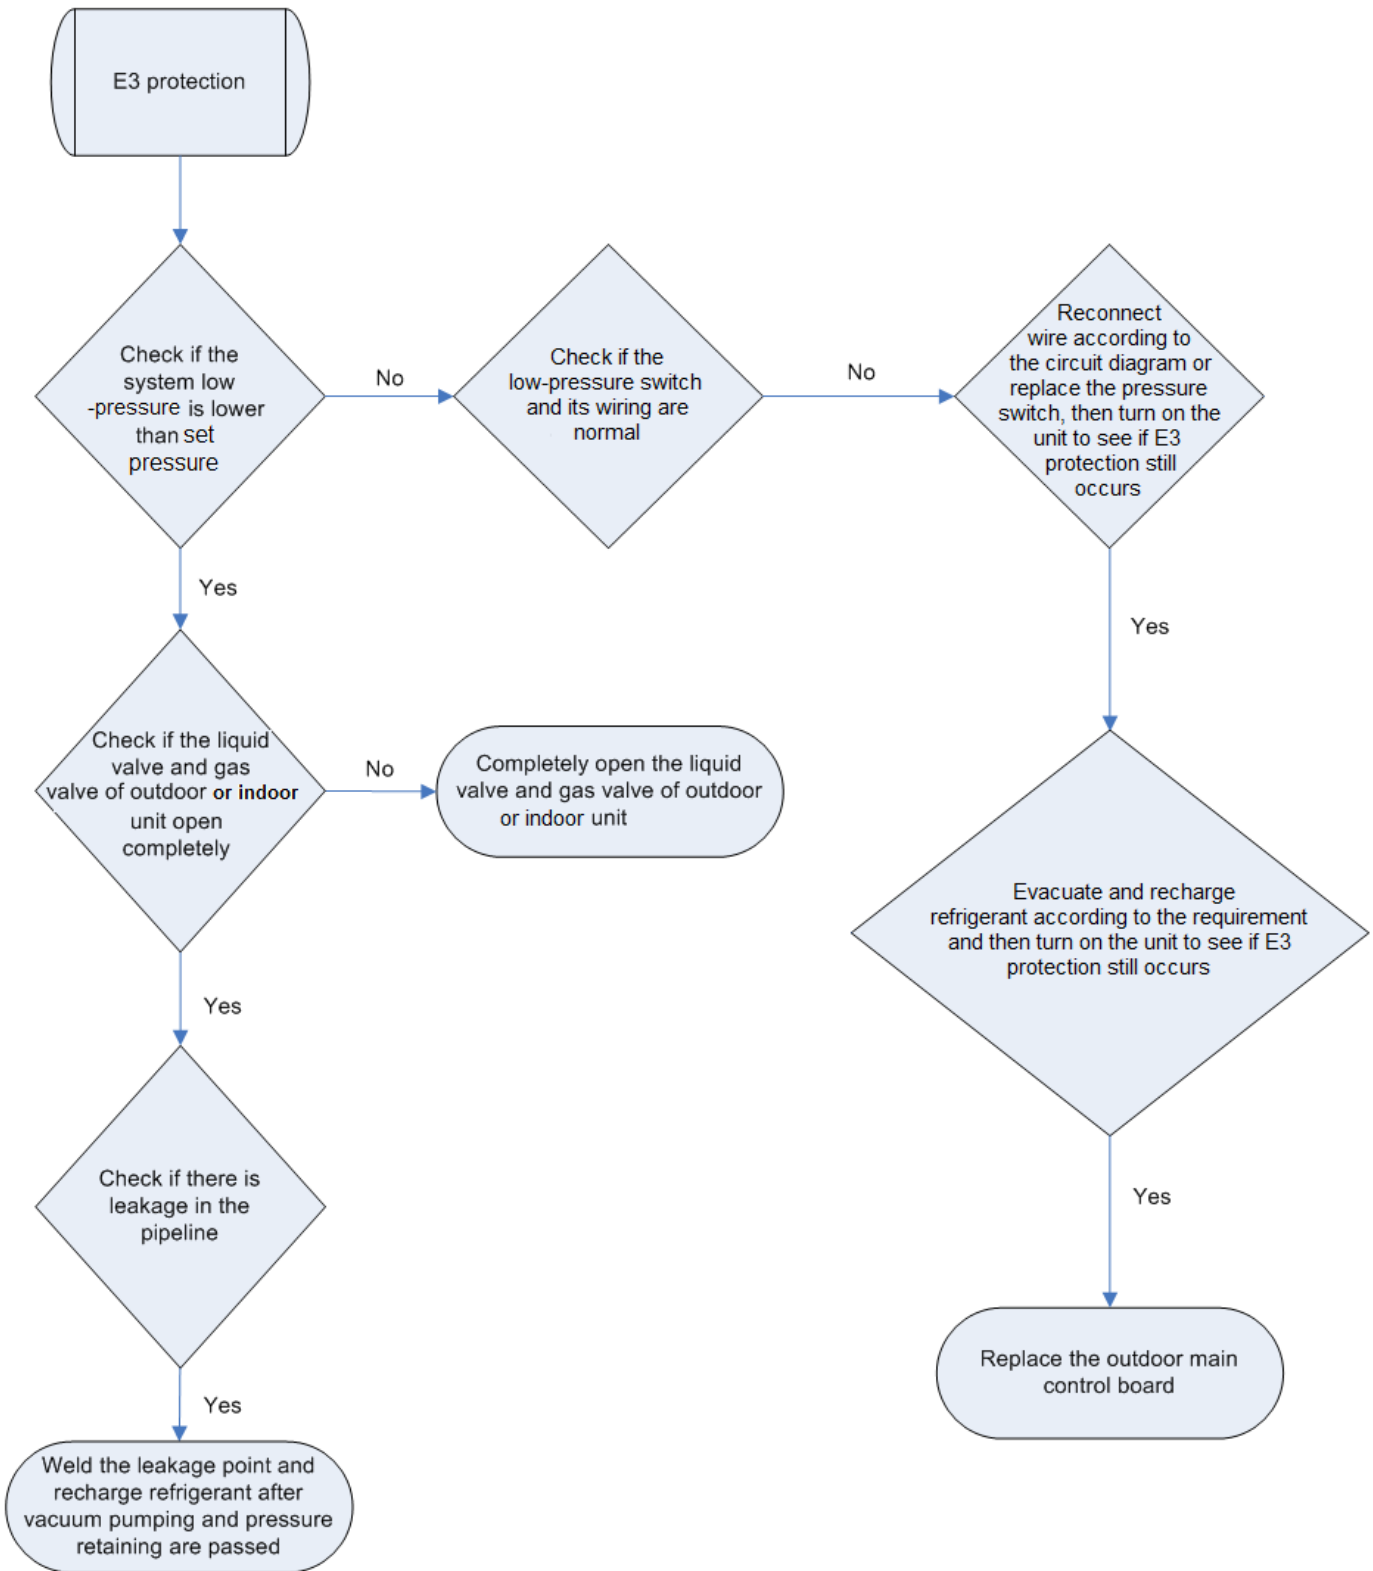
**Error judgment condition and method:**

It is judged through the action of low-pressure switch. If the low-pressure switch is cut off, it is judged that low pressure is too low and the system stops operation for protection.

**Possible reason:**

- Cut-off valve of ODU or IDU is not fully opened.
- Low-pressure sensor is abnormal.
- Outdoor or indoor fan is not working properly.
- IDU filter or air duct is blocked (cooling mode).
- Ambient temperature is too low.
- Refrigerant charging amount is insufficient.
- System pipeline is blocked.

**Troubleshooting:**



### 3.4.3 “E4” Compressor Air Discharge High-temperature Protection

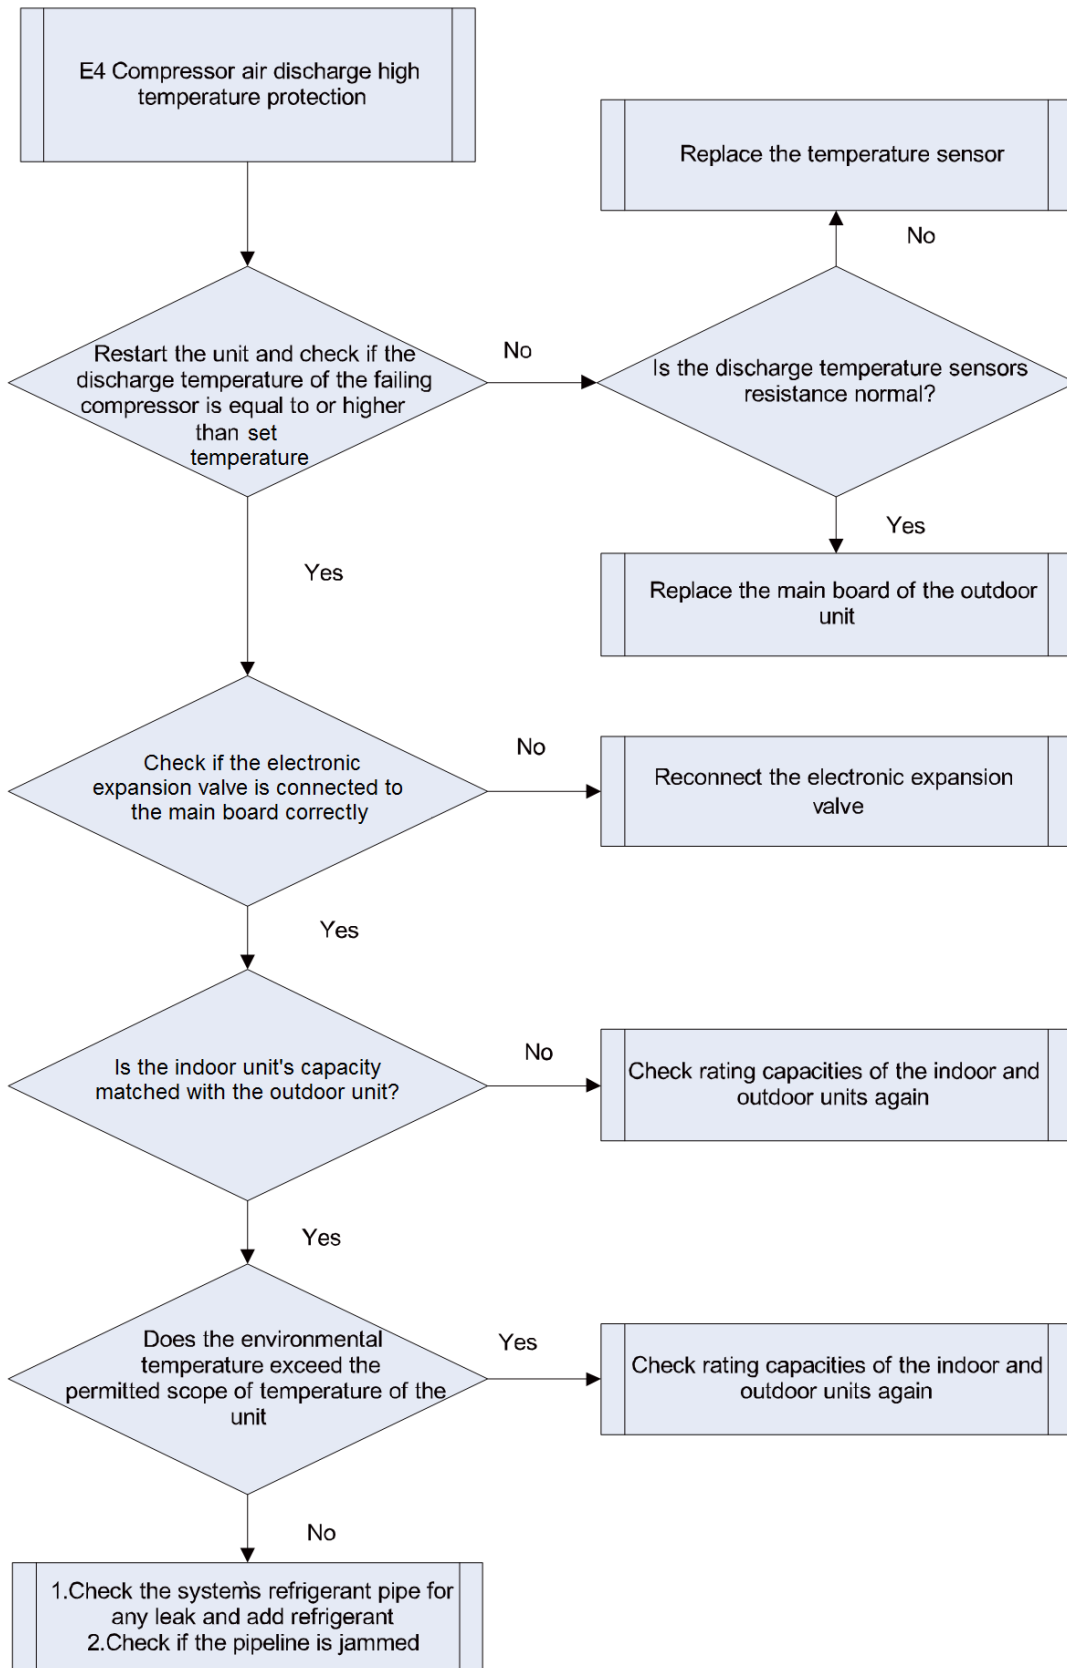
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

Test the compressor discharge temperature through compressor discharge pipe and shell top temperature sensor. If the tested temperature value is higher than 115°C, the unit will stop for protection.

**Possible reason:**

- Cut-off valve of ODU or IDU is not fully opened.
- Electronic expansion valve is abnormal.
- Outdoor or indoor fan is not working properly.
- IDU filter or air duct is blocked (cooling mode).
- Ambient temperature exceeds allowable operation range.
- Refrigerant charging amount is insufficient.
- System pipeline is blocked.

**Troubleshooting:**

### 3.4.4 “H4” Overload protection

**Error display:** ODU mainboard LED displayer.

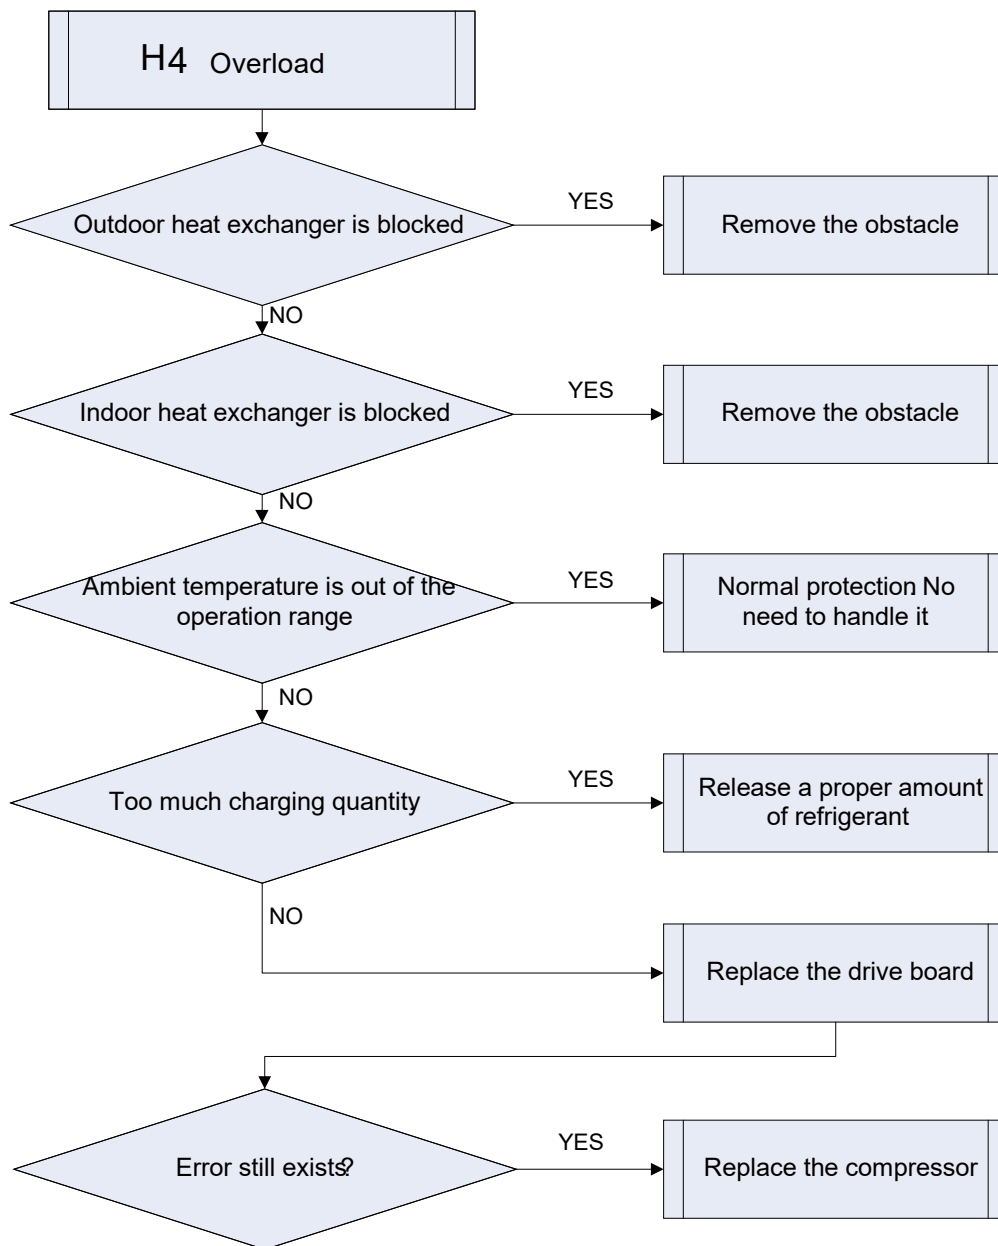
**Error judgment condition and method:**

When condensing pressure is higher than the protection value, system will report overload protection.

**Possible reason:**

- Cooling ODU heat exchanger is blocked or heat exchange is bad.
- Heating IDU heat exchanger is blocked or heat exchange is bad.
- Operating temperature is too high.
- System charging quantity is too much.

**Troubleshooting:**



### 3.4.5 “C6” Discharge temperature sensor error

**Error display:** ODU mainboard LED displayer.

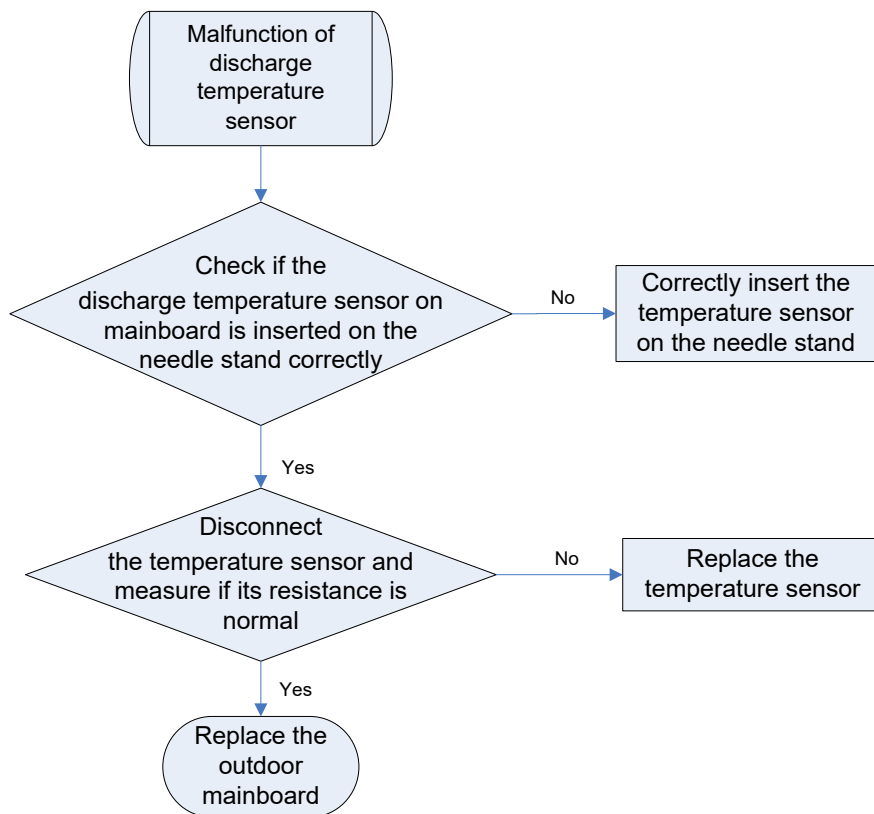
**Error judgment condition and method:**

Sample the AD value of temperature sensor through temperature sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 5 seconds continuously, report the error.

**Possible reason:**

- Poor contact between temperature sensor and terminal in mainboard interface.
- Temperature sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:**



**NOTE:**

Please refer to Appendix 1 for the relation between temperature and resistance of temperature sensor.

### 3.4.6 “F3” Outdoor Ambient Temperature Sensor Error

**Error display:** ODU mainboard LED displayer.

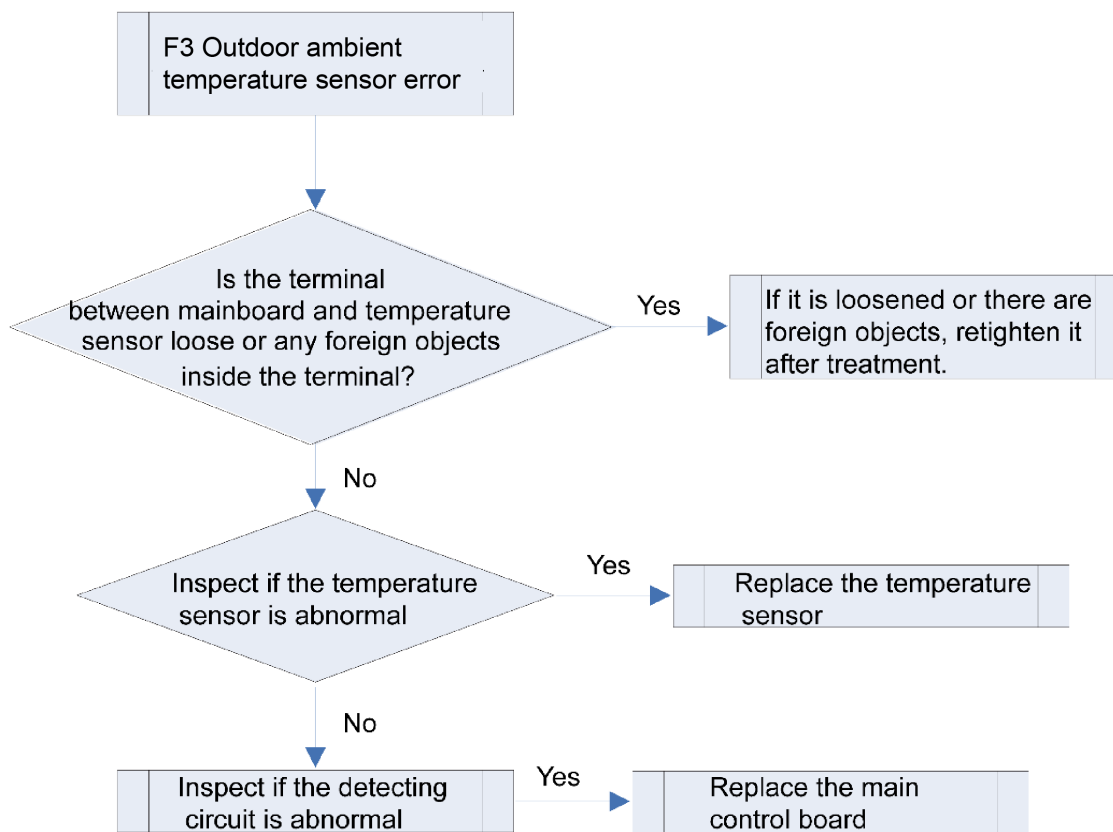
**Error judgment condition and method:**

Sample the AD value of temperature sensor through temperature sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 5 seconds continuously, report the error.

**Possible reason:**

- Poor contact between ambient temperature sensor and terminal in mainboard interface.
- Ambient temperature sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:**



**NOTE:**

Please refer to Appendix 1 for the relation between temperature and resistance of temperature sensor.

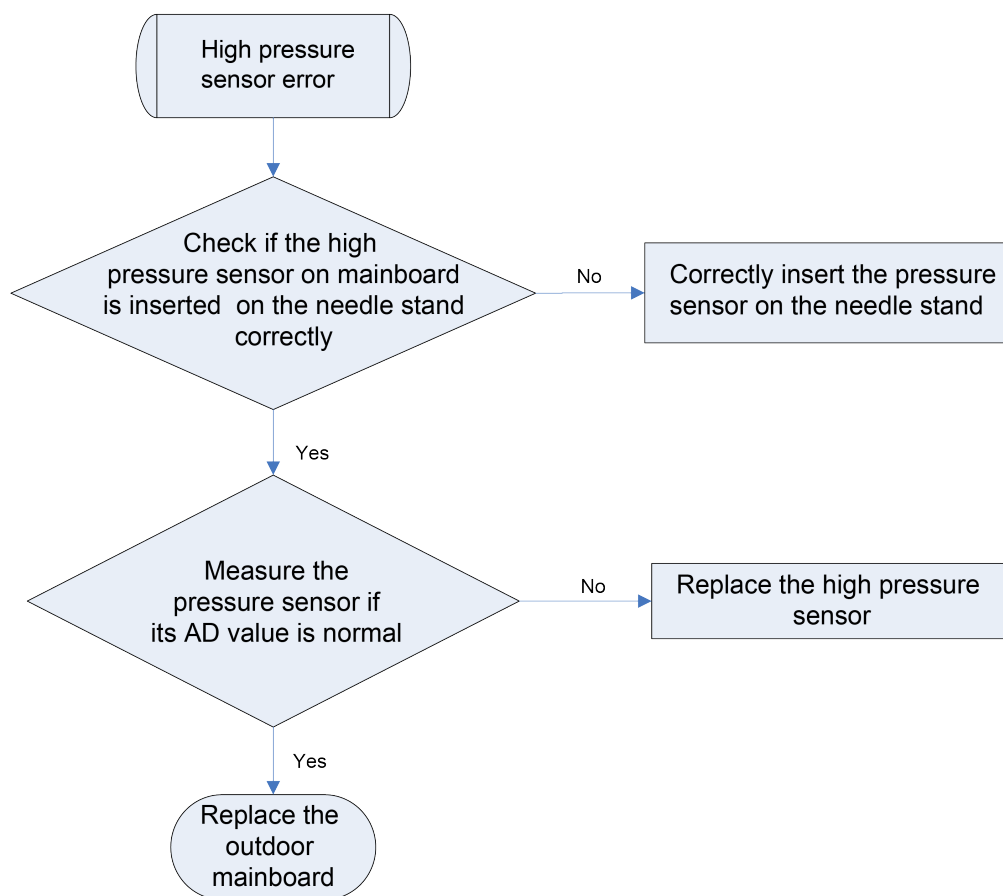
### 3.4.7 “e1” High-Pressure Sensor Error

**Error display:** ODU mainboard LED displayer.

Sample the AD value of pressure sensor through pressure sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 30 seconds continuously, report the error.

- Poor contact between pressure sensor and terminal in mainboard interface.
- Pressure sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:**



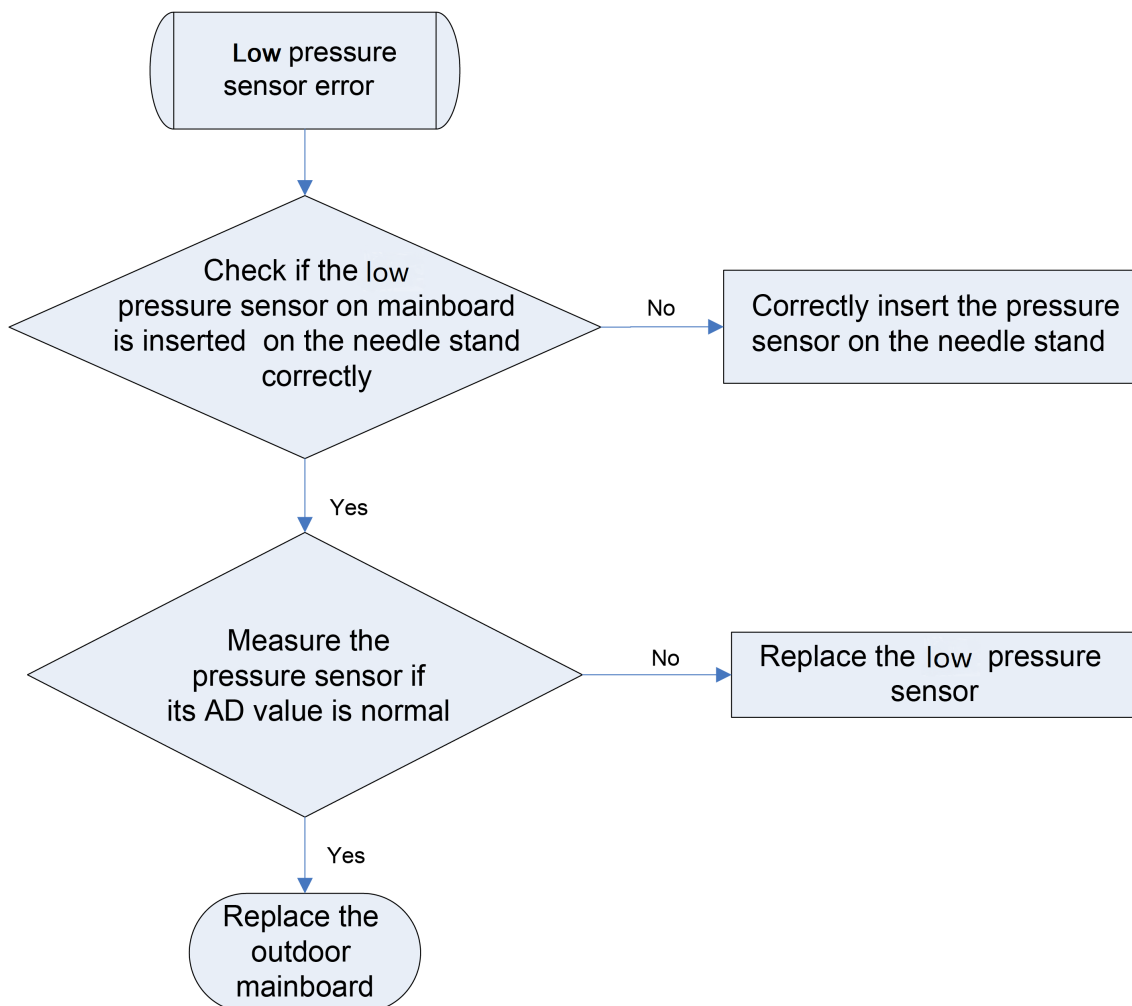
### 3.4.8 “e3” Low pressure sensor error

**Error display:** ODU mainboard LED displayer.

Sample the AD value of pressure sensor through pressure sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 30 seconds continuously, report the error.

- Poor contact between pressure sensor and terminal in mainboard interface.
- Pressure sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:**



### 3.4.9 “EE” Memory chip reading and writing failure

**Error display:** ODU mainboard LED displayer.

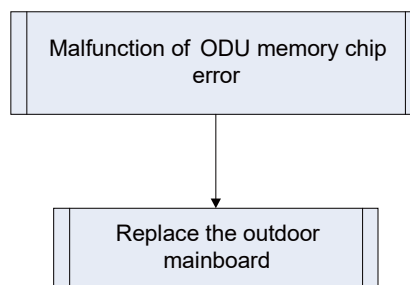
**Error judgment condition and method:**

If ODU mainboard cannot read the memory chip, this error will be reported.

**Possible reason:**

- Memory chip on the ODU mainboard is damaged.
- Memory chip is weakly welded.
- Memory chip lead is short-circuited.

**Troubleshooting:**



### 3.4.10 “C4” ODU Jumper Cap Error

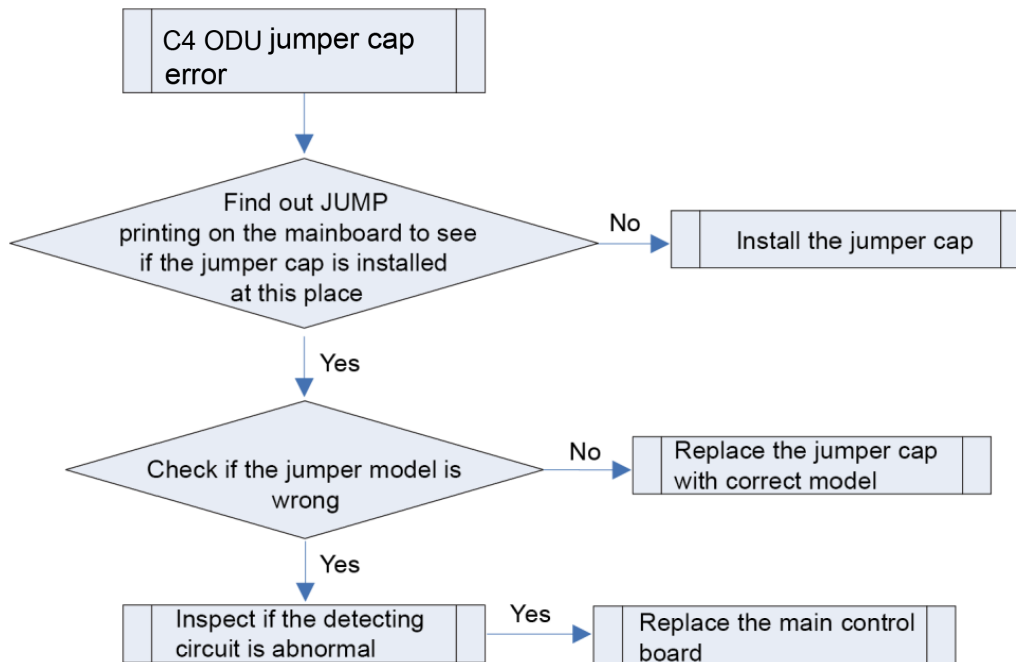
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

If jumper cap model doesn't match with mainboard, report the error.

**Possible reason:**

- Jumper cap is not installed.
- Jumper cap model is wrong.
- Detecting circuit is abnormal.

**Troubleshooting:****3.4.11 “C3” Condenser Temperature Sensor Error**

**Error display:** ODU mainboard LED displayer.

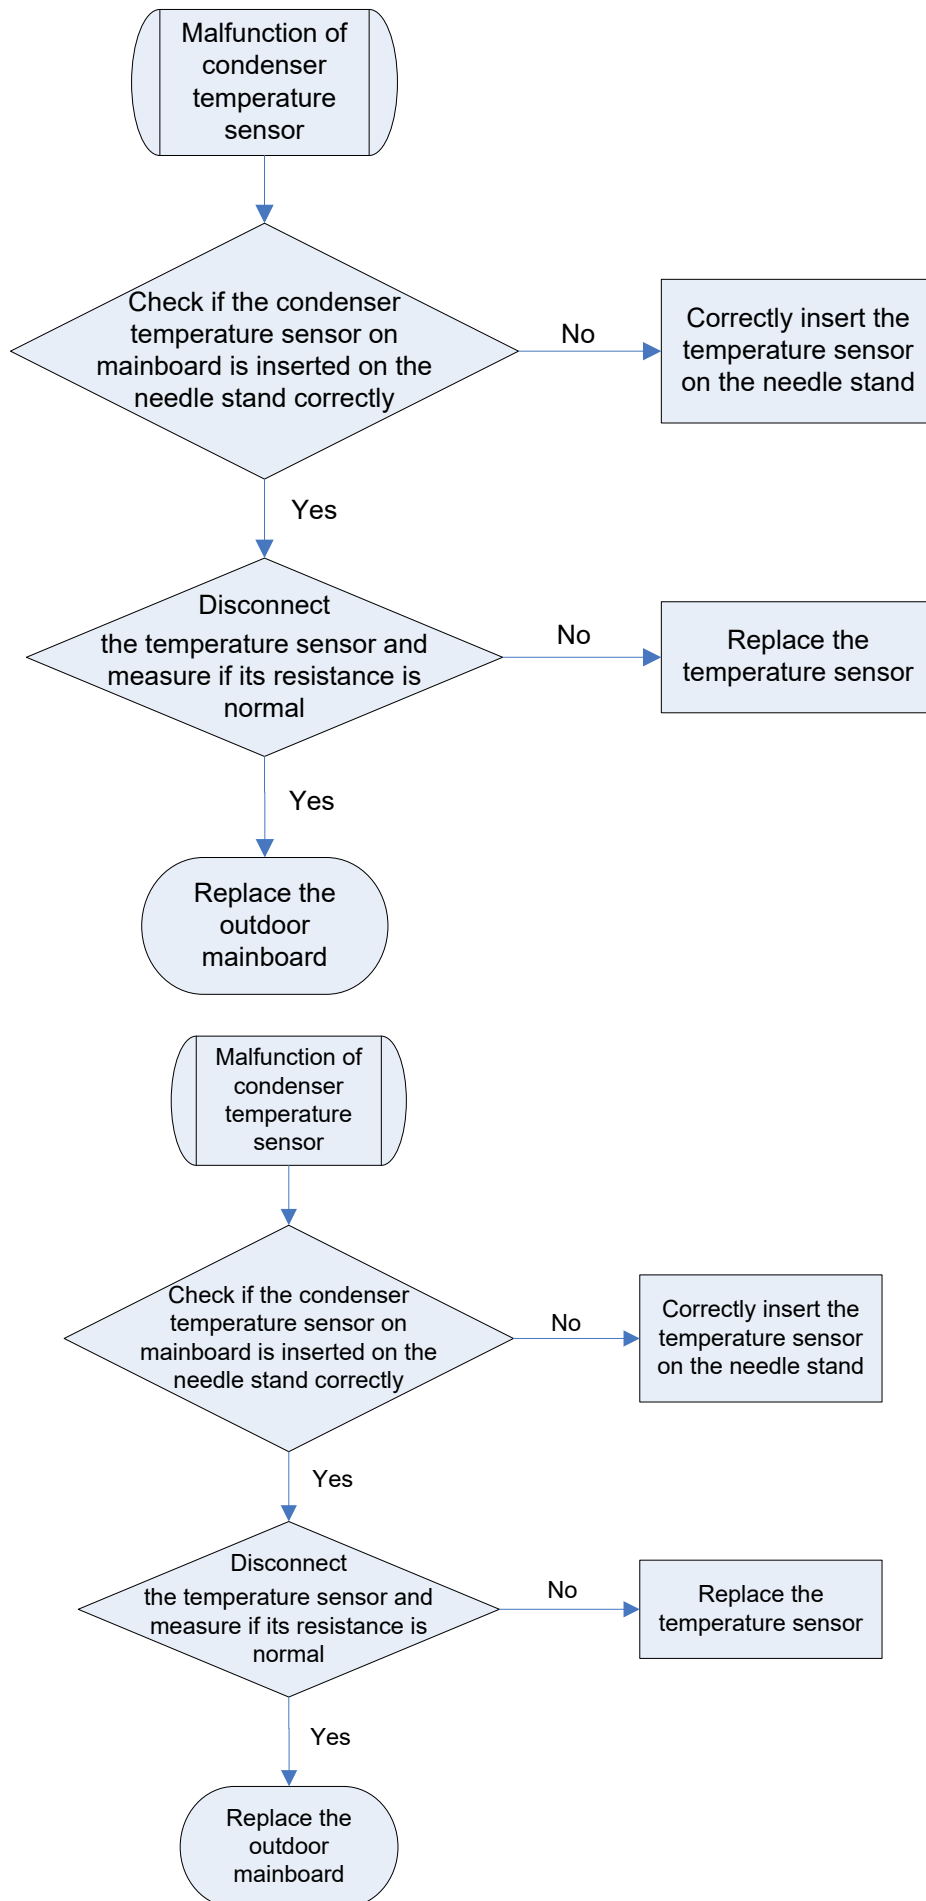
**Error judgment condition and method:**

Sample the AD value of temperature sensor through temperature sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 5 seconds continuously, report the error.

**Possible reason:**

- Poor contact between temperature sensor and terminal in mainboard interface.
- Temperature sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:**



**NOTE:**

Please refer to Appendix 1 for the relation between temperature and resistance of temperature sensor.

**3.4.12 “C7” ODU Tube Temperature Sensor Error**

**Error display:** ODU mainboard LED displayer.

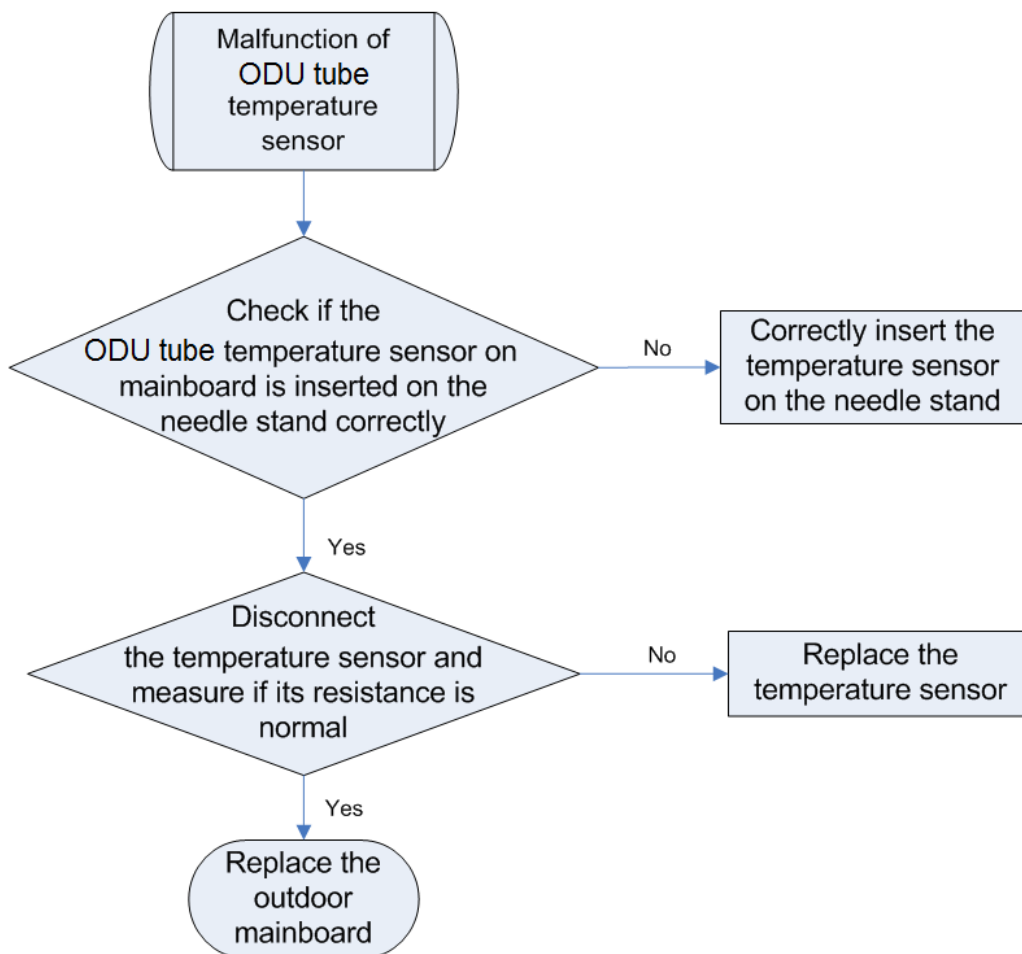
**Error judgment condition and method:**

Sample the AD value of temperature sensor through temperature sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 5 seconds continuously, report the error.

**Possible reason:**

- Poor contact between temperature sensor and terminal in mainboard interface.
- Temperature sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:**



**NOTE:**

Please refer to Appendix 1 for the relation between temperature and resistance of temperature sensor.

**3.4.13 “H3” Compressor overload protection**

**Error display:** ODU mainboard, IDU wired control and IDU receiver light board will display **H3**.

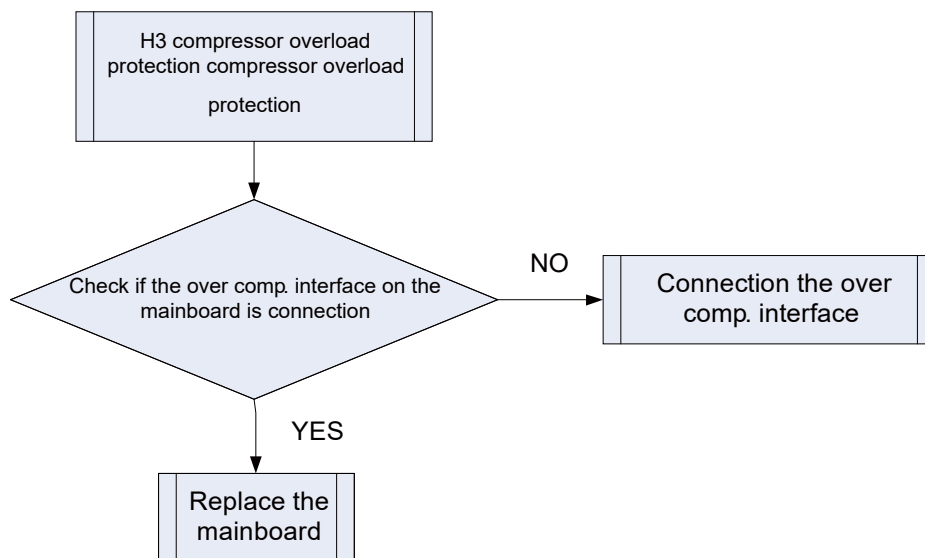
**Error judgment condition and method:**

When the mainboard's interface ovc-comp is broken off for 3s, error H3 will be reported.

**Possible reason:**

- The interface ovc-comp is not short-circuited.
- ODU mainboard is damaged.

**Troubleshooting:**

**3.4.14 “PL” Bus Low-Voltage Protection**

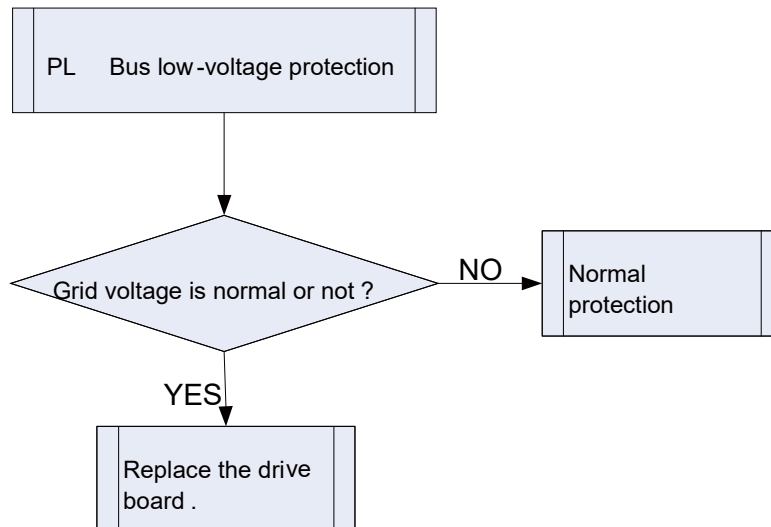
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

When compressor is running and there is no other malfunction, if busbar voltage is lower than the set value for low voltage protection, then it can be judged that bus low-voltage protection occurs. System will shut down for protection.

**Possible reason:**

- Voltage of power grid is abnormal.
- Drive board busbar voltage sampling circuit element is damaged or drive board busbar voltage sampling AD terminal is abnormal.

**Troubleshooting:****NOTE:**

“AL” refer to this fault handling.

**3.4.15 “PH” Bus High-Voltage Protection**

**Error display:** ODU mainboard LED displayer.

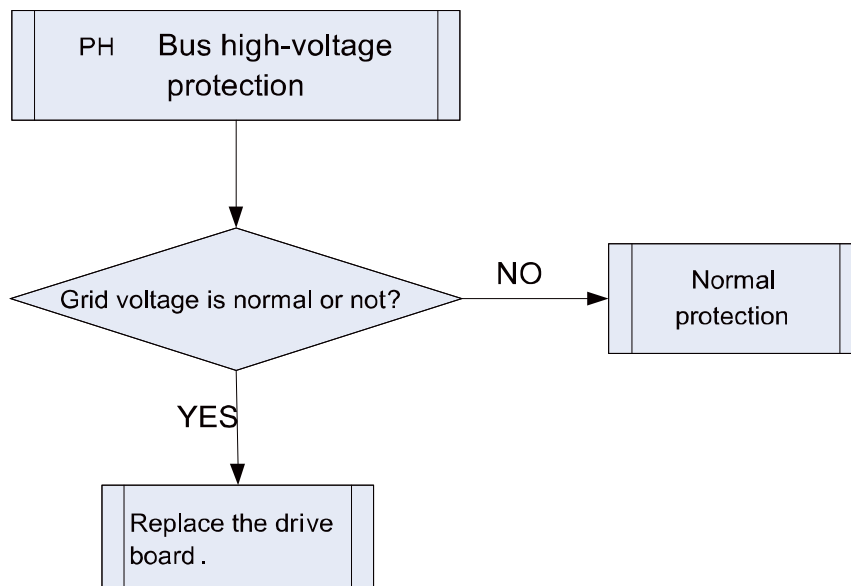
**Error judgment condition and method:**

If there is no other malfunction and the busbar voltage is higher than the set value for high voltage protection, then it can be judged that bus high-voltage protection occurs. System will shut down for protection.

**Possible reason:**

- Voltage of power grid is abnormal.
- Drive board busbar voltage sampling circuit element is damaged or drive board busbar voltage sampling

AD terminal is abnormal.

**Troubleshooting:**

**NOTE:**

“AH” refer to this fault handling.

**3.4.16 “PA” ODU AC current protection**

**Error display:** ODU mainboard LED displayer.

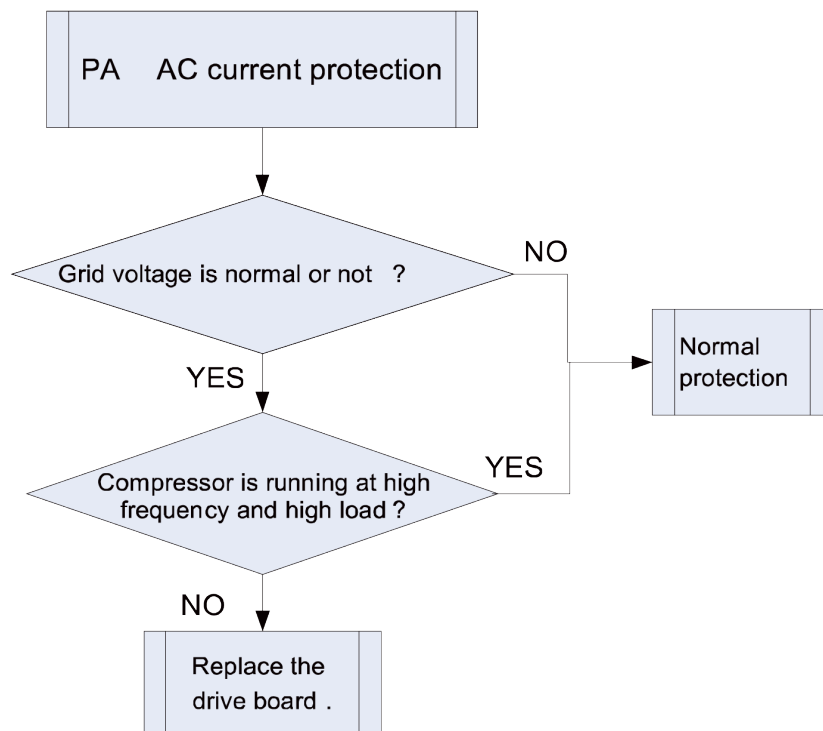
**Error judgment condition and method:**

If input current value exceeds the set protection value, then it can be judged that AC current protection occurs and system will shut down for protection.

**Possible reason:**

- System is heavy-loaded and compressor current is too large.
- Grid voltage is abnormal.
- PFC module is damaged.
- Drive board PFC current sampling circuit element is damaged or drive chip PFC current sampling AD terminal is abnormal.

**Troubleshooting:**

**3.4.17 “H5” IPM module current protection**

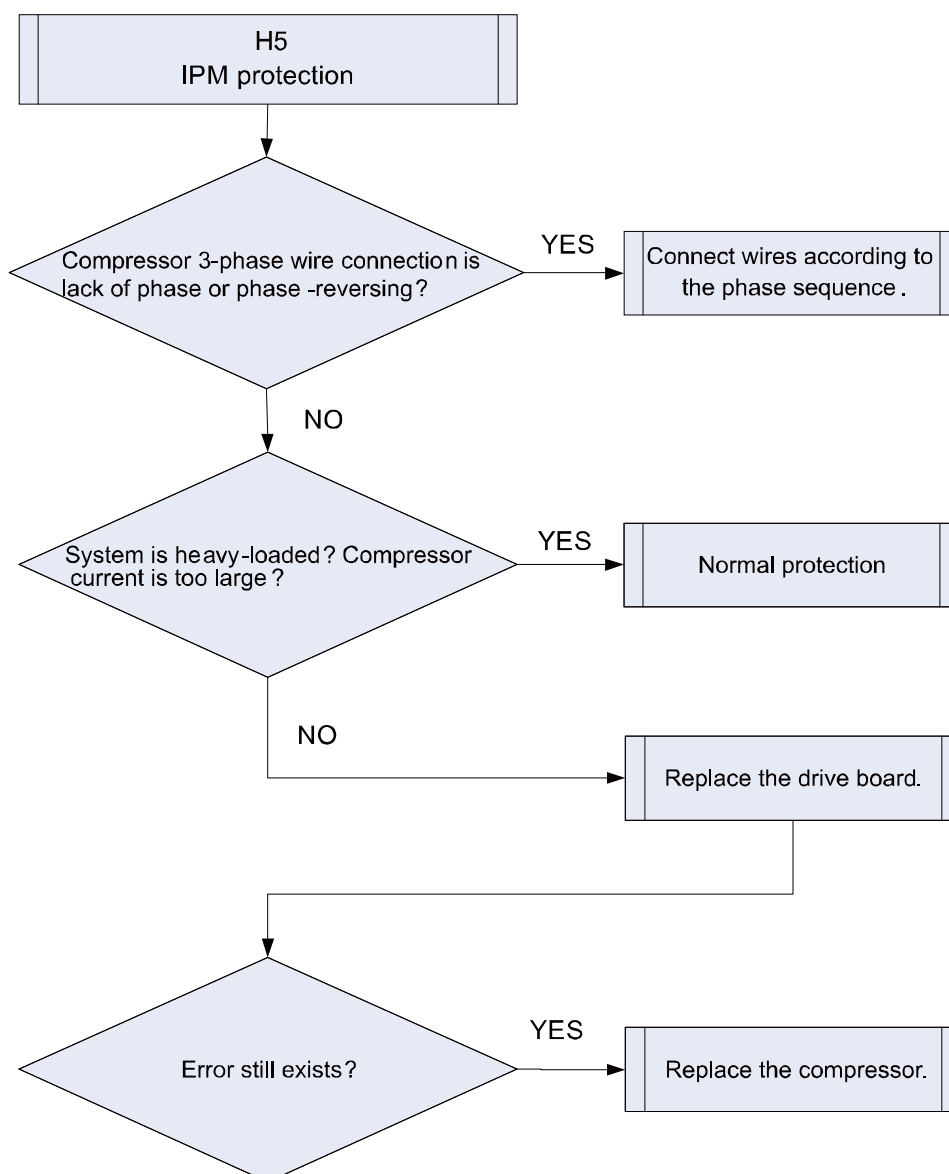
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

When power is connected and drive chip received IPM lead F0 that is of low level, than it is IPM module malfunction. System will shut down for protection.

**Possible reason:**

- Compressor 3-phase wire connection is lack of phase or phase-reversed.
- System is overloaded and compressor current is too large.
- Drive board IPM module is damaged.
- Drive board IPM module's 15V power supply is lower than 13.5V.
- Drive board 6-line PWM signal and the corresponding element are abnormal.
- Drive board compressor current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.
- Compressor is damaged.

**Troubleshooting:**

### 3.4.18 “L3” DC Fan Error

**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

Mainboard doesn't receive the signal of outdoor fan within 30s after the outdoor fan starts up.

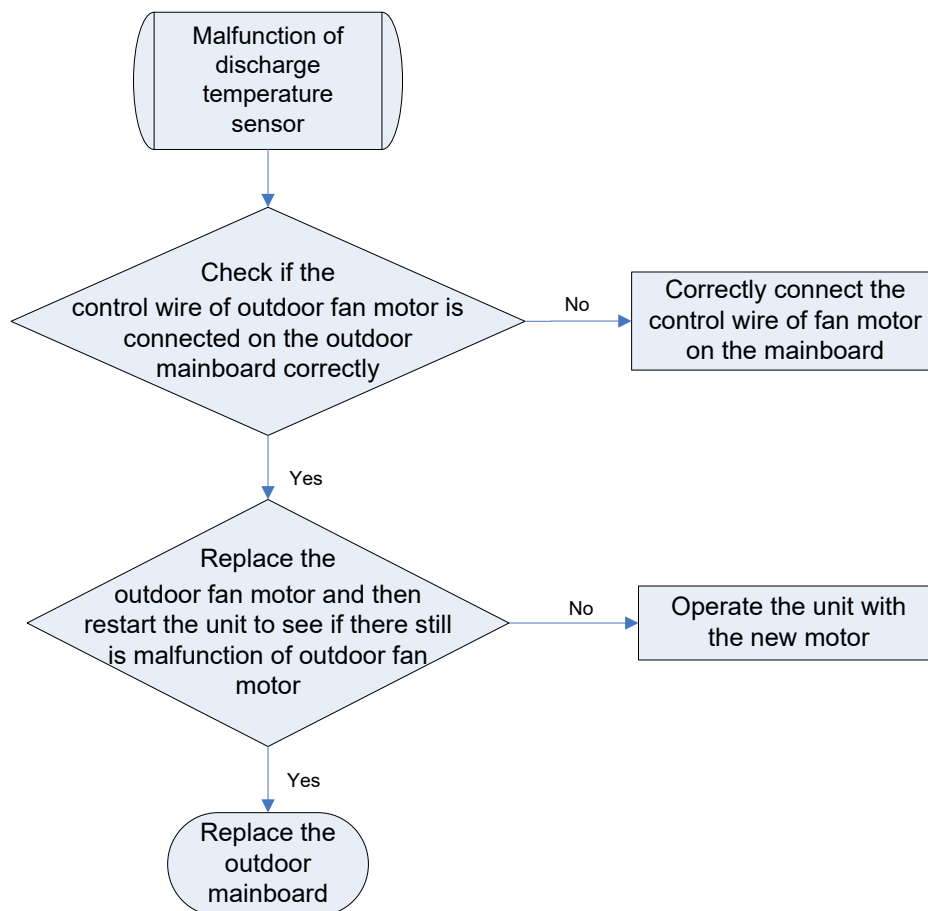
**Possible reason:**

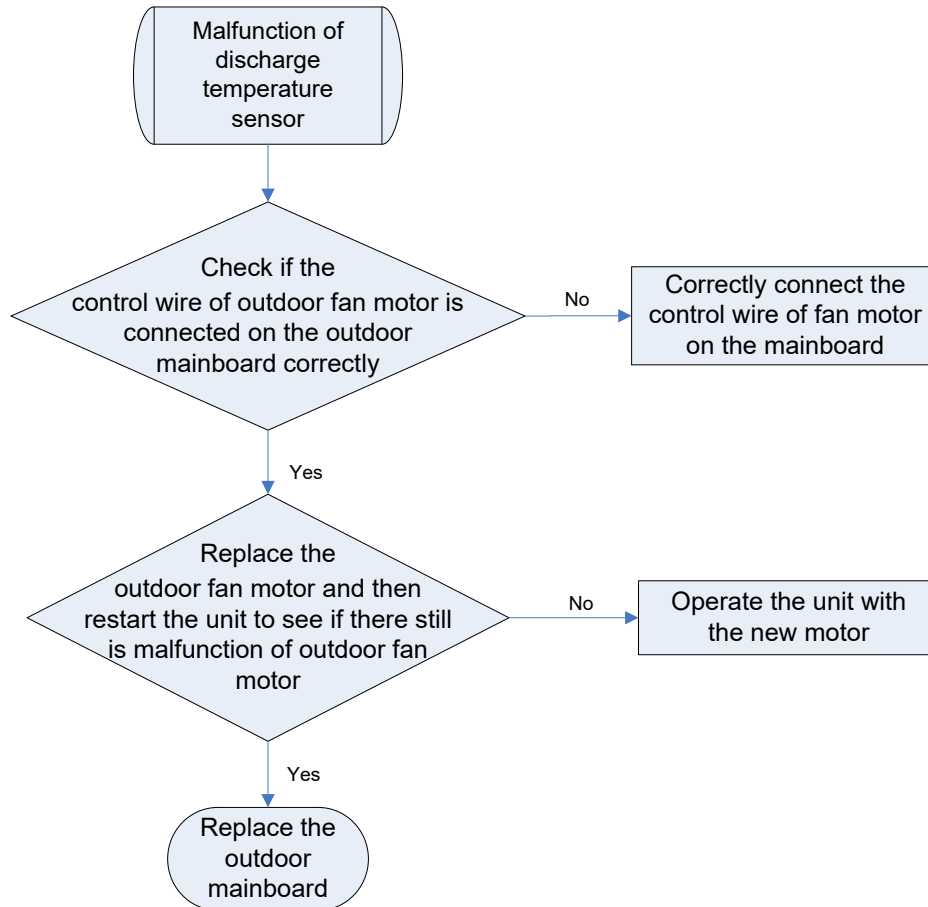
■ Outdoor fan wiring terminal is not correctly connected to the mainboard.

■ Outdoor fan is damaged.

■ If it is a new unit or a new motor has been replaced in the unit and the wire connection is correct, then probably it is the program that goes wrong.

**Troubleshooting:**





### 3.4.19 “HC” PFC overcurrent protection

**Error display:** ODU mainboard LED displayer.

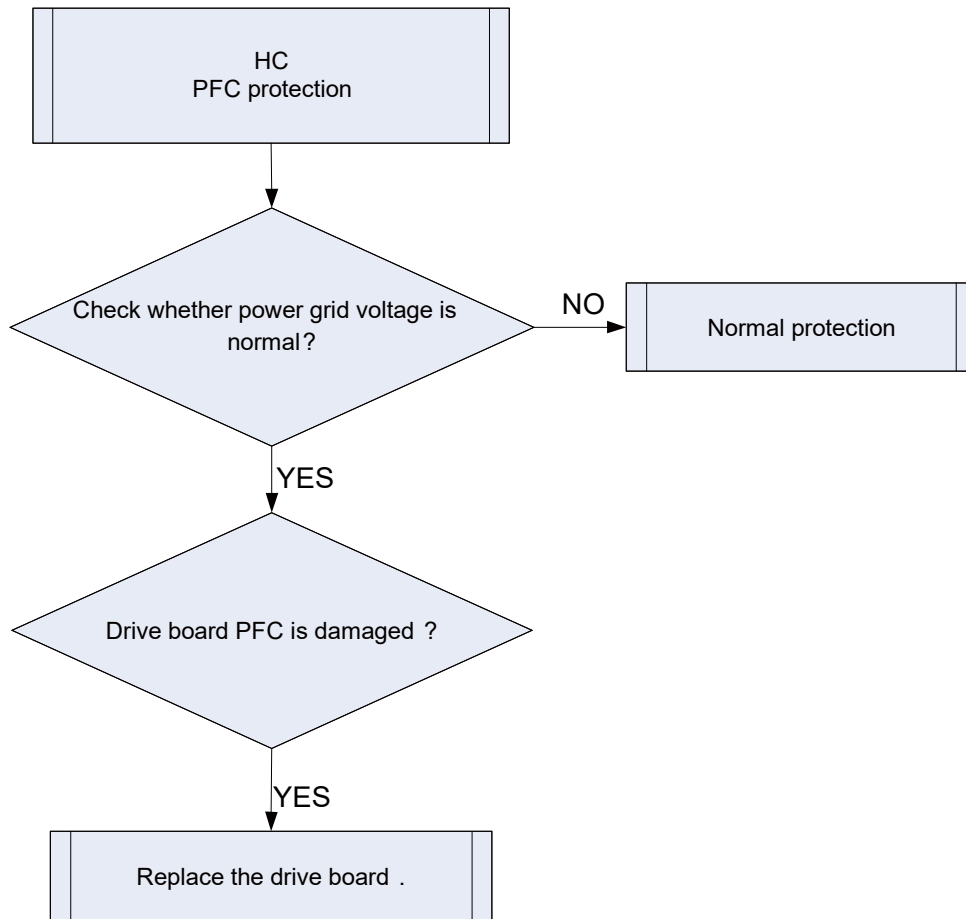
**Error judgment condition and method:**

After power is connected, and drive chip received PFC lead F0 that is of low level, than it is PFC module malfunction. System will shut down for protection.

**Possible reason:**

- Power grid voltage is abnormal.
- Drive board PFC module is damaged.
- Drive board PFC module's 15V power supply is lower than 13.5V.
- Drive board PWM signal for PFC and the corresponding element are abnormal.
- Drive board PFC current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.

**Troubleshooting:**



### 3.4.20 “Lc” Compressor startup failure

**Error display:** ODU mainboard LED displayer.

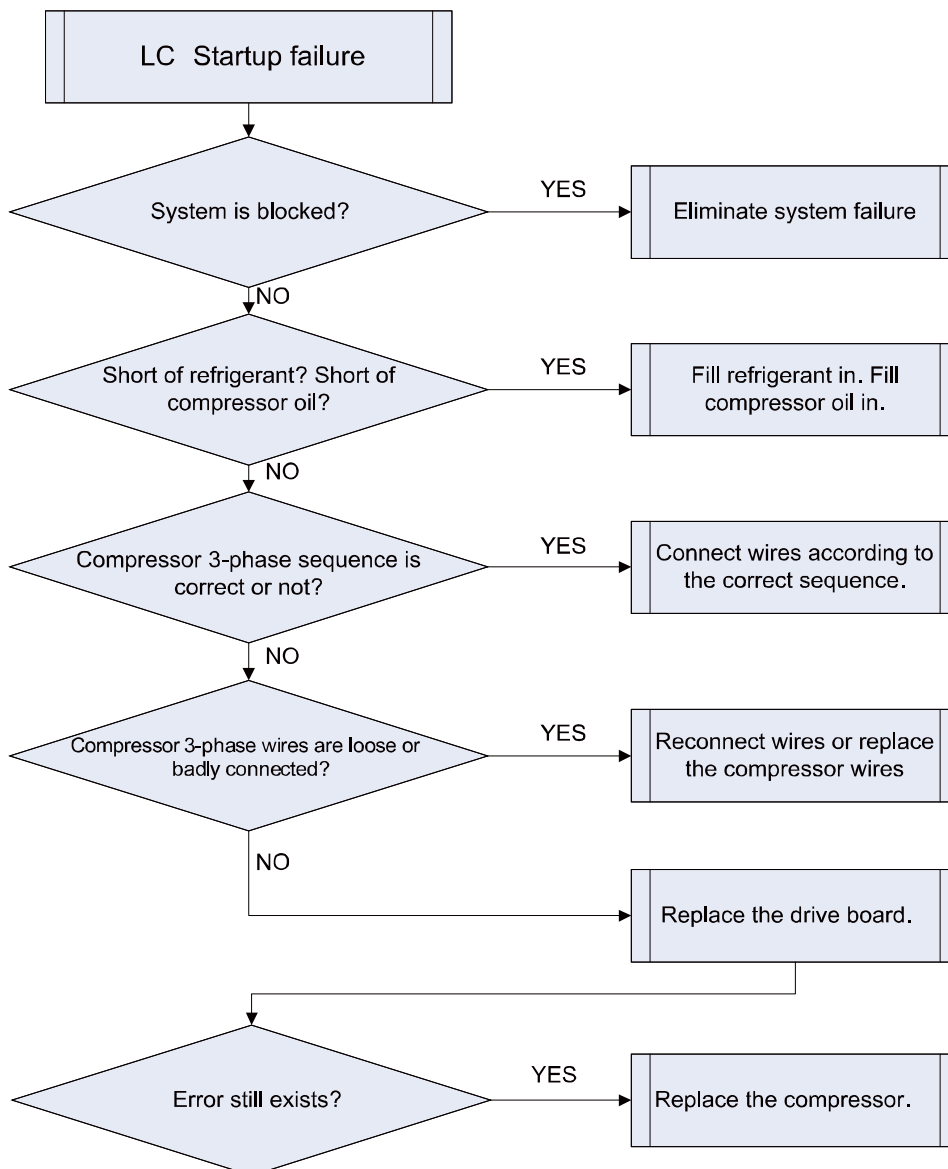
**Error judgment condition and method:**

Check the error code on nixie tube of ODU main control board. If PJ is displayed, it indicates inverter compressor startup failure.

**Possible reason:**

- Poor contact of compressor UVW wire.
- Compressor is broken.
- Compressor drive board is broken.

**Troubleshooting:**



### 3.4.21 “P0” Driver Reset Protection

**Error display:** ODU mainboard LED displayer.

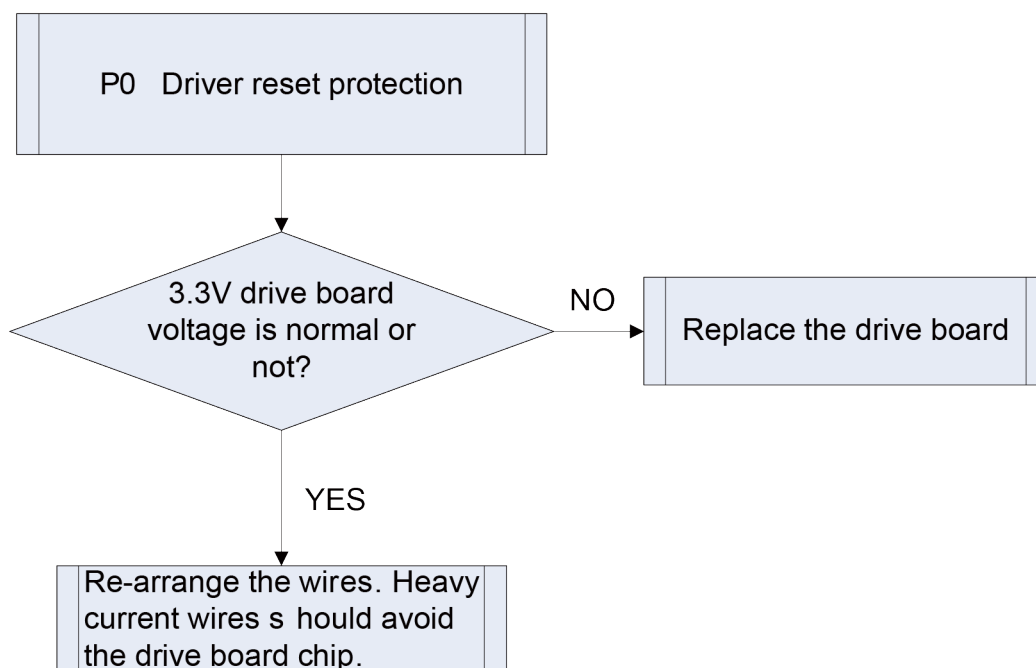
**Error judgment condition and method:**

Drive board chip resets and starts initialization. After the drive board is energized for 5s, it detects that the chip resets again. In this case, it can be judged as drive chip reset protection.

**Possible reason:**

- 3.3V drive chip supply voltage drop.
- TRST lead of JTAG programming is interrupted.

**Troubleshooting:**



**NOTE:**

“A0” refer to this fault handling.

### 3.4.22 “P5” Over-Current Protection

**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

If compressor’s instant current value is higher than the set current protection value, then it can be judged that compressor over-current occurs and system will shut down for protection.

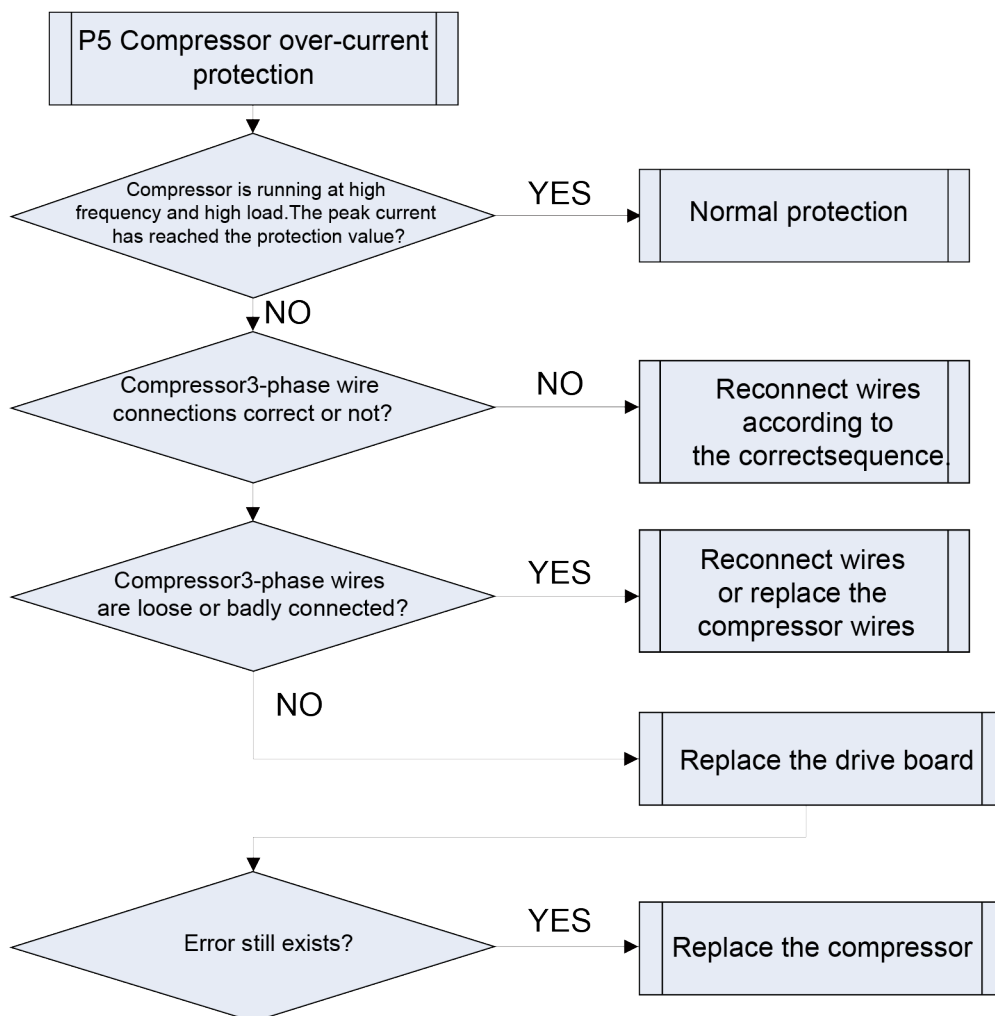
**Possible reason:**

- System load is too much and compressor current is too large.
- Compressor 3-phase wire connection is lack of phase or phase-reversed.
- Compressor phase wire is loose or has bad contact.

■ Drive board current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.

■ Compressor is damaged.

#### Troubleshooting:



#### NOTE:

“UL” refer to this fault handling.

### 3.4.23 “U1” Current detection circuit fault or current sensor fault

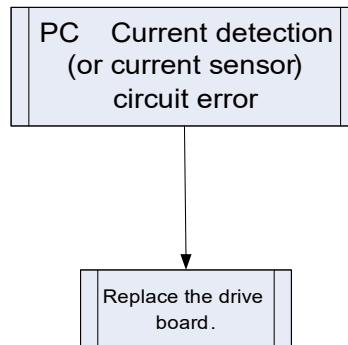
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

After power charging, if offset voltage average is detected to exceed 12.5% of 1.65V in 1s, then it can be judged that current detection (or current sensor) circuit is faulted. System will shut down for protection.

**Possible reason:**

- Current detection (or current sensor) sampling circuit element is abnormal.
- Drive chip compressor current sampling AD terminal is badly welded or short-circuited.

**Troubleshooting:****NOTE:**

“A9” “A8” “P8” refer to this fault handling.

**3.4.24 “H7” Compressor out-of-step protection**

**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

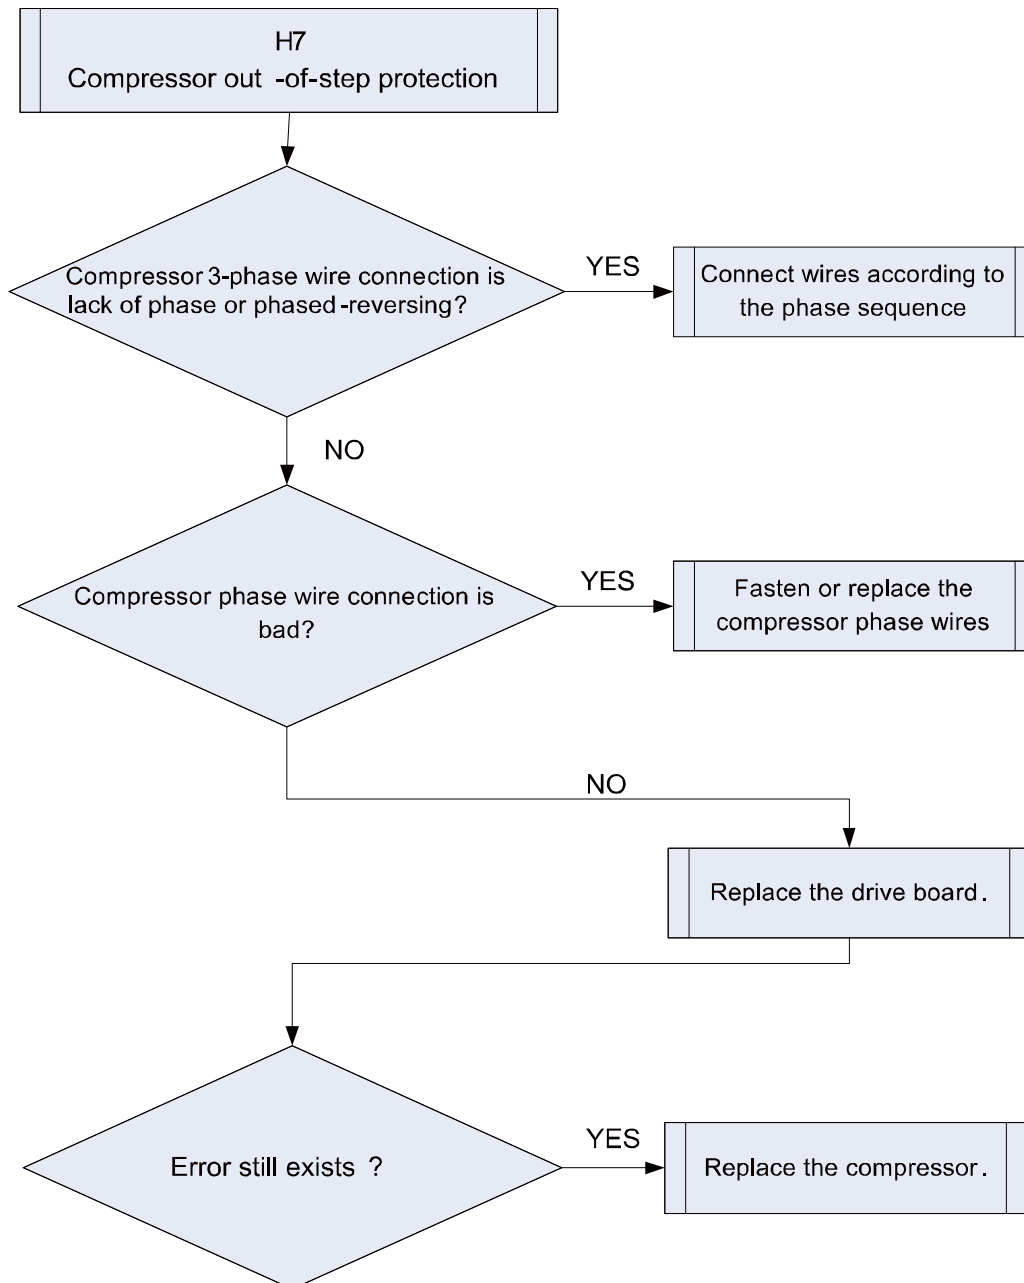
During operation, it can't detect the rotor position and stops output. Or the actual running speed differs too much from the set running speed. In each case, compressor runs out of step and system stops for protection.

**Possible reason:**

- Compressor 3-phase wire connection is lack of phase or phased-reversed.
- Compressor phase wire connection is bad.
- System is blocked, short of refrigerant or compressor oil.
- Drive board IPM module is damaged.
- Drive board compressor current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.
- Compressor is damaged.

**NOTE:**

“Ad” “U2” refer to this fault handling.

**Troubleshooting:****3.4.25 “P7” Module temperature sensor circuit failure**

**Error display:** ODU mainboard LED displayer.

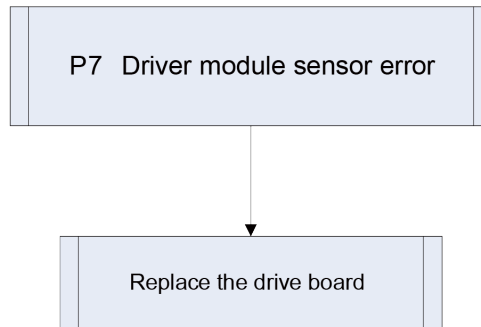
**Error judgment condition and method:**

If IPM or PFC module temperature is lower than the set protection value, then it can be judged that driver module sensor error occurs and system will shut down for protection.

**Possible reason:**

■ Module temperature sensor is short-circuited or broken-circuited.

■ Drive board current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.

**Troubleshooting:****3.4.26 “ee” Drive Memory Chip Error**

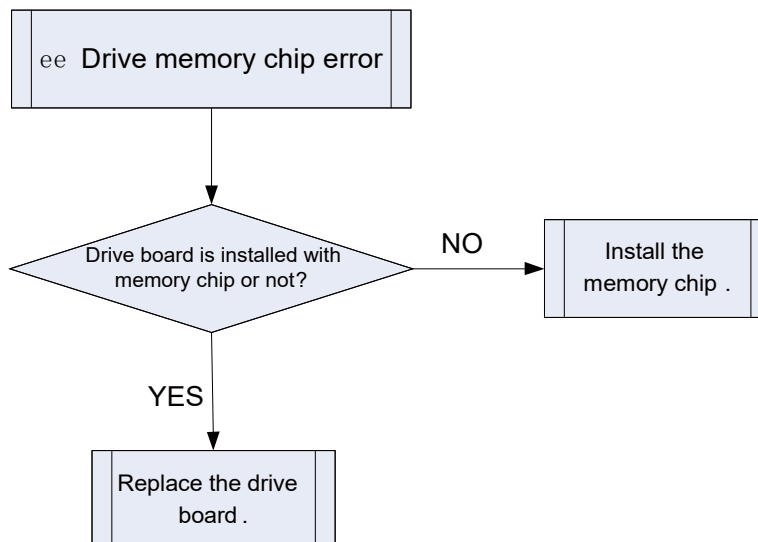
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

If power is connected but the drive board with memory chip cannot detect the memory chip or read the memory chip data correctly, then it can be judged that drive memory chip error exists.

**Possible reason:**

- The drive board that needs memory chip is not installed with the memory chip.
- The lead or connector of memory chip is badly welded or short-circuited.

**Troubleshooting:****3.4.27 “PU” Capacitor charging failure**

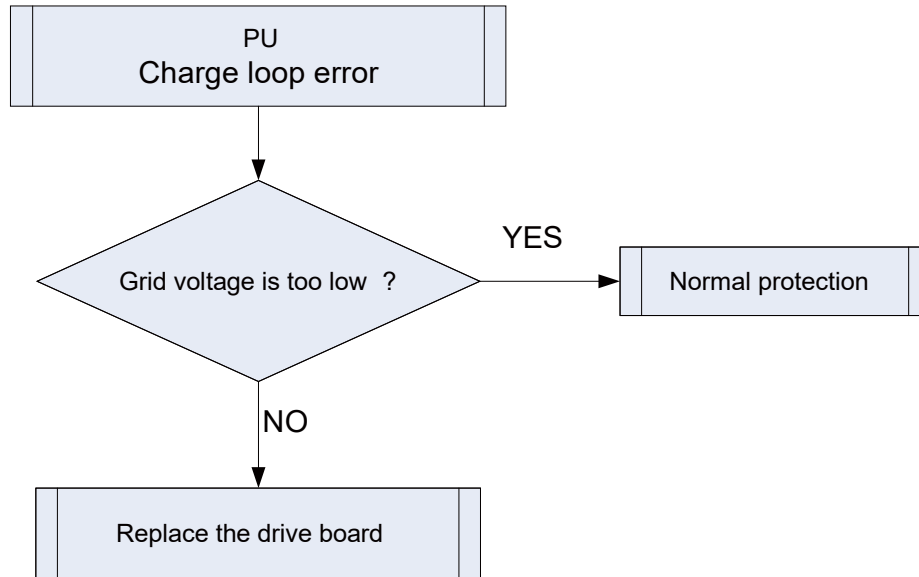
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

When the charge loop starts to get charged and the busbar voltage cannot reach the set value in a certain period of time, then it can be judged that charge loop error exists. System will shut down for protection.

**Possible reason:**

- Voltage of power grid is abnormal. Voltage is too low.
- Drive board charge loop element is abnormal.
- Drive board busbar voltage sampling circuit element is damaged or drive chip busbar voltage sampling AD terminal is abnormal.

**Troubleshooting:****3.4.28 “A1” Outdoor fan IPM module protection**

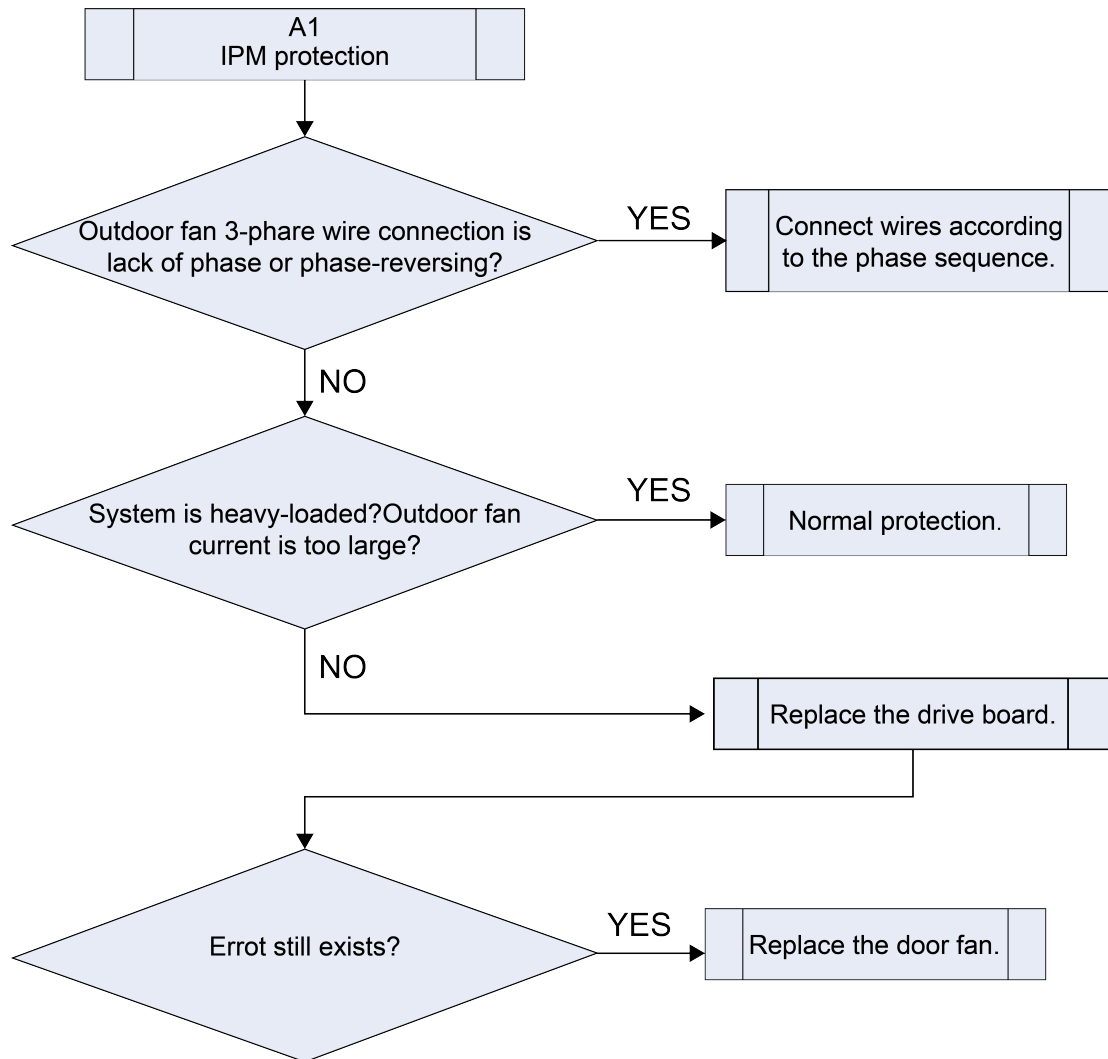
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

When power is connected and drive chip received IPM lead F0 that is of low level, than it is IPM module malfunction. System will shut down for protection.

**Possible reason:**

- Outdoor fan 3-phase wire connection is lack of phase or phase-reversed.
- System is overloaded and outdoor fan current is too large.
- Drive board IPM module is damaged.
- Drive board IPM module's 15V power supply is lower than 13.5V.
- Drive board 6-line PWM signal and the corresponding element are abnormal.
- Drive board outdoor fan current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.
- Compressor is damaged.

**Troubleshooting:****3.4.29 “AC” Outdoor fan startup failure**

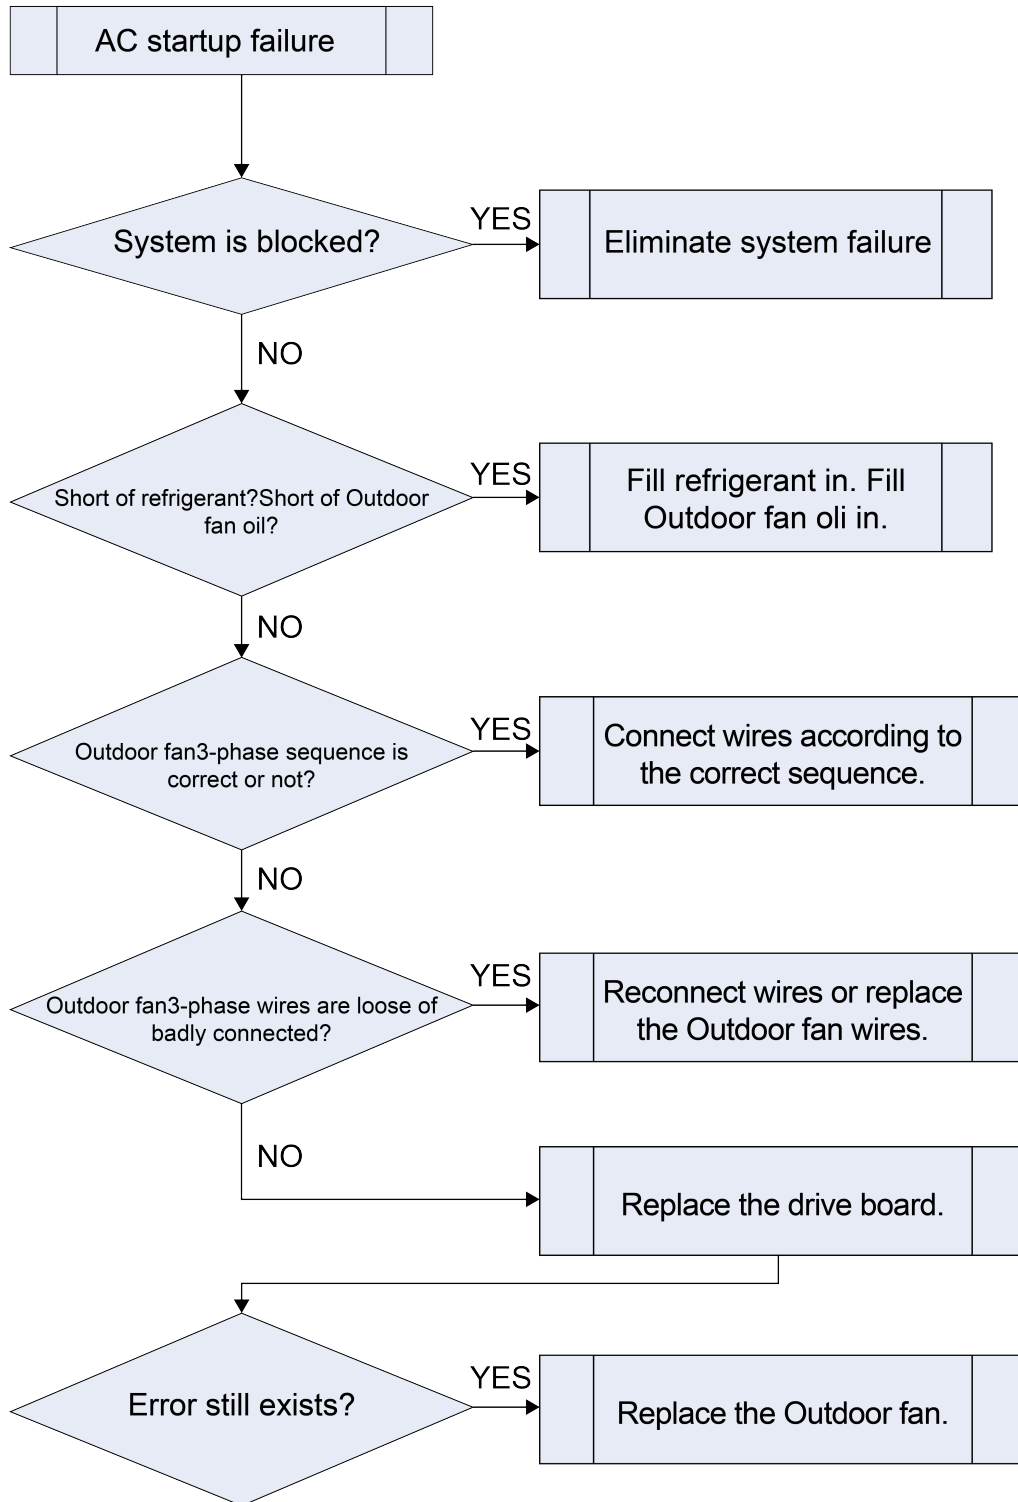
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

Check the error code on nixie tube of ODU main control board. If PJ is displayed, it indicates inverter compressor startup failure.

**Possible reason:**

- Poor contact of outdoor fan UVW wire.
- Outdoor fan is broken.
- Outdoor fan drive board is broken.

**Troubleshooting:**

### 3.4.30 “UL” Outdoor fan overcurrent protection

**Error display:** ODU mainboard LED displayer.

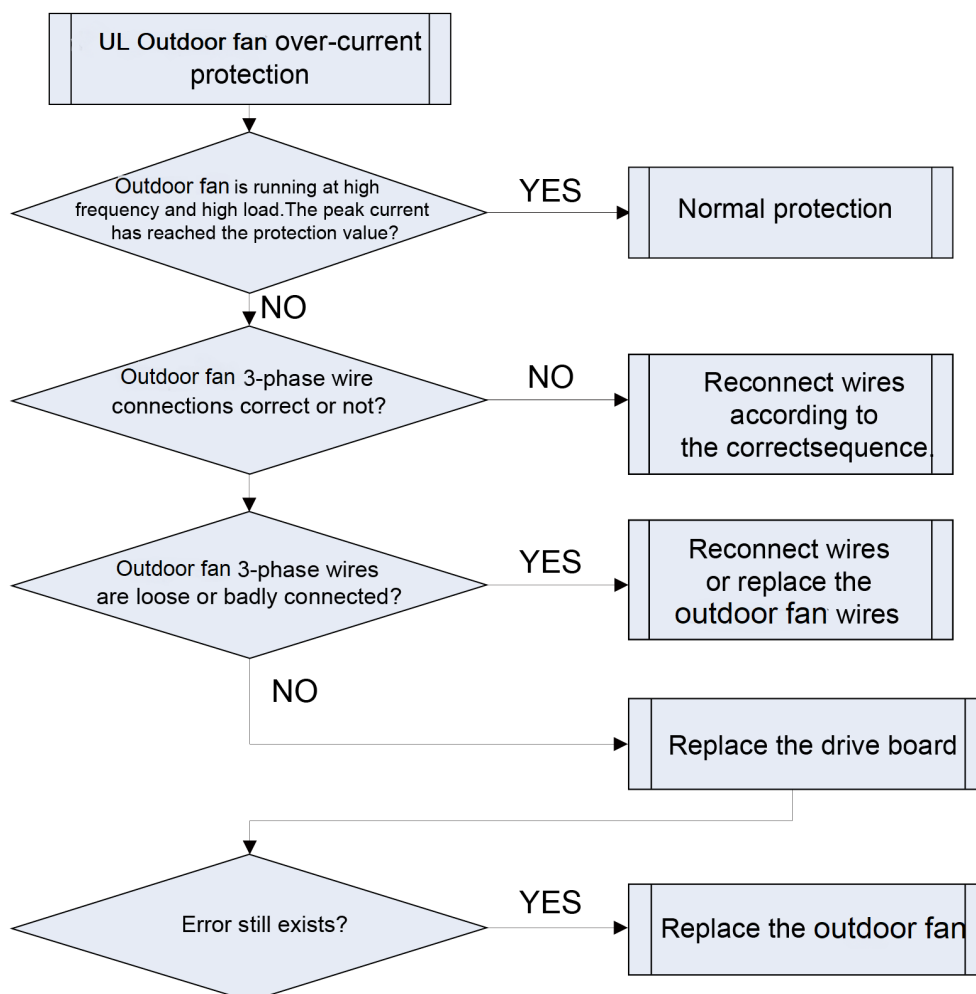
**Error judgment condition and method:**

If outdoor fan's instant current value is higher than the set current protection value, then it can be judged that outdoor fan over-current occurs and system will shut down for protection.

**Possible reason:**

- System load is too much and outdoor fan current is too large.
- Outdoor fan 3-phase wire connection is lack of phase or phase-reversed.
- Outdoor fan phase wire is loose or has bad contact.
- Drive board current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.
- Outdoor fan is damaged.

**Troubleshooting:**



### 3.4.31 “AE” Outdoor fan current detection circuit error

**Error display:** ODU mainboard LED displayer.

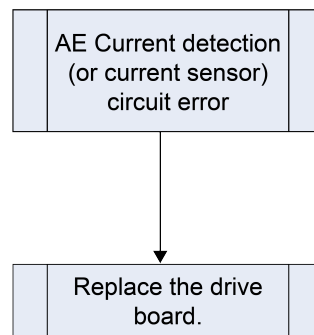
**Error judgment condition and method:**

After power charging, if offset voltage average is detected to exceed 12.5% of 1.65V in 1s, then it can be judged that current detection (or current sensor) circuit is faulted. System will shut down for protection.

**Possible reason:**

- Current detection (or current sensor) sampling circuit element is abnormal.
- Drive chip compressor current sampling AD terminal is badly welded or short-circuited.

**Troubleshooting:**



### 3.4.32 “AJ” Outdoor fan out-of-step protection

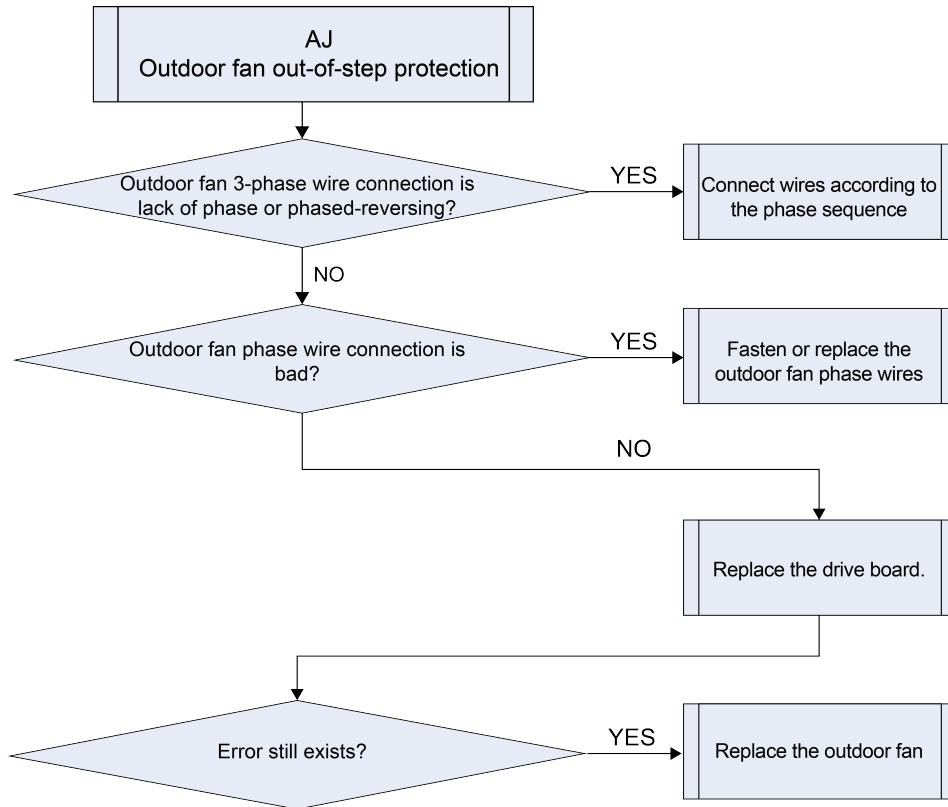
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

During operation, it can't detect the rotor position and stops output. Or the actual running speed differs too much from the set running speed. In each case, outdoor fan runs out of step and system stops for protection.

**Possible reason:**

- Outdoor fan 3-phase wire connection is lack of phase or phased-reversed.
- Outdoor fan phase wire connection is bad.
- System is blocked, short of refrigerant or compressor oil.
- Drive board IPM module is damaged.
- Drive board outdoor fan current sampling circuit element is damaged or drive chip current sampling AD terminal is abnormal.
- Outdoor fan is damaged.

**Troubleshooting:****3.4.33 "C8" ODU Drive jumper cap error**

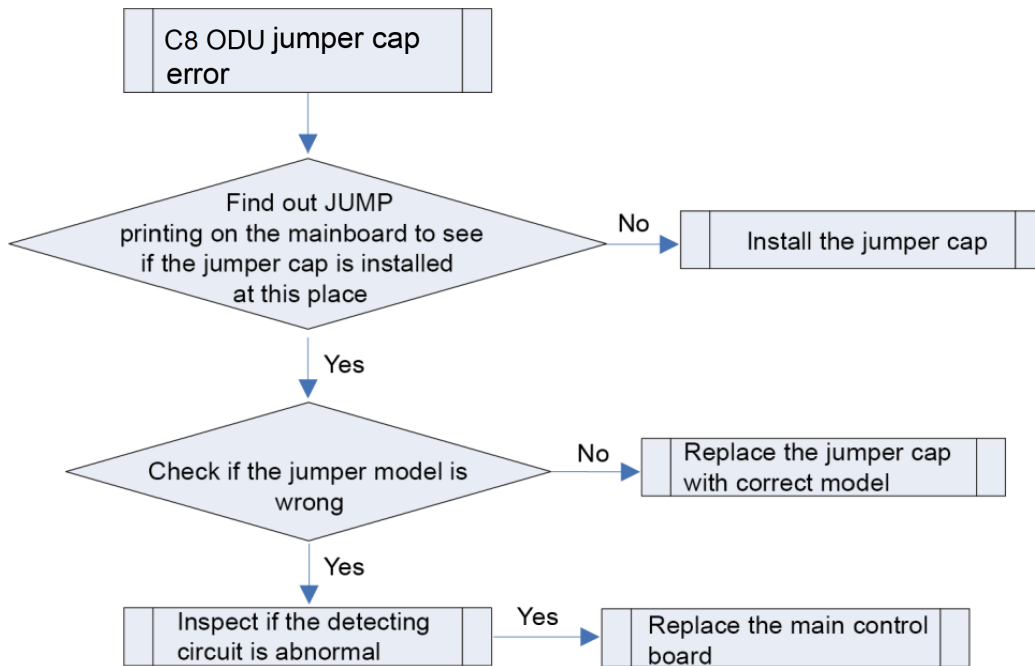
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

If jumper cap model doesn't match with mainboard, report the error.

**Possible reason:**

- Jumper cap is not installed.
- Jumper cap model is wrong.
- Detecting circuit is abnormal.

**Troubleshooting:****NOTE:**

"C4" refer to this fault handling.

**3.4.34 "E6" Communication Error**

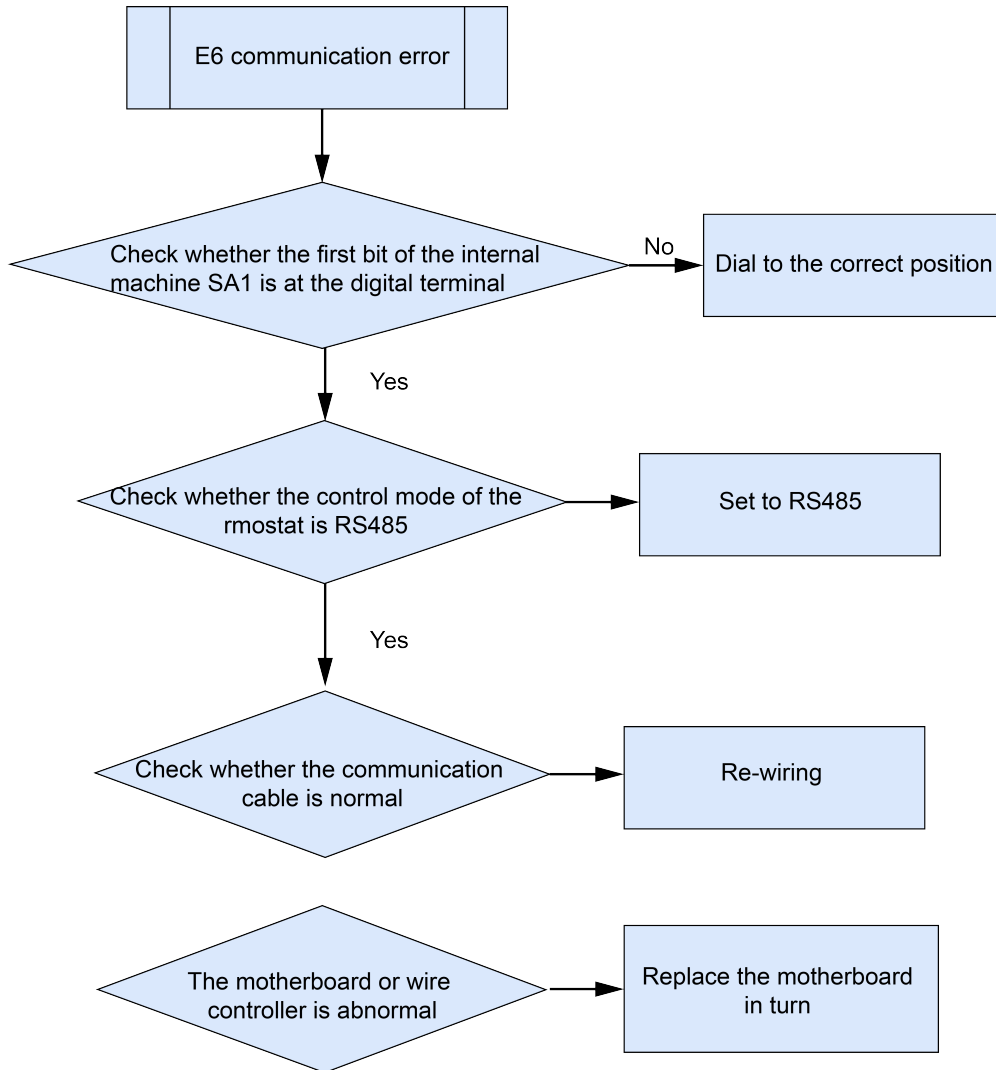
**Error display:** ODU mainboard, and IDU wired controller will display E6.

**Error judgment condition and method:**

If no communication between ODU and IDU in continuously 60s, this error will be reported.

**Possible reason:**

- Communication wire is connected improperly or loose.
- Communication wire is cut off.
- Communication wire is in poor connection.
- Controller is abnormal.
- Internal and external machine dialing error.
- Thermostat setting parameter error.

**Troubleshooting:****3.4.35FE Refrigerant sensor fault**

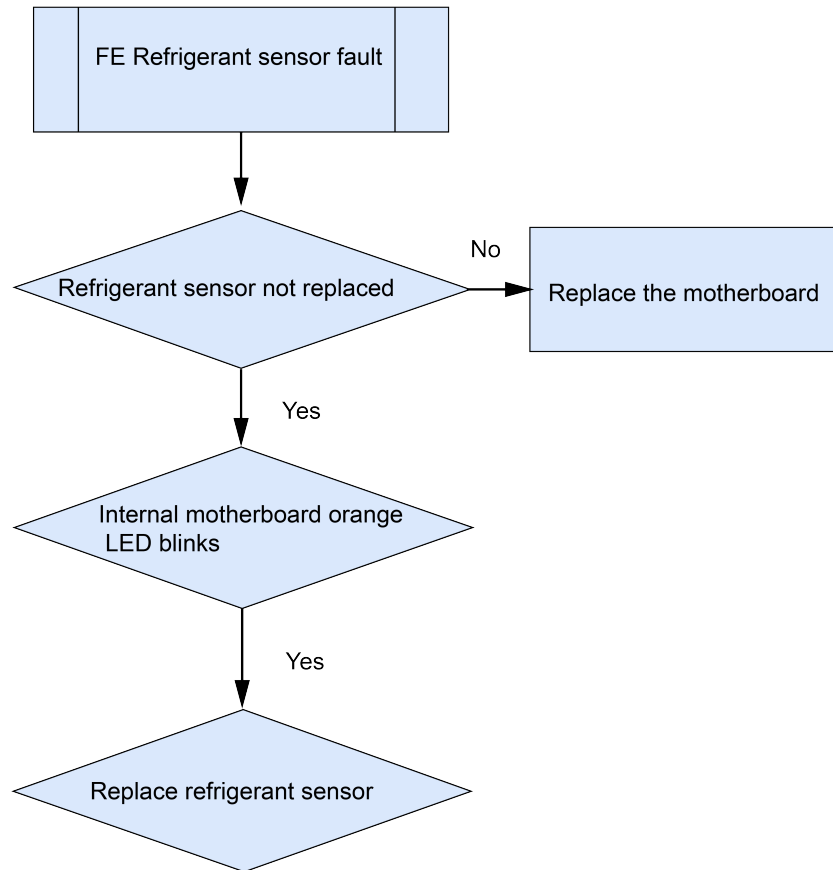
**Error display:** ODU mainboard, and IDU wired controller will display FE.

**Error judgment condition and method:**

If the motherboard receives an error signal from the refrigerant sensor or fails to receive data from the refrigerant sensor for 5 seconds, a fault is reported.

**Possible reason:**

- Refrigerant sensor fault.
- Refrigerant sensor communication failure.
- Motherboard communication circuit is abnormal.

**Troubleshooting:****3.4.36 "CJ" IDU****Jumper Cap Error**

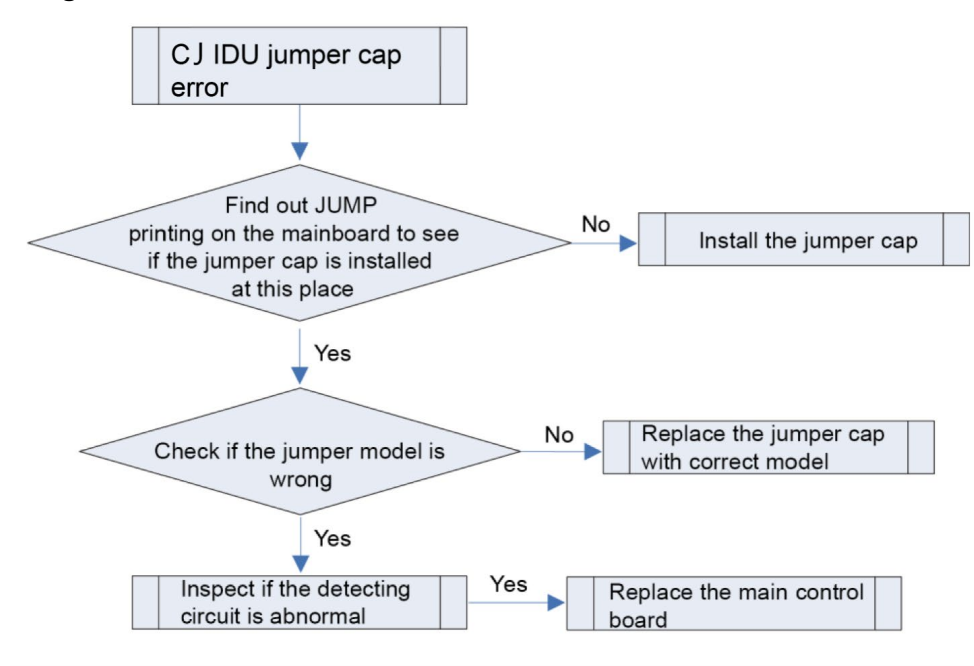
**Error display:** IDU wired controller will display CJ.

**Error judgment condition and method:**

If jumper cap model doesn't match with mainboard, this error will be reported.

**Possible reason:**

- Jumper cap is not installed.
- Jumper cap model is wrong.
- Detecting circuit is abnormal.

**Troubleshooting:**

### 3.4.37 "C1" indoor environment temperature sensing bag failure \ "C2" indoor evaporator temperature sensing bag failure, "CA" evaporator inlet tube temperature sensing bag failure "Cb" evaporator inlet tube temperature sensing bag failure \ "FJ" outlet temperature sensing bag failure

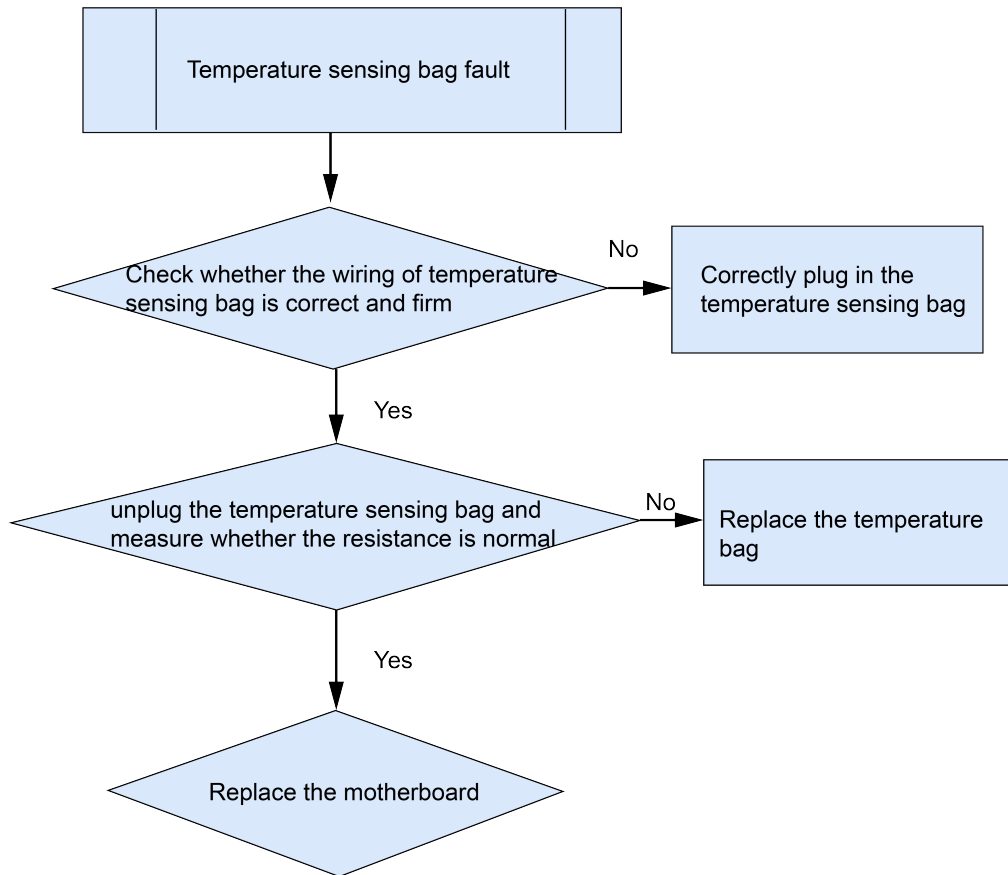
**Error display:** ODU mainboard and IDU wired controller will display C1,C2,CA,Cb,FJ.

**Error judgment condition and method:**

- ① Sample the AD value of temperature sensor through temperature sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 5 seconds continuously, report the error.
- ② Compare the discharge temperature after the compressor has just started running and after 10 minutes of operation, if the temperature is not changed, report the error.

**Possible reason:**

- Poor contact between temperature sensor and terminal in mainboard interface.
- Temperature sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:****3.4.38 "A6" Fan communication failure (fan drive)**

**Error display:** External motherboard LED display.

**Error judgment condition and method:**

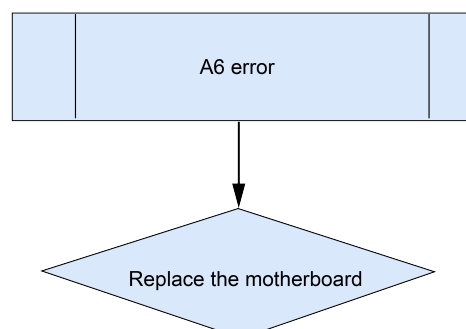
If the communication between the driver and the main control is interrupted for 30s, it is judged as a communication fault.

**Possible reason:**

■ Damaged motherboard.

Troubleshooting:

Replace the motherboard.



### 3.4.39 “U2” Phase miss

**Error display:** External motherboard LED display.

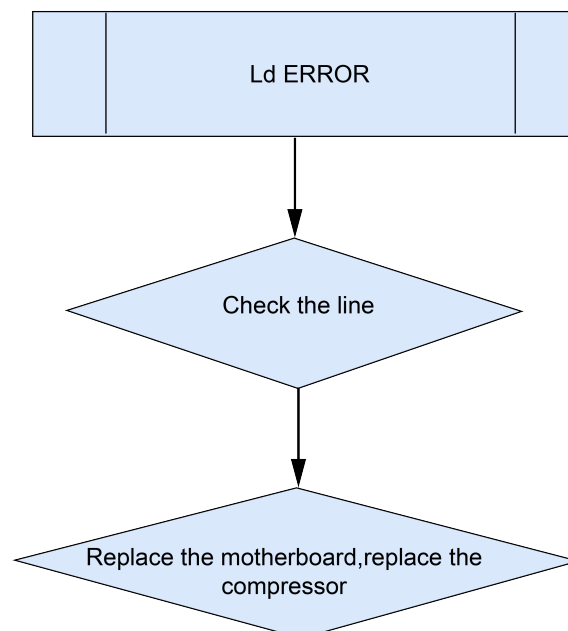
**Error judgment condition and method:**

If any one or more phases are not normally connected and the compressor runs in an abnormal state or does not operate, it is judged that the phase is missing fault.

**Possible reason:**

- The compressor line is not connected or the wrong phase is connected.
- Damaged motherboard.
- Compressor damage.

**Troubleshooting:**



### 3.4.40 “E2” Indoor Anti-freezing Protection

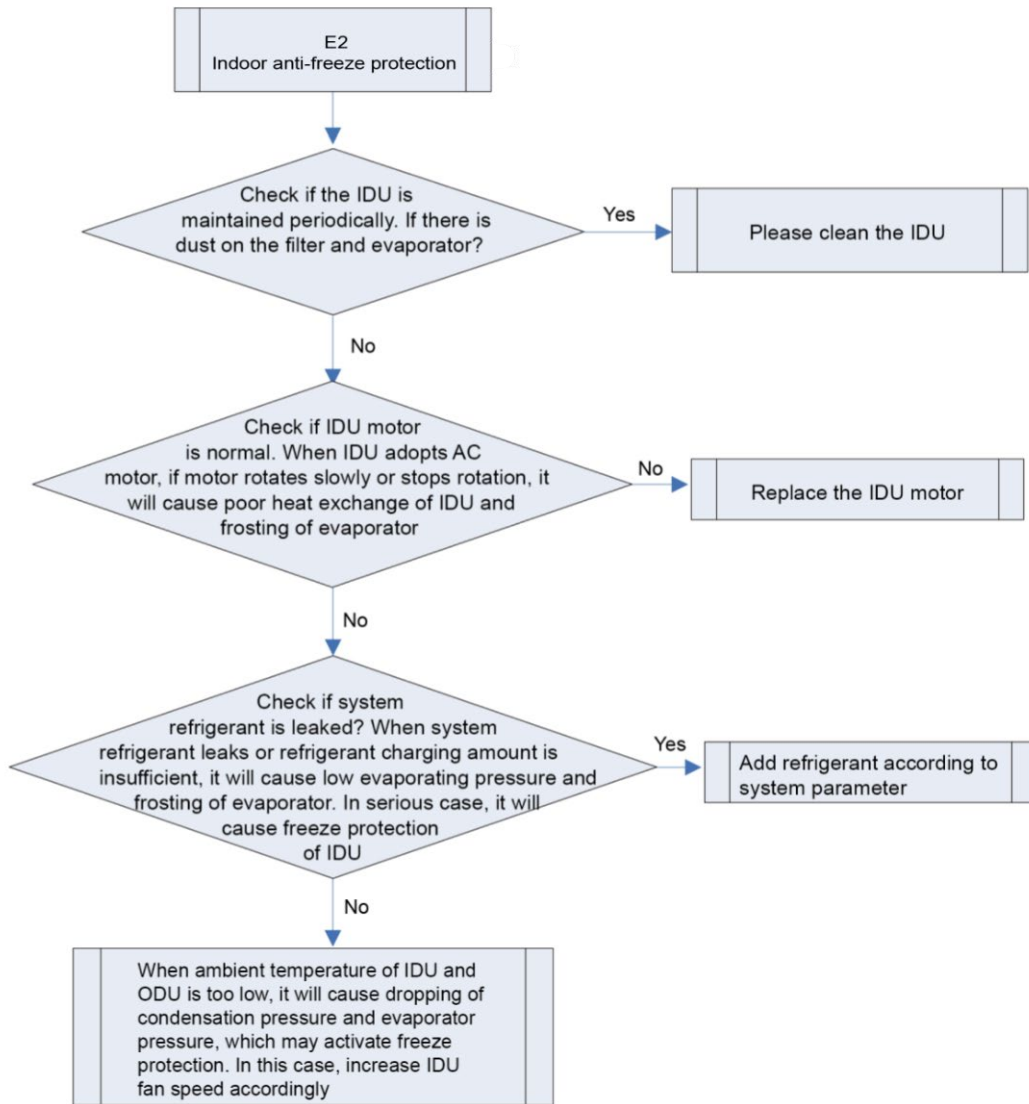
**Error display:** ODU mainboard will display E2.

**Error judgment condition and method:**

Check IDU evaporator pipe temperature. When evaporator pipe temperature is too low, freeze protection will be activated to prevent freezing damage of evaporator.

**Possible reason:**

- IDU filter and evaporator are dirty.
- IDU motor is blocked.
- Refrigerant amount is insufficient.
- Ambient temperature of IDU and ODU is too low.

**Troubleshooting:****3.4.41 “EA” Internal refrigerant leakage protection**

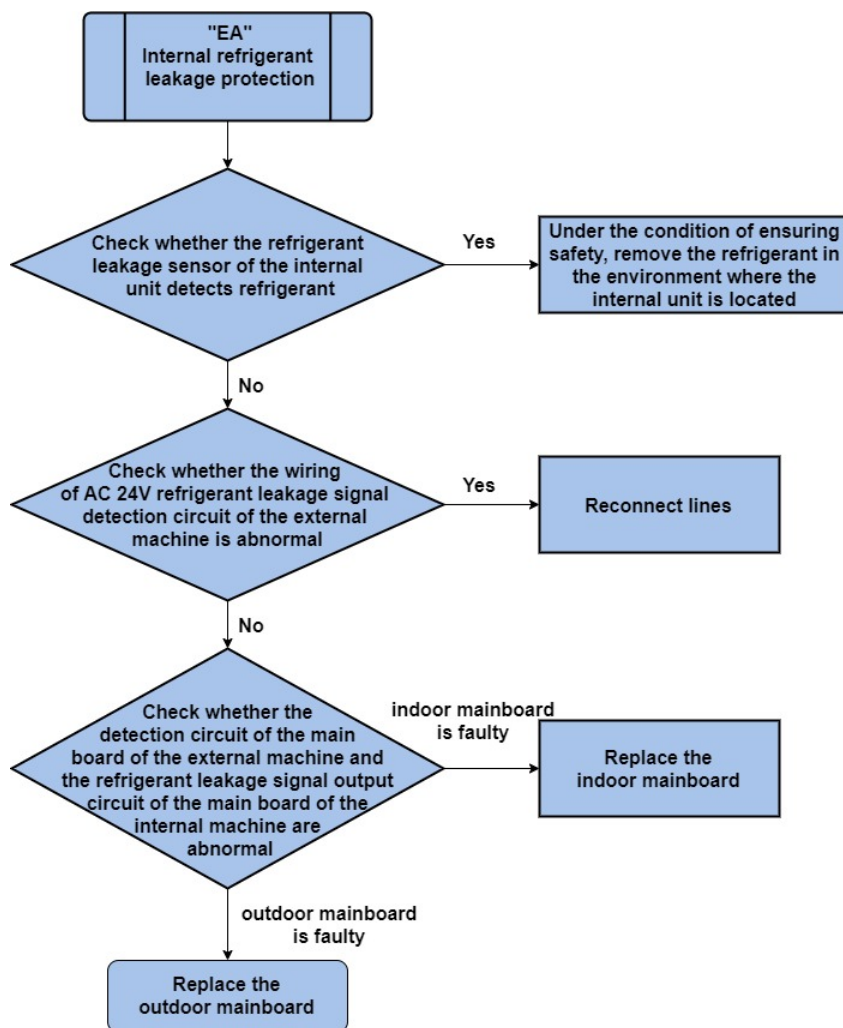
**Error display:** ODU mainboard will display EA.

**Error judgment condition and method:**

ODU receives internal refrigerant leakage signal. In the 485 communication mode, if IDU detects refrigerant leakage, it will inform ODU through 485 communication. In addition, IDU can also inform ODU through 24V signal.

**Possible reason:**

- Internal refrigerant leakage sensor detects refrigerant leakage.
- ODU mainboard detects refrigerant leakage signal.

**Troubleshooting:**

### 3.4.42 “b2” Overcooler Gaseous Inlet Tube Temperature Sensing Error、 “b3” Overcooler Gaseous Outlet Tube Temperature Sensing Error

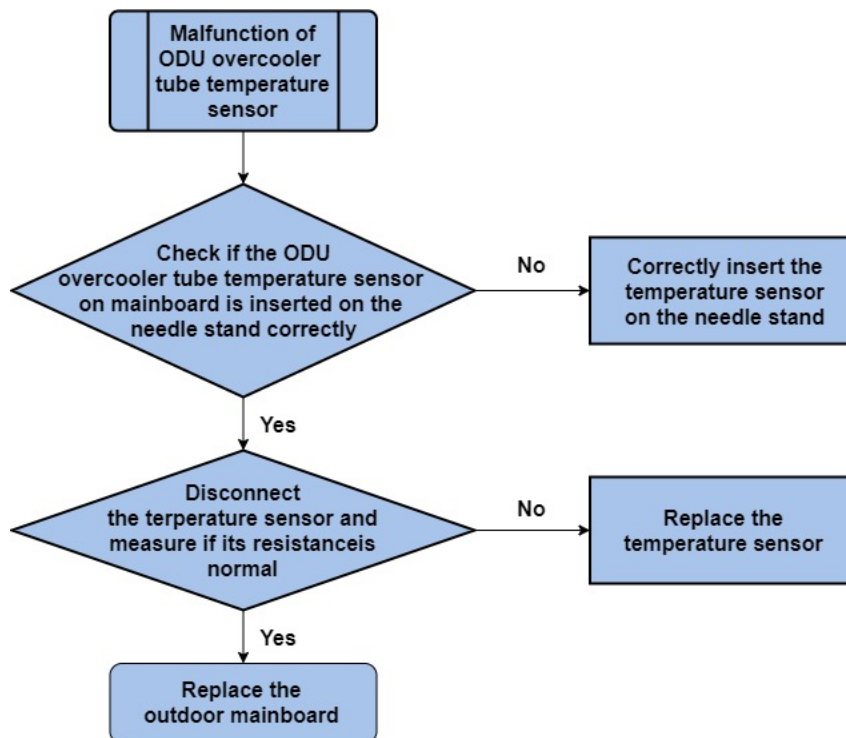
**Error display:** ODU mainboard LED displayer.

**Error judgment condition and method:**

Sample the AD value of temperature sensor through temperature sensor detecting circuit and judge the range of AD value, If the sampling AD value exceeds upper limit and lower limit in 5 seconds continuously, report the error.

**Possible reason:**

- Poor contact between temperature sensor and terminal in mainboard interface.
- Temperature sensor is abnormal.
- Detecting circuit is abnormal.

**Troubleshooting:****3.4.43 “H2” IPM Low Temperature Protection**

Error display: ODU mainboard will display H2.

Error judgment condition and method:

When the system is in heating mode and the compressor has run over 15min, if IPM temperature is lower than outdoor temperature 4°C, this protection will be reported.

Possible reason:

- Outdoor ambient temperature sensor is abnormal.
- ODU IPM temperature detection is abnormal.
- The temperature of the refrigerant heat dissipation pipeline of the outdoor mainboard is too low due to the blockage of the pipeline.

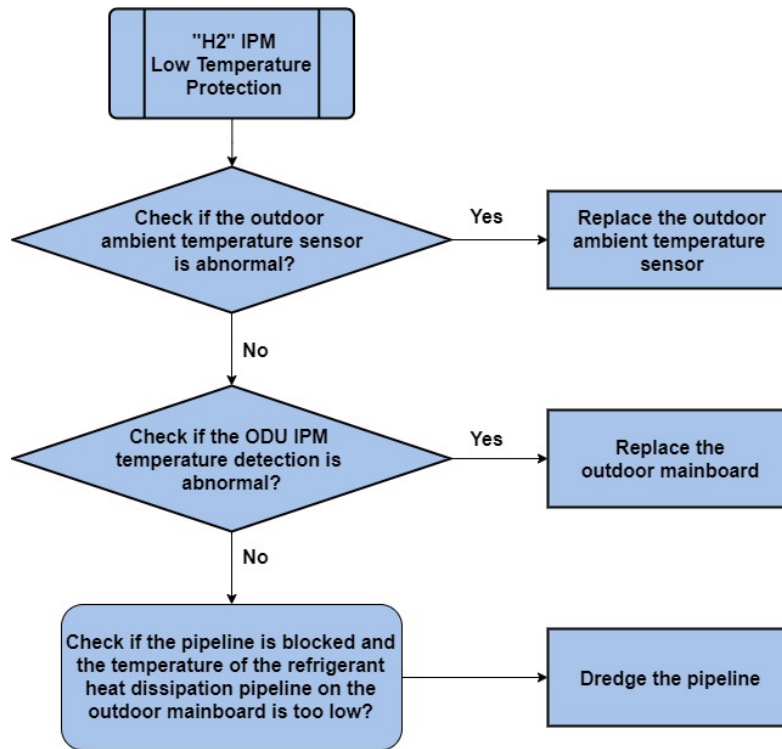
**Troubleshooting:**

**3.4.44 “E0” Indoor Fan Error**

**Error display:** IDU wired controller and IDU receiver light board will display E0.

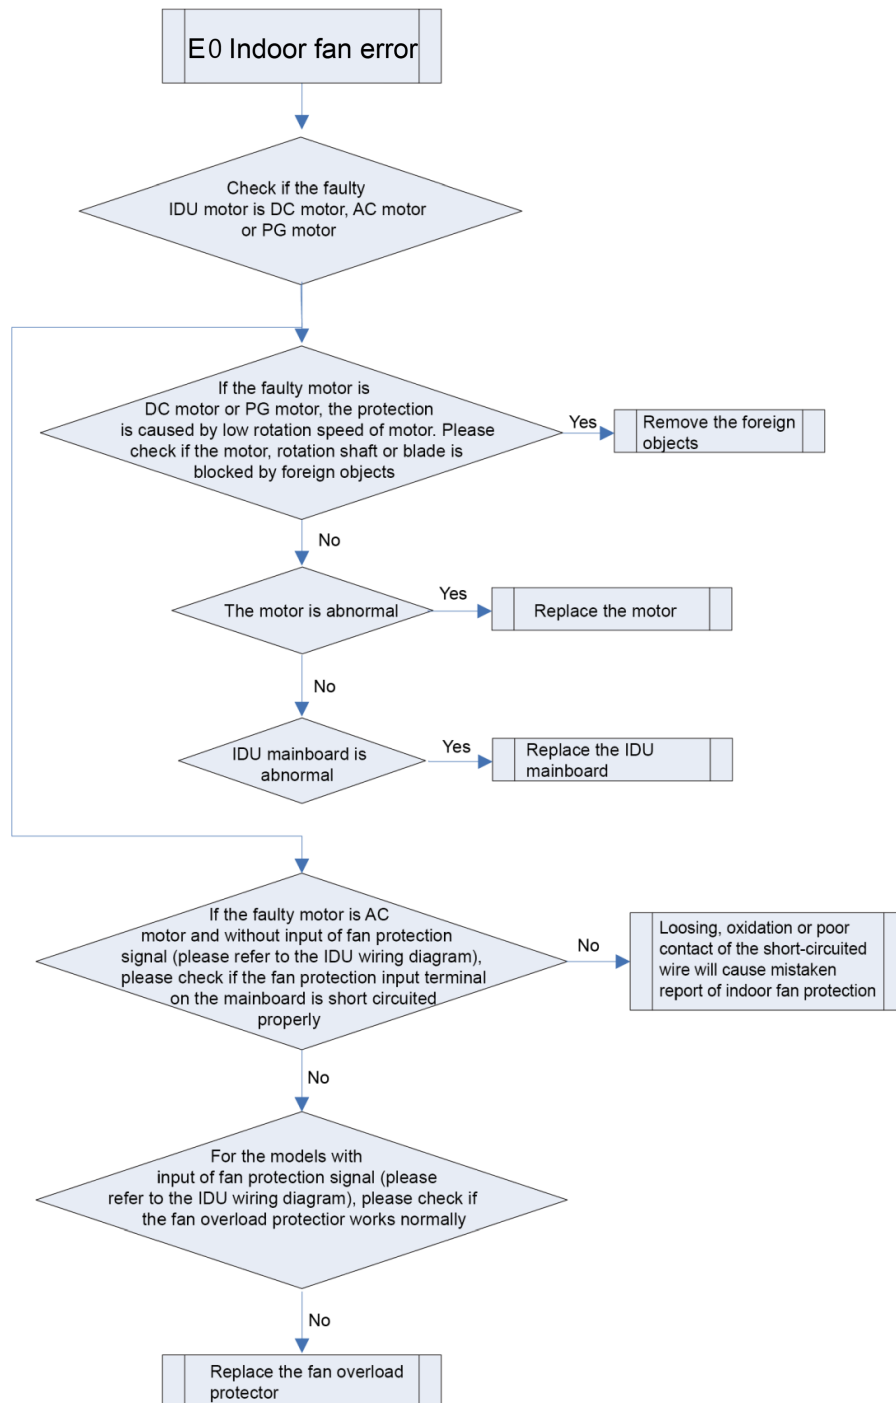
**Error judgment condition and method:**

Check if the rotation speed of IDU is too slow, or it stops rotation, or protection signal of outdoor fan is transferred. If yes, it is judged that indoor fan protection occurs.

**Possible reason:**

■ Motor stops operation or it is blocked.

■ IDU mainboard is abnormal.

**Troubleshooting:**

### 3.5 Failures Not Caused by Errors

(1) If your air conditioner fails to function normally, please first check the following items before maintenance:

Problem	Cause	Corrective Measure
The air conditioner can't run.	If you turn off the unit and then immediately turn it on, in order to protect the compressor and avoid system overload, compressor will delay running for 3min.	Please wait for a while.
	Wire connection is wrong.	Connect wires according to the wiring diagram.
	Fuse or circuit breaker is broken.	Replace the fuse or switch on the circuit breaker.
	Power failure.	Restart after power is resumed.
	Power plug is loose.	Re-insert the power plug.
	Thermostat has low battery.	Replace the batteries.
Bad cooling or heating effect.	Air inlet and outlet of the units have been blocked.	Clear the obstacles and keep the room for the units well ventilated.
	Improper temperature setting	Reset a proper temperature.
	Fan speed is too low.	Reset a proper fan speed.
	Air flow direction is not right.	Change the direction of air louvers.
	Doors or windows are open.	Close them.
	Exposed under direct sunshine.	Put on curtains or louvers in front of the windows.
	Too many heat sources in the room.	Remove unnecessary heat sources.
	Filter is blocked or dirty.	Send for a professional to clean the filter.
Air inlets or outlets of the units are blocked.	Clear away obstacles that are blocking the air inlets and outlets of the units.	

(2) The following situations are not operation failures.

Problem	Time of Occurrence	Cause
Mist comes from the air conditioner.	During operation.	If the unit is running under high humidity, the wet air in the room will be quickly cooled down.
The air conditioner generates some noise.	System switches to heating mode after defrosting.	Defrosting process will generate some water, which will turn to water vapor.
	The air conditioner is buzzing at the beginning of operation.	Thermostat will be buzzing when it starts working. The noise will become weak 1min later.
Dust comes from the air conditioner.	When the unit is turned on, it purrs.	When the system is just started, the refrigerant is not stable. About 30s later, the purr of the unit becomes low.
	About 20s after the unit first enables the heating mode or there is refrigerant brushing sound when defrosting under heating.	It's the sound of 4-way valve switching direction. The sound will disappear after the valve changes its direction.
	There is hissing sound when the unit is started or stopped and a slight hissing sound during and after operation.	It's the sound of gaseous refrigerant that stops flowing and the sound of drainage system.
	There is a sound of crunching during and after operation.	Because of temperature change, front panel and other components may be swelled up and cause abrasion sound.
	There is a hissing sound when the unit is turned on or suddenly stopped during operation or after defrosting.	Because refrigerant suddenly stops flowing or changes the flow direction.
	The unit starts operation after being unused for a long time.	Dust inside the units come out together with the air.
The air conditioner generates some smell.	During operation.	The room smell or the smell of cigarette comes out through the units.



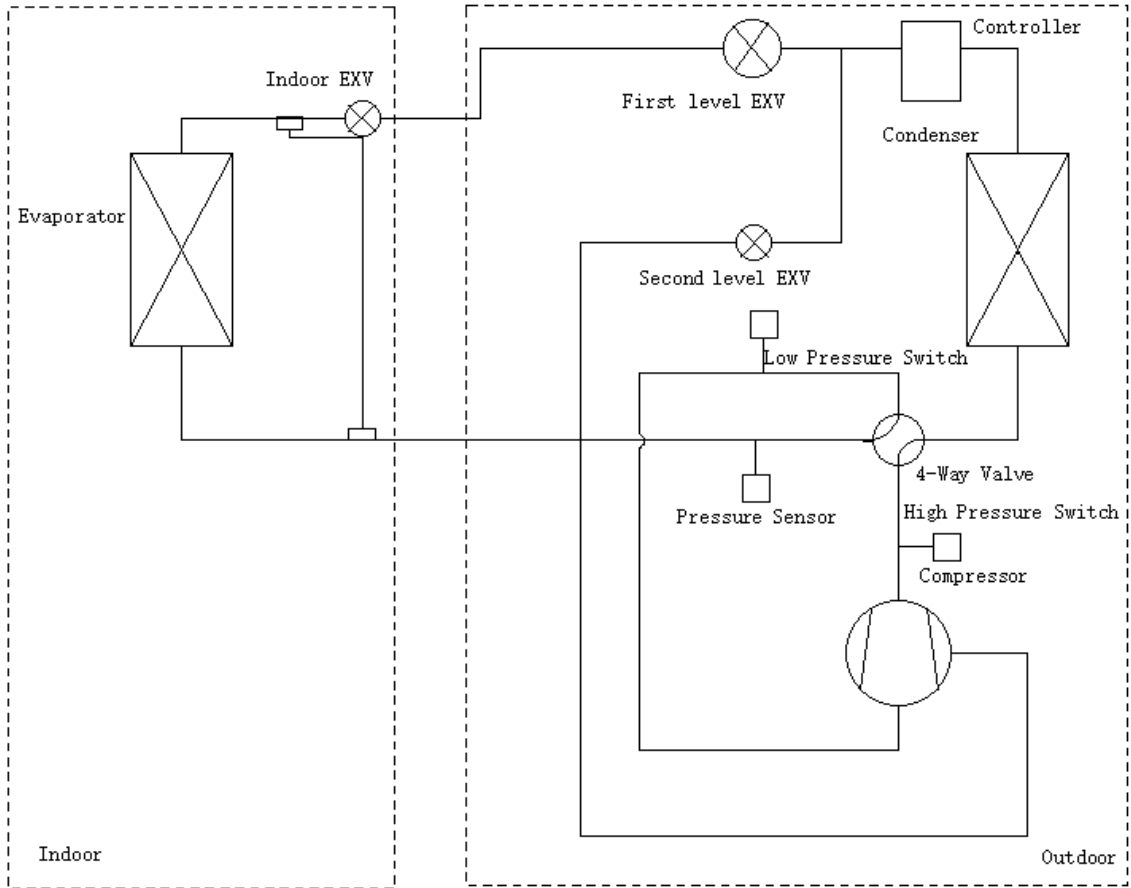
**NOTICE:**

Check the above items and adopt the corresponding corrective measures. If the air conditioner continues to function poorly, please stop the air conditioner immediately and contact Gree's authorized local service center. Ask our professional service staff to check and repair the unit.

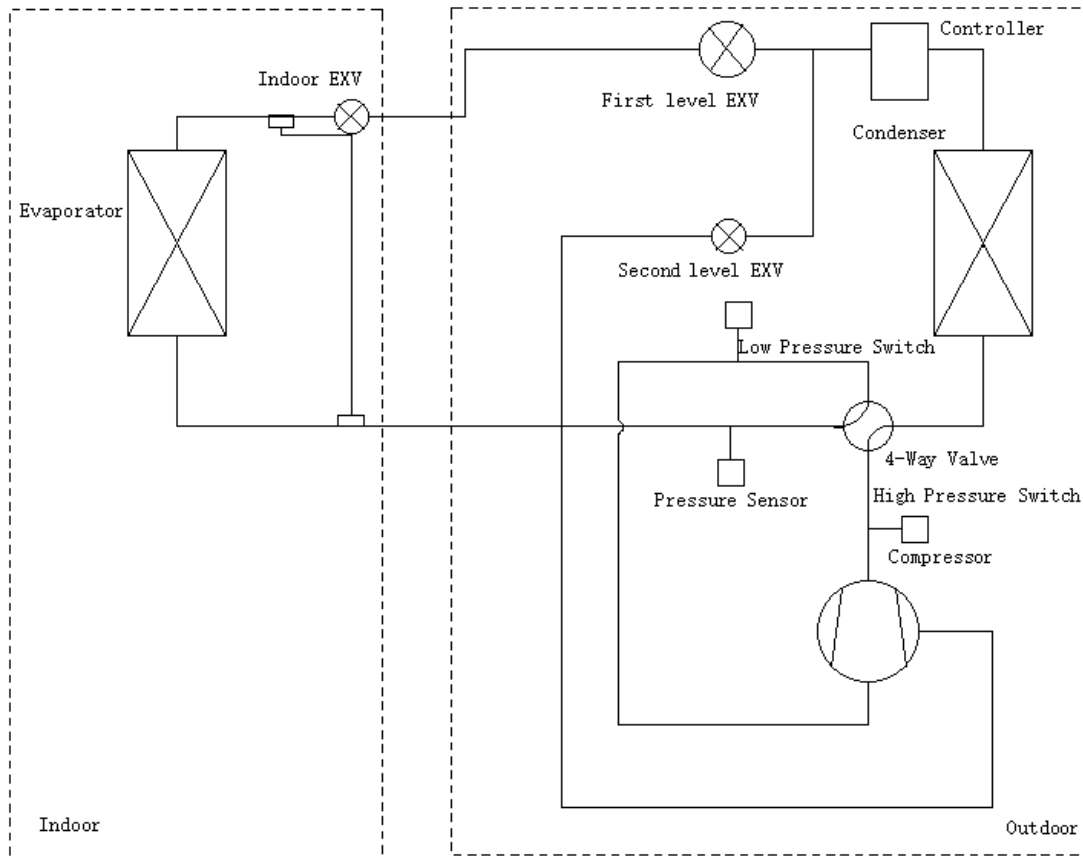
## 4 Maintenance

### 4.1 System Diagram

Model: FXU24HP230V1R32AO, FXU36HP230V1R32AO



Model:FXU48HP230V1R32AO FXU60HP230V1R32AO



## 4.2 Connection Pipe Vacuum Pumping



### NOTICE

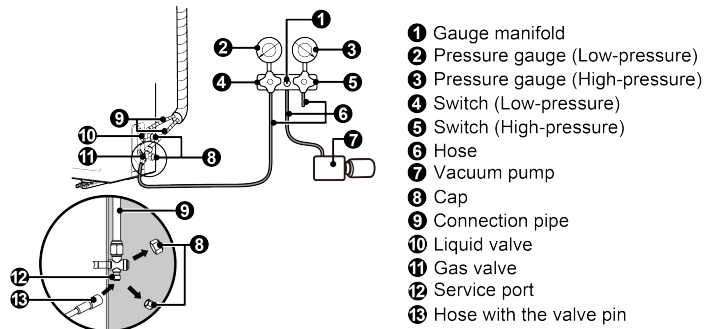
- ① Make sure the outlet of vacuum pump is away from fire source and is well-ventilated.
- ② Before vacuum pumping, make sure the unit cut-off valves are closed.

- (1) Remove the caps of the liquid valve, gas valve and also the service port.
- (2) meanwhile the gas and liquid valves should be kept closed in case of refrigerant leak.
- (3) Connect the hose used for evacuation to the vacuum pump.
- (4) Open the switch at the lower pressure side of the manifold valve assembly and start the vacuum pump. Meanwhile, the switch at the high pressure side of the manifold valve assembly should be kept closed, otherwise evacuation would fail.
- (5) The evacuation duration depends on the unit's capacity, generally.

Model	Time(min)
FXU24HP230V1R32AO FXU36HP230V1R32AO	30
FXU48HP230V1R32AO FXU60HP230V1R32AO	45

And verify if the pressure gauge at the low pressure side of the manifold valve assembly reads -0.1Mpa (-750mmHg), if not, it indicates there is leak somewhere. Then, close the switch fully and then stop the vacuum pump.

- (6) Wait for 10min to see if the system pressure can remain unchanged. During this time, the reading of the pressure gauge at the low pressure side can not be larger than 0.005MPa.
- (7) Slightly open the liquid valve and let some refrigerant go to the connection pipe to balance the pressure inside and outside of the connection pipe, so that air will not come into the connection pipe when removing the hose. Notice that the gas and liquid valve can be opened fully only after the manifold valve assembly is removed.
- (8) Place back the caps of the liquid valve, gas valve and also the service port.



**NOTICE:**

For large-size units, there are maintenance ports for liquid valve and gas valve. During evacuation, you may connect the two hoses of the branch valve assembly to the maintenance ports to speed up the evacuation.

## 4.3 Refrigerant Charging

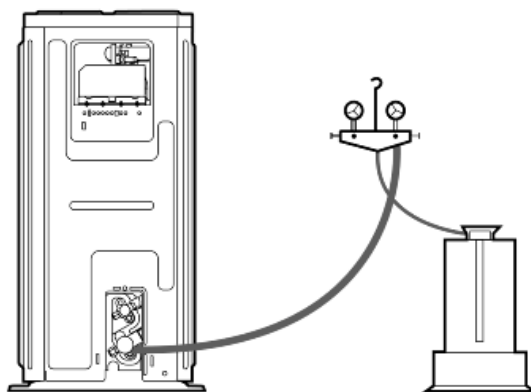
### Pre-charging

Step 1: Connect the high pressure gauge line to the valve of liquid pipe and connect the low pressure gauge line to the valve of gas pipe. Connect the middle gauge line to the vacuum pump. Power on the vacuum pump and perform vacuum drying.

Step 2: After vacuum drying, close the high and low pressure gauge valves. Then remove the middle gauge line from the connector of vacuum pump. Then connect to the refrigerant tank.

Step 3: Loosen the middle gauge line from the connector of pressure gauge to a proper extent and slightly open the valve of refrigerant tank. Evacuate the middle gauge line. Then tighten up the connector again and completely open the valve of refrigerant tank at the same time.

Step 4: Keep the refrigerant tank erect and put it on an electronic scale. Record the current weight as  $m_1$ .



Step 5: Open the high pressure gauge valve (Keep the low pressure gauge valve closed). Then charge refrigerant into the system. Meanwhile, record the weight of refrigerant tank as  $m_2$ .

Step 6:  $m_1 - m_2 = m$ . If  $m$  equals to the required charging quantity  $M$ , close the valve of refrigerant tank at once. Then move to step 8.

Step 7: If you can't continue to charge refrigerant into the system and the quantity of charged refrigerant is less than the required charging quantity, then record the current quantity of charged refrigerant:

$$m = m_1 - m_2$$

$$m' = M - m$$

The remaining charging quantity is:  $m' = M - m$ .

Step 8: After charging, remove the pressure gauge.

Refrigerant charging when unit is turned on:

Step 1: Close the valve of refrigerant tank. First remove the pressure gauge lines and connect the outdoor unit to the indoor unit. Then reconnect the pressure gauge lines. Connect the low pressure gauge line to the other joint of gas valve and connect the high pressure gauge line to the liquid valve. Connect the middle gauge line to

the vacuum pump. Power on the vacuum pump and perform vacuum drying.

Step 2: After vacuum drying, close the high and low pressure gauge valves. Then remove the middle gauge line from the connector of vacuum pump. Then connect to the refrigerant tank.

Step 3: Loosen the middle gauge line from the connector of pressure gauge to a proper extent and slightly open the valve of refrigerant tank. Evacuate the middle gauge line. Then tighten up the connector again and completely open the valve of refrigerant tank at the same time.

Step 4: Turn on the air conditioner and let it run for a while.

Step 5: Open the low pressure gauge valve (Keep the high pressure gauge valve closed). Then charge in the remaining charging quantity m`.

Step 6: After all required refrigerant is charged in, close the valve of refrigerant tank.

Step 7: Remove the pressure gauge to finish the refrigerant charging work.

Procedure of refrigerant charging.

Following is the supplementary requirement for refrigerant charging on the basis of normal procedure:

- 1) Make sure that when charging refrigerant into the system, no other types of refrigerant will be mixed.  
The pipeline for refrigerant charging should be as short as possible to reduce the amount of refrigerant left in it.
- 2) The refrigerant tank should stand erect.
- 3) Make sure the refrigerating system is already grounded before refrigerant charging.
- 4) When charging is completed (or not yet completed), stick a label on the system.
- 5) Before re-charging refrigerant into the system, use oxygen-free nitrogen to perform pressure test. When charging is completed, perform leak test before trial running. Before leaving the workplace, perform a leak test again.

## 4.4 Maintenance of Major Components

### 4.4.1 Replacement of thermostat

Please refer to the instruction manual of thermostat WK-010WB1.

### 4.4.2 How to replace the compressor

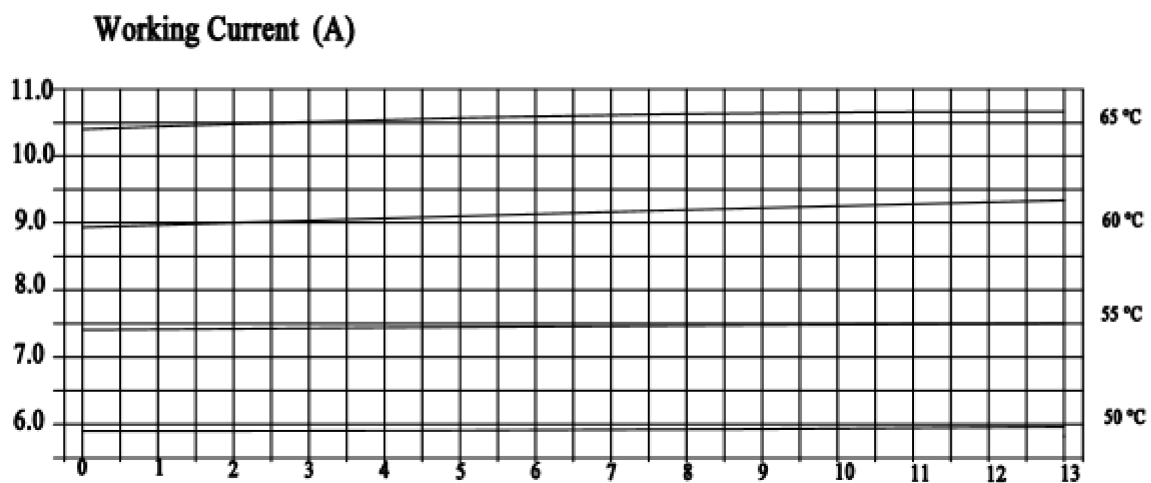
#### 4.4.2.1 Diagnosis of compressor failure

A. On condition that the unit can be started up

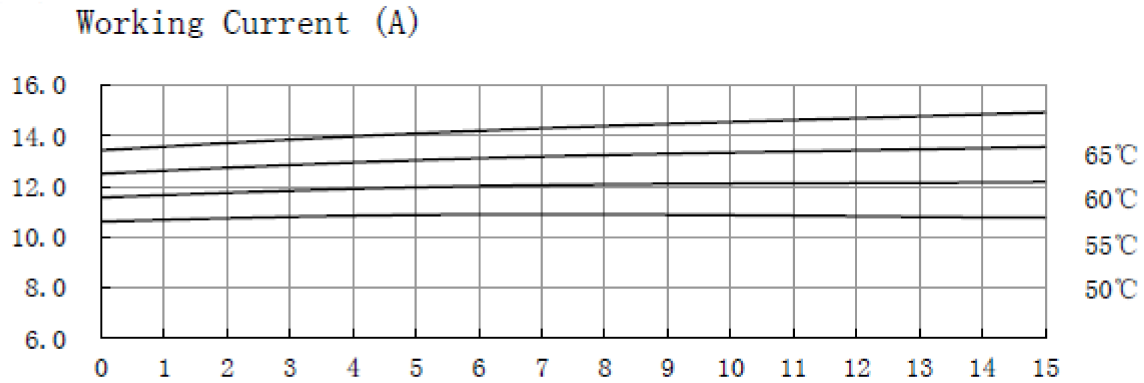
Step 1:

If the unit can be started up, then start it up to check the current of the faulted compressor. Use a pressure gauge to measure the pressure of the big and small valves. Connect with a computer to monitor the data. Refer to the following table based on the recommended working current. The electric current of an inverter compressor will be different under different rotation speed or different working conditions. If the compressor is working at 60Hz, the working current corresponding to different condensing temperature and evaporating temperature is shown below:

Inverter compressor QXFT-F310zN450B.



Inverter compressor QXAT-F400zN450.



Step 2:

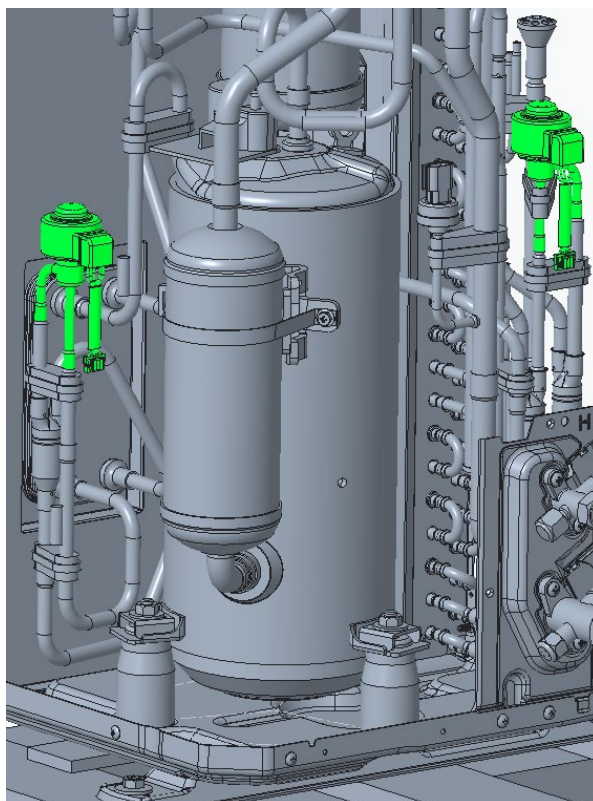
Judge whether the operating noise of the compressor is normal, and whether there is a sharp noise or obvious scraping. If there is a normal compressor working nearby, compare their operating noise.

Step 3:

Examine whether the electronic expansion valve of the outdoor unit is active and whether the 4-way valve works or not. How to examine:

(1) Electronic expansion valve:

The electronic expansion valve will be reset every time when the unit is powered on or off. Touch the valve and you can feel the movement of the valve spool. In the last stage of the reset process, you will hear the click of the valve and feel its vibration.

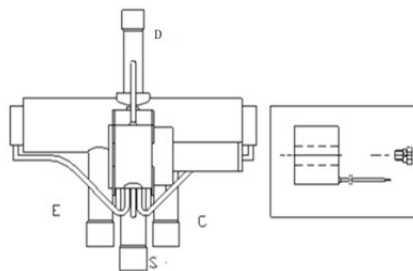
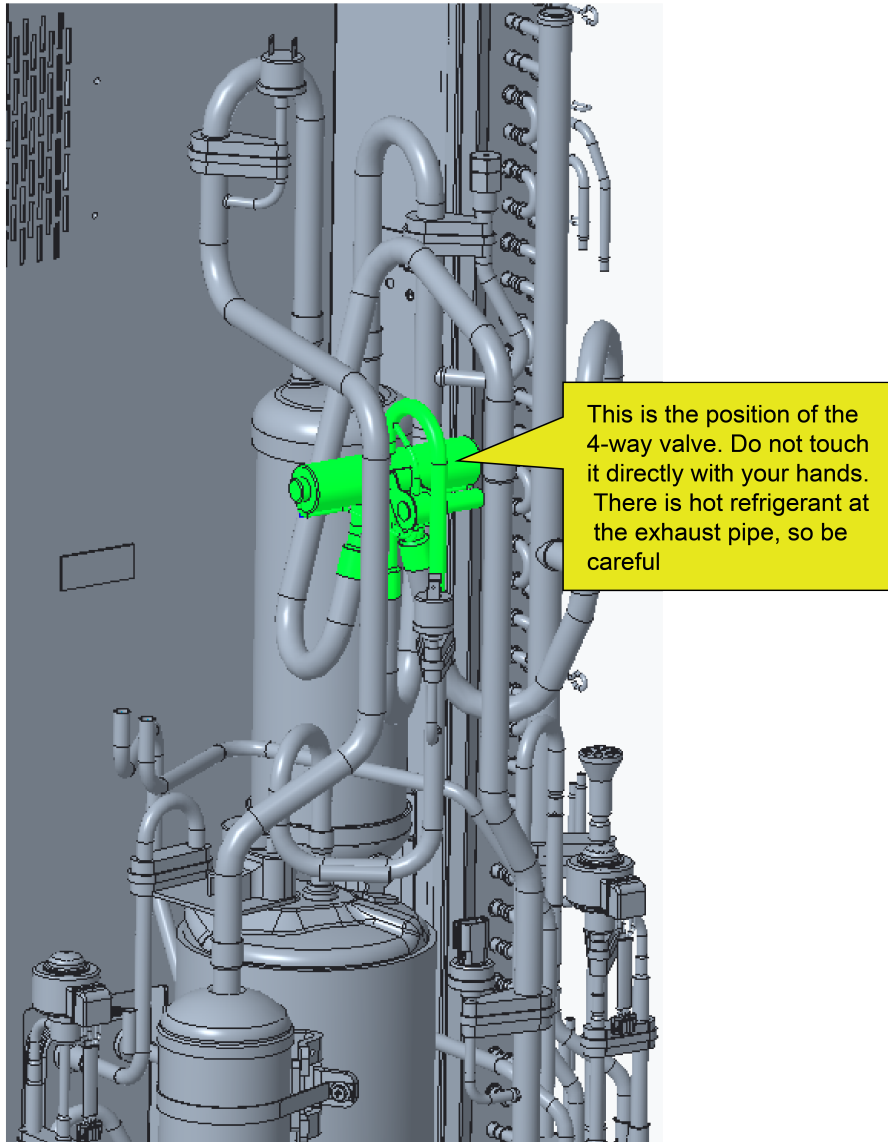


Touch the electronic expansion valve:

- a. Touch the top of the electronic expansion valve and you can feel its move as it is reset upon startup.
- b. Make sure the coil is fixed firmly.

(2) 4-way valve:

During normal operation, the 4 copper tubes that connect to the valve will have different temperature. When the 4-way valve is working, it will generate some noise and vibration.



D- Connect to the exhaust side

Caution! High temperature!

Labels on the 4-way valve:

D-connect to the exhaust side; E-connect to the evaporator of indoor unit.

S-connect to the inhalation side of the liquid separator; C-connect to the condenser.

When the system is in cooling mode, C-the pipeline is with high pressure and high temperature; E, S-the pipeline is with low pressure and low temperature.

When the system is in heating mode, E-the pipeline is with high pressure and high temperature; C, S-the pipeline is with low pressure and low temperature.

Because D is connected to the exhaust side, it is with high pressure and high temperature regardless of the operating mode. When the unit is powered on, in defrosting or oil return mode, the 4-way valve will produce some noise. Do not touch the pipes directly with your hands and be cautious of the hot temperature.

Step 4:

Check the drive board of compressor, i.e. the IPM module.

Please refer to the IPM checking method in the section of troubleshooting.

Check the drive board of compressor, i.e. the IPM module.

Please refer to the IPM checking method in the section of troubleshooting.

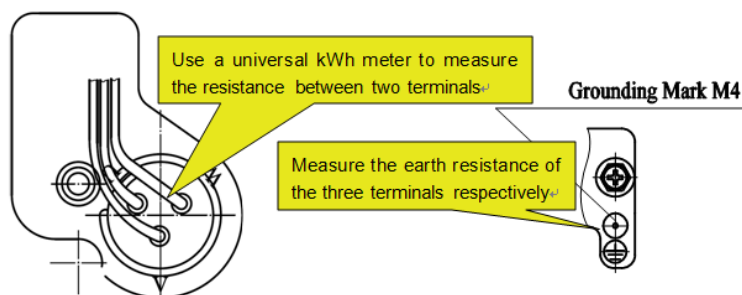
B. On condition that the unit cannot be started up.

Step 1:

Cut off the power supply and detach the cover of the wiring box of the compressor. Check the wiring of the compressor.

Step 2:

Check the resistance between the wiring terminals (U, V, W) of compressor.



Refer to the following table for the resistance between any two terminals:

Compressor model	UV Winding resistance	VW Winding resistance	WU Winding resistance
QXFT-F310zN450B	$0.54 \pm 7\% \Omega$	$0.54 \pm 7\% \Omega$	$0.54 \pm 7\% \Omega$
QXAT-F400zN450	$0.52 \pm 5\% \Omega$	$0.52 \pm 5\% \Omega$	$0.52 \pm 5\% \Omega$

Measure the earth resistance of each wiring terminal. The resistance should be above 10 megohm. If not, we can judge that the compressor is faulted inside.

Step 3:

On condition that the unit cannot be started up, we also need to check the solenoid valve assembly of the system, including the electronic expansion valve. The checking method is the same as instructed above.

Step 4:

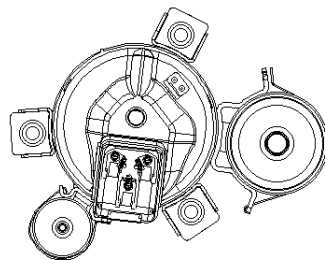
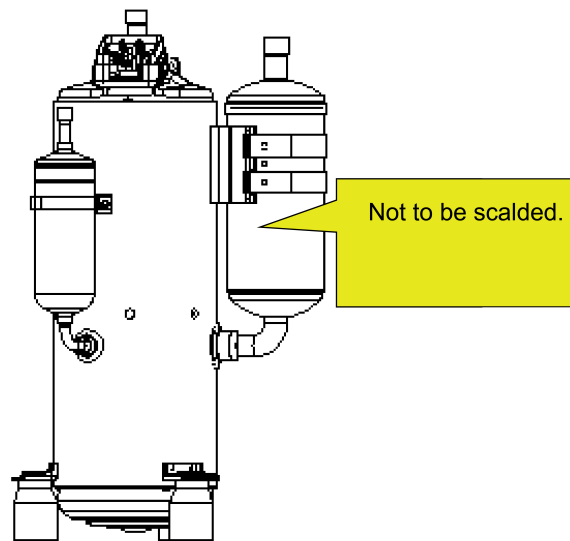
Check whether the IPM module is normal. Please refer to the IPM checking method in the section of troubleshooting.

#### 4.4.2.2 Replacement of compressor

Step 1: Preparation

(1) Prepare the components for replacement.

When carrying the old and new compressors, do not place the compressors horizontally or upside down. The angle of inclination should be within  $\pm 30^\circ$ . Make sure the lubricant inside the compressors will not flow from the oil balance mouth. The suction and exhaust openings of the compressors must be sealed. If a rubber seal is missing, user adhesive tape to seal the opening. This is to prevent the compressor oil from contacting the air.





**NOTICE:** Before replacement, make sure the nameplates and models of the compressors are identical.



**NOTICE:** Make sure the lubricant is sealed inside the compressors.

- (2) Prepare relevant tools.
  - 1) Prepare nitrogen. Please strictly follow the nitrogen welding standards during the welding process. Make sure there is sufficient nitrogen. The nitrogen pressure should be above 2.0MPa.
  - 2) Prepare welding rods. Prepare some welding rods of common specifications and some special welding rods that contain more than 5% silver. They are used to weld the compressor. The suction and exhaust openings of the compressor are all connected to copper-plated steel pipes, so we need to use special welding rods and solder.
  - 3) Prepare applicable welding tools. Please evaluate how much oxygen and acetylene should be used according to the current welding condition. Try to avoid repeated welding.
  - 4) Prepare a complete set of tools, including an internal hexagonal wrench, diagonal pliers, pincer pliers, nipper pliers, a universal meter, a pressure gauge, cross screwdriver, straight screwdriver, more than two wrenches, insulating tape and wire cables.

Step 2: Disconnect power.

If the compressor needs to be replaced after judging as above, then switch off the outdoor unit and disconnect the power cable of the outdoor unit. Use insulating tape to wrap the power cable and put a notice board on the power switch to remind people to be cautious of electric shock.

Step 3: Neaten the electric components.

When you detach the compressor wires, temperature sensors and electric heaters, mark them correspondingly for the convenience of reconnecting them.

Step 4: Discharge refrigerant.

Discharge refrigerant from the system. Discharge simultaneously from the high pressure side and low

pressure side. Do not discharge too fast (It should take more than 12h to completely discharge the refrigerant); otherwise, large quantity of lubricant will escape from the system together with the refrigerant.

Step 5: Detach the compressor.

Check the condition of the damaged compressor, including its position and model.

If the information of the compressor is confirmed, check the oil quality.

(a) If the oil is clear and impurities-free, we consider that the oil of the system is not polluted. Meanwhile, if we confirm that the valves and pipes are also normal, then we can replace the compressor only. For the removal of compressor, please refer to the section: Removal of Major Components.

How to check oil quality :

- (1) After the compressor is detached, put it on a solid ground and shake it at an angle of 30~45° to ensure that the contaminant at the bottom of the compressor can be poured out.
- (2) Place the compressor at a position above the ground level and then pour out the oil from the air outlet of the compressor. Collect the oil in a transparent container. The amount of oil should be over 150ml.

**NOTE:**

- 1) The axial direction of the compressor should not slant at an angle larger than 20° to the horizontal direction.
  - 2) Prevent the compressor from falling.
  - 3) Put a transparent container (over 150ml in volume) under the exhaust pipe to collect the compressor oil, thus we can see the oil quality.
- (3) Put the container of compressor lubricant in a bright location and see if there is impurity and discoloration. Sniff at the compressor lubricant. Normally, there is no pungent smell.
- 1) If the oil is contaminated, replace the compressor and the gas-liquid separator.

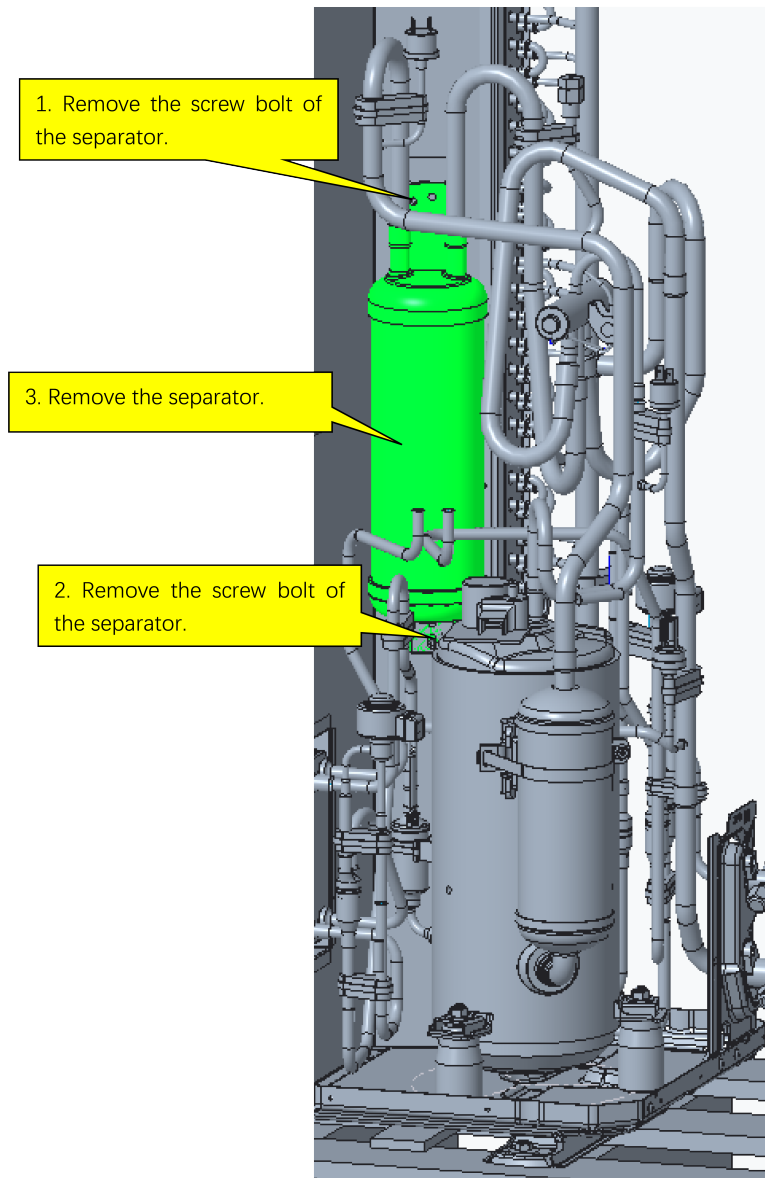
**NOTE:**

Confirm whether the compressor needs to be replaced. The pipe mouths of the faulted compressor must be sealed by adhesive tape as soon as the compressor is detached. Make sure the compressor is well preserved for the ease of future analysis.

Step 6: Check the components.

If the oil is contaminated, check the components of the unit, including the gas-liquid separator.

Check the gas-liquid separator.



When the separator is detached, check whether there are impurities inside. Below is the checking method:

**NOTE:**

When pouring the liquid from the separator, make sure the discharge pipe is at the lower position. Slant at an angle not larger than 20°.

Use a transparent container to collect the content inside the separator. Check its color, seal it well and return it to the factory for inspection.

**NOTE:**

If the compressor is damaged and needs to be replaced, the gas-liquid separator should also be replaced, whether or not there are impurities in the separator or other abnormal conditions.

Confirm which parts of the system should be replaced. Make sure the pipe mouths of the damaged parts or components are sealed by adhesive tape as soon as they are detached. Keep them in the original condition for future analysis.

Step 7: Clear the pipeline.

After confirming which parts of the system should be replaced, check the pipeline of the system. Blow through the main pipeline with nitrogen. After clearing the pipeline, if the components are not replaced immediately, seal the pipeline with adhesive tape to prevent the system from being contaminated by water and impurities in the air.

Step 8: Replace the compressor.

For the removal of compressor, please refer to the section: Removal of Major Components.

Step 9: Check/Replace the gas-liquid separator.

**NOTE:**

If a compressor is damaged and needs to be replaced, its gas-liquid separator should also be replaced. This is to avoid the abnormal condition of the separator from affecting the safe and reliable operation of the system.

For the removal of gas-liquid separator, please refer to the section: Removal of Major Components.

Step 10: Check the system for leaks.

- (1) First of all, check each welding point. Check whether the welding points are smooth and whether there is any obvious welding hole or other abnormal condition.
- (2) Next, fill high-pressure nitrogen into the system for leak detection. If it is only the outdoor unit that needs to be repaired and the indoor unit is confirmed normal, then it's OK to charge high-pressure nitrogen into the outdoor unit only. Fill in the nitrogen simultaneously from the high pressure side and low pressure side. We recommend charging the nitrogen from the big and small valves at the same time. The pressure of nitrogen should be above 20kgf. Then use soapy water to check for leaks. Check the welding points particularly.
- (3) Finally, retain the pressure of the system. Fill high-pressure nitrogen into the system and maintain the pressure above 25kgf. Close the big and small valves and keep the pressure of indoor and outdoor units for more than 12h. If the pressure remains unchanged, then start vacuum pumping; otherwise, check the system for leaks again.

Temperature should be considered when judging the pressure change. If temperature changes by 1°C, pressure will change by 0.01MPa or so.

For example, if temperature is 30°C when nitrogen of 2.5MPa is charged, and temperature changes to 25°C after 12h, we consider that the system is qualified if the pressure is found at 2.43MPa or above.

Step 11: Evacuate the system and charge refrigerant.

Please refer to the section of maintenance: vacuum pumping and refrigerant charging.

Step 12: Connect electric components.

Connect cables, compressor wires and the electric heating belt according to the signs marked before and the wiring diagram on the cover of the electric box.

### 4.4.3 How to replace the drive module of compressor

Step 1: First, make sure that power is cut off. Set the universal meter at the AC voltage and measure the voltage between L1, L2, L3, and N. If each time the voltage is 0V (Errors may occur to the universal meter, sometimes the voltage may not be 0V), proceed with the next step and put a sign on the power switch that reads "Under maintenance, don't switch on".

Step 2: Measure the voltage between DC bus P and N on the drive board of the compressor. Set the universal meter at the DC voltage and measure the voltage between P and N as shown below. If the voltage is below 36V, proceed with the next step. In case that a universal meter is not available, disconnect power for 20min and then continue with the next step.

Step 3: Remove all the wires on the drive board of the compressor.



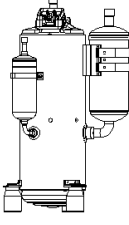
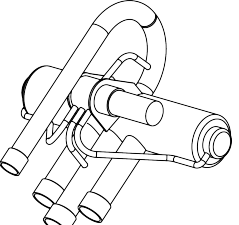
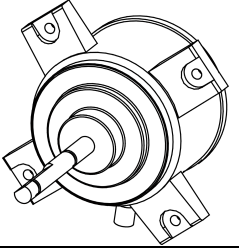
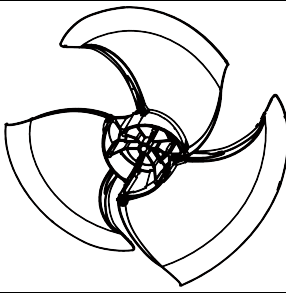
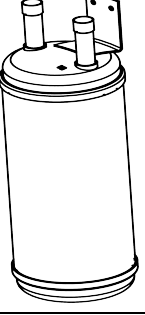
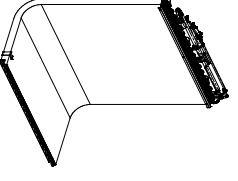
Step 4: Remove the screws on the drive board of the compressor. The screws are located in the white circles as shown above in the picture.

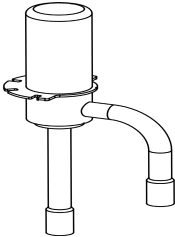
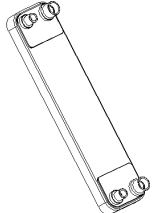
Step 5: Replace with a new compressor drive board. Before replacement, apply some silica gel on the IPM module.

Step 6: Install the new compressor drive board. Fix the screws and connect the wires correctly.

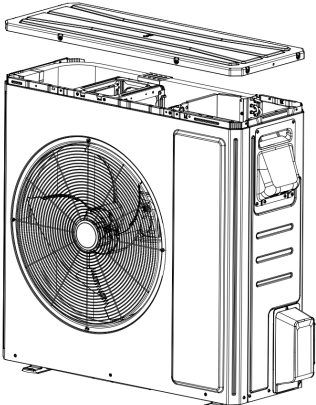
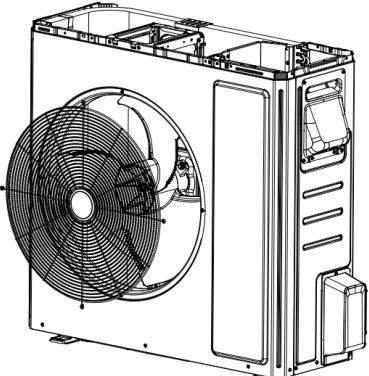
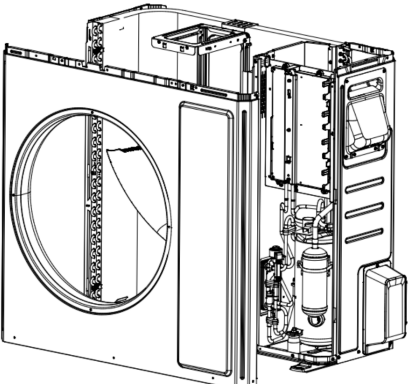
## 4.5 Removal of Major Components

### 4.5.1 Removal of ODU Major Components

Picture	Name	Function
	Compressor	Through compression, the low pressure refrigerant occupies a less space. As its pressure and temperature both rise, it becomes high pressure and high temperature refrigerant. It is the power drive of the system.
	4-way valve	It is used to change directions, the flow of refrigerant in cooling/heating.
	Motor	The power drive of the fan. It enables the fan to run so as to provide smooth currents of air for forced convection and heat exchange of condenser and evaporator.
	Fan	It is used to provide smooth currents of air for forced convection and heat exchange of condenser and evaporator.
	Gas liquid separator	Installed at the suction side of compressor, it can separate the liquefied refrigerant from the gaseous refrigerant to make sure that only gaseous refrigerant will be sucked into the compressor. If liquefied refrigerant gets inside the compressor, ineffective compressor or slugging phenomenon will occur.
	Condenser	It is used to transfer partial heat of the hot flow to the cold flow so that the flow temperature can reach the specified index. It is an energy exchanging device.

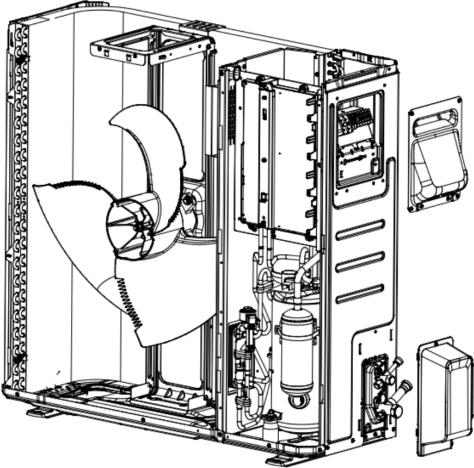
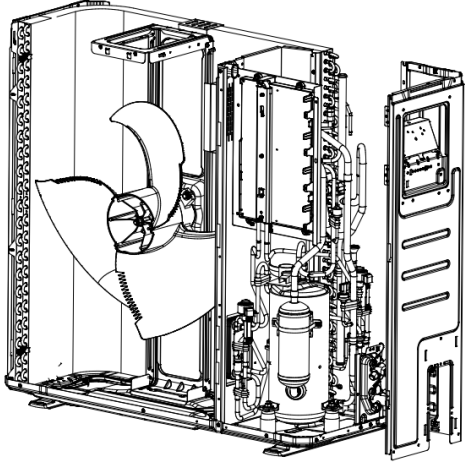
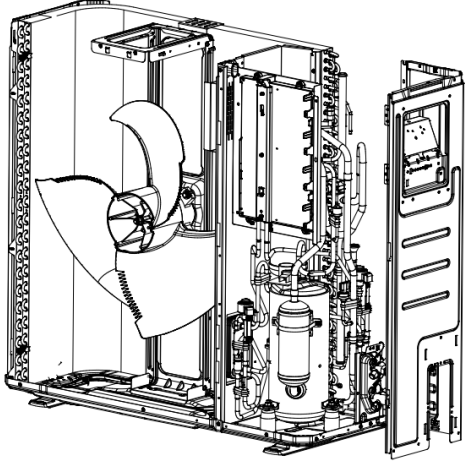
Picture	Name	Function
	<p>Electronic expansion valve</p>	<p>It is used to lower the pressure and temperature of liquefied refrigerant and adjust the flow of refrigerant entering the evaporator.</p>
	<p>Heat exchanger</p>	<p>It is used to exchange heat between refrigerants and supplement gas to the compressor.</p>

**Model:** FXU24HP230V1R32AO, FXU36HP230V1R32AO

Removal of Front Panel		
<b>NOTE:</b> Before removing the front panel, make sure power is cut off.		
Step	Picture	Work Instruction
<p>1. Remove the upper cover plate.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws of the upper cover plate with a screwdriver.</li> </ul>
<p>2. Remove the front grill.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws of the front grill with a screwdriver.</li> </ul>
<p>3. Remove the front panel.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws of the upper and front side plate with a screwdriver.</li> </ul>

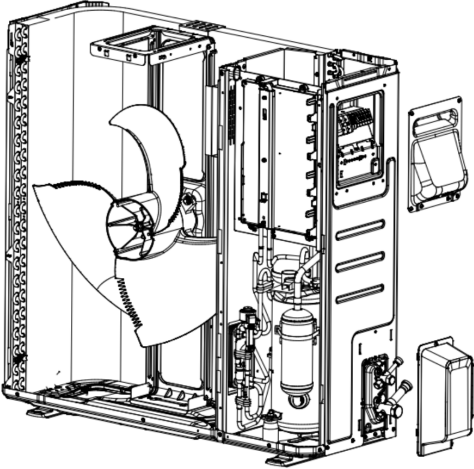
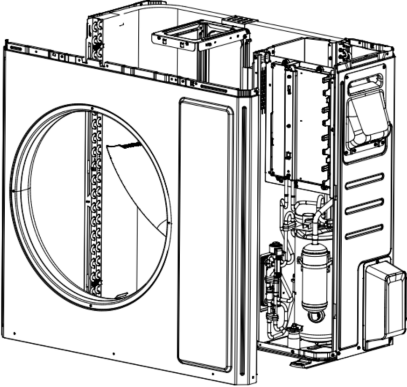
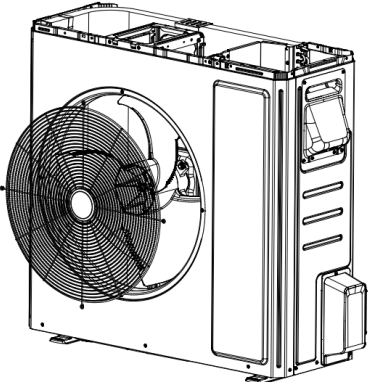
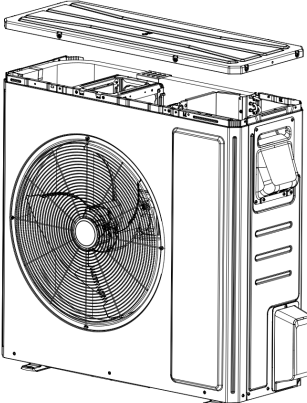
## Removal of Front Panel

**NOTE:** Before removing the front panel, make sure power is cut off.

Step	Picture	Work Instruction
<p>4. Remove the handle and the valve cover.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws that connect the handle to the electric box, and unscrew the screws that connect the valve cover to the right side plate.</li> </ul>
<p>5. Remove the right side plate.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws that connect the right side plate to the electric box and the screws around the right side plate.</li> </ul>
<p>6. Install the right side plate.</p>		<ul style="list-style-type: none"> <li>● Screw up the screws around the right side plate. Be careful to handle well the clasps at the bottom of the right side plate.</li> </ul>

## Removal of Front Panel

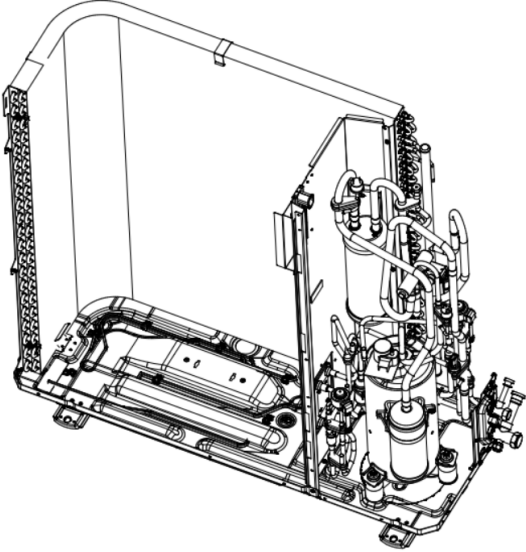
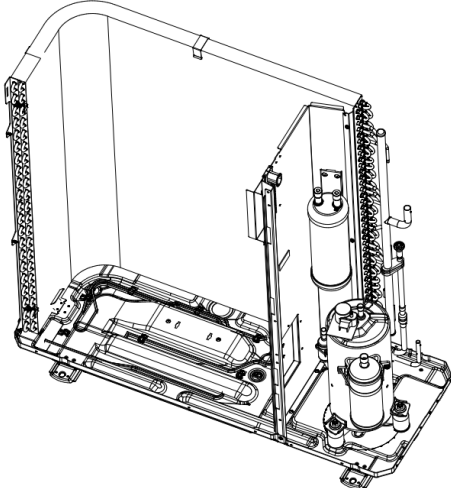
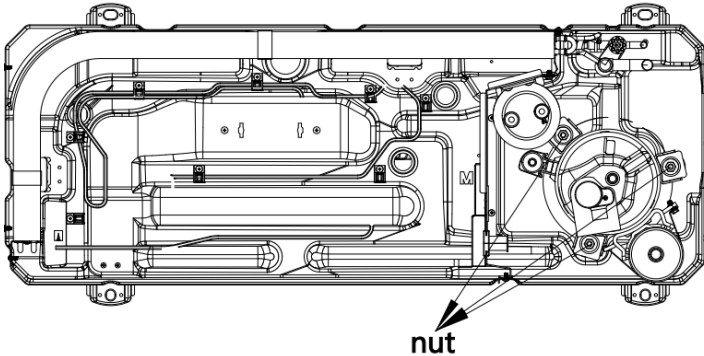
**NOTE:** Before removing the front panel, make sure power is cut off.

Step	Picture	Work Instruction
7. Install the handle and the valve cover.		<ul style="list-style-type: none"> <li>● Install the valve cover by mounting on 3 clasps on its both sides.</li> </ul>
8. Install the front panel.		<ul style="list-style-type: none"> <li>● Install the front panel by mounting on 6 clasps on its both sides. Please note that there is one screw on the lower right side.</li> </ul>
9. Install the grill.		<ul style="list-style-type: none"> <li>● Attach the grill back in place and tighten up the screws.</li> </ul>
10. Install the upper cover plate.		<ul style="list-style-type: none"> <li>● Tighten up the screws around the upper cover plate.</li> </ul>

**Model:** FXU24HP230V1R32AO, FXU36HP230V1R32AO

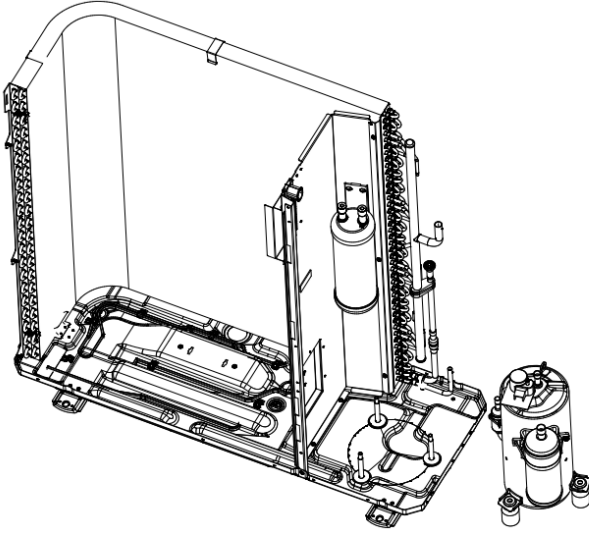
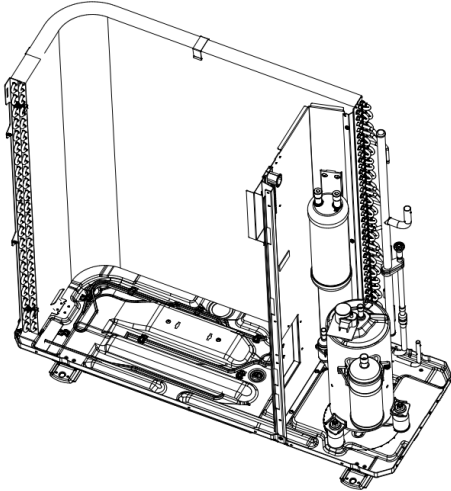
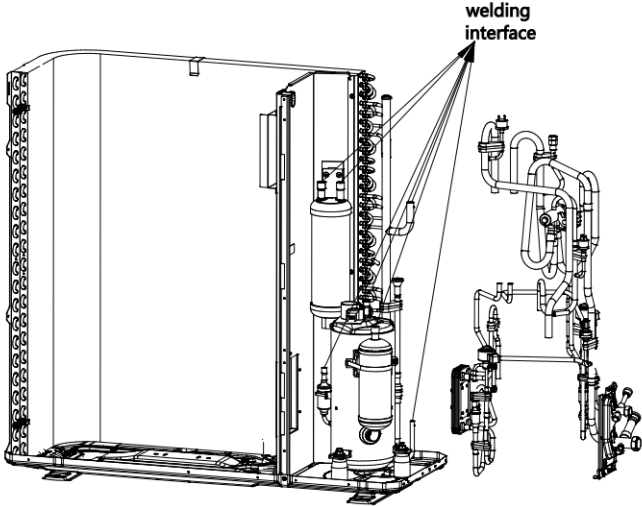
### Removal of Compressor

**NOTE:** Before removing the compressor, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>1. Remove wires.</p>		<ul style="list-style-type: none"> <li>● Loosen the securing screws of the wires with a screwdriver.</li> <li>● Remove the wires.</li> <li>● <b>NOTE:</b> When removing the wires, mark the wire terminals corresponding to their color so as to avoid misconnection.</li> </ul>
<p>2. Break off the pipes that connecting to the compressor.</p>		<ul style="list-style-type: none"> <li>● Weld the pipes that are connected to the compressor.</li> <li>● Then remove the pipes.</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>
<p>3. Loosen the compressor's base connectors.</p>		<ul style="list-style-type: none"> <li>● Use a wrench to twist off the compressor's base nuts.</li> </ul>

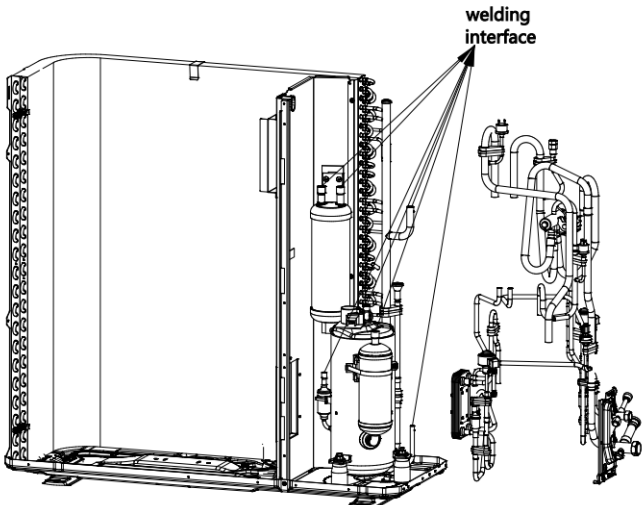
## Removal of Compressor

**NOTE:** Before removing the compressor, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>4. Remove the compressor from the chassis.</p>		<ul style="list-style-type: none"> <li>● Take away the compressor and replace with a new one.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>
<p>5. Install the new compressor onto the chassis.</p>		<ul style="list-style-type: none"> <li>● After replacing the compressor, tighten up the base screw nuts.</li> </ul>
<p>6. Connect the welding interfaces of compressor to the pipeline.</p>		<ul style="list-style-type: none"> <li>● Weld the connection pipes of compressor so as to connect them to the compressor.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>

## Removal of Compressor

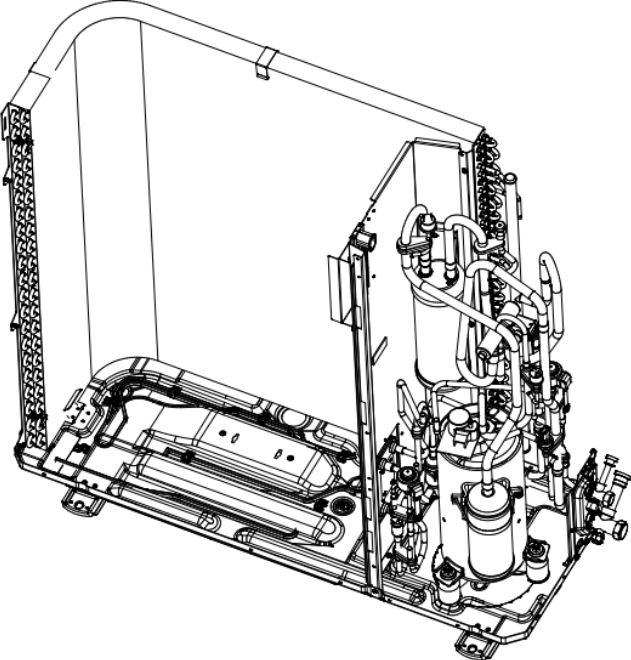
**NOTE:** Before removing the compressor, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
7. Connect the compressor wires.	 <p>The diagram shows a side view of the heat pump condensing unit with the compressor assembly. A callout line points to the top of the compressor where the wires are connected, labeled 'welding interface'.</p>	<ul style="list-style-type: none"> <li>● Connect the compressor wires to the wire terminals on the top of compressor.</li> <li>● <b>NOTE:</b> When connecting the wires, be sure to match the colors with the corresponding wire terminals.</li> </ul>

**Model:** FXU24HP230V1R32AO, FXU36HP230V1R32AO

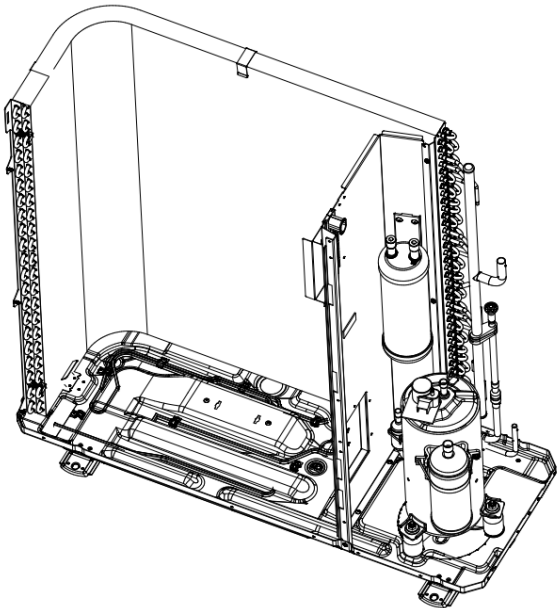
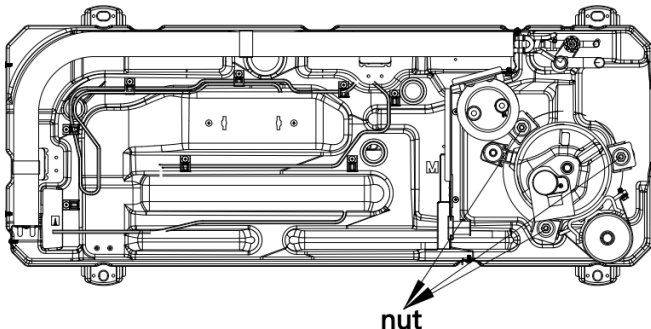
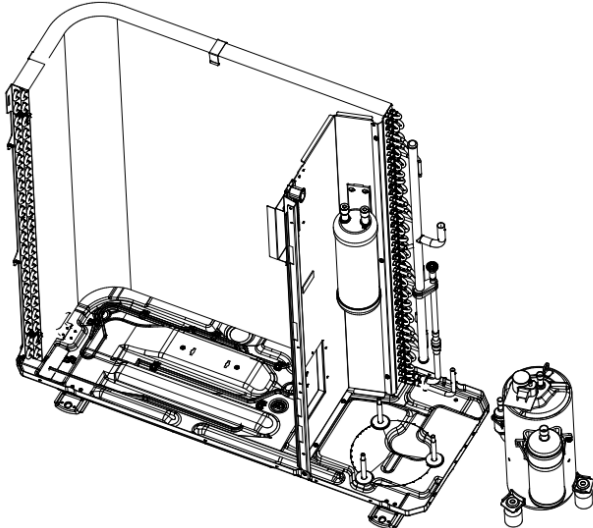
## Removal of Compressor/Gas Liquid Separator

**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
1. Remove wires.	 <p>The diagram shows a side view of the heat pump condensing unit with the compressor and gas liquid separator assembly. Several wires are shown connected to the top of the compressor.</p>	<ul style="list-style-type: none"> <li>● Loosen the securing screws of the wires with a screwdriver.</li> <li>● Remove the wires.</li> <li>● <b>NOTE:</b> When removing the wires, mark the wire terminals corresponding to their color so as to avoid misconnection.</li> </ul>

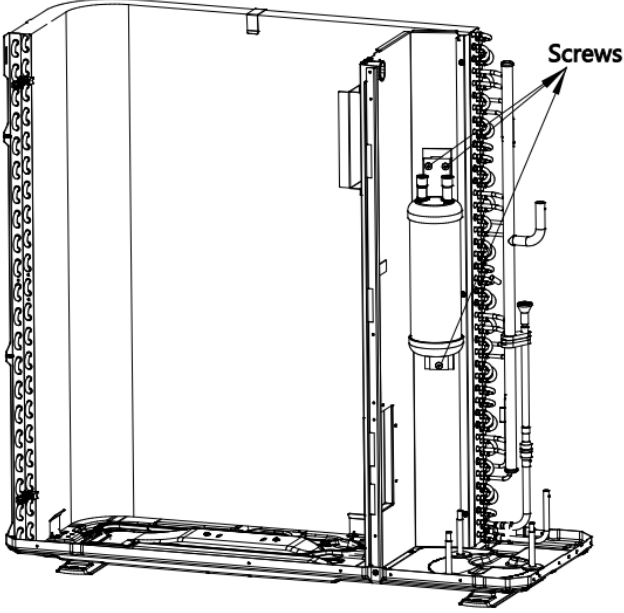
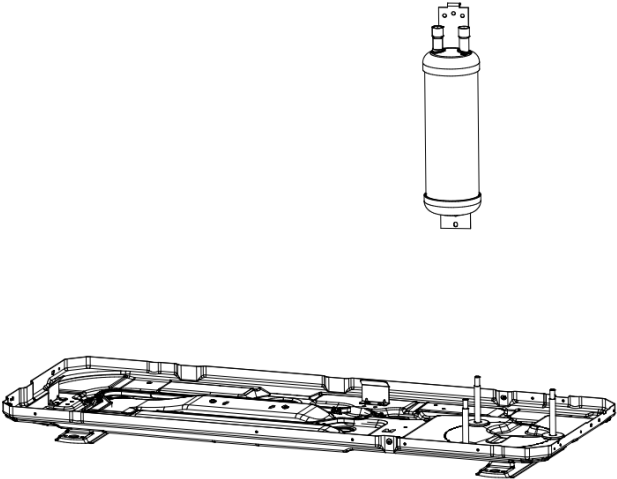
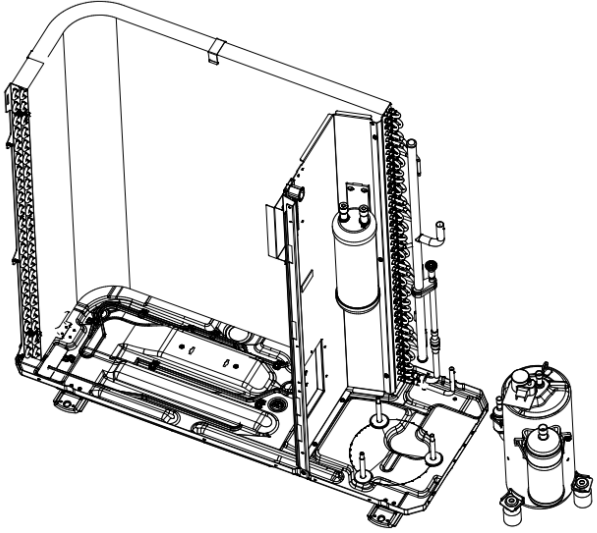
## Removal of Compressor/Gas Liquid Separator

**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>2. Break off the pipes that connecting to the compressor/gas liquid separator.</p>		<ul style="list-style-type: none"> <li>● Weld the pipes that are connected to the compressor/gas liquid separator.</li> <li>● Then remove the pipes.</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>
<p>3. Loosen the compressor's base connectors.</p>		<ul style="list-style-type: none"> <li>● Use a wrench to twist off the compressor's base nuts.</li> </ul>
<p>4. Remove the compressor from the chassis.</p>		<ul style="list-style-type: none"> <li>● Take away the compressor and replace with a new one.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>

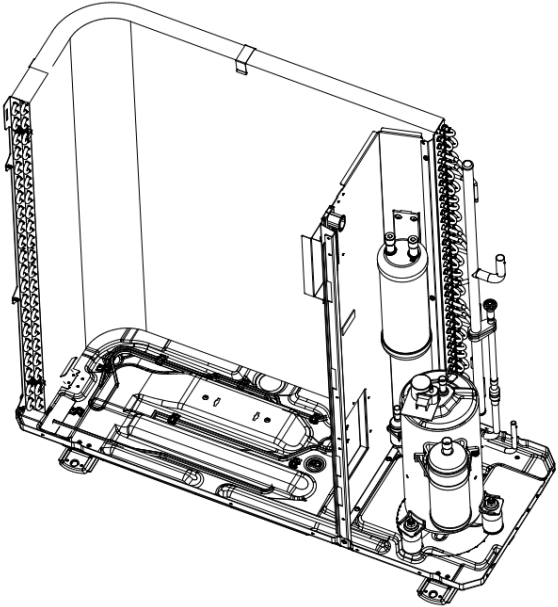
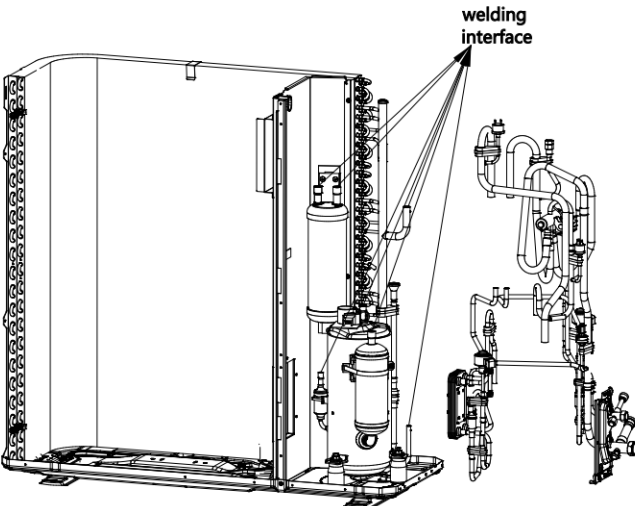
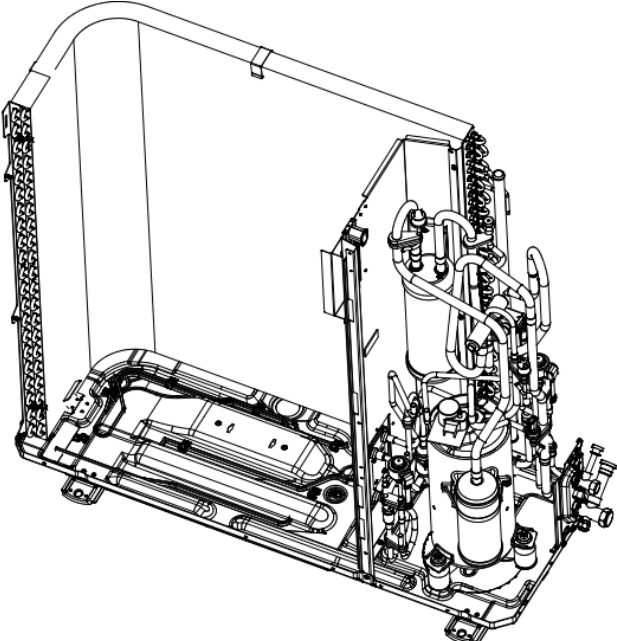
## Removal of Compressor/Gas Liquid Separator

**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>5. Loosen the gas liquid separator's base nuts.</p>		<ul style="list-style-type: none"> <li>● Use a wrench to twist off the gas liquid separator's base nuts.</li> </ul>
<p>6. Remove the gas liquid separator from the chassis.</p>		<ul style="list-style-type: none"> <li>● Take away the compressor and replace with a new one. <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>
<p>7. Install the new gas liquid separator onto the chassis.</p>		<ul style="list-style-type: none"> <li>● After replacing the gas liquid separator, tighten up the base screw nuts.</li> </ul>

## Removal of Compressor/Gas Liquid Separator

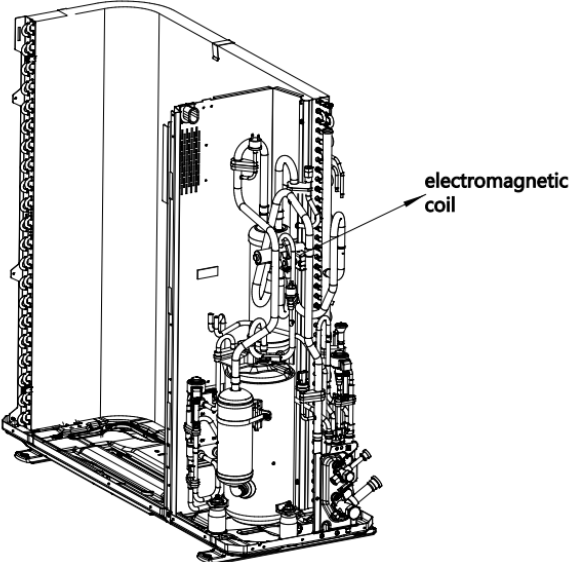
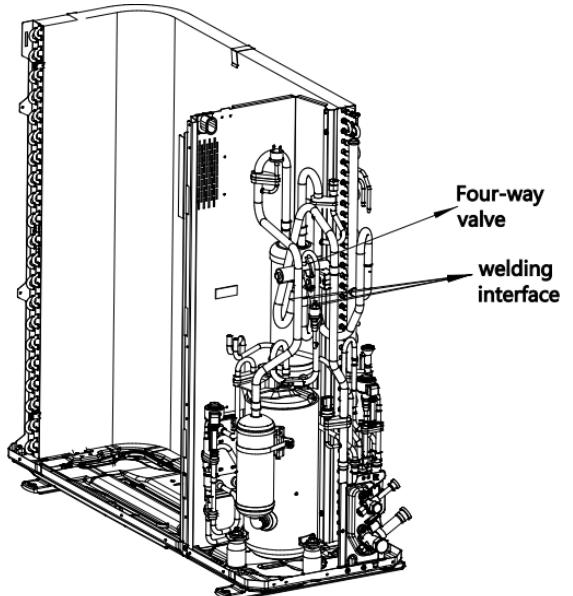
**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>8. Install the new compressor onto the chassis.</p>		<ul style="list-style-type: none"> <li>● After replacing the compressor, tighten up the base screw nuts.</li> </ul>
<p>9. Connect the welding interfaces of compressor/gas liquid separator to the pipeline.</p>		<ul style="list-style-type: none"> <li>● Weld the connection pipes of compressor so as to connect them to the compressor.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>
<p>10. Connect the compressor wires.</p>		<ul style="list-style-type: none"> <li>● Connect the compressor wires to the wire terminals on the top of compressor.</li> <li>● <b>NOTE:</b> When connecting the wires, be sure to match the colors with the corresponding wire terminals.</li> </ul>

Model: FXU24HP230V1R32AO, FXU36HP230V1R32AO

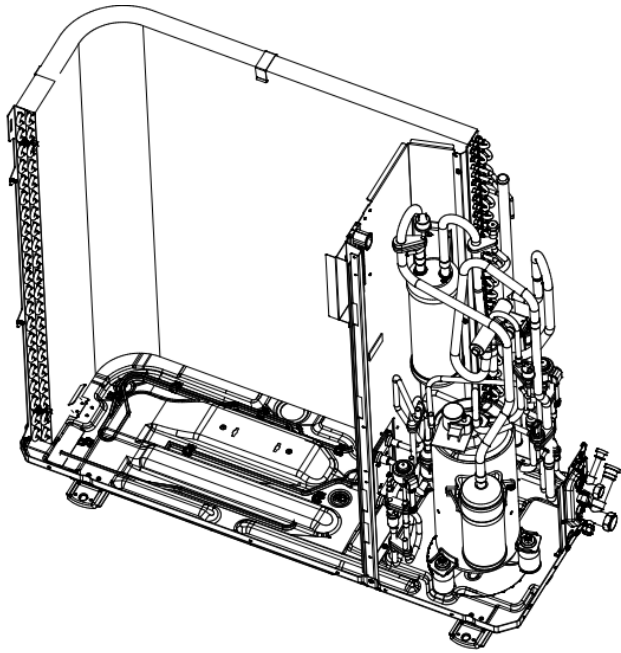
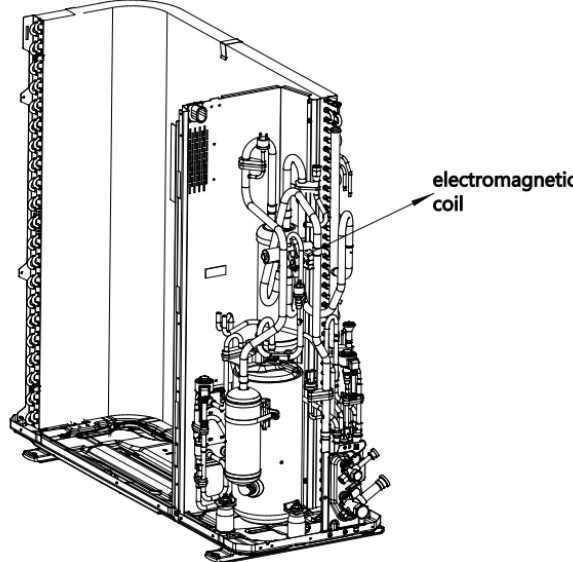
### Removal of 4-Way Valve

**NOTE:** Before removing the 4-way valve, make sure refrigerant is fully discharged from the unit and power is cut off.

Step	Picture	Work Instruction
<p>1. Take off the coil of the 4-way valve.</p>		<ul style="list-style-type: none"> <li>Carefully unscrew the screws of electromagnetic coil with a screwdriver.</li> </ul>
<p>2. Break off the connection pipes from the 4-way valve.</p>		<ul style="list-style-type: none"> <li>Use a soldering gun to loosen the 4 joints on the 4-way valve and then remove the connection pipes.</li> <li><b>NOTE:</b> When welding the pipes, the 4-way valve should be wrapped with wet cloth for cooling. Do not let the flame burn the other components.</li> </ul>

## Removal of 4-Way Valve

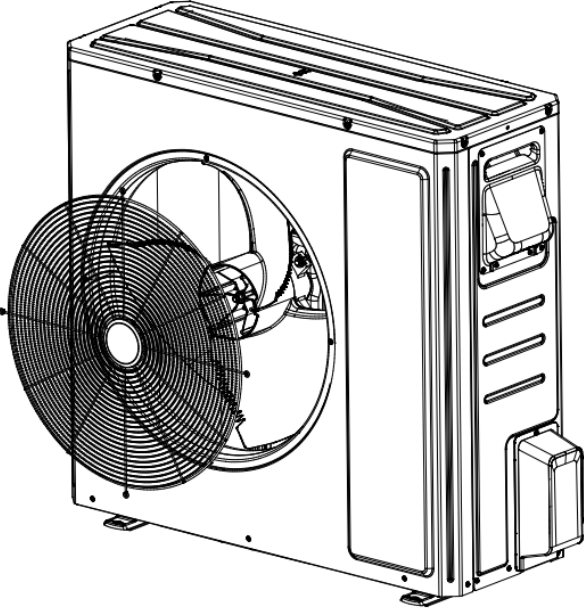
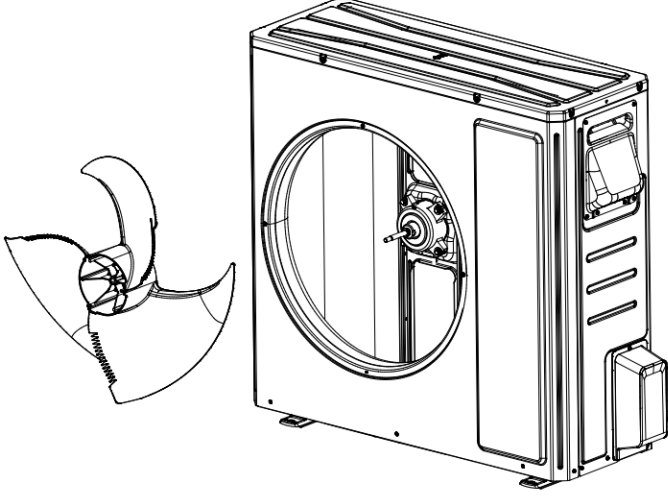
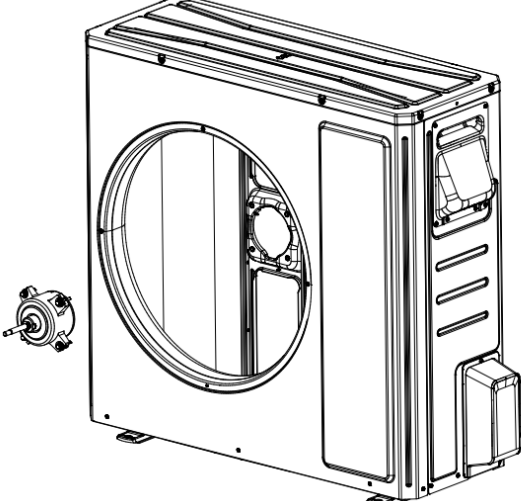
**NOTE:** Before removing the 4-way valve, make sure refrigerant is fully discharged from the unit and power is cut off.

Step	Picture	Work Instruction
<p>3. Replace the 4-way valve and connect it to the connection pipes.</p>	 <p>The diagram shows a perspective view of the condensing unit's internal components. A 4-way valve is mounted on top of the unit, with four pipes extending from it. The unit is shown in a partially disassembled state, with the top cover removed.</p>	<ul style="list-style-type: none"> <li>● Replace the 4-way valve and then use a soldering gun to weld the 4 joints of the 4-way valve.</li> <li>● <b>NOTE:</b>When welding the pipes, the 4-way valve should be wrapped with wet cloth for cooling. Do not let the flame burn the other components.</li> </ul>
<p>4. Install the coil of 4-way valve.</p>	 <p>The diagram shows the same condensing unit as in the previous step, but now with an electromagnetic coil installed on the 4-way valve. An arrow points to the coil with the label "electromagnetic coil".</p>	<ul style="list-style-type: none"> <li>● Tighten the screws of the coil of 4-way valve with a screwdriver.</li> </ul>

**Model:**FXU24HP230V1R32AO, FXU36HP230V1R32AO

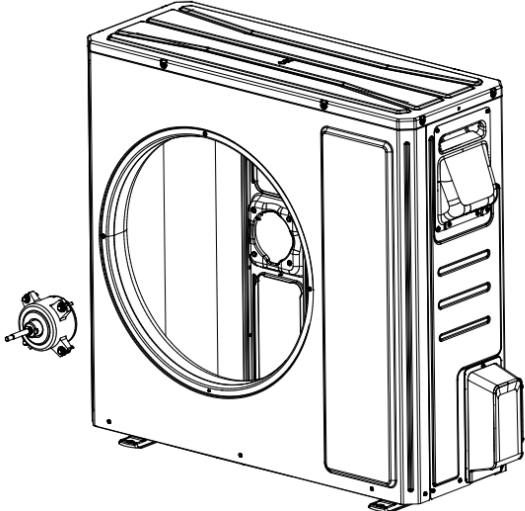
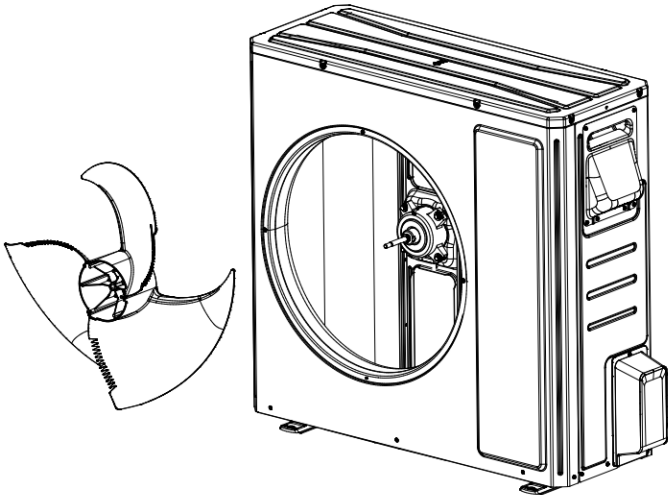
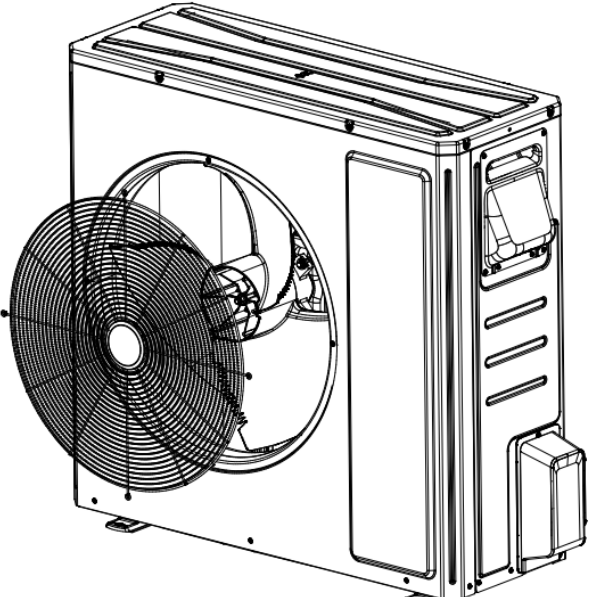
Removal of Fan and Motor

**NOTE:** Before removing the fan, make sure power is cut off.

Step	Picture	Work Instruction
1. Remove the grill.		<ul style="list-style-type: none"> <li>● Use a screwdriver to unscrew the two screws on the upper left and lower right corners.</li> </ul>
2. Remove the fan.		<ul style="list-style-type: none"> <li>● Use a wrench to remove the specialized nut and gasket of the fan.</li> <li>● <b>NOTE:</b> Please keep the nut and gasket safe after removing them from the fan.</li> </ul>
3. Remove motor.		<ul style="list-style-type: none"> <li>● Use a screwdriver to unscrew the bolt of motor.</li> <li>● <b>NOTE:</b> Motor wire should be first removed from the electric box.</li> </ul>

## Removal of Fan and Motor

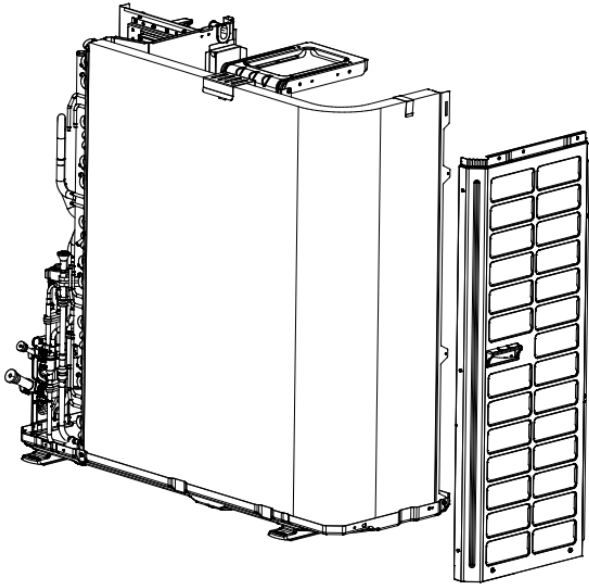
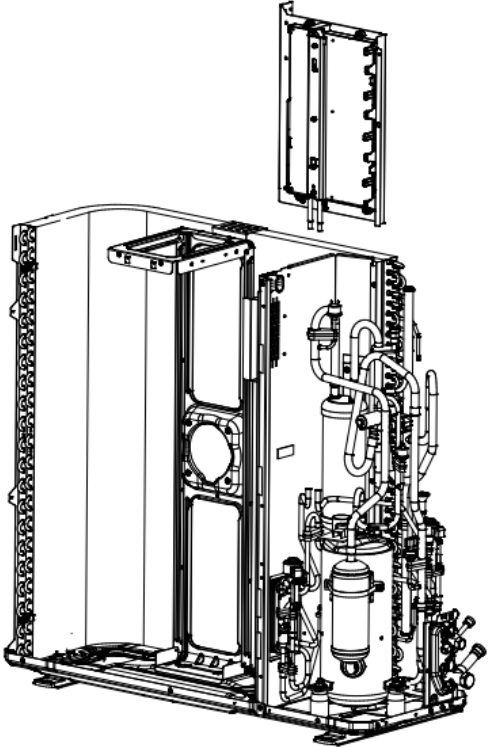
**NOTE:** Before removing the fan, make sure power is cut off.

Step	Picture	Work Instruction
4. Install the motor.		<ul style="list-style-type: none"> <li>● Replace with a new motor. Then tighten up the screw bolt.</li> </ul>
5. Install the fan.		<ul style="list-style-type: none"> <li>● Install the fan in place. Put on the gasket and use a wrench to secure the screw nut.</li> <li>● <b>NOTE:</b> After installing the fan, turn the fan by hand to see if it can run normally. If not, please check for the reason.</li> </ul>
6. Install the grill.		<ul style="list-style-type: none"> <li>● After replacing the motor, use a screwdriver to tighten up the screw bolt that secures the motor. Arrange the wires according to the wiring diagram.</li> </ul>

**Model:** FXU24HP230V1R32AO, FXU36HP230V1R32AO

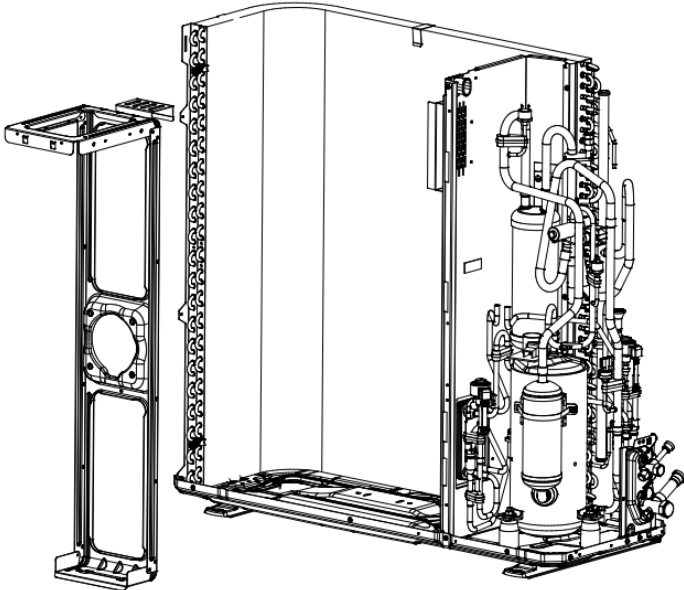
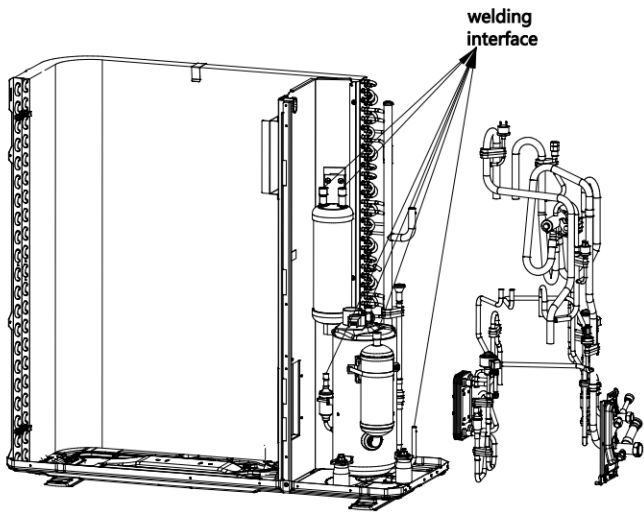
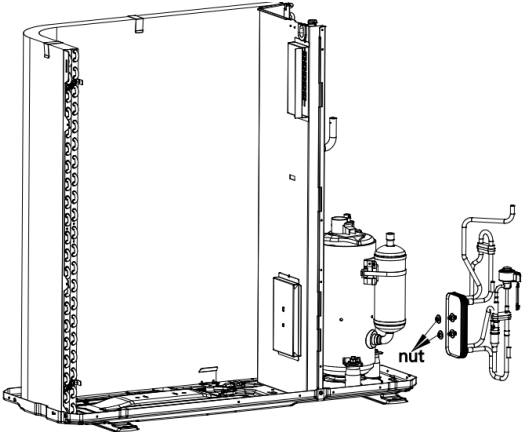
Removal of Condenser

**NOTE:** Before removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>1. Remove the panels.</p>		<ul style="list-style-type: none"> <li>● Remove the upper, lower and front panels.</li> </ul>
<p>2. Remove the electric box.</p>		<ul style="list-style-type: none"> <li>● Loosen the wire clamp at the bottom of the electric box.</li> <li>● Unscrew the screws of electric box.</li> <li>● The connection wires inside and outside the electric box should be removed.</li> </ul>

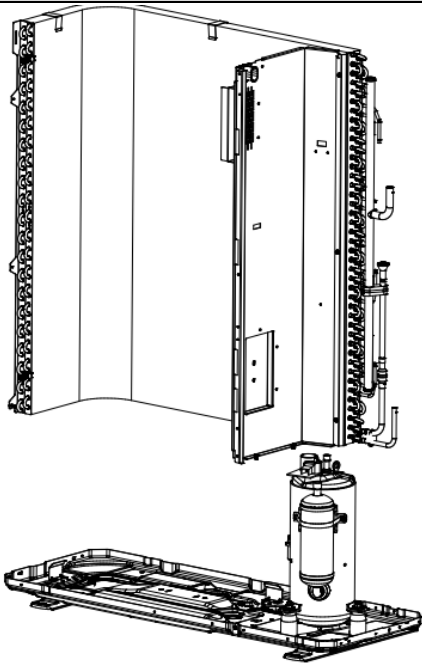
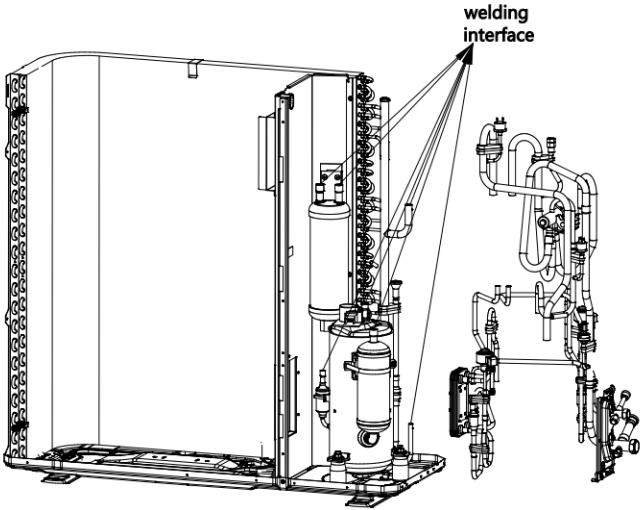
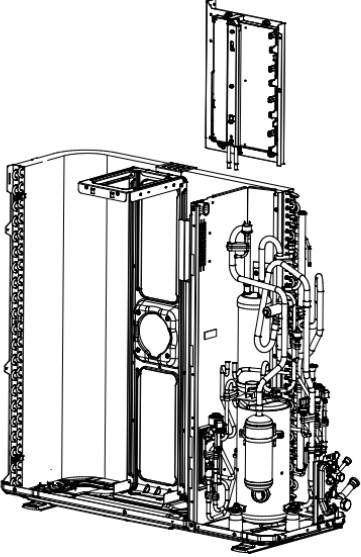
## Removal of Condenser

**NOTE:** Before removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>3. Remove motor support.</p>		<ul style="list-style-type: none"> <li>When removing the motor support, be careful to protect the components.</li> </ul>
<p>4. Break off the connection pipes.</p>		<ul style="list-style-type: none"> <li>Heat up the welding points of connection pipes through gas welding until the pipes break off.</li> <li><b>NOTE:</b> When welding the pipes, do not let the flame burn the other components. The welding points of condenser are steel and copper welding points. Be sure to maintain the welding quality.</li> </ul>
<p>5. Take out the condenser.</p>		<ul style="list-style-type: none"> <li>Loosen the securing screws of condenser support. Take off the plate type heat exchanger and the support as a whole.</li> </ul>

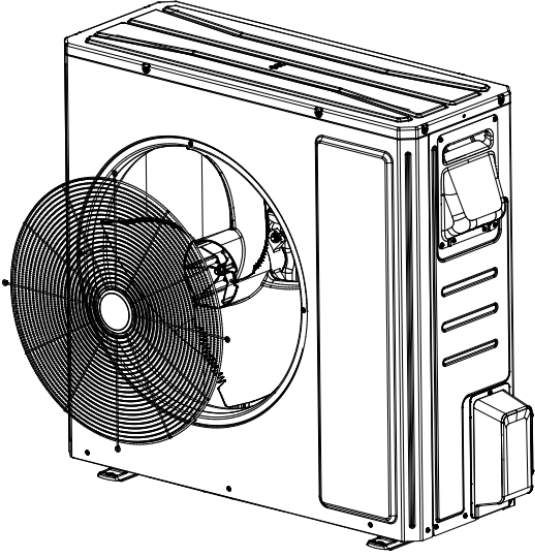
## Removal of Condenser

**NOTE:** Before removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>6. Install the new condenser.</p>		<ul style="list-style-type: none"> <li>Secure the screws of condenser and support. Then fix them together on the chassis.</li> </ul>
<p>7. Break off the connection pipes.</p>		<ul style="list-style-type: none"> <li>Install the condenser by referring to the positions of entering and leaving pipes. Weld the connection pipes.</li> <li>Nitrogen welding: the pressure of nitrogen is <math>0.5 \pm 0.1 \text{ kgf/cm}^2</math> (relative pressure).</li> <li><b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>
<p>8. Secure the electric box and arrange the wires according to the requirement.</p>		<ul style="list-style-type: none"> <li>Put the electric box in place and tighten up the screws of electric box.</li> <li>Arrange and secure the wires as original.</li> </ul>

## Removal of Condenser

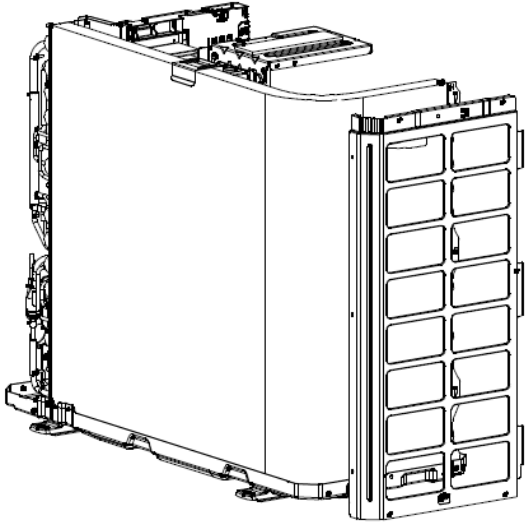
**NOTE:** Before removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>9. Check and open the upper and side panels.</p>		<ul style="list-style-type: none"> <li>● Check whether each component and connection wire is well connected.</li> <li>● If everything is OK, place back the upper, left and right side panels.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

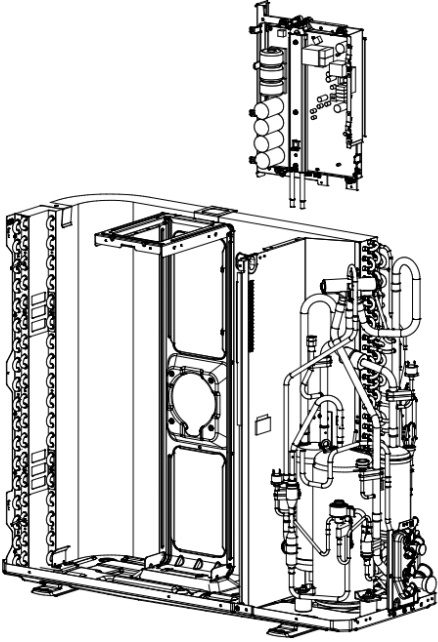
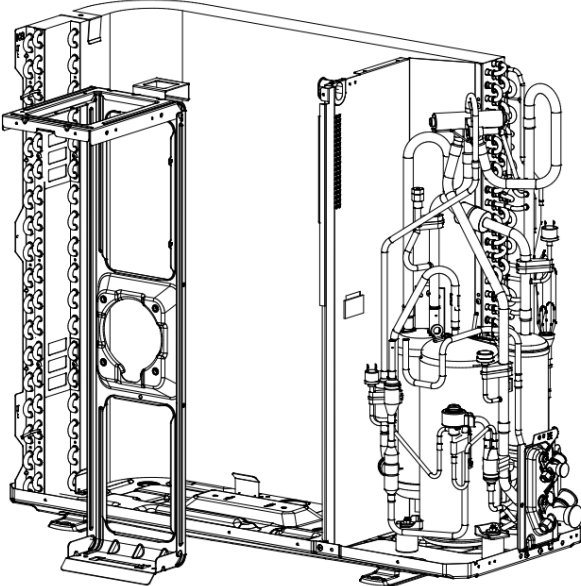
## Removal of Condenser

Removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>1. Remove the panels.</p>		<ul style="list-style-type: none"> <li>● Remove the upper, lower and front panels.</li> </ul>

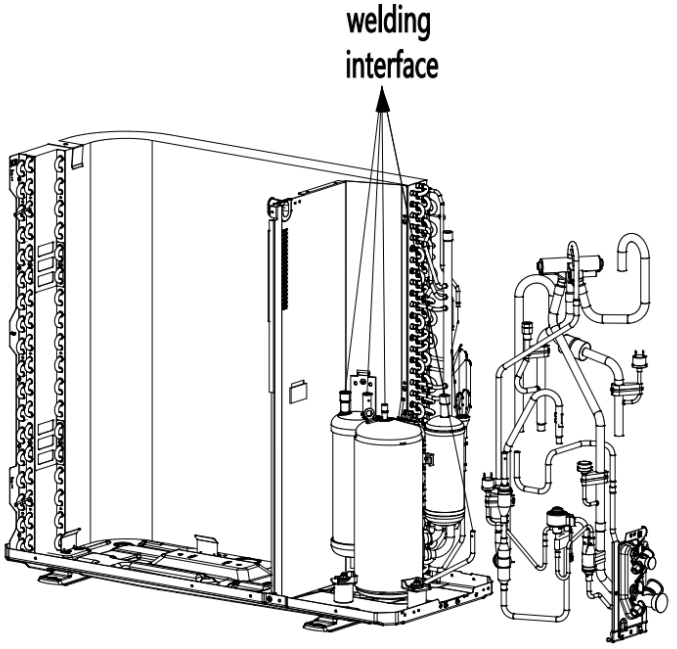
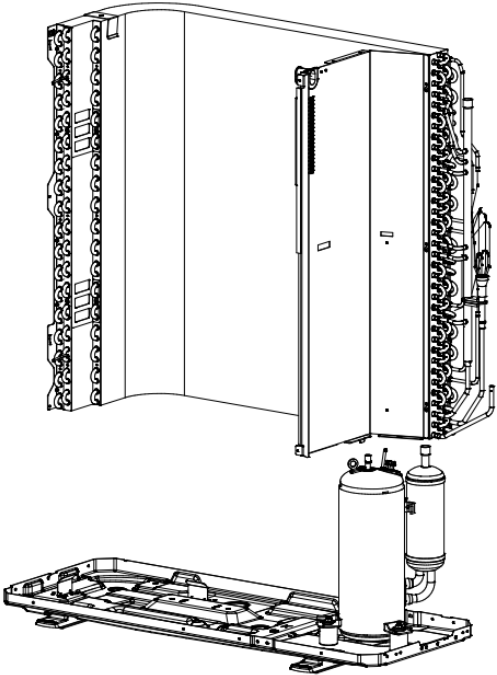
## Removal of Condenser

Removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>2. Remove the electric box.</p>		<ul style="list-style-type: none"> <li>● Loosen the wire clamp at the bottom of the electric box.</li> <li>● Unscrew the screws of electric box.</li> <li>● The connection wires inside and outside the electric box should be removed.</li> </ul>
<p>3. Remove motor support.</p>		<ul style="list-style-type: none"> <li>● When removing the motor support, be careful to protect the components.</li> </ul>

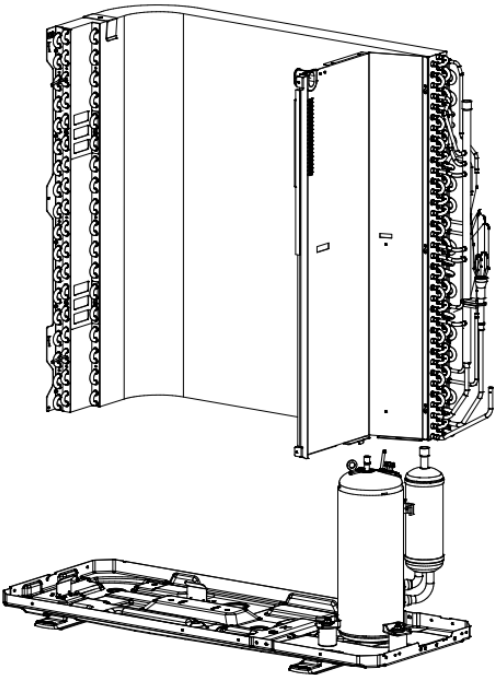
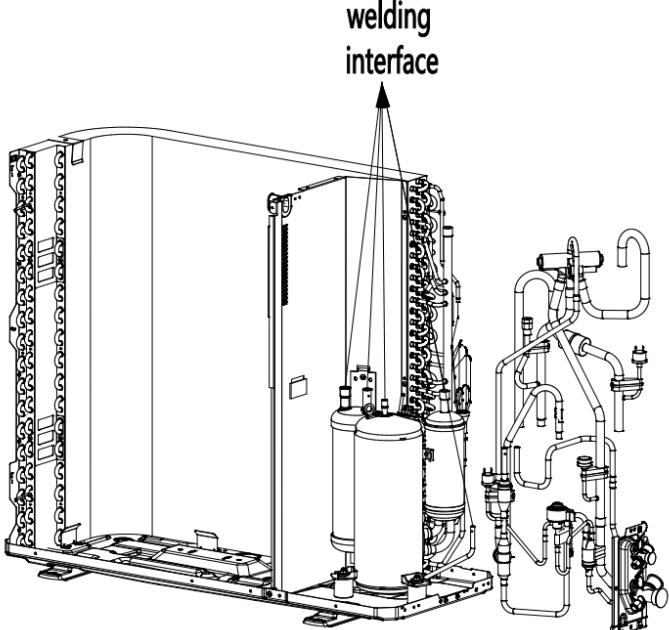
## Removal of Condenser

Removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>4. Break off the connection pipes.</p>	 <p>welding interface</p>	<ul style="list-style-type: none"> <li>● Heat up the welding points of connection pipes through gas welding until the pipes break off.</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components. The welding points of condenser are steel and copper welding points. Be sure to maintain the welding quality.</li> </ul>
<p>5. Take out the condenser.</p>		<ul style="list-style-type: none"> <li>● Loosen the securing screws of condenser support. Take off the plate type heat exchanger and the support as a whole.</li> </ul>

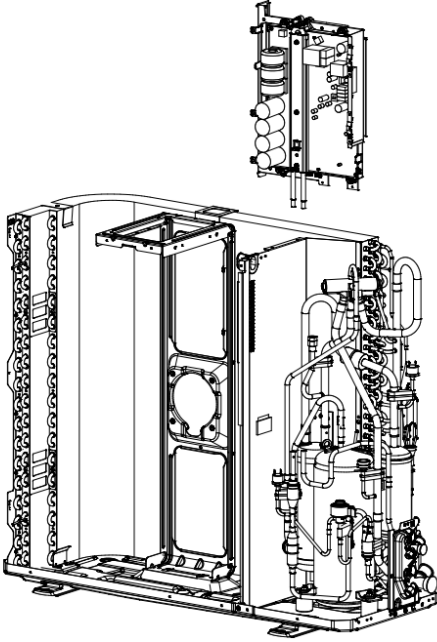
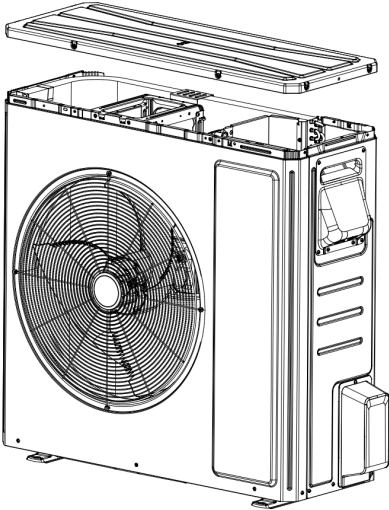
## Removal of Condenser

Removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>6. Install the new condenser.</p>		<ul style="list-style-type: none"> <li>Secure the screws of condenser and support. Then fix them together on the chassis.</li> </ul>
<p>7. Break off the connection pipes.</p>	 <p>welding interface</p>	<ul style="list-style-type: none"> <li>Install the condenser by referring to the positions of entering and leaving pipes. Weld the connection pipes.</li> <li>Nitrogen welding: the pressure of nitrogen is <math>0.5 \pm 0.1 \text{ kgf/cm}^2</math> (relative pressure).</li> <li><b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>

## Removal of Condenser

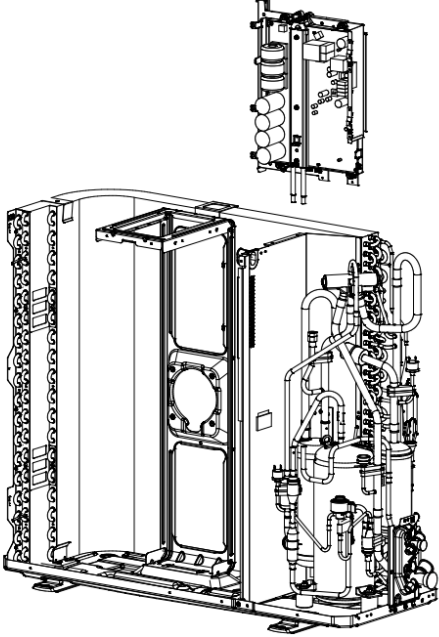
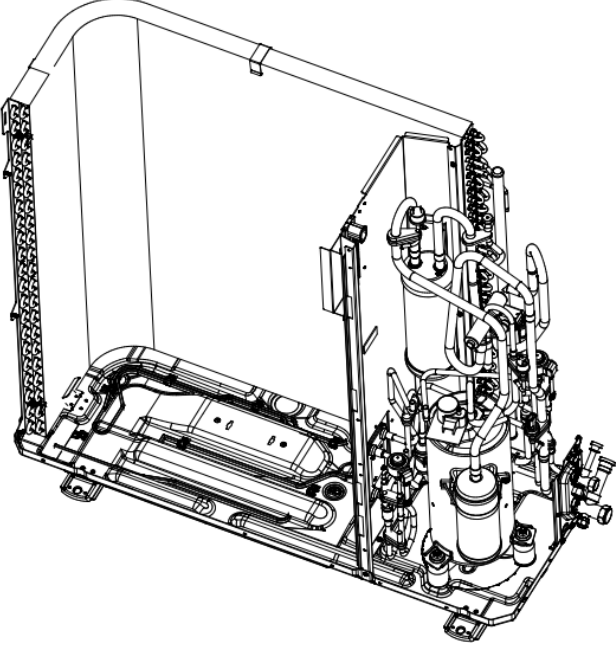
Removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

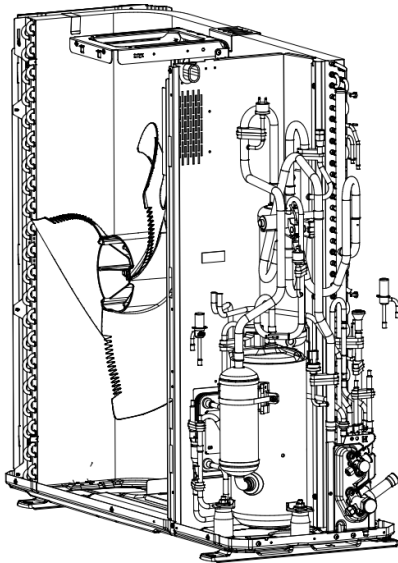
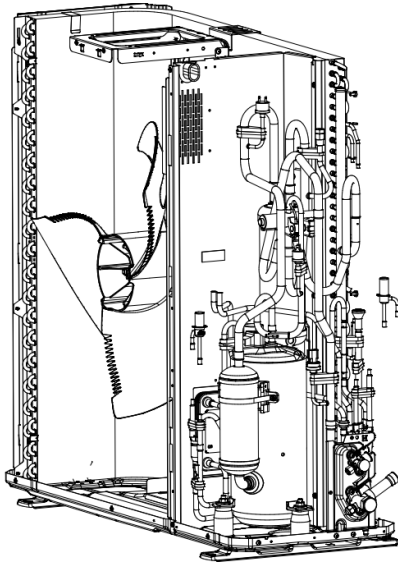
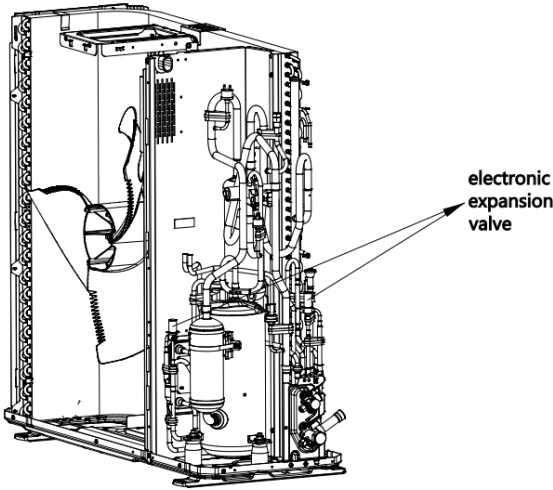
Step	Picture	Work Instruction
<p>8. Secure the electric box and arrange the wires according to the requirement.</p>		<ul style="list-style-type: none"> <li>● Put the electric box in place and tighten up the screws of electric box.</li> <li>● Arrange and secure the wires as original.</li> </ul>
<p>9. Check and open the upper and side panels.</p>		<ul style="list-style-type: none"> <li>● Check whether each component and connection wire is well connected.</li> <li>● If everything is OK, place back the upper, left and right side panels.</li> </ul>

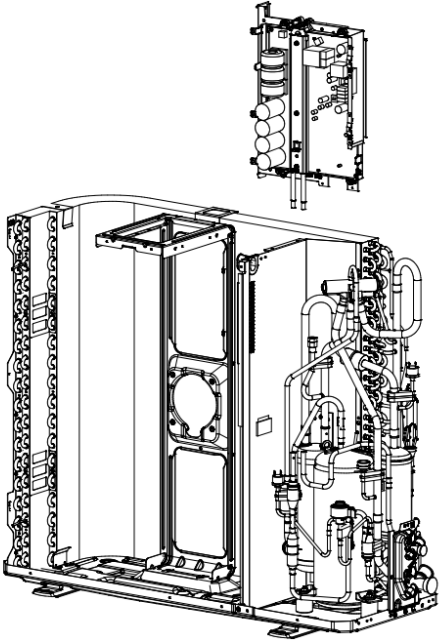
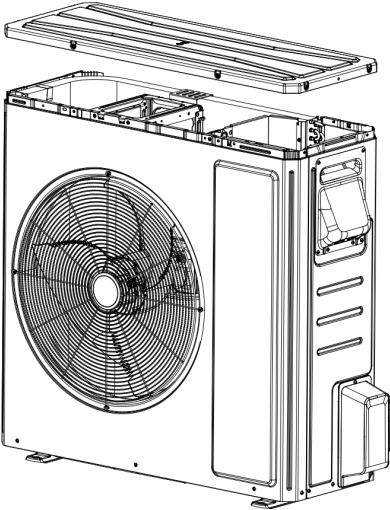
Model: FXU24HP230V1R32AO, FXU36HP230V1R32AO

### Removal of Electronic Expansion Valve

Removing the electronic expansion valve, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>1. Remove the electric box.</p>		<ul style="list-style-type: none"> <li>● Remove the upper, lower and front panels.</li> <li>● Loosen the wire clamp at the bottom of the electric box</li> <li>● Unscrew the screws of electric box.</li> <li>● The connection wires inside and outside the electric box should be removed.</li> <li>● When removing the electric box, be careful to protect the components.</li> </ul>
<p>2. Remove the fixed block.</p>		<ul style="list-style-type: none"> <li>● Remove the fixed block between the electronic expansion valve and the pipe.</li> </ul>

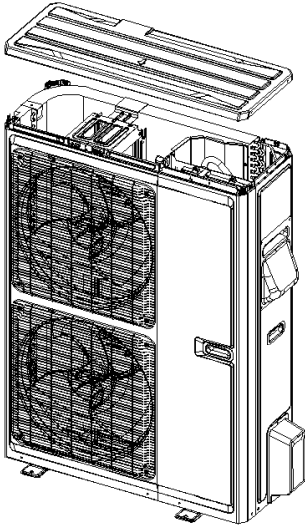
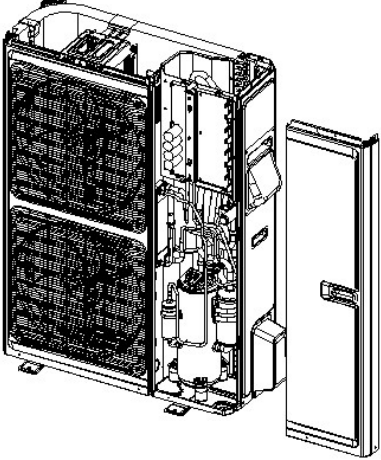
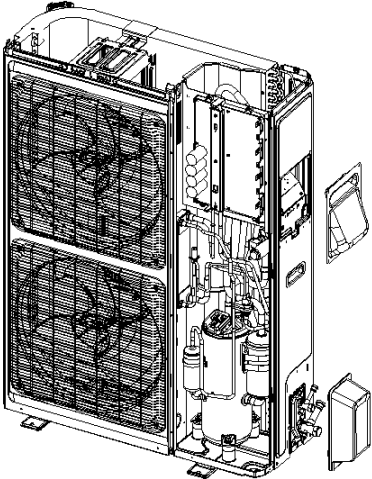
Removal of Electronic Expansion Valve		
Removing the electronic expansion valve, make sure there is no refrigerant in the pipeline and power is cut off.		
Step	Picture	Work Instruction
3. Remove the electronic expansion valve.		<ul style="list-style-type: none"> <li>● Take off the coil of electronic expansion valve.</li> <li>● Loosen the connection pipe of electronic expansion valve by welding. Then remove the connection pipe.</li> <li>● <b>NOTE:</b> When welding the pipe, do not let the flame bunt the other components.</li> </ul>
4. Take out the electronic expansion valve.		<ul style="list-style-type: none"> <li>● Take out the electronic expansion valve.</li> </ul>
5. Install the new electronic expansion valve.		<ul style="list-style-type: none"> <li>● Weld the connection pipe of electronic expansion valve.</li> <li>● When welding the electronic expansion valve, the valve should be wrapped with wet cloth.</li> <li>● Nitrogen welding: the pressure of nitrogen is <math>0.5 \pm 0.1 \text{ kgf/cm}^2</math> (relative pressure). <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> <li>● Install the coil of electronic expansion valve.</li> </ul>

Removal of Electronic Expansion Valve		
Removing the electronic expansion valve, make sure there is no refrigerant in the pipeline and power is cut off.		
Step	Picture	Work Instruction
<p>6. Secure the electric box and arrange the wires as required.</p>	 <p>The diagram illustrates the internal structure of the condensing unit. An electric box is shown being positioned and secured within the unit's frame. Wires are shown being routed and organized according to the original configuration.</p>	<ul style="list-style-type: none"> <li>● Put the electric box back in place and tighten up the screws.</li> <li>● Arrange the wires as original.</li> </ul>
<p>7. Check and open the upper and front panels.</p>	 <p>The diagram shows the condensing unit with its upper and front panels removed, revealing the internal fan and other components. The panels are shown floating above the unit, indicating they have been taken off.</p>	<ul style="list-style-type: none"> <li>● Check whether each component and connection wire is well connected.</li> <li>● If everything is OK, install the upper, left and right panels. Tighten up the screws.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

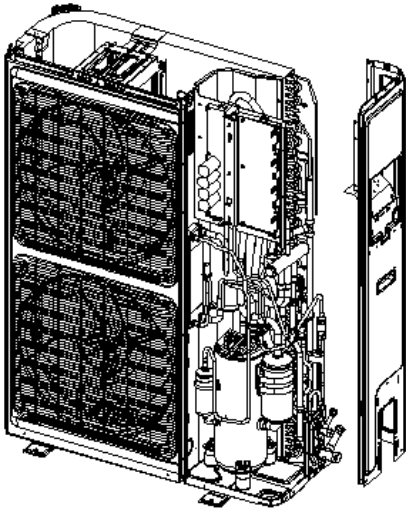
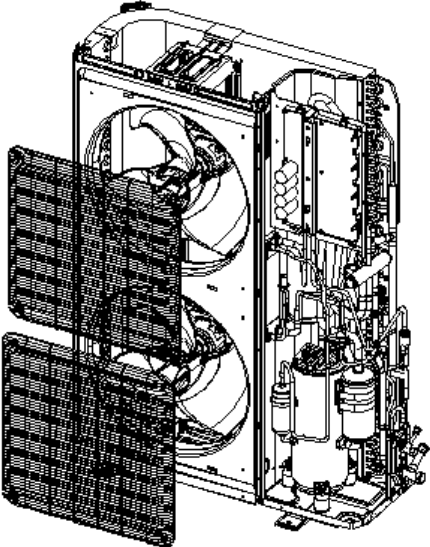
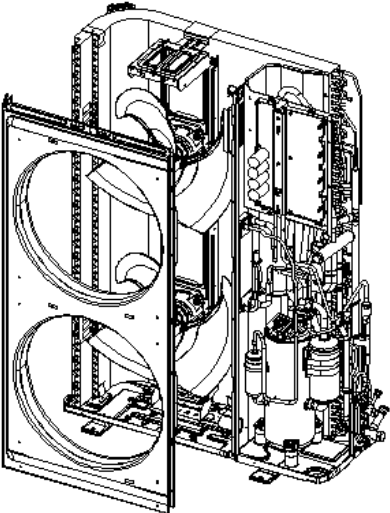
Removal of Front Panel

**NOTE:** Before removing the front panel, make sure power is cut off.

Step	Picture	Work Instruction
<p>1. Remove the upper cover plate.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws of the upper cover plate with a screwdriver.</li> </ul>
<p>2. Remove the front panel.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws of the upper and front side plate with a screwdriver.</li> </ul>
<p>3. Remove the handle and the valve cover.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws that connect the handle to the electric box, and unscrew the screws that connect the valve cover to the right side plate.</li> </ul>

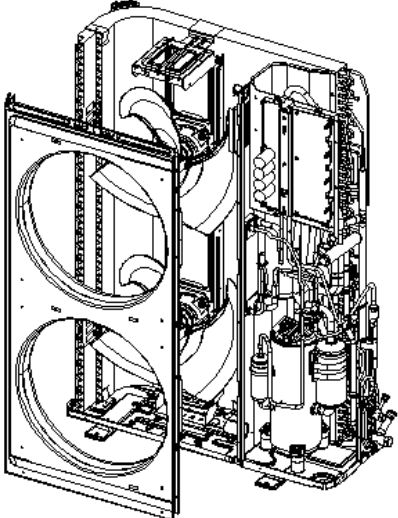
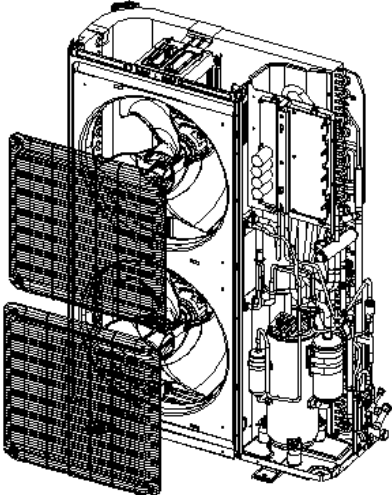
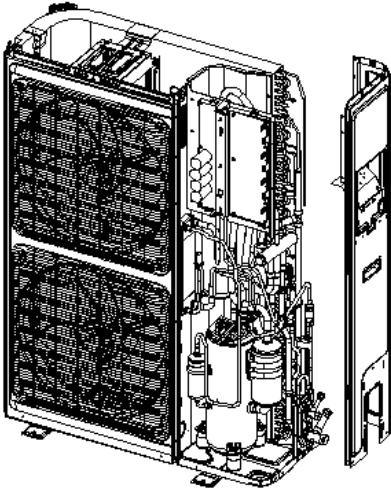
## Removal of Front Panel

**NOTE:** Before removing the front panel, make sure power is cut off.

Step	Picture	Work Instruction
4. Remove the right side plate.		<ul style="list-style-type: none"> <li>● Unscrew the screws that connect the right side plate to the electric box and the screws around the right side plate.</li> </ul>
5. Remove the front grill.		<ul style="list-style-type: none"> <li>● Unscrew the screws of the front grill with a screwdriver.</li> </ul>
6. Remove the cover panel.		<ul style="list-style-type: none"> <li>● Unscrew the screws of the cover plate with a screwdriver.</li> </ul>

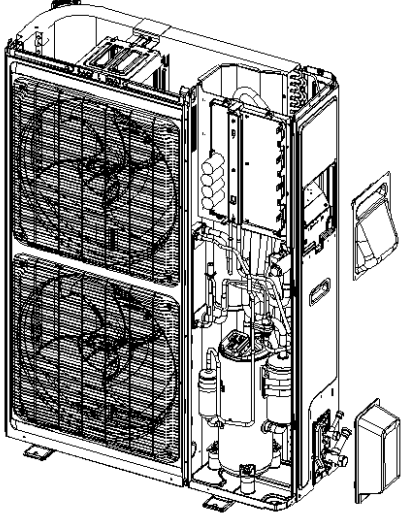
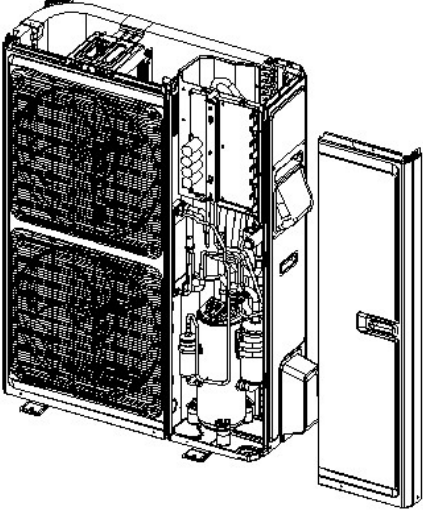
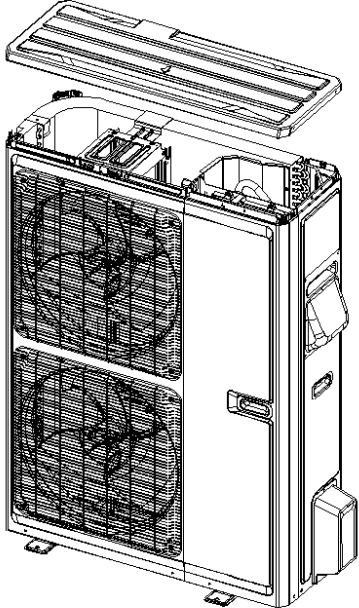
## Removal of Front Panel

**NOTE:** Before removing the front panel, make sure power is cut off.

Step	Picture	Work Instruction
7. Install the cover panel.		<ul style="list-style-type: none"> <li>● Screw up the screws around the cover panel.</li> </ul>
8. Install the front grill.		<ul style="list-style-type: none"> <li>● Attach the grill back in place and tighten up the screws.</li> </ul>
9. Install the right side plate.		<ul style="list-style-type: none"> <li>● Screw up the screws around the right side plate. Be careful to handle well the clasps at the bottom of the right side plate.</li> </ul>

## Removal of Front Panel

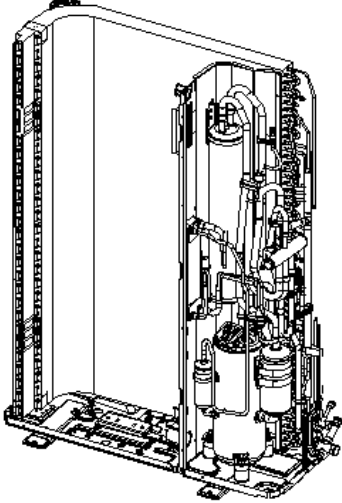
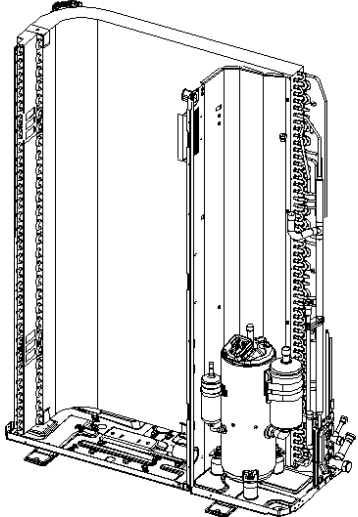
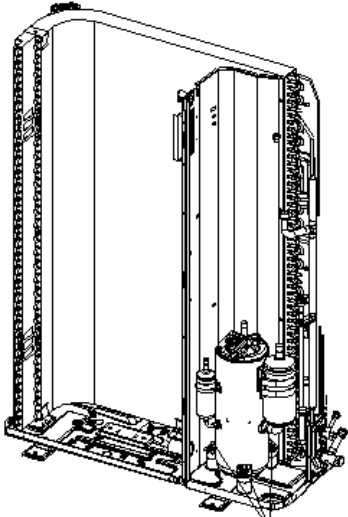
**NOTE:** Before removing the front panel, make sure power is cut off.

Step	Picture	Work Instruction
10. Install the handle and the valve cover.		<ul style="list-style-type: none"> <li>● Install the valve cover by mounting on 4 clasps on its both sides.</li> </ul>
11. Install the front panel.		<ul style="list-style-type: none"> <li>● Install the front panel by mounting on 5 clasps on its both sides. Please note that there is one screw on the lower right side.</li> </ul>
12. Install the upper cover plate.		<ul style="list-style-type: none"> <li>● Tighten up the screws around the upper cover plate.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

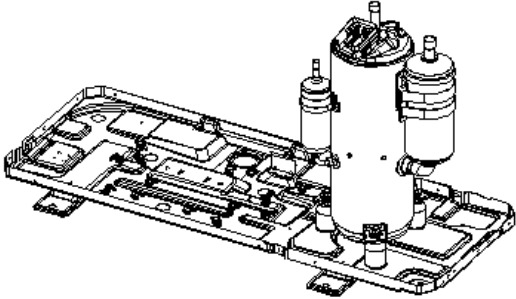
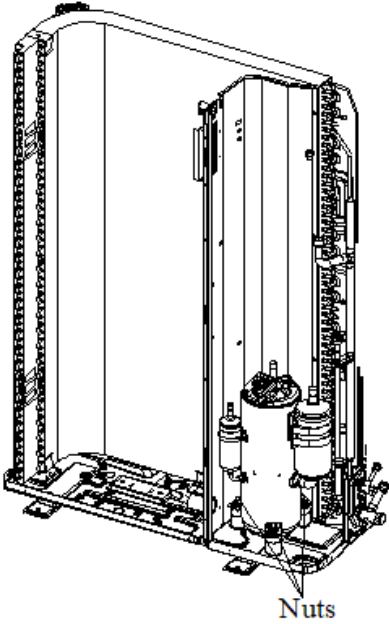
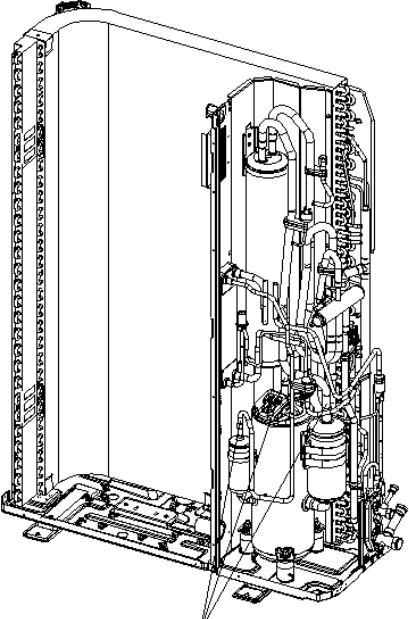
Removal of Compressor

**NOTE:** Before removing the compressor, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>1. Remove wires.</p>		<ul style="list-style-type: none"> <li>● Loosen the securing screws of the wires with a screwdriver.</li> <li>● Remove the wires.</li> <li>● <b>NOTE:</b> When removing the wires, mark the wire terminals corresponding to their color so as to avoid misconnection.</li> </ul>
<p>2. Break off the pipes that connecting to the compressor.</p>		<ul style="list-style-type: none"> <li>● Weld the pipes that are connected to the compressor.</li> <li>● Then remove the pipes.</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>
<p>3. Loosen the compressor's base connectors.</p>	 <p style="text-align: center;">Nuts</p>	<ul style="list-style-type: none"> <li>● Use a wrench to twist off the compressor's base nuts.</li> </ul>

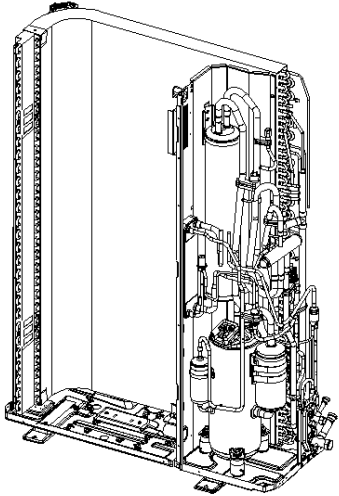
## Removal of Compressor

**NOTE:** Before removing the compressor, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>4. Remove the compressor from the chassis.</p>		<ul style="list-style-type: none"> <li>● Take away the compressor and replace with a new one.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>
<p>5. Install the new compressor onto the chassis.</p>	 <p style="text-align: center;">Nuts</p>	<ul style="list-style-type: none"> <li>● After replacing the compressor, tighten up the base screw nuts.</li> </ul>
<p>6. Connect the welding interfaces of compressor to the pipeline.</p>	 <p style="text-align: center;">Pipe welding interface</p>	<ul style="list-style-type: none"> <li>● Weld the connection pipes of compressor so as to connect them to the compressor.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>

## Removal of Compressor

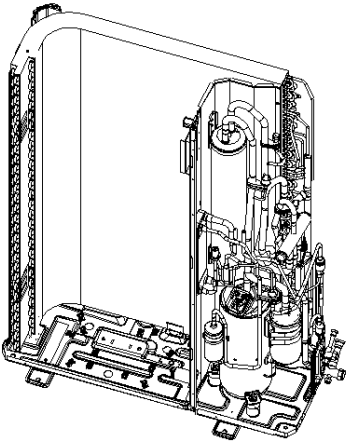
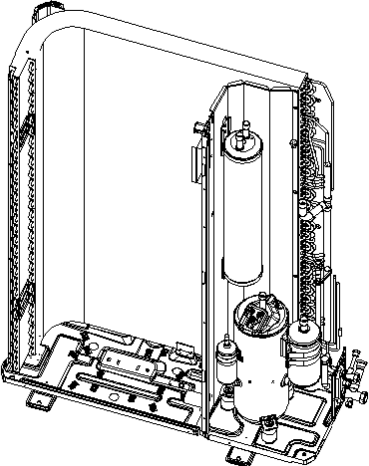
**NOTE:** Before removing the compressor, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
7. Connect the compressor wires.		<ul style="list-style-type: none"> <li>● Connect the compressor wires to the wire terminals on the top of compressor.</li> <li>● <b>NOTE:</b> When connecting the wires, be sure to match the colors with the corresponding wire terminals.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

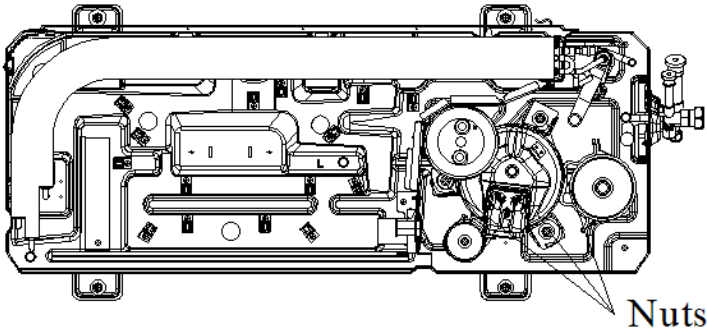
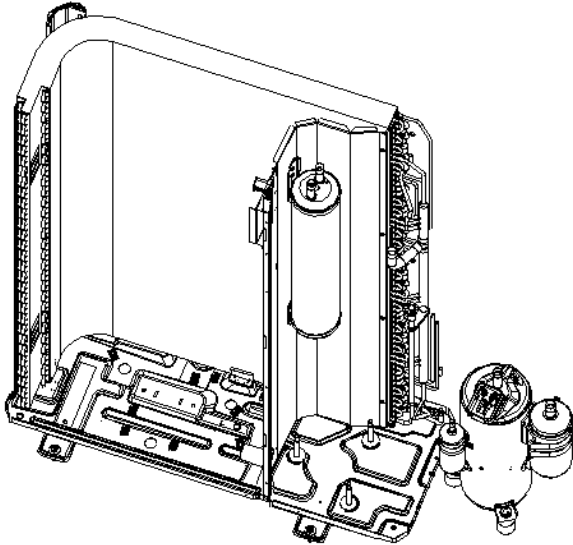
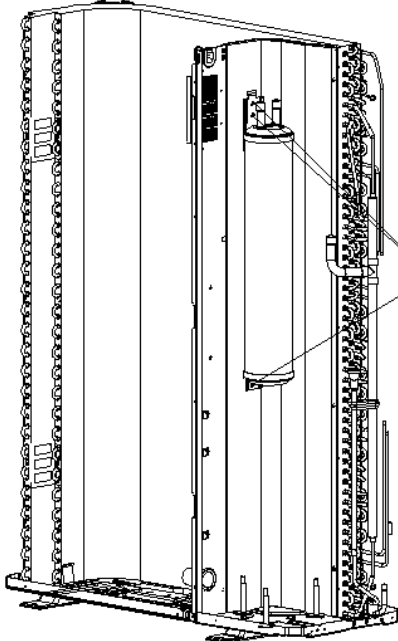
## Removal of Compressor/Gas Liquid Separator

**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
1. Remove wires.		<ul style="list-style-type: none"> <li>● Loosen the securing screws of the wires with a screwdriver.</li> <li>● Remove the wires.</li> <li>● <b>NOTE:</b> When removing the wires, mark the wire terminals corresponding to their color so as to avoid misconnection.</li> </ul>
2. Break off the pipes that connecting to the compressor/gas liquid separator.		<ul style="list-style-type: none"> <li>● Weld the pipes that are connected to the compressor/gas liquid separator.</li> <li>● Then remove the pipes.</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>

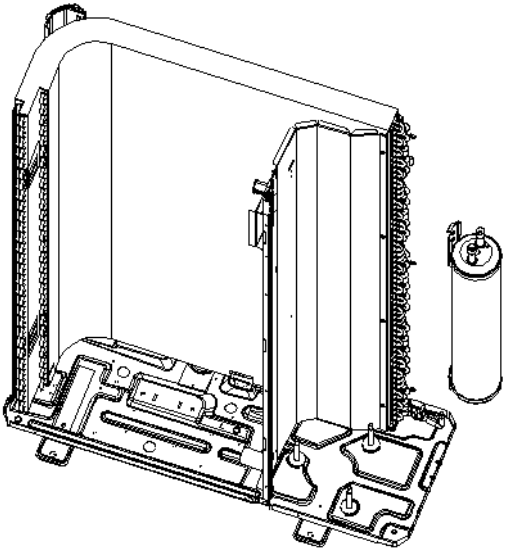
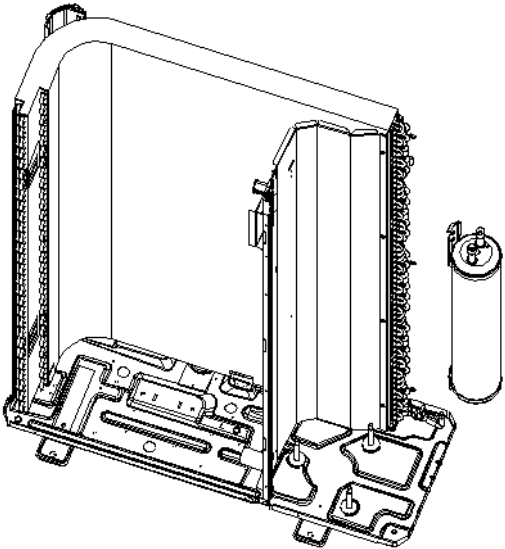
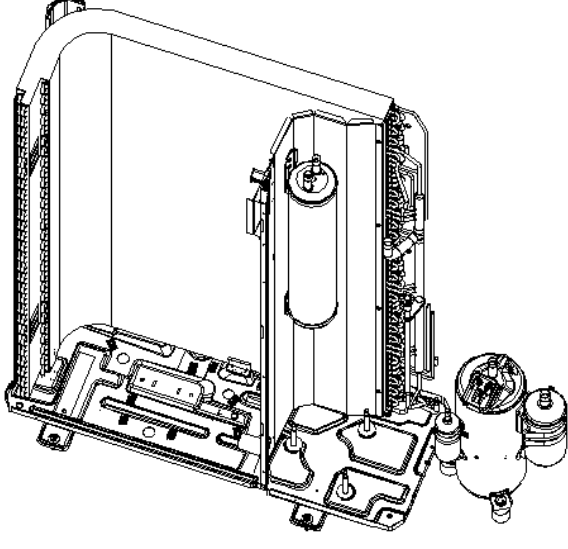
## Removal of Compressor/Gas Liquid Separator

**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>3. Loosen the compressor's base connectors.</p>	 <p style="text-align: right;">Nuts</p>	<ul style="list-style-type: none"> <li>● Use a wrench to twist off the compressor's base nuts.</li> </ul>
<p>4. Remove the compressor from the chassis.</p>		<ul style="list-style-type: none"> <li>● Take away the compressor and replace with a new one.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>
<p>5. Loosen the gas liquid separator's base nuts.</p>	 <p style="text-align: right;">Screws</p>	<ul style="list-style-type: none"> <li>● Use a wrench to twist off the gas liquid separator's base nuts.</li> </ul>

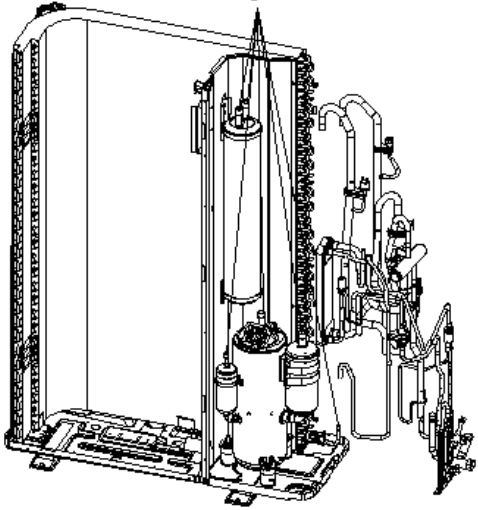
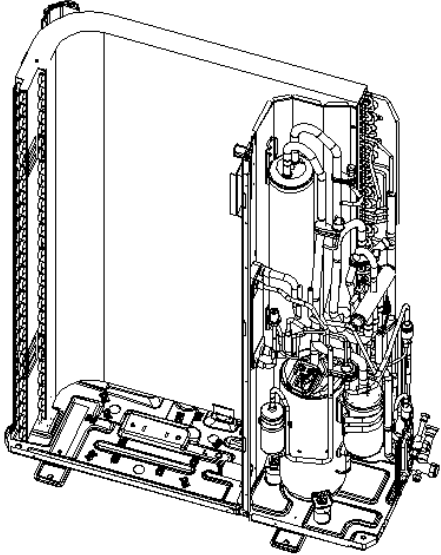
## Removal of Compressor/Gas Liquid Separator

**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>6. Remove the gas liquid separator from the chassis.</p>		<ul style="list-style-type: none"> <li>● Take away the gas liquid separator and replace with a new one.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>
<p>7. Install the new gas liquid separator onto the chassis.</p>		<ul style="list-style-type: none"> <li>● After replacing the gas liquid separator, tighten up the base screw nuts.</li> </ul>
<p>8. Install the new compressor onto the chassis.</p>		<ul style="list-style-type: none"> <li>● After replacing the compressor, tighten up the base screw nuts.</li> </ul>

## Removal of Compressor/Gas Liquid Separator

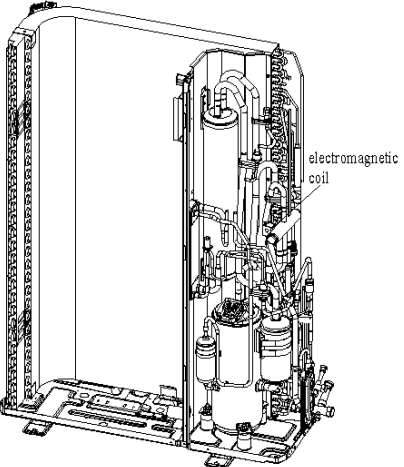
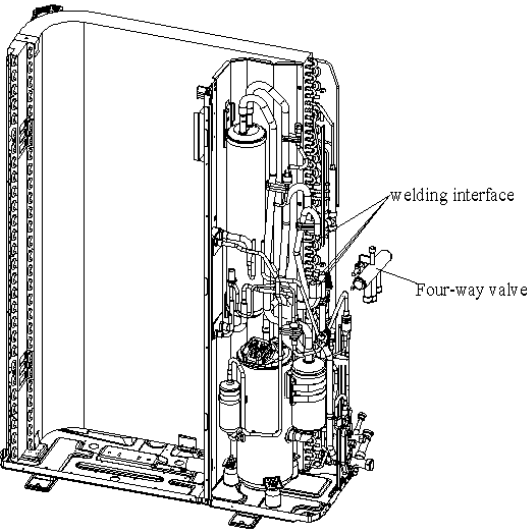
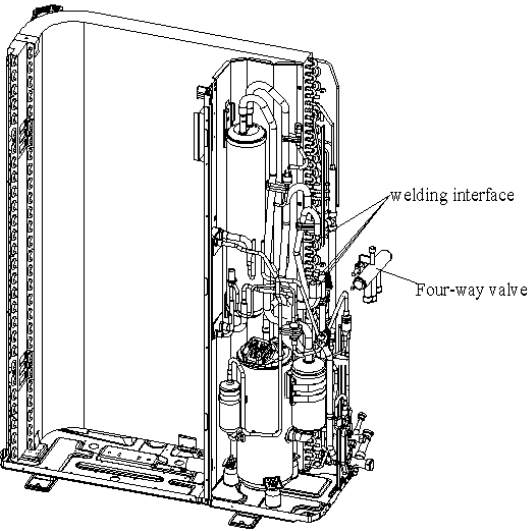
**NOTE:** Before removing the compressor/gas liquid separator, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>9. Connect the welding interfaces of compressor/gas liquid separator to the pipeline.</p>	<p>welding interface</p> 	<ul style="list-style-type: none"> <li>● Weld the connection pipes of compressor so as to connect them to the compressor.</li> <li>● <b>NOTE:</b> When replacing the compressor, avoid touching the nearby pipeline and components.</li> </ul>
<p>10. Connect the compressor wires.</p>		<ul style="list-style-type: none"> <li>● Connect the compressor wires to the wire terminals on the top of compressor.</li> <li>● <b>NOTE:</b> When connecting the wires, be sure to match the colors with the corresponding wire terminals.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

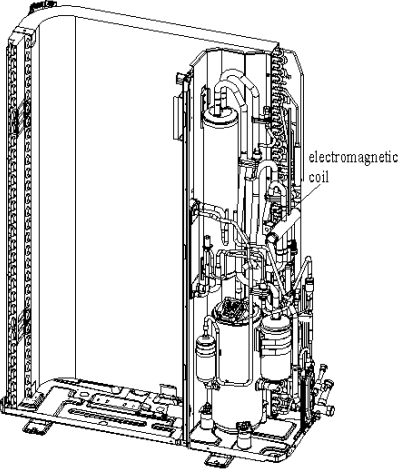
### Removal of 4-Way Valve

**NOTE:** Before removing the 4-way valve, make sure refrigerant is fully discharged from the unit and power is cut off.

Step	Picture	Work Instruction
<p>1. Take off the coil of the 4-way valve.</p>		<ul style="list-style-type: none"> <li>Carefully unscrew the screws of electromagnetic coil with a screwdriver.</li> </ul>
<p>2. Break off the connection pipes from the 4-way valve.</p>		<ul style="list-style-type: none"> <li>Use a soldering gun to loosen the 4 joints on the 4-way valve and then remove the connection pipes.</li> <li><b>NOTE:</b> When welding the pipes, the 4-way valve should be wrapped with wet cloth for cooling. Do not let the flame burn the other components.</li> </ul>
<p>3. Replace the 4-way valve and connect it to the connection pipes.</p>		<ul style="list-style-type: none"> <li>Replace the 4-way valve and then use a soldering gun to weld the 4 joints of the 4-way valve.</li> <li><b>NOTE:</b>When welding the pipes, the 4-way valve should be wrapped with wet cloth for cooling. Do not let the flame burn the other components.</li> </ul>

## Removal of 4-Way Valve

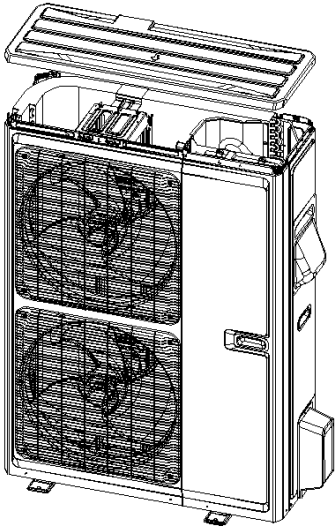
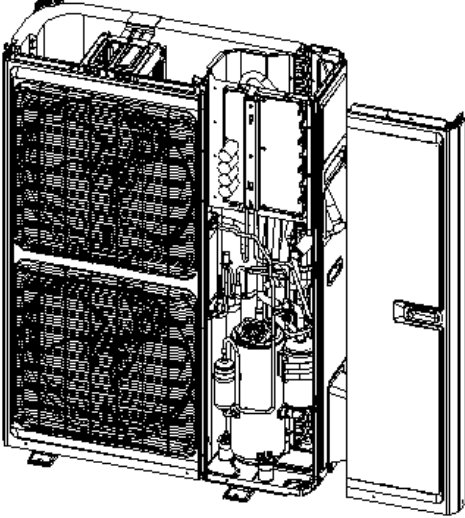
**NOTE:** Before removing the 4-way valve, make sure refrigerant is fully discharged from the unit and power is cut off.

Step	Picture	Work Instruction
4. Install the coil of 4-way valve.		<ul style="list-style-type: none"> <li>● Tighten the screws of the coil of 4-way valve with a screwdriver.</li> </ul>

**Model:**FXU48HP230V1R32AO, FXU60HP230V1R32AO

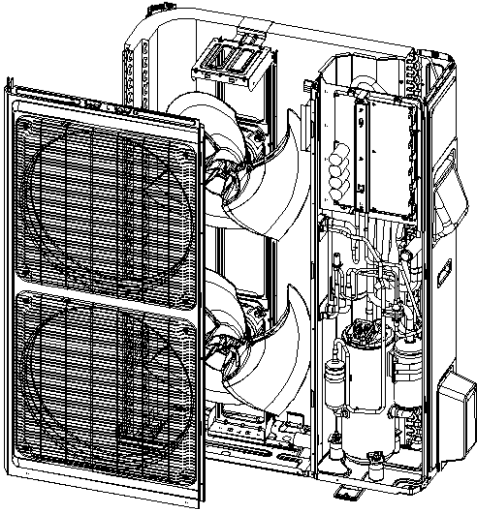
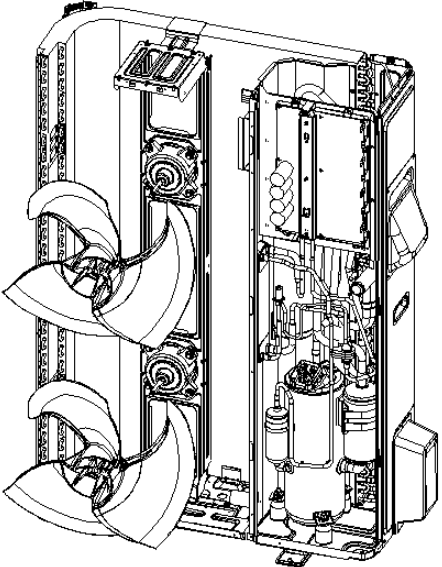
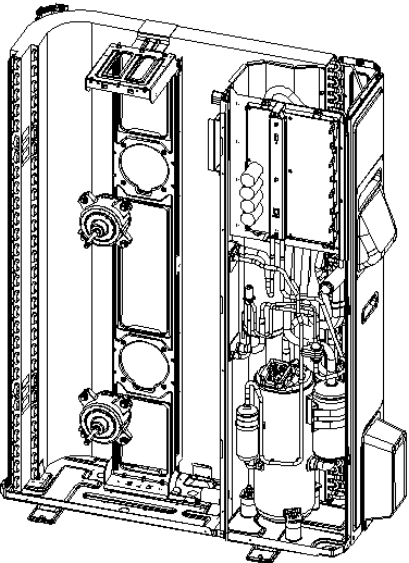
## Removal of Fan and Motor

**NOTE:** Before removing the fan, make sure power is cut off.

Step	Picture	Work Instruction
1. Remove the upper cover plate.		<ul style="list-style-type: none"> <li>● Unscrew the screws of the upper cover plate with a screwdriver.</li> </ul>
2. Remove the front panel.		<ul style="list-style-type: none"> <li>● Unscrew the screws of the upper and front side plate with a screwdriver.</li> </ul>

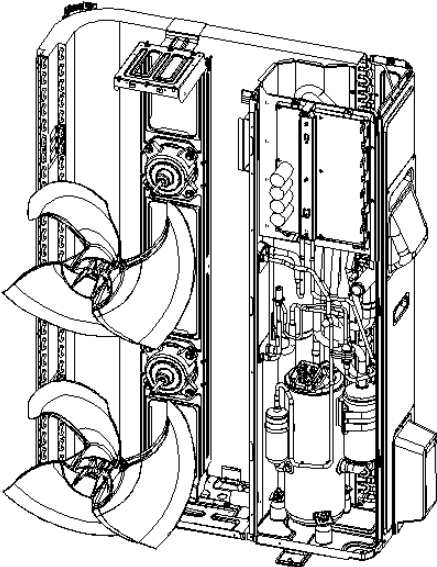
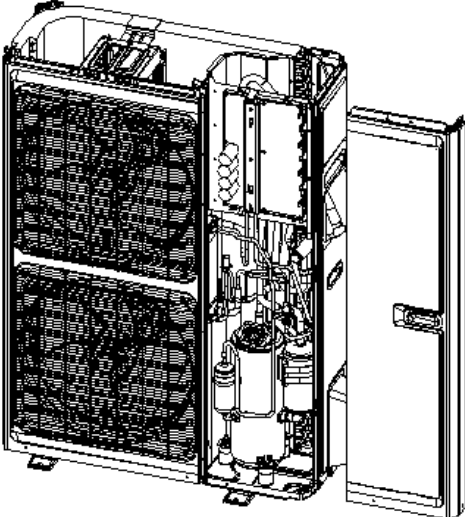
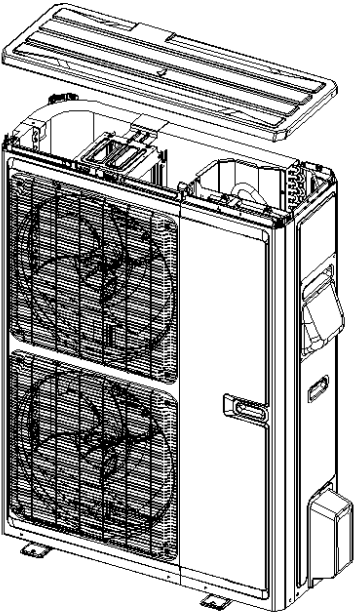
## Removal of Fan and Motor

**NOTE:** Before removing the fan, make sure power is cut off.

Step	Picture	Work Instruction
3. Install the cover panel.		<ul style="list-style-type: none"> <li>● Unscrew the screws of the cover plate with a screwdriver.</li> </ul>
4. Remove the fan.		<ul style="list-style-type: none"> <li>● Use a wrench to remove the specialized nut and gasket of the fan.</li> <li>● <b>NOTE:</b> Please keep the nut and gasket safe after removing them from the fan.</li> </ul>
5. Remove motor.		<ul style="list-style-type: none"> <li>● Use a screwdriver to unscrew the bolt of motor.</li> <li>● <b>NOTE:</b> Motor wire should be first removed from the electric box.</li> </ul>

## Removal of Fan and Motor

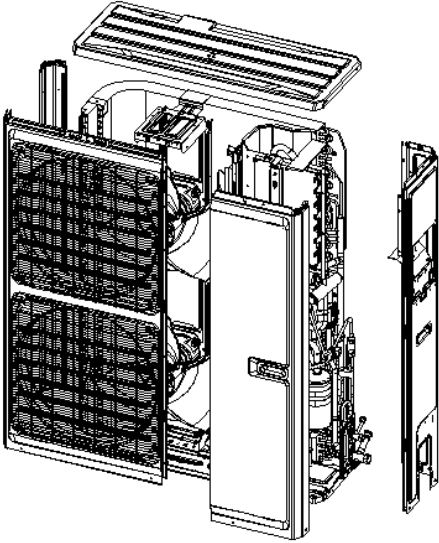
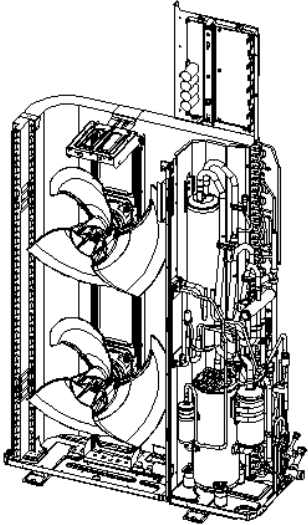
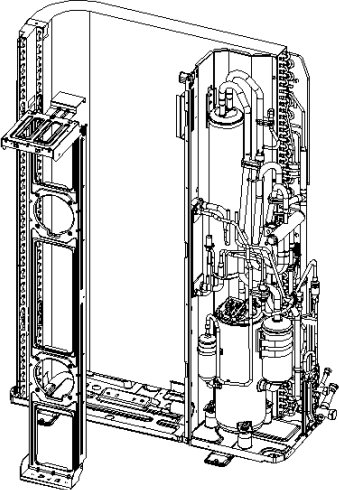
**NOTE:** Before removing the fan, make sure power is cut off.

Step	Picture	Work Instruction
6. Install the motor and fan.		<ul style="list-style-type: none"> <li>● Replace with a new motor. Then tighten up the screw bolt.</li> <li>● Install the fan in place. Put on the gasket and use a wrench to secure the screw nut.</li> <li>● <b>NOTE:</b> After installing the fan, turn the fan by hand to see if it can run normally. If not, please check for the reason.</li> </ul>
7. Install the cover panel and front panel.		<ul style="list-style-type: none"> <li>● Screw up the screws around the cover panel.</li> <li>● Install the front panel by mounting on 5 clasps on its both sides. Please note that there is one screw on the lower right side.</li> </ul>
8. Install the upper cover plate.		<ul style="list-style-type: none"> <li>● Tighten up the screws around the upper cover plate.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

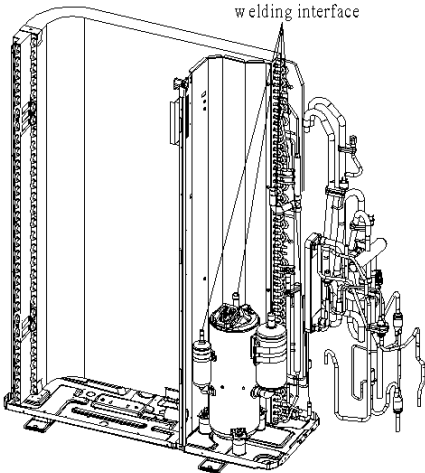
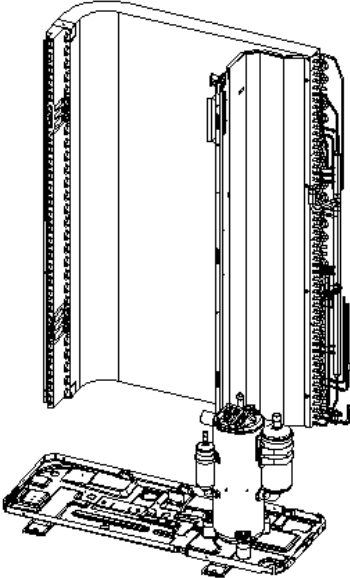
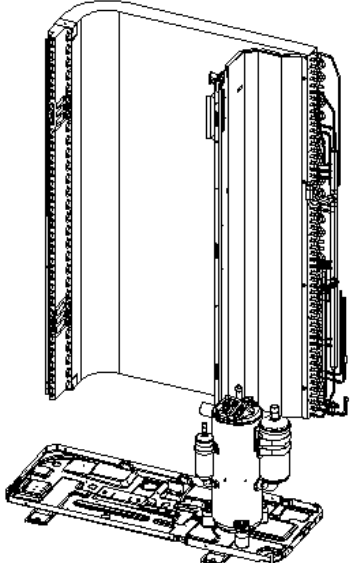
Removal of Condenser

**NOTE:** Before removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
1. Remove the panels.		<ul style="list-style-type: none"> <li>● Remove the upper, lower and front panels.</li> </ul>
2. Remove the electric box.		<ul style="list-style-type: none"> <li>● Loosen the wire clamp at the bottom of the electric box.</li> <li>● Unscrew the screws of electric box.</li> <li>● The connection wires inside and outside the electric box should be removed.</li> </ul>
3. Remove motor support.		<ul style="list-style-type: none"> <li>● When removing the motor support, be careful to protect the components.</li> </ul>

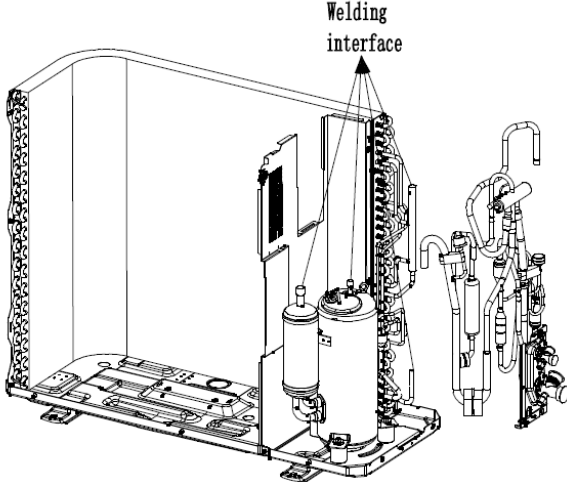
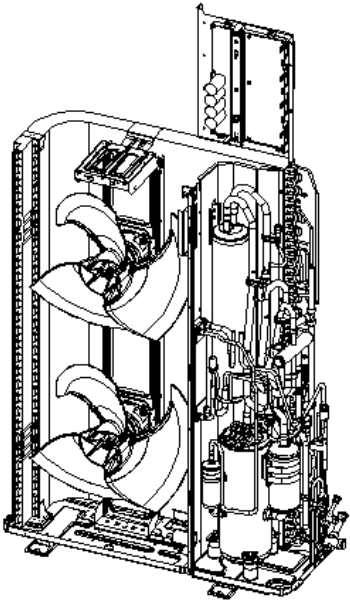
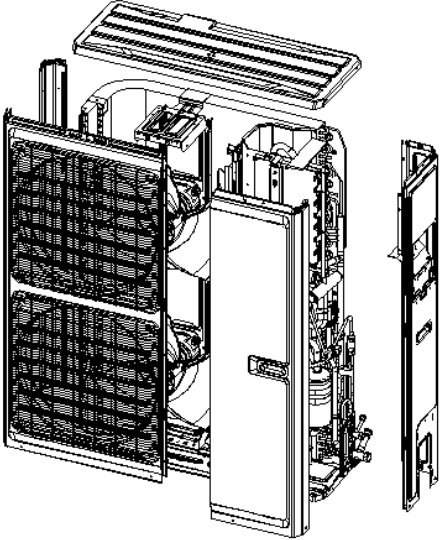
## Removal of Condenser

**NOTE:** Before removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>4. Break off the connection pipes</p>	 <p>The diagram shows a side view of the condenser unit with a welding torch positioned at the top of the connection pipes. A label 'welding interface' points to the area where the torch is applied.</p>	<ul style="list-style-type: none"> <li>● Heat up the welding points of connection pipes through gas welding until the pipes break off.</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components. The welding points of condenser are steel and copper welding points. Be sure to maintain the welding quality.</li> </ul>
<p>5. Take out the condenser.</p>	 <p>The diagram shows the condenser unit being lifted away from the chassis. The unit is shown in a vertical orientation, and the chassis is shown below it.</p>	<ul style="list-style-type: none"> <li>● Loosen the securing screws of condenser support. Take off the plate type heat exchanger and the support as a whole.</li> </ul>
<p>6. Install the new condenser.</p>	 <p>The diagram shows the new condenser unit being lowered into the chassis. The unit is shown in a vertical orientation, and the chassis is shown below it.</p>	<ul style="list-style-type: none"> <li>● Secure the screws of condenser and support. Then fix them together on the chassis.</li> </ul>

## Removal of Condenser

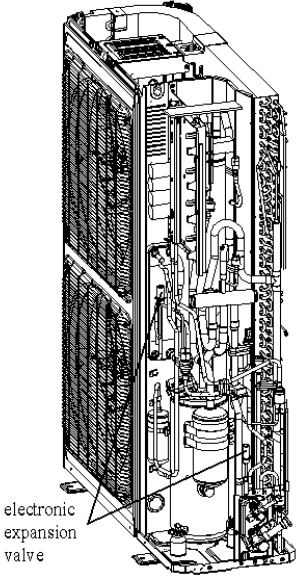
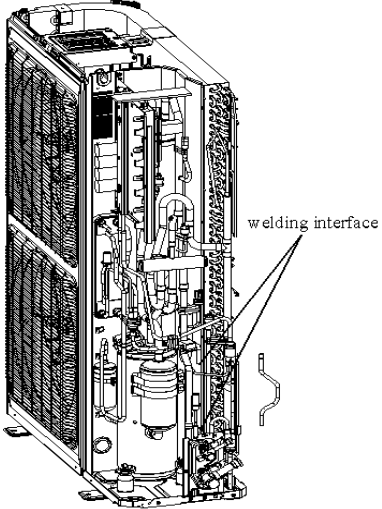
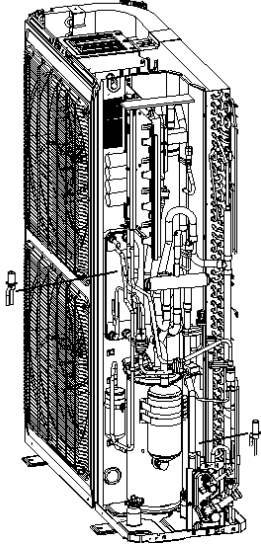
**NOTE:** Before removing the condenser, make sure there is no refrigerant in the pipeline and power is cut off.

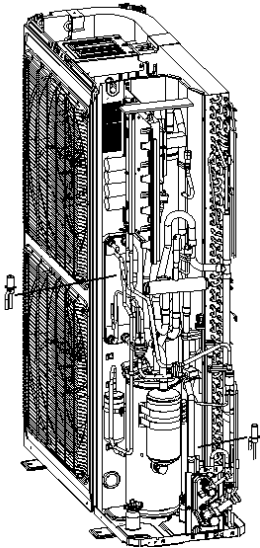
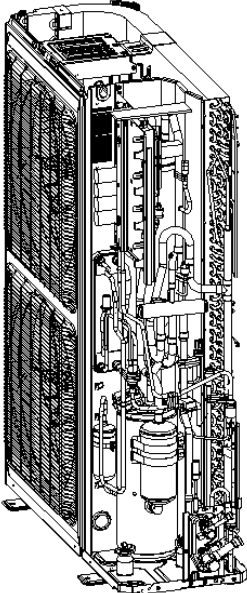
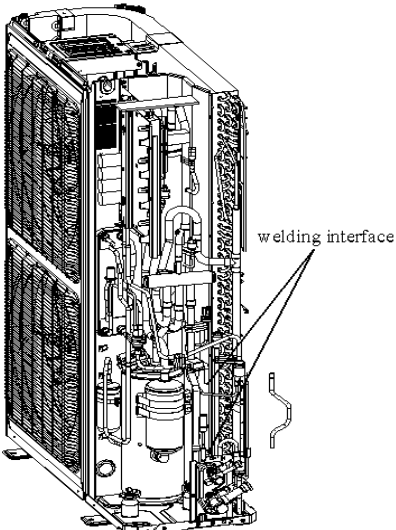
Step	Picture	Work Instruction
<p>7. Connect the welding interfaces</p>		<ul style="list-style-type: none"> <li>● Install the condenser by referring to the positions of entering and leaving pipes. Weld the connection pipes.</li> <li>● Nitrogen welding: the pressure of nitrogen is <math>0.5 \pm 0.1 \text{ kgf/cm}^2</math> (relative pressure).</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components</li> </ul>
<p>8. Secure the electric box and arrange the wires according to the requirement.</p>		<ul style="list-style-type: none"> <li>● Put the electric box in place and tighten up the screws of electric box.</li> <li>● Arrange and secure the wires as original.</li> </ul>
<p>9. Check and open the upper and side panels.</p>		<ul style="list-style-type: none"> <li>● Check whether each component and connection wire is well connected.</li> <li>● If everything is OK, place back the upper, left and right side panels.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

### Removal of Electronic Expansion Valve

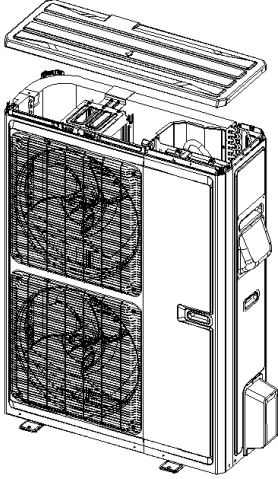
Removing the electronic expansion valve, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>1. Remove the panels.</p>		<ul style="list-style-type: none"> <li>● Remove the upper, lower and front panels.</li> </ul>
<p>2. Remove the pipe.</p>		<ul style="list-style-type: none"> <li>● Remove the pipe that interferes with welding.</li> </ul>
<p>3. Remove the electronic expansion valve.</p>		<ul style="list-style-type: none"> <li>● Take off the coil of electronic expansion valve.</li> <li>● Loosen the connection pipe of electronic expansion valve by welding. Then remove the connection pipe.</li> </ul> <p><b>NOTE:</b> When welding the pipe, do not let the flame bunt the other components.</p>

Removal of Electronic Expansion Valve		
Removing the electronic expansion valve, make sure there is no refrigerant in the pipeline and power is cut off.		
Step	Picture	Work Instruction
4. Take out the electronic expansion valve.		<ul style="list-style-type: none"> <li>● Take out the electronic expansion valve.</li> </ul>
5. Install the new electronic expansion valve.		<ul style="list-style-type: none"> <li>● Weld the connection pipe of electronic expansion valve.</li> <li>● When welding the electronic expansion valve, the valve should be wrapped with wet cloth.</li> <li>● Nitrogen welding: the pressure of nitrogen is <math>0.5 \pm 0.1 \text{ kgf/cm}^2</math> (relative pressure). <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>
6. Connect the welding interfaces.		<ul style="list-style-type: none"> <li>● When welding the pipes, do not let the flame burn the other components.</li> <li>● Install the coil of electronic expansion valve.</li> </ul>

## Removal of Electronic Expansion Valve

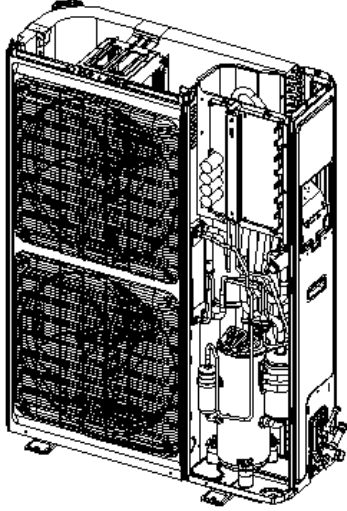
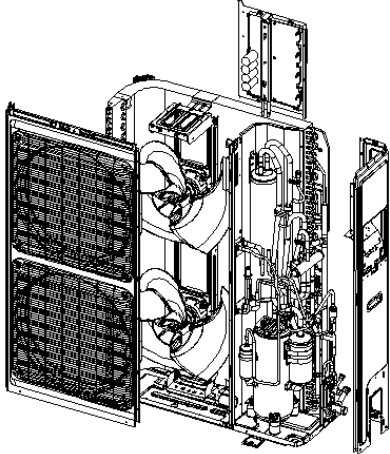
Removing the electronic expansion valve, make sure there is no refrigerant in the pipeline and power is cut off.

Step	Picture	Work Instruction
<p>7. Check and install the upper and front panels.</p>		<ul style="list-style-type: none"> <li>● Check whether each component and connection wire is well connected.</li> <li>● If everything is OK, install the upper, left and right panels. Tighten up the screws.</li> </ul>

**Model:** FXU48HP230V1R32AO, FXU60HP230V1R32AO

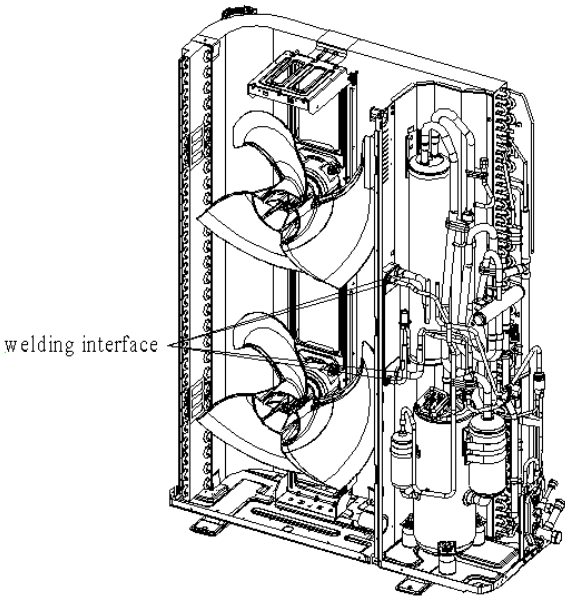
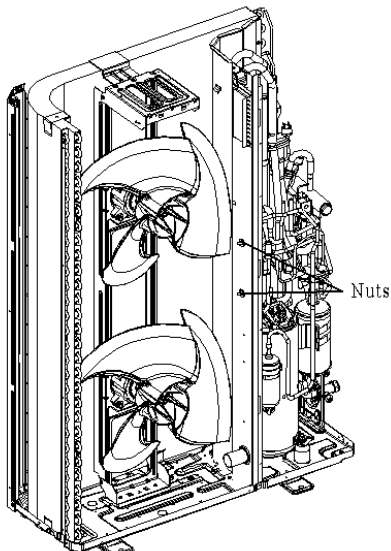
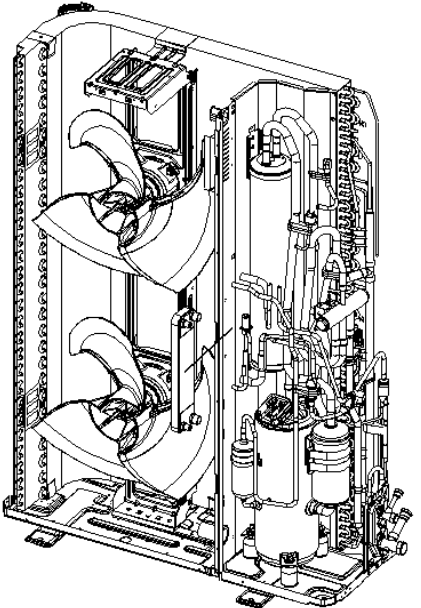
## Removal of Plate-type Heat Exchanger

**NOTE:** Before removing the plate heat exchanger, make sure refrigerant is fully discharged from the unit and power is cut off.

Step	Picture	Work Instruction
<p>1. Remove the upper cover and front plate.</p>		<ul style="list-style-type: none"> <li>● Unscrew the screws of the upper cover and front plate with a screwdriver.</li> </ul>
<p>2. Remove the other plates and the electric box.</p>		<ul style="list-style-type: none"> <li>● Loosen the wire clamp at the bottom of the electric box.</li> <li>● Unscrew the screws of electric box.</li> <li>● The connection wires inside and outside the electric box should be removed.</li> </ul>

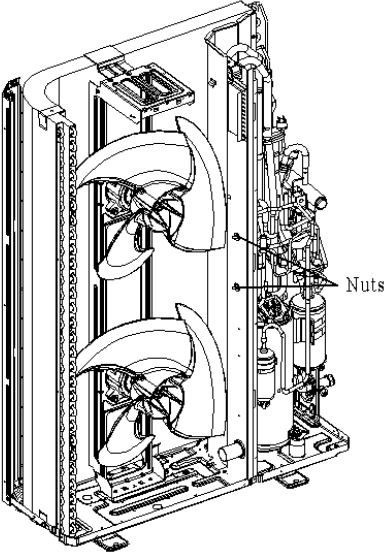
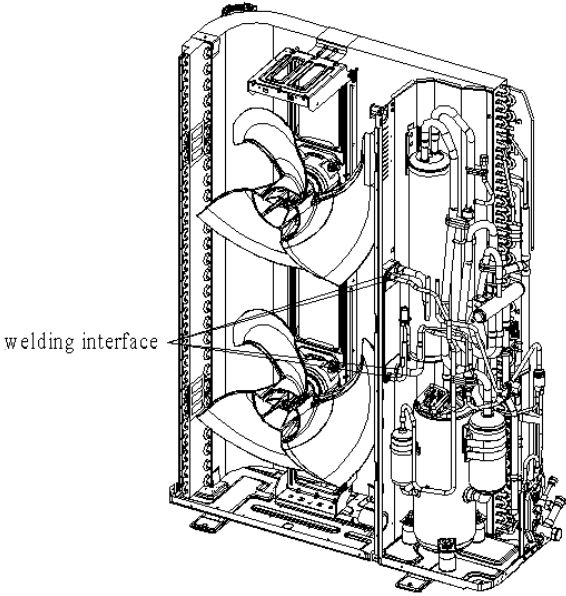
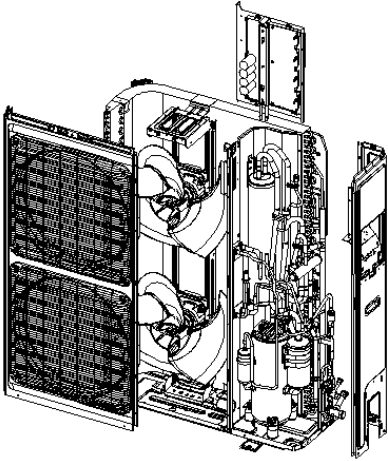
## Removal of Plate-type Heat Exchanger

**NOTE:** Before removing the plate heat exchanger, make sure refrigerant is fully discharged from the unit and power is cut off.

Step	Picture	Work Instruction
<p>3. Break off the connection pipes.</p>		<ul style="list-style-type: none"> <li>● Heat up the welding points of connection pipes through gas welding until the pipes break off.</li> </ul> <p><b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</p>
<p>4. Loosen the base connectors.</p>		<ul style="list-style-type: none"> <li>● Use a wrench to twist off the Plate-type Heat Exchanger's base nuts.</li> </ul>
<p>5. Remove the Plate-type Heat Exchanger.</p>		<ul style="list-style-type: none"> <li>● Take out the Plate-type Heat Exchanger.</li> </ul>

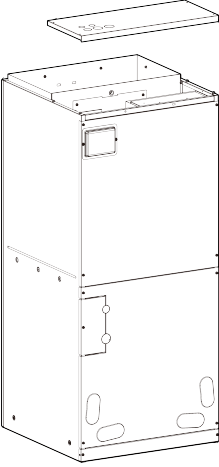
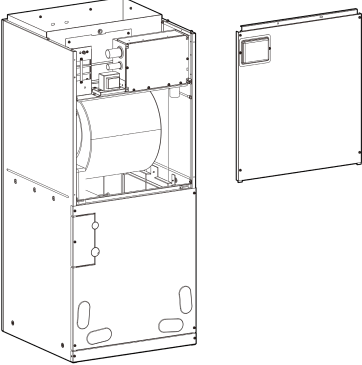
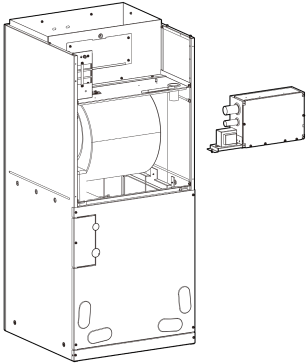
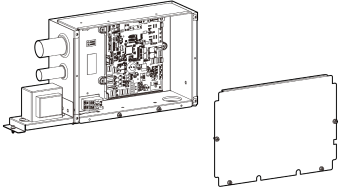
## Removal of Plate-type Heat Exchanger

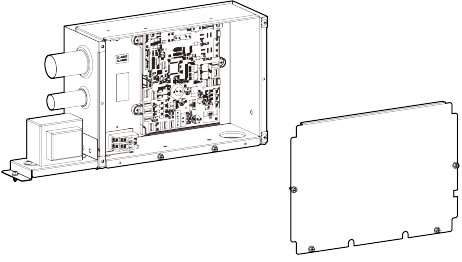
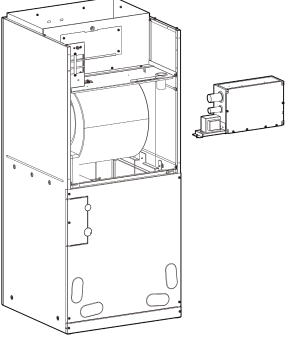
**NOTE:** Before removing the plate heat exchanger, make sure refrigerant is fully discharged from the unit and power is cut off.

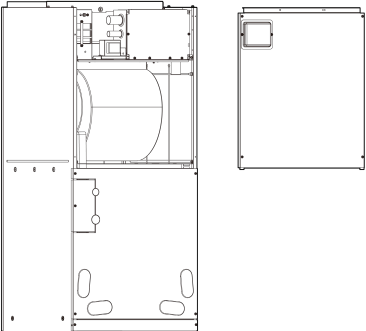
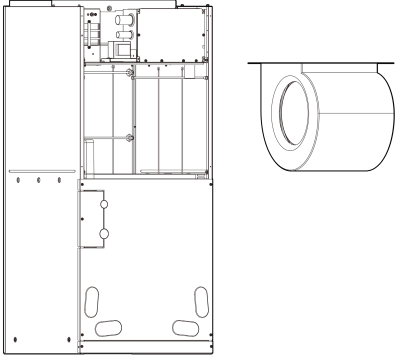
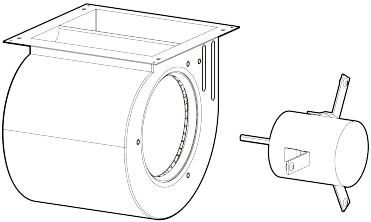
Step	Picture	Work Instruction
<p>6. Install the new Plate-type Heat Exchanger.</p>		<ul style="list-style-type: none"> <li>● After replacing the Plate-type Heat Exchanger, tighten up the screw nuts.</li> </ul>
<p>7. Connect the welding interfaces of Plate-type Heat Exchanger to the pipeline.</p>		<ul style="list-style-type: none"> <li>● Weld the connection pipes of Plate-type Heat Exchanger so as to connect them to the Plate-type Heat Exchanger.</li> <li>● <b>NOTE:</b> When welding the pipes, do not let the flame burn the other components.</li> </ul>
<p>8. Install the electric box and all the plates.</p>		<ul style="list-style-type: none"> <li>● Put the electric box in place and tighten up the screws of electric box.</li> <li>● Check whether each component and connection wire is well connected.</li> <li>● If everything is OK, place back the upper, left and right side panels.</li> </ul>

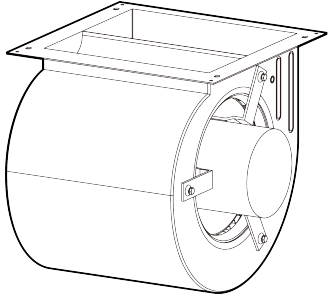
## 4.5.2 Removal of IDU Major Components

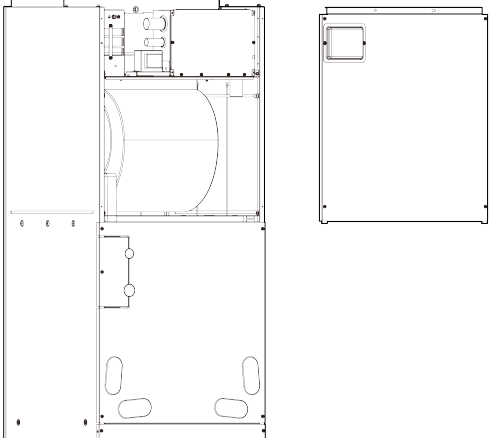
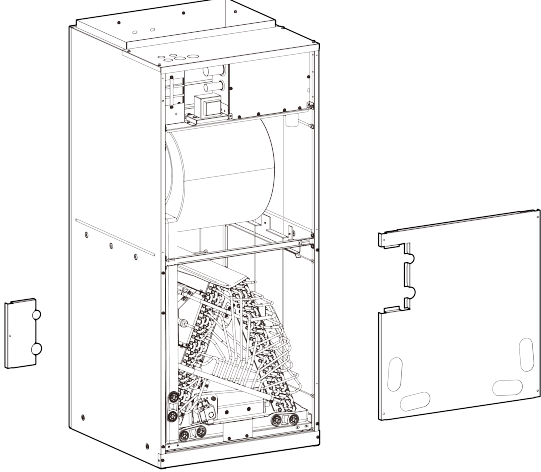
### 4.5.2.1 Air handler Unit

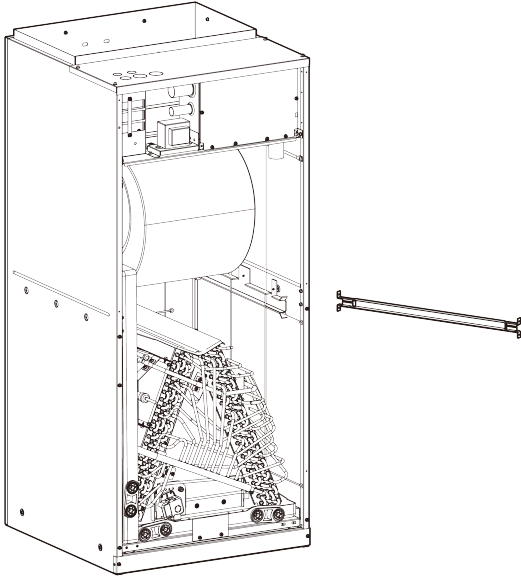
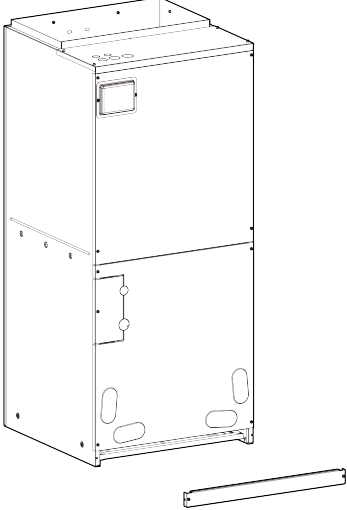
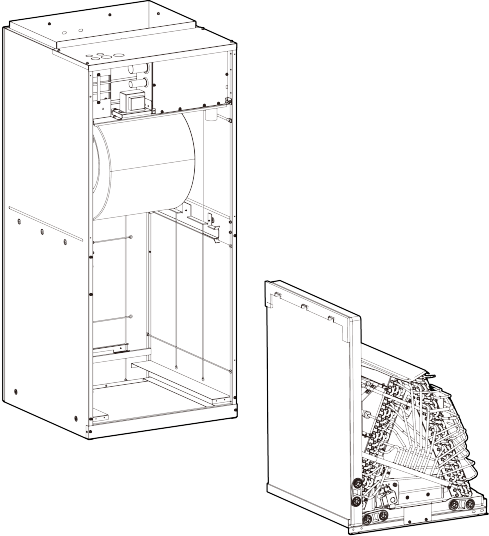
Disassembly and Assembly of the Electric Box		
Step	Picture	Work Instruction
1. Remove the upper panel.		<ul style="list-style-type: none"> <li>● Loosen screws around the upper panel with a screwdriver.</li> <li>● Remove the upper panel away from the unit.</li> </ul>
2. Remove the front panel.		<ul style="list-style-type: none"> <li>● Loosen screws around the upper panel with a screwdriver.</li> <li>● Remove the front panel away from the unit.</li> </ul>
3. Remove the electric box.		<ul style="list-style-type: none"> <li>● Disconnect the power cord and control line from the wiring terminals, and then draw them out.</li> <li>● Loosen screws around the electric box with a screwdriver.</li> <li>● Remove the electric box from the unit.</li> </ul>
4. Remove the electric element.		<ul style="list-style-type: none"> <li>● Disconnect the electric element from the wiring terminal.</li> <li>● Loosen screws around the electric element with a screwdriver.</li> <li>● Remove the electric element from the electric box.</li> </ul>

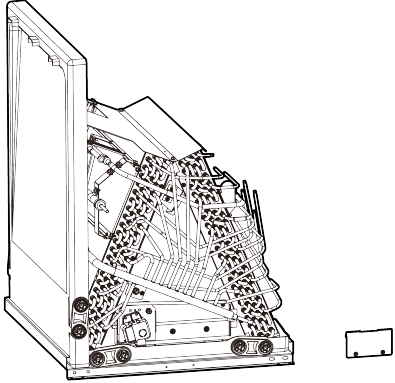
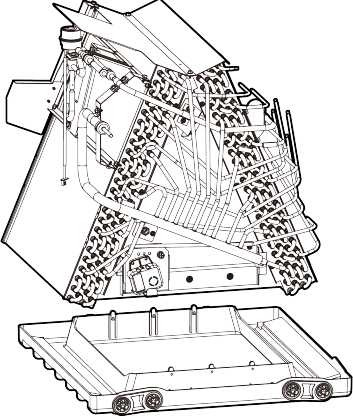
Disassembly and Assembly of the Electric Box		
Step	Picture	Work Instruction
5. Mount the new electric element.		<ul style="list-style-type: none"> <li>● Place the electric element at the proper position.</li> <li>● Tighten the screws around the electric element with a screwdriver.</li> <li>● Wire the electric element to the wiring terminal.</li> </ul>
6. Reinstall the electric box.		<ul style="list-style-type: none"> <li>● Place the electric box at the proper position.</li> <li>● Tighten screws around the electric box with a screwdriver.</li> <li>● Connect the power cord and control line properly.</li> <li>● Reassemble the unit as before.</li> </ul>

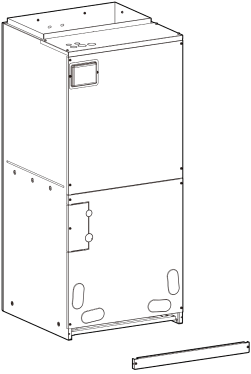
Disassembly and Assembly of the Fan Motor		
Step	Picture	Work Instruction
1. Remove the upper panel.		<ul style="list-style-type: none"> <li>● Loosen screws round the upper panel with a screwdriver.</li> <li>● Remove the upper panel from unit.</li> </ul>
2. Remove the fan.		<ul style="list-style-type: none"> <li>● Disconnect the wires of the fan from the wiring terminal and draw them out.</li> <li>● Loosen screws located at the front of the fan with a screwdriver.</li> <li>● Remove the fan from the unit.</li> </ul>
3. Remove the motor.		<ul style="list-style-type: none"> <li>● Loosen screws fixing the motor and fan blades.</li> <li>● Loosen screw bolts fixing the bracket.</li> <li>● Remove the motor rightward from the fan.</li> </ul>

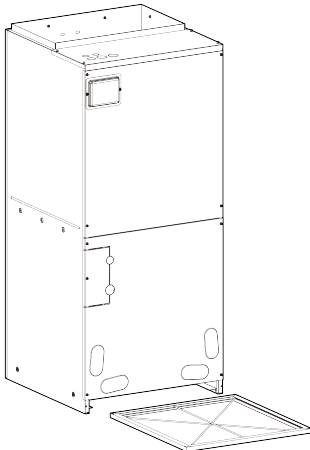
Disassembly and Assembly of the Fan Motor		
Step	Picture	Work Instruction
4. Reinstall the fan.		<ul style="list-style-type: none"> <li>● Place the motor at the proper position.</li> <li>● Tighten screws fixing the motor and fan blades.</li> <li>● Tighten screw bolts fixing the motor bracket.</li> <li>● After the installation, reassemble the unit as before.</li> </ul>

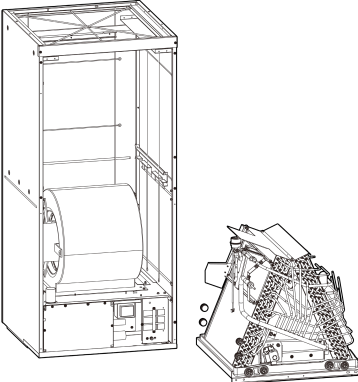
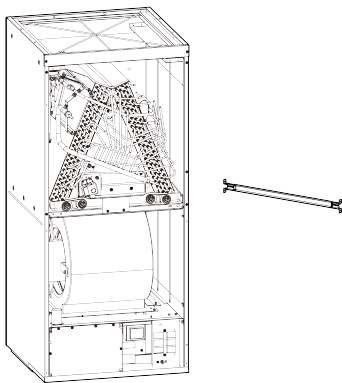
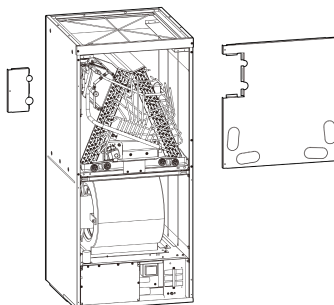
Disassembly and Assembly of the Evaporator and Drain Pan		
Step	Picture	Work instruction
1. Remove the upper panel.		<ul style="list-style-type: none"> <li>● Loosen screws round the upper panel with a screwdriver.</li> <li>● Remove the upper panel from unit.</li> </ul>
2. Remove the lower panel (1) and panel (2).		<ul style="list-style-type: none"> <li>● Loosen screws round the lower panel with a screwdriver.</li> <li>● Remove the lower panel from unit.</li> </ul>

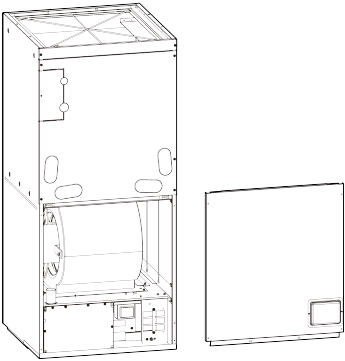
Disassembly and Assembly of the Evaporator and Drain Pan		
Step	Picture	Work instruction
3. Remove the enhanced frame if applicable.		<ul style="list-style-type: none"> <li>● Remove the screws from enhanced frame.</li> <li>● Disassemble the enhanced frame from the unit.</li> </ul>
4. Remove the mounting plate of the drain pan.		<ul style="list-style-type: none"> <li>● Loosen screws at both side of the mounting plate with a screwdriver.</li> <li>● Remove the mounting plate from the unit.</li> </ul>
5. Remove the primary drain pan.		<ul style="list-style-type: none"> <li>● Remove the primary drain pan from the unit.</li> </ul>

Disassembly and Assembly of the Evaporator and Drain Pan		
Step	Picture	Work instruction
6. Remove the secondary drain pan.		<ul style="list-style-type: none"> <li>● Remove the secondary drain pan from the unit.</li> </ul>
7. Remove the evaporator.		<ul style="list-style-type: none"> <li>● Remove the evaporator away from the primary drain pan.</li> <li>● Reassemble the unit as before.</li> </ul>

Disassembly and Assembly of the Filter		
Step	Picture	Work instruction
1. Remove the mounting plate.		<ul style="list-style-type: none"> <li>● Loosen screws fixing the mounting plate with a screwdriver.</li> <li>● Remove the mounting plate away from the unit.</li> </ul>

Disassembly and Assembly of the Filter		
Step	Picture	Work instruction
2. Remove the filter screen.		<ul style="list-style-type: none"> <li>● Remove the filter screen away from the unit.</li> <li>● After replacing the filter screen, reassemble the unit as before.</li> </ul>

Installation of downward air supply mode		
Step	Picture	Work instruction
1. Turn the internal unit upside down.		<ul style="list-style-type: none"> <li>● Loosen screws around the upper and lower panel with a screwdriver.</li> <li>● Remove the front panel away from the unit.</li> </ul>
2. Install the enhanced frame.		<ul style="list-style-type: none"> <li>● install the screws from enhanced frame.</li> <li>● install the enhanced frame from the unit.</li> </ul>
3. install the lower panel (1) and panel (2).		<ul style="list-style-type: none"> <li>● install screws round the lower panel with a screwdriver.</li> <li>● install the lower panel for unit.</li> </ul>

Installation of downward air supply mode		
Step	Picture	Work instruction
4. install the upper panel.		<ul style="list-style-type: none"><li>● install screws round the upper panel with a screwdriver.</li><li>● install the upper panel from unit.</li></ul>

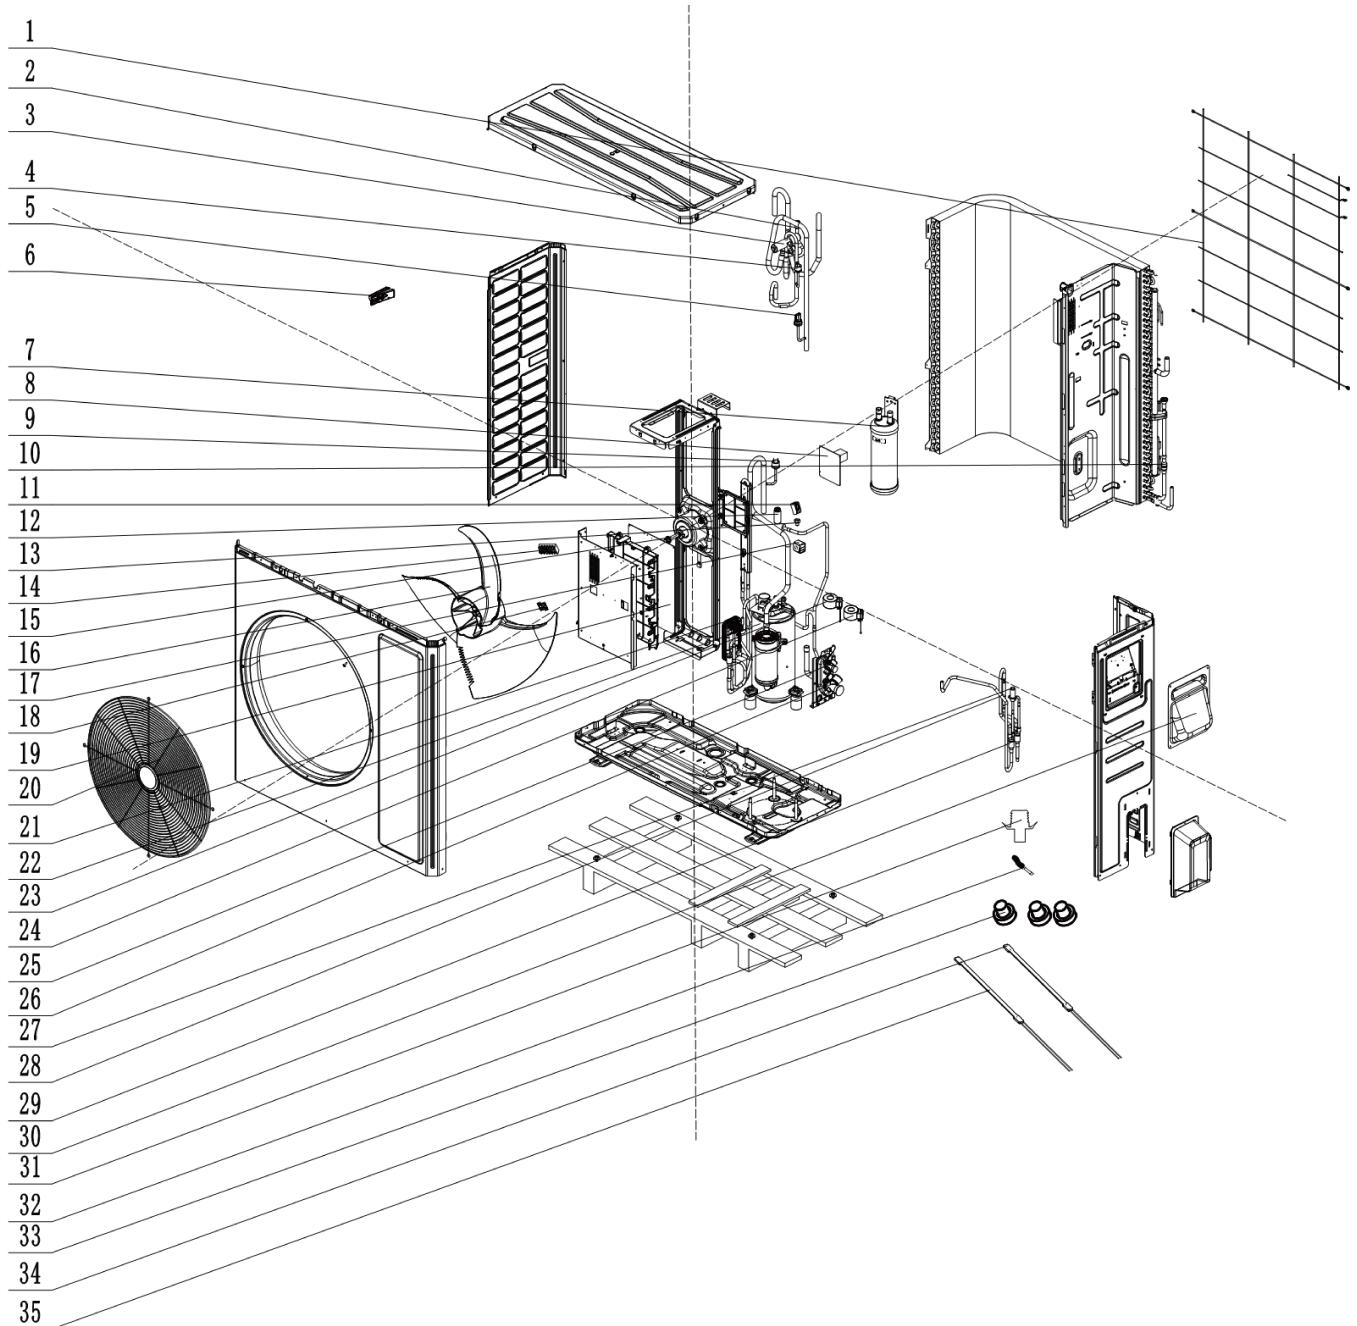
**NOTE:**

When the unit is switched to the downward air mode, the temperature sensing bag should be inserted accurately, otherwise it will affect the reliability of the unit and even damage the unit.

## 4.6 Explosive View and Lists of Parts

### 4.6.1 ODU Explosive View and Lists of Parts

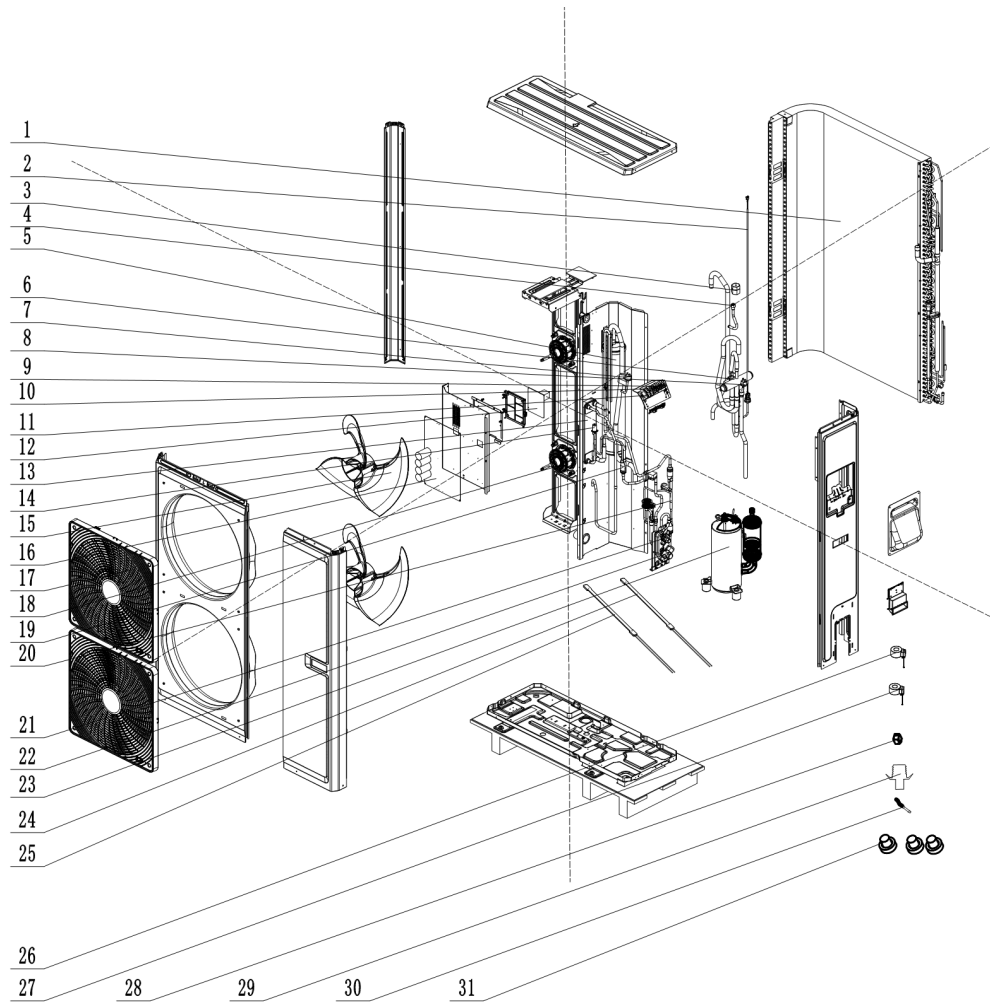
FXU24HP230V1R32AO (Product Code:CF090W3110) FXU36HP230V1R32AO (Product Code:CF090W3130)



No.	Material Name	Finished Product Code
1	Rear Grill	01600406001701
2	Joint	012055060393P01
3	4-Way Valve	01207306161101P01
4	Pressure Protect Switch	10335262
5	Pressure Sensor	1501506409
6	Handle	012008060109
7	Gas-Liquid Separator	430004032
8	Filter Board	46020007

No.	Material Name	Finished Product Code
9	Pressure Protect Switch	009001060621
10	Strainer	07245007
11	Terminal Board	07225088
12	Electronic Expansion Valve	071001060012
13	Fusible Plug	070001060033
14	Terminal Board	070001060023
15	Brushless DC Motor	43004406002201
16	Axial Flow Fan	072009060006
17	4 Way Valve Coil	07200206002311
18	Terminal Board	01205606038704P01
19	Main Board	42000100000102
20	Front Grill	422000060106
21	Plate-Type Heat Exchanger	01221006000701P01
22	Compressor and Fittings	300027062325
23	Electric Expand Valve Fitting	430034060150
24	Electric Expand Valve Fitting	100002074486
25	Cut-Off Valve 3/8(N)	011002061988
26	Cut Off Valve	012049060117P01
27	Electronic Expansion Valve	01600106008501
28	One Way Valve	07201006000605
29	Strainer	06813401
30	Handle	26113009
31	Drainage Joint	26113009
32	Sensor Sub-Assy	390002060540
33	Drainage Hole Cap	06813401
34	Electrical Heater	7651000417
35	Electrical Heater	7651521241

FXU48HP230V1R32AO (Product Code:CF090W3120) FXU60HP230V1R32AO (Product Code:  
CF090W3010)

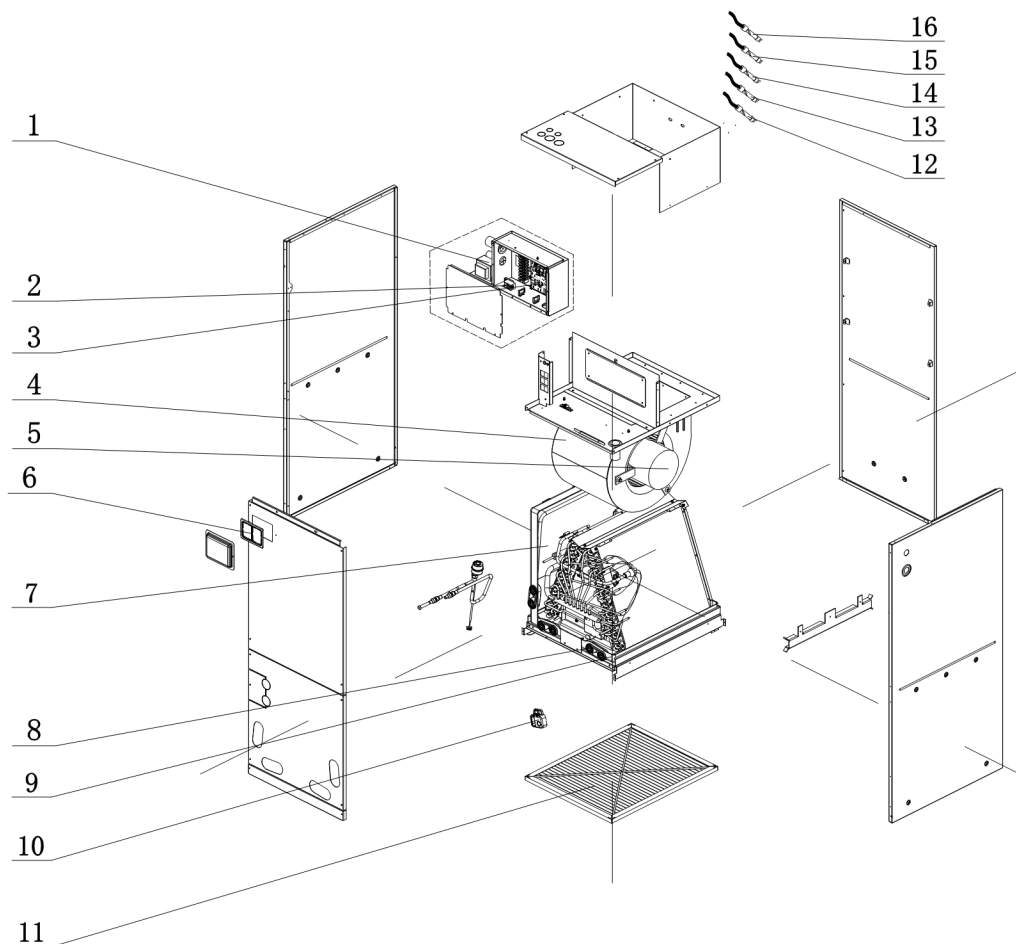


No.	Material Name	Finished Product Code
1	Condenser Assy	000100060887
2	Pressure Sensor	43004406002204
3	Fusible Plug	035222000004
4	Joint	06652200001
5	Gas-Liquid Separator	035027060022
6	4-Way Valve	43000338
7	Pressure Protect Switch	4602000603
8	Pressure Protect Switch	46020007
9	Terminal Board	42200006001202
10	Terminal Board	422000060106
11	Terminal Board	42200006005601
12	Filter Board	300020060144
13	Plate-type Heat Exchanger	00904100004
14	Electronic Expansion Valve	43005017
15	Axial Flow Fan	1043410000301
16	Main Board	300027063855
17	Front Grill	01600406000201
18	Brushless DC Motor	15010406007401
19	Strainer	035021060018

No.	Material Name	Finished Product Code
20	One Way Valve	071001060011
21	Cut-Off Valve 3/8(N)	070001060053
22	Cut Off Valve	070001060054
23	Compressor and Fittings	009001060980
24	Electrical Heater(Compressor)	765152128
25	Electrical Heater	7651000421
26	Electric Expand Valve Fitting	4304413297
27	Electric Expand Valve Fitting	07200206002329
28	4 Way Valve Coil	07201006000604
29	Drainage Joint	26113009
30	Sensor Sub-Assy	390002060557
31	Drainage Hole Cap	06813401

#### 4.6.2 IDU Explosive View and Lists of Parts

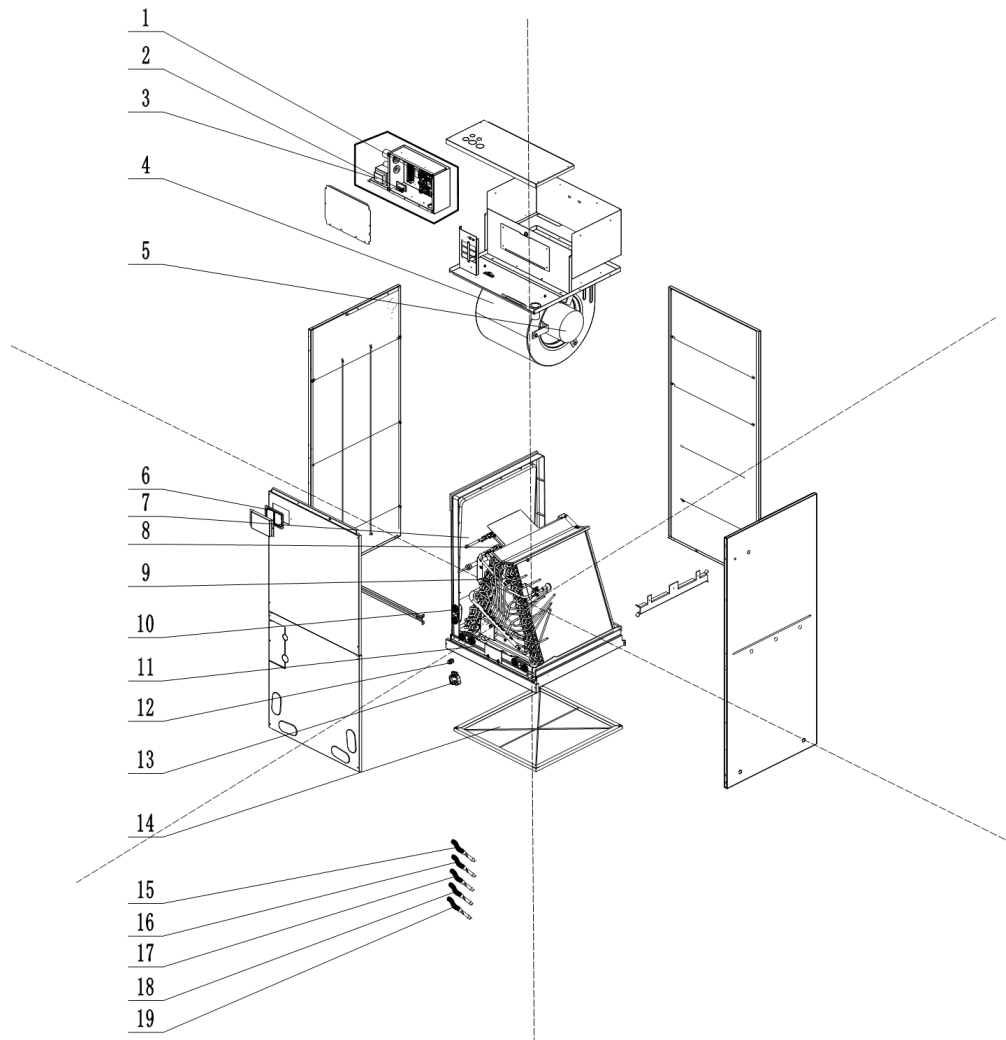
FXU24HP230V1R32AH (Product Code: EH010N0210)



No.	Material Name	Finished Product Code
1	Transformer	43110286
2	Terminal Board	422000060207
3	Main Board	300002064036
4	Centrifugal Fan Housing	1570220101

No.	Material Name	Finished Product Code
5	Brushless DC Motor	15010400001401
6	Insulating Board	75142201
7	Water Tray	2690220000202
8	Choke Plug	76718209
9	Water Tray	2690220000102
10	Gas Sensor	340024060015
11	Filter Sub-Assy	111001060269
12	Temperature Sensor	390001923
13	Temperature Sensor	390001060088
14	Temperature Sensor	390002074G
15	Temperature Sensor	390001923
16	Temperature Sensor	390001060085

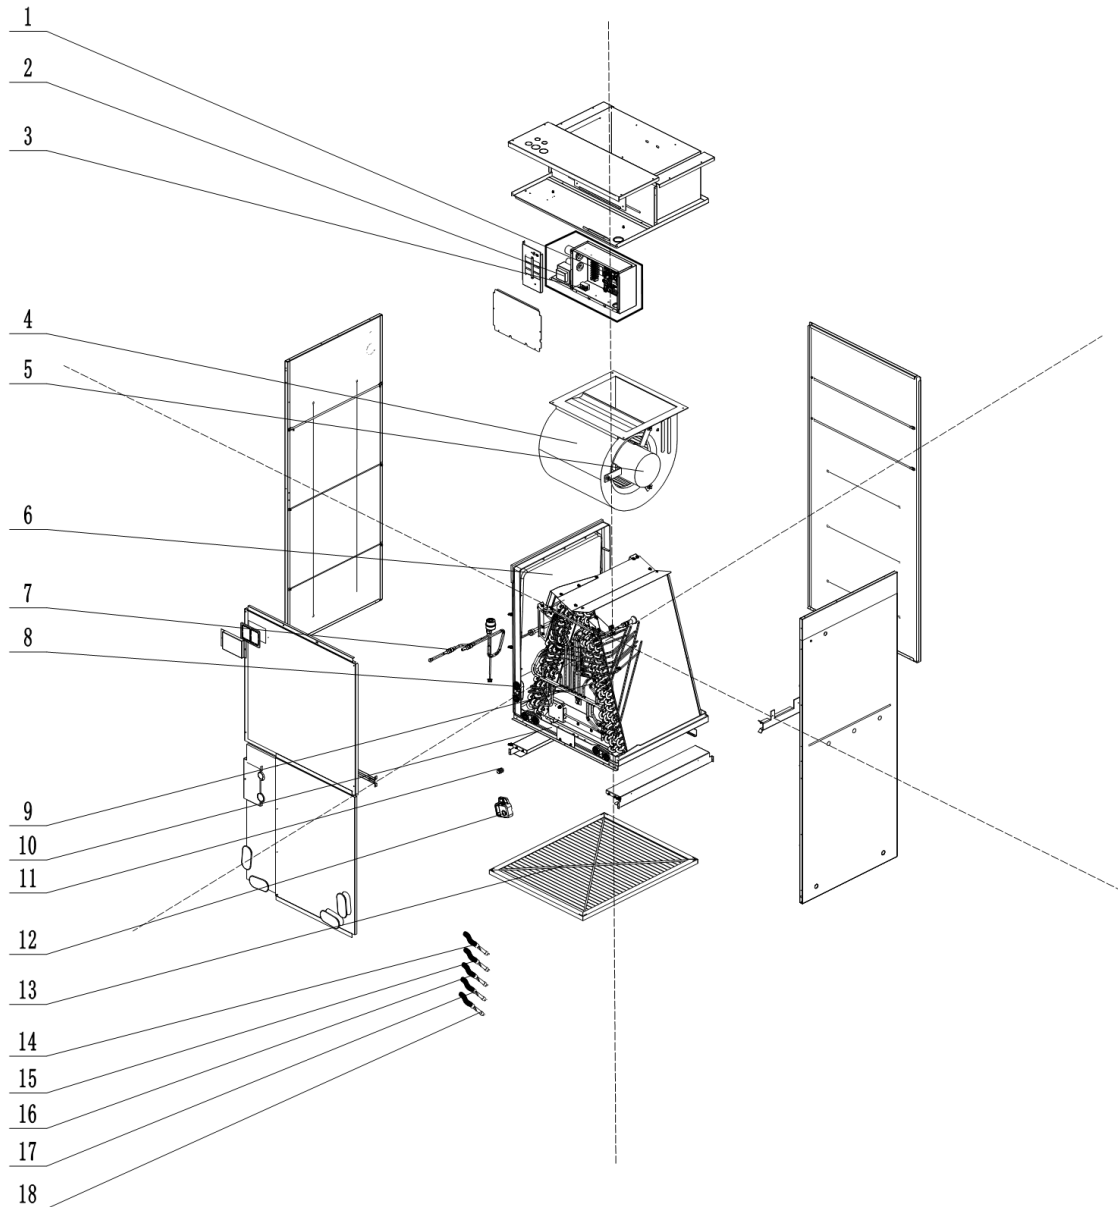
FXU36HP230V1R32AH (Product Code: EH010N0220)



No.	Material Name	Finished Product Code
1	Main Board	300002064036
2	Terminal Board	422000060207
3	Transformer	43110286
4	Centrifugal Fan Housing	1570220201
5	Brushless DC Motor	15010400001401

No.	Material Name	Finished Product Code
6	insulating Board	75142201
7	Water Tray	2690220502
8	Strainer	0721200102
9	Evaporator Sub-Assy	0721200102
10	Choke Plug	76718209
11	Water Tray	2690220402
12	Joint	0665800008
13	Gas Sensor	340024060015
14	Filter Sub-Assy	11001060160
15	Temperature Sensor	390001923
16	Temperature Sensor	390001060088
17	Temperature Sensor	390002074G
18	Temperature Sensor	390001923
19	Temperature Sensor	390001060085

FXU48HP230V1R32AH (Product Code: EH010N0190), FXU60HP230V1R32AH (Product Code: EH010N0200)



No.	Material Name	Finished Product Code
1	Main Board	300002064036
2	Transformer	43110286
3	Terminal Board	422000060207
4	Centrifugal Fan Housing	1570220301
5	Brushless DC Motor	15010400001301
6	Water Tray	2690220602
7	Strainer	0721200102
8	Choke Plug	76718209
9	Evaporator Sub-Assy	010001060326
10	Water Tray	2690220502
11	Joint	06658000008
12	Gas Sensor	340024060015
13	Filter Sub-Assy	111001060188
14	Temperature Sensor	390001923
15	Temperature Sensor	390001060088
16	Temperature Sensor	390002074G
17	Temperature Sensor	390001923
18	Temperature Sensor	390001060085

## Appendices

### 1 Resistance/Temperature Lists of Temperature Sensors

#### 1.1 Voltage List of 15 K $\Omega$ Temperature Sensors (including ODU temperature sensors)

Temperature (°C)	Resistance (k $\Omega$ )	Voltage (V)	Temperature (°C)	Resistance (k $\Omega$ )	Voltage (V)
-20	144	0.311	71	2.523	2.825
-19	138.1	0.323	72	2.439	2.838
-18	128.6	0.345	73	2.358	2.852
-17	121.6	0.362	74	2.28	2.865
-16	115	0.381	75	2.205	2.877
-15	108.7	0.4	76	2.133	2.889
-14	102.9	0.42	77	2.064	2.901
-13	97.4	0.44	78	1.997	2.912
-12	92.22	0.462	79	1.933	2.923
-11	87.35	0.484	80	1.871	2.934
-10	82.75	0.506	81	1.811	2.945
-9	78.43	0.53	82	1.754	2.955
-8	74.35	0.554	83	1.699	2.964
-7	70.5	0.579	84	1.645	2.974
-6	66.88	0.605	85	1.594	2.983
-5	63.46	0.631	86	1.544	2.992
-4	60.23	0.658	87	1.497	3.001
-3	57.18	0.686	88	1.451	3.009

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
-2	54.31	0.714	89	1.408	3.017
-1	51.59	0.743	90	1.363	3.025
0	49.02	0.773	91	1.322	3.033
1	46.8	0.801	92	1.282	3.04
2	44.31	0.835	93	1.244	3.047
3	42.14	0.866	94	1.207	3.054
4	40.09	0.899	95	1.171	3.061
5	38.15	0.931	96	1.136	3.068
6	36.32	0.965	97	1.103	3.074
7	34.58	0.998	98	1.071	3.08
8	32.94	1.033	99	1.039	3.086
9	31.38	1.067	100	1.009	3.092
10	29.9	1.102	101	0.98	3.098
11	28.51	1.138	102	0.952	3.103
12	27.18	1.174	103	0.925	3.108
13	25.92	1.21	104	0.898	3.114
14	24.73	1.246	105	0.873	3.119
15	23.6	1.282	106	0.848	3.123
16	22.53	1.319	107	0.825	3.128
17	21.51	1.356	108	0.802	3.133
18	20.54	1.393	109	0.779	3.137
19	19.63	1.429	110	0.758	3.141
20	18.75	1.467	111	0.737	3.145
21	17.93	1.503	112	0.717	3.15
22	17.14	1.54	113	0.697	3.153
23	16.39	1.577	114	0.678	3.157
24	15.68	1.613	115	0.66	3.161
25	15	1.65	116	0.642	3.165
26	14.36	1.686	117	0.625	3.168
27	13.74	1.722	118	0.608	3.171
28	13.16	1.758	119	0.592	3.175
29	12.6	1.793	120	0.577	3.178
30	12.07	1.829	121	0.561	3.181
31	11.57	1.863	122	0.547	3.184
32	11.09	1.897	123	0.532	3.187
33	10.63	1.931	124	0.519	3.19
34	10.2	1.964	125	0.505	3.192
35	9.779	1.998	126	0.492	3.195
36	9.382	2.03	127	0.48	3.198
37	9.003	2.062	128	0.467	3.2
38	8.642	2.094	129	0.456	3.203
39	5.997	2.125	130	0.444	3.205
41	7.653	2.185	131	0.433	3.207
42	7.352	2.215	132	0.422	3.21
43	7.065	2.243	133	0.412	3.212
44	6.791	2.272	134	0.401	3.214

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
45	6.529	2.299	135	0.391	3.216
46	6.278	2.326	136	0.382	3.218
47	6.038	2.353	137	0.372	3.22
48	5.809	2.379	138	0.363	3.222
49	5.589	2.404	139	0.355	3.224
50	5.379	2.429	140	0.346	3.226
51	5.179	2.453	141	0.338	3.227
52	4.986	2.477	142	0.33	3.229
53	4.802	2.5	143	0.322	3.231
54	4.625	2.522	144	0.314	3.232
55	4.456	2.544	145	0.307	3.234
56	4.294	2.566	146	0.299	3.235
57	4.139	2.586	147	0.292	3.237
58	3.99	2.607	148	0.286	3.238
59	3.848	2.626	149	0.279	3.24
60	3.711	2.646	150	0.273	3.241
61	3.579	2.664	151	0.266	3.242
62	3.454	2.682	152	0.261	3.244
63	3.333	2.7	153	0.254	3.245
64	3.217	2.717	154	0.248	3.246
65	3.105	2.734	155	0.243	3.247
66	2.998	2.75	156	0.237	3.249
67	2.898	2.766	157	0.232	3.25
68	2.797	2.781	158	0.227	3.251
69	2.702	2.796	159	0.222	3.252
70	2.611	2.811	160	0.217	3.253

## 1.2 Voltage List of 20 KΩ Pipeline Temperature Sensors (including temperature sensors for defroster, IDU and ODU pipes)

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30	361.8	0.173	66	3.998	2.75
-29	339.8	0.183	67	3.861	2.766
-28	319.2	0.195	68	3.729	2.781
-27	300	0.206	69	3.603	2.796
-26	282.2	0.218	70	3.481	2.811
-25	265.5	0.231	71	3.364	2.825
-24	249.9	0.245	72	3.252	2.838
-23	235.3	0.259	73	3.144	2.852
-22	221.6	0.273	74	3.04	2.865
-21	208.9	0.288	75	2.94	2.877
-20	196.9	0.304	76	2.844	2.889
-19	181.4	0.328	77	2.752	2.901
-18	171.4	0.345	78	2.663	2.912
-17	162.1	0.362	79	2.577	2.923

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
-16	153.3	0.381	80	2.495	2.934
-15	145	0.4	81	2.415	2.944
-14	137.2	0.42	82	2.339	2.954
-13	129.9	0.44	83	2.265	2.964
-12	123	0.462	84	2.194	2.974
-11	116.5	0.484	85	2.125	2.983
-10	110.3	0.507	86	2.059	2.992
-9	104.6	0.53	87	1.996	3.001
-8	99.13	0.554	88	1.934	3.009
-7	94	0.579	89	1.875	3.017
-6	89.17	0.605	90	1.818	3.025
-5	84.61	0.631	91	1.763	3.033
-4	80.31	0.658	92	1.71	3.04
-3	76.24	0.686	93	1.658	3.047
-2	72.41	0.714	94	1.609	3.054
-1	68.79	0.743	95	1.561	3.061
0	65.37	0.773	96	1.515	3.068
1	62.13	0.804	97	1.47	3.074
2	59.08	0.835	98	1.427	3.08
3	56.19	0.866	99	1.386	3.086
4	53.46	0.898	100	1.346	3.092
5	50.87	0.931	101	1.307	3.098
6	48.42	0.965	102	1.269	3.103
7	46.11	0.998	103	1.233	3.108
8	43.92	1.033	104	1.198	3.114
9	41.84	1.067	105	1.164	3.119
10	39.87	1.102	106	1.131	3.123
11	38.01	1.138	107	1.099	3.128
12	36.24	1.174	108	1.069	3.133
13	34.57	1.209	109	1.039	3.137
14	32.98	1.246	110	1.01	3.141
15	31.47	1.282	111	0.9825	3.145
16	30.04	1.319	112	0.9556	3.15
17	28.68	1.356	113	0.9295	3.153
18	27.39	1.393	114	0.9043	3.157
19	26.17	1.429	115	0.8799	3.161
20	25.01	1.466	116	0.8562	3.165
21	23.9	1.503	117	0.8333	3.168
22	22.85	1.54	118	0.8111	3.171
23	21.85	1.577	119	0.7895	3.175
24	20.9	1.614	120	0.7687	3.178
25	20	1.65	121	0.7485	3.181
26	19.14	1.686	122	0.7289	3.184
27	18.32	1.722	123	0.7099	3.187
28	17.55	1.758	124	0.6915	3.19
29	16.8	1.793	125	0.6736	3.192

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
30	16.1	1.828	126	0.6563	3.195
31	15.43	1.863	127	0.6395	3.198
32	14.79	1.897	128	0.6232	3.2
33	14.18	1.931	129	0.6074	3.203
34	13.59	1.965	130	0.5921	3.205
35	13.04	1.998	131	0.5772	3.207
36	12.51	2.03	132	0.5627	3.21
37	12	2.063	133	0.5487	3.212
38	11.52	2.094	134	0.5351	3.214
39	11.06	2.125	135	0.5219	3.216
40	10.62	2.155	136	0.509	3.218
41	10.2	2.185	137	0.4966	3.22
42	9.803	2.215	138	0.4845	3.222
43	9.42	2.243	139	0.4727	3.224
44	9.054	2.272	140	0.4613	3.226
45	8.705	2.299	141	0.4502	3.227
46	8.37	2.326	142	0.4394	3.229
47	8.051	2.353	143	0.4289	3.231
48	7.745	2.379	144	0.4187	3.232
49	7.453	2.404	145	0.4088	3.234
50	7.173	2.429	146	0.3992	3.235
51	6.905	2.453	147	0.3899	3.237
52	6.648	2.477	148	0.3808	3.238
53	6.403	2.5	149	0.3719	3.24
54	6.167	2.522	150	0.3633	3.241
55	5.942	2.544	151	0.3549	3.242
56	5.726	2.565	152	0.3468	3.244
57	5.519	2.586	153	0.3389	3.245
58	5.32	2.607	154	0.3312	3.246
59	5.13	2.626	155	0.3237	3.247
60	4.948	2.646	156	0.3164	3.249
61	4.773	2.664	157	0.3093	3.25
62	4.605	2.682	158	0.3024	3.251
63	4.443	2.7	159	0.2956	3.252
64	4.289	2.717	160	0.2891	3.253
65	4.14	2.734	—	—	—

### 1.3 Voltage List of 50 KΩ Discharge Temperature Sensors (including discharge air temperature sensor)

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30	911.56	0.036	61	11.736	1.518
-29	853.66	0.038	62	11.322	1.548
-28	799.98	0.041	63	10.925	1.577
-27	750.18	0.043	64	10.544	1.606
-26	703.92	0.046	65	10.178	1.635

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
-25	660.93	0.049	66	9.8269	1.664
-24	620.94	0.052	67	9.4896	1.693
-23	583.72	0.056	68	9.1655	1.722
-22	549.04	0.059	69	8.9542	1.741
-21	516.71	0.063	70	8.5551	1.778
-20	486.55	0.066	71	5.9676	1.806
-19	458.4	0.07	72	7.9913	1.834
-18	432.1	0.075	73	7.7257	1.862
-17	407.51	0.079	74	7.4702	1.889
-16	384.51	0.084	75	7.2245	1.916
-15	362.99	0.088	76	6.9882	1.943
-14	342.83	0.094	77	6.7608	1.969
-13	323.94	0.099	78	6.542	1.995
-12	306.23	0.104	79	6.3315	2.021
-11	289.61	0.11	80	6.1288	2.046
-10	274.02	0.116	81	5.9336	2.071
-9	259.37	0.123	82	5.7457	2.096
-8	245.61	0.129	83	5.5647	2.12
-7	232.67	0.136	84	5.3903	2.144
-6	220.5	0.143	85	5.2223	2.168
-5	209.05	0.151	86	5.0605	2.191
-4	195.97	0.158	87	4.9044	2.214
-3	188.12	0.167	88	4.7541	2.237
-2	178.65	0.175	89	4.6091	2.259
-1	169.68	0.184	90	4.4693	2.281
0	161.02	0.193	91	4.3345	2.302
1	153	0.202	92	4.2044	2.323
2	145.42	0.212	93	4.0789	2.344
3	135.96	0.223	94	3.9579	2.364
4	131.5	0.233	95	3.841	2.384
5	126.17	0.242	96	3.7283	2.404
6	119.08	0.256	97	3.6194	2.423
7	113.37	0.267	98	3.5143	2.442
8	107.96	0.28	99	3.4128	2.46
9	102.85	0.292	100	3.3147	2.478
10	98.006	0.306	101	3.22	2.496
11	93.42	0.319	102	3.1285	2.514
12	89.075	0.333	103	3.0401	2.531
13	84.956	0.348	104	2.9547	2.547
14	81.052	0.362	105	2.8721	2.564
15	77.349	0.378	106	2.7922	2.58
16	73.896	0.393	107	2.715	2.595
17	70.503	0.41	108	2.6404	2.611
18	67.338	0.427	109	2.5682	2.626
19	64.333	0.444	110	2.4983	2.64
20	61.478	0.462	111	2.4308	2.655
21	58.766	0.48	112	2.3654	2.669
22	56.189	0.499	113	2.3021	2.682
23	53.738	0.518	114	2.2409	2.696
24	51.408	0.537	115	2.1816	2.709
25	49.191	0.558	116	2.1242	2.722
26	47.082	0.578	117	2.0686	2.734
27	45.074	0.599	118	2.0148	2.747

Temperature (°C)	Resistance (kΩ)	Voltage (V)	Temperature (°C)	Resistance (kΩ)	Voltage (V)
28	43.163	0.621	119	1.9626	2.759
29	41.313	0.643	120	1.9123	2.77
30	39.61	0.665	121	1.8652	2.781
31	37.958	0.688	122	1.8158	2.793
32	36.384	0.711	123	1.7698	2.804
33	34.883	0.735	124	1.7253	2.814
34	33.453	0.759	125	1.6821	2.825
35	32.088	0.784	126	1.6402	2.835
36	30.787	0.809	127	1.5996	2.845
37	29.544	0.835	128	1.5602	2.855
38	28.359	0.86	129	1.522	2.864
39	27.227	0.886	130	1.485	2.873
40	26.147	0.913	131	1.449	2.882
41	25.114	0.94	132	1.4141	2.891
42	24.128	0.967	133	1.3803	2.9
43	23.186	0.994	134	1.3474	2.908
44	22.286	1.022	135	1.3155	2.916
45	21.425	1.05	136	1.2846	2.924
46	20.601	1.078	137	1.2545	2.932
47	19.814	1.107	138	1.2233	2.94
48	19.061	1.136	139	1.1969	2.947
49	18.34	1.164	140	1.1694	2.955
50	17.651	1.193	141	1.1476	2.96
51	16.99	1.223	142	1.1166	2.969
52	16.358	1.252	143	1.0913	2.975
53	15.753	1.281	144	1.0667	2.982
54	15.173	1.311	145	1.0429	2.988
55	14.618	1.34	146	1.0197	2.995
56	14.085	1.37	147	0.9971	3.001
57	13.575	1.4	148	0.9752	3.007
58	13.086	1.429	149	0.9538	3.013
59	12.617	1.459	150	0.9331	3.018
60	12.368	1.475	—	—	—

## 2 Temperature/Pressure List of Refrigerant

R32							
Temperature	Pressure		Temperature	Pressure		Temperature	Pressure
°C	kPa		°C	kPa		°C	kPa
-30	273		0	813		30	1928
-29	285		1	839		31	1978
-28	297		2	866		32	2029
-27	309		3	894		33	2082
-26	322		4	922		34	2135
-25	335		5	951		35	2190
-24	348		6	981		36	2245
-23	362		7	1012		37	2302
-22	376		8	1043		38	2360
-21	391		9	1074		—	—
-20	406		10	1107		—	—
-19	421		11	1140		—	—
-18	437		12	1174		—	—
-17	454		13	1209		—	—
-16	471		14	1244		—	—
-15	488		15	1281		—	—
-14	506		16	1318		—	—
-13	524		17	1356		—	—
-12	543		18	1395		—	—
-11	563		19	1434		—	—
-10	586		20	1475		—	—
-9	603		21	1475		—	—
-8	624		22	1516		—	—
-7	646		23	1558		—	—
-6	668		24	1601		—	—
-5	691		25	1645		—	—
-4	714		26	1690		—	—
-3	738		27	1735		—	—
-2	762		28	1782		—	—
-1	787		29	1830		—	—

## 3 Operation Tools

The following tools will be used: 1) Liquid-level gauge; 2) Screwdriver; 3) Electric driven rotary hammer; 4) Drill; 5) Pipe expander; 6) Torque wrench; 7) Open-end wrench; 8) Pipe cutter; 9) Leak detector; 10) Vacuum pump; 11) Pressure gauge; 12) Universal meter; 13) Hexagon wrench; 14) Tapeline.



GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI 519070

Add: West Jinji Rd, Qianshan Zhuhai, Guangdong, China

Tel: (+86-756)8522218

Fax: (+86-756)8669426

E-mail: [global@cn.gree.com](mailto:global@cn.gree.com) [www.gree.com](http://www.gree.com)

JF00305628