



## PUSH BUTTON OPERATION

### FEATURE

### ACTION

**Scrolling Function**

Press the Smart Button to scroll through different data screens.

**System Test**

Press and hold the Red Button. Release after 3 beeps.

**Alarm Menu Access**

Press and hold the Smart Button for 3 beeps to access the Alarm Menu.  
Press and hold the Smart Button for 3 beeps to exit the Alarm Menu.

**Silence Active Alarm**

Press the Smart Button to silence an active alarm.

**Mute Active Alarm for 24hrs**

Press and hold the Smart Button to disable an active alarm for 24 hrs. 3 beeps indicates that the alarm has been disabled.

**Disable or Enable Alarms**

Press and hold the Smart Button for 3 beeps to access the Alarm Menu.  
While the desired alarm is displayed, press the Red Button to either disable or enable that alarm.  
Press and hold the Smart Button for 3 beeps to exit the Alarm Menu.



## ALARM CONDITIONS

ALARM TYPE	CONDITION
<b>High Water</b>	Triggers after 25 seconds if the Red Sensor is still detecting water after two "air lock" attempts.
<b>Pump Not Detected</b>	Triggers if the switch turns the pump on, but no pump current is detected.
<b>Auto Test No Amp</b>	Triggers if the switch turns the pump on during an Auto Test and no pump current is detected.
<b>Weak Ground</b>	Triggers if water reaches the Red Sensor and the Black Sensor isn't detecting water due to a weak/missing ground.
<b>Red Sensor Dirty</b>	Triggers during an Auto Test if the switch determines that the Red Sensor should be cleaned.
<b>Black Sensor Dirty</b>	Triggers during an Auto Test if the switch determines that the Black Sensor should be cleaned.
<b>Black Sensor Fail</b>	Triggers if the Black Sensor isn't detecting water at the start of the pump cycle.