



User Guide

NTWR38 Ratchet Head for NTW1

WHEN CHANGING THE TYPE OF HEAD



If you are changing the NTW1's original wrench head to the NTWR38, you must recalculate your Target Torque Value.

The applicable Coefficient Factor is 1.28. To accurately achieve the desired torque, set your tool's Target Torque Value to:

Your desired torque * 1.28.

For example, if your installation service manual specifies a torque of 100 ft-lb, set your Target Torque Value to 128 ft-lb.

For instructions on how to set the Target Torque Value on your tool, please refer to the NTW1 User Manual.