

PRO¹

T605-2

Pro1 Technologies, Inc.

1111 S. Glenstone Ave., Suite 2-100
Springfield, MO 65804

Toll-Free: 888-776-1427 **Web:** www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern

Congratulations on purchasing a new thermostat. This thermostat was designed to the highest reliability and ease of use standards. Thank you for choosing Pro1.



Caution:



Equipment damage hazard
Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.

| Table of Contents | Page |
|--------------------------------------|------|
| Thermostat Quick Reference | 2 |
| Thermostat Operation | 3 |
| Programming | 4 |
| Contact Us and Warranty Registration | 6 |

OPERATING MANUAL THERMOSTAT QUICK REFERENCE

Getting to know your thermostat

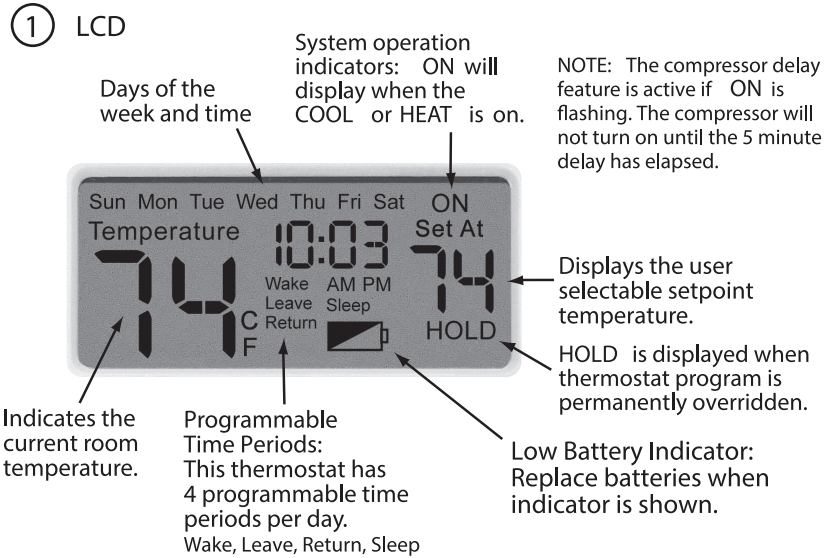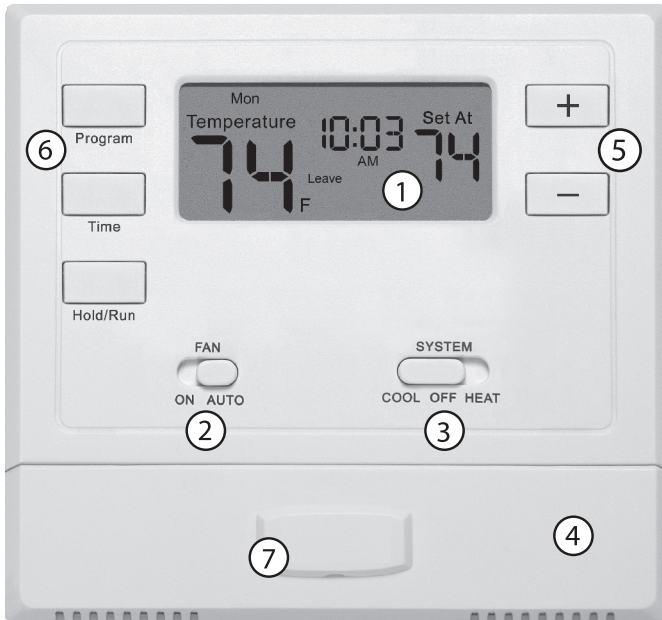


- ② Fan Switch
- ③ System Switch
- ④ Easy Change Battery Door
- ⑤ Setpoint Buttons
- ⑥ User Buttons
- ⑦ Universal Private Label Badge



Important:


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable.

Battery door information

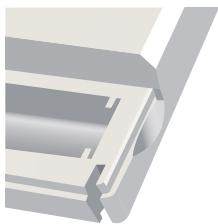


Use the finger bevel on the lower portion of the side of the thermostat to open the easy access battery door.

Insert 2 AA Alkaline batteries (included). High quality Alkaline Batteries are recommended.

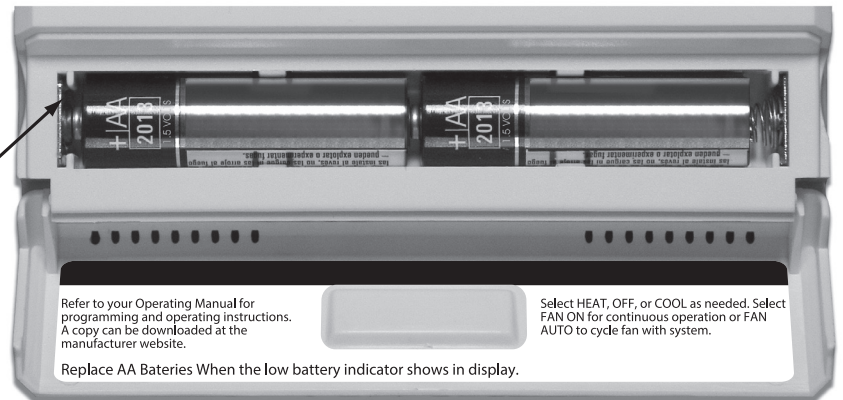


Simple operating instructions are found on the back of the battery door.

Easy to use controls

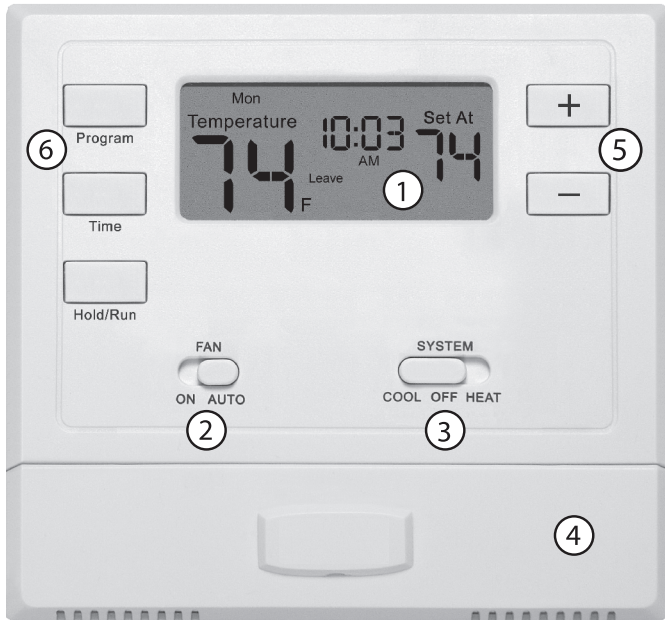

Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- ① **LCD Display:**
See page 2 for details about this display read out and icons.
- ② **Fan Switch:**
Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.
- ③ **System Switch:**
Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off.
- ④ **Easy Change Battery Door:**
Access door to change the batteries, or read the simple operating instructions.
- ⑤ **Temperature Setpoint Buttons:**
Press the + or - buttons to select the desired room temperature.
- ⑥ **User Buttons:**
Use these buttons to set up your programming options. Refer to the next page for instructions.

Set Time

Follow the steps below to set the current time:

1. Press **TIME**
2. Day of the week will be flashing.
Use the or key to select the current day of the week.
3. Press **TIME**
4. The current hour is flashing.
Use the or key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
5. Press **TIME**
6. Minutes are now flashing.
Use the or key to select current minutes.
7. Press **HOLD/RUN** when completed.

Set Program Schedule

To customize your program schedule, follow these steps

Weekday:

1. Select **HEAT** or **COOL** from the system switch.
Note: You have to program heat and cool each separately.
2. Press **PROGRAM**
3. Monday-Friday is displayed and **WAKE** is shown.
You are now programming the wake time period for the weekday setting.
4. Time is flashing. Use the or key to make your time selection for the weekday **WAKE** time period.
5. Press **PROGRAM**
6. The setpoint temperature is flashing. Use the or key to make your setpoint selection for the weekday wake period.
7. Press **PROGRAM**
8. Repeat steps 4 through 7 for weekday **LEAVE** time period, for weekday **RETURN** time period, and for weekday **SLEEP** time period.

Saturday:

9. Repeat steps 4 through 7 for Saturday **WAKE** time period, for Saturday **LEAVE** time period, for Saturday **RETURN** time period, and for Saturday **SLEEP** time period.


Sunday:

10. Repeat steps 4 through 7 for Sunday **WAKE** time period, for Sunday **LEAVE** time period, for Sunday **RETURN** time period, and for Sunday **SLEEP** time period.

Filter Change Reminder

If your installing contractor has configured the thermostat to remind you when the air filter needs changed, you will see **FILT** in the display when your air filter needs changed. **FILT** will be shown in the display after your system has run long enough to require an air filter change.

Resetting the filter change reminder: When **FILT** reminder is displayed, you should change your air filter and reset the reminder.

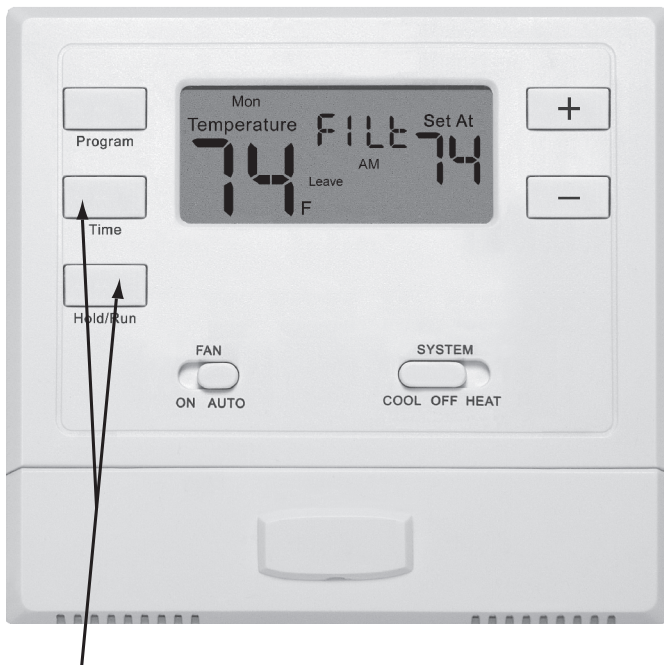

To reset the reminder first enter the filter change remindersetup by pressing and holding down the 'TIME' + Hold/Run buttons at the same time for 3 seconds. It first shows you the hours of run time the reminder is set at. Then press the 'Time' button and it will show you the elapsed time your fan has been running since the last reset.

At this point, press and hold the Time and Hold/Run buttons together for 3 seconds to reset elapsed time and the reminder.

Temporary and Permanent Hold Feature

Temporary hold: The thermostat will flash **HOLD** on the left of your screen when you press the **+** or **-** key. If you do nothing the temperature will remain at this setpoint temporarily until the next program period begins. Your program setpoint will then replace your temporary setpoint.

Permanent hold: If you press **HOLD/RUN**, you will see **HOLD** appear below the setpoint temperature in the display. The thermostat will now permanently stay at this setpoint and can be adjusted using the **+** or **-** keys.

To return to program: Press **HOLD/RUN** to exit either temporary or permanent hold.

Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to our website, select warranty registration and fill out a short registration form.
- or -
- ② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Thermostat Model: _____

Address: _____

Date Installed: _____

City: _____

Complete form and mail to:

State: _____

Thermostat Warranty Registration

Zip: _____

1111 S. Glenstone
Suite 2-100
Springfield, MO 65804