



REPAIR PARTS

UCQ SERIES Upflow Coils

UCQ-18
UCQ-24
UCQ-30
UCQ-36
UCQ-43
UCQ-48
UCQ-60

This manual is to be used by qualified technicians only.

© 1989-2008 Goodman Manufacturing Company, L.P. ♦ 5151 San Felipe, Suite 500 ♦ Houston, TX 77056

Important Information

Index

Functional Parts List	3
Illustration and Parts	4 - 5

Views shown are for parts illustrations only, not servicing procedures.

Text Codes:

AR - As Required

NA - Not Available

NS - Not Shown

00000000 - See Note

QTY - Quantity Example (QTY 3) (If Quantity not shown, Quantity = 1)

M - Model Example (M1) (If M Code not shown, then part is used on all Models)

Expanded Model Nomenclature:

Example M1 - Model#1 M2 - Model#2 M3 - Model#3

Goodman Manufacturing Company, L.P. is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Goodman Manufacturing Company, L.P. also recommends contacting an authorized technician and using authorized factory parts.

Goodman Manufacturing Company, L.P. reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations.

For assistance within the U.S.A. contact:
Consumer Affairs Department
Goodman Manufacturing Company, L.P.
7401 Security Way
Houston, Texas 77040
877-254-4729-Telephone
713-863-2382-Facsimile

For assistance outside the U.S.A. contact:
International Division
Goodman Manufacturing Company, L.P.
7401 Security Way
Houston, Texas 77040
713-861-2500-Telephone
713-863-2382-Facsimile

Functional Parts

Part No:	Description:
----------	--------------


SPECIAL PARTS

IO-125J	INSTALLATION INSTRUCTIONS
PKC-0AC	PISTON KIT CHART
RP-130	REPAIR PARTS MANUAL

Expanded Model Nomenclature

M1 - UCQ-18
M2 - UCQ-24
M3 - UCQ-30
M4 - UCQ-36
M5 - UCQ-43
M6 - UCQ-48
M7 - UCQ-60

Replacement Parts List

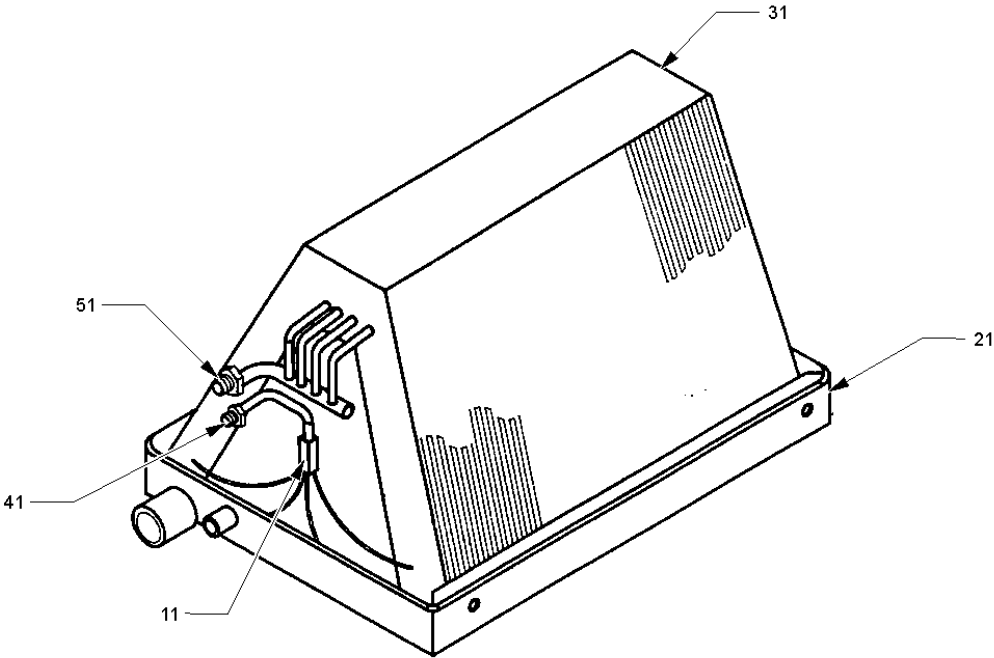

Replacement Parts List

Ref. Part No: No:	Description:	Ref. Part No: No:	Description:
<i>Image 1:</i>			
11	B1314252		FLOWRATOR .052 (M1)
11	B1314459		FLOWRATOR .059 (M2)
11	B1313465		FLOWRATOR .065 (M3)
11	B1313680		FLOWRATOR .080 (M4, M5)
11	B1313682		FLOWRATOR .082 (M6)
11	B1313693		FLOWRATOR .093 (M7)
21	B1755913H		VERTICAL DRAIN PAN ASSY (M1, M2, M3)
21	B1755917H		VERTICAL DRAIN PAN ASSY (M4)
21	B1755923H		VERTICAL DRAIN PAN ASSY (M5, M6, M7)
31	1595400-18NQ		COIL PAN ASSY (UCQ18) (M1)
31	1595401-24NQ		COIL PAN ASSY (UCQ24) (M2)
31	1595402-30NQ		COIL PAN ASSY (UCQ30) (M3)
31	1595403-36NQ		COIL PAN ASSY (UCQ36) (M4)
31	1595404-43NQ		COIL PAN ASSY (UCQ43) (M5)
31	1595405-48NQ		COIL PAN ASSY (UCQ48) (M6)
31	1595406-60NQ		COIL PAN ASSY (UCQ60) (M7)
41	B1282546		3/8" HALF COUPLING (OBSOLETE)
51	B1282547		3/4" HALF COUPLING

Expanded Model Nomenclature

M1 - UCQ-18
M2 - UCQ-24
M3 - UCQ-30
M4 - UCQ-36
M5 - UCQ-43
M6 - UCQ-48
M7 - UCQ-60

